

Network Working Group
Request for Comments: 4327
Category: Standards Track

M. Dubuc
T. Nadeau
Cisco Systems
J. Lang
Sonos, Inc.
E. McGinnis
Hammerhead Systems
January 2006

Link Management Protocol (LMP) Management Information Base (MIB)

Status of This Memo

This document specifies an Internet standards track protocol for the Internet community, and requests discussion and suggestions for improvements. Please refer to the current edition of the "Internet Official Protocol Standards" (STD 1) for the standardization state and status of this protocol. Distribution of this memo is unlimited.

Copyright Notice

Copyright (C) The Internet Society (2006).

Abstract

This memo defines a portion of the Management Information Base (MIB) for use with network management protocols in the Internet community. In particular, it describes managed objects for modeling the Link Management Protocol (LMP).

Table of Contents

1. The Internet-Standard Management Framework	2
2. Introduction	2
3. Terminology	3
4. Feature Checklist	3
5. Outline	4
6. Brief Description of MIB Objects	4
6.1. lmpNbrTable	4
6.2. lmpControlChannelTable	4
6.3. lmpControlChannelPerfTable	4
6.4. lmpTeLinkTable	5
6.5. lmpLinkVerificationTable	5
6.6. lmpTeLinkPerfTable	5
6.7. lmpDataLinkTable	5
6.8. lmpDataLinkPerfTable	5
7. Example of LMP Control Channel Setup	5

8.	Application of the Interfaces Group to LMP	8
8.1.	Support of the LMP Layer by ifTable	9
9.	LMP MIB Module Definitions	11
10.	Security Considerations	77
11.	Contributors	78
12.	Acknowledgements	78
13.	IANA Considerations	78
13.1.	IANA Considerations for lmp ifType	78
13.2.	IANA Considerations for LMP-MIB	78
14.	References	79
14.1.	Normative References	79
14.2.	Informative References	80

1. The Internet-Standard Management Framework

For a detailed overview of the documents that describe the current Internet-Standard Management Framework, please refer to [section 7 of RFC 3410](#) [[RFC3410](#)].

Managed objects are accessed via a virtual information store, termed the Management Information Base or MIB. MIB objects are generally accessed through the Simple Network Management Protocol (SNMP). Objects in the MIB are defined using the mechanisms defined in the Structure of Management Information (SMI). This memo specifies a MIB module that is compliant to the SMIV2, which is described in STD 58, [RFC 2578](#) [[RFC2578](#)], STD 58, [RFC 2579](#) [[RFC2579](#)] and STD 58, [RFC 2580](#) [[RFC2580](#)].

2. Introduction

Current work is under way in the IETF to specify a suite of protocols to be used as a common control plane and a separate common measurement plane. Generalized MPLS (GMPLS) [[RFC3471](#)] and the Link Management Protocol [[RFC4204](#)] are key components of this standardization activity. The primary purpose of LMP is to manage traffic engineering (TE) links. Primary goals of LMP are the maintenance of the control channel connectivity, correlation of link properties, verification of data-bearing links, and detection and isolation of link faults.

We describe in this document a MIB module that can be used to manage LMP implementations. This MIB module covers both configuration and performance monitoring aspects of LMP.

The key words "MUST", "MUST NOT", "REQUIRED", "SHALL", "SHALL NOT", "SHOULD", "SHOULD NOT", "RECOMMENDED", "MAY", and "OPTIONAL" in this document are to be interpreted as described in [RFC 2119](#) [[RFC2119](#)].

3. Terminology

This document uses terminology from the document describing the Link Management Protocol [[RFC4204](#)]. An "LMP adjacency" is formed between two nodes that support the same capabilities, and LMP messages are exchanged between the node pair over control channels that form this adjacency. Several control channels can be active at the same time. With the exception of messages related to control channel management, anytime an LMP message needs to be transferred to a neighbor node, it can be sent on any of the active control channels. The control channels can also be used to exchange MPLS control plane information or routing information.

LMP is designed to support aggregation of one or more data-bearing links into a traffic-engineering (TE) link. The data-bearing links can be either component links or ports depending on their multiplexing capability (see [[RFC4204](#)] for distinction between port and component link).

Each TE link is associated with an LMP adjacency, and one or more control channels are used to exchange LMP messages for a particular adjacency. In turn, control channels are used to manage the TE links associated with the LMP adjacency.

4. Feature Checklist

The Link Management Protocol MIB module (LMP-MIB) is designed to satisfy the following requirements and constraints:

- The MIB module supports the enabling and disabling of LMP capability on LMP-capable interfaces of a photonic switch, optical cross-connect, or router.
- The MIB module is used to provide information about LMP adjacencies.
- Support is provided for configuration of the keep alive and link verification parameters.
- The MIB module is used to express the mapping between local and remote TE links, as well as local and remote interface identifiers for port or component link.
- Performance counters are provided for measuring LMP performance on a per-control channel basis. Performance counters are also provided for measuring LMP performance on the data-bearing links.

Note that the LMP MIB module goes hand-in-hand with the TE Link (TE-LINK-STD-MIB) MIB module [[RFC4220](#)]. The TE link table, which is used to associate data-bearing links to TE links, is defined in the TE Link MIB. The TE link table in the LMP MIB module contains TE link information specific to LMP.

5. Outline

Configuring LMP through an optical device involves the following steps:

- Enabling LMP on LMP-capable interfaces through control channel configuration.
- Optionally specifying link verification parameters.
- Configuring the data-bearing links and associating them to the appropriate TE link (this association is stored in the ifStackTable of the Interfaces Group MIB).

TE links are managed by the control channels that run between the same pair of nodes (LMP adjacency).

6. Brief Description of MIB Objects

Sections [6.1-6.8](#) describe objects pertaining to LMP. The MIB objects were derived from the LMP document [[RFC4204](#)].

6.1. ImpNbrTable

The remote node table is used to identify the pair of nodes that exchange LMP messages over control channels.

6.2. ImpControlChannelTable

The control channel table is used for enabling the LMP protocol on LMP-capable interfaces. A photonic switch, optical cross-connect, or router creates an entry in this table for every LMP-capable interface in that device.

6.3. ImpControlChannelPerfTable

The control channel performance table is used for collecting LMP performance counts on a per-control channel basis. Each entry in the ImpControlChannelTable has a corresponding entry in the ImpControlChannelPerfTable.

6.4. ImpTeLinkTable

The TE link table is used for specifying LMP information associated with TE links.

6.5. ImpLinkVerificationTable

The link verification table is used for configuring the LMP link verification parameters of TE links. For every TE link entry in the ImpTeLinkTable that supports the link verification procedure, there is a corresponding entry in the ImpLinkVerificationTable.

6.6. ImpTeLinkPerfTable

The TE link performance table is used for collecting LMP performance counts on a per-TE link basis. Each entry in the ImpTeLinkTable has a corresponding entry in the ImpTeLinkPerfTable.

6.7. ImpDataLinkTable

The data-bearing link table is used to specify the data-bearing links that are associated with TE links.

6.8. ImpDataLinkPerfTable

The data-bearing link performance table is used for collecting LMP performance counts on data-bearing links.

7. Example of LMP Control Channel Setup

In this section, we provide a brief example of using the MIB objects described in [section 9](#) to set up an LMP control channel. While this example is not meant to illustrate every nuance of the MIB module, it is intended as an aid to understanding some of the key concepts. It is meant to be read after going through the MIB itself.

Suppose that one would like to form an LMP adjacency between two nodes using two control channels. Suppose also that there are three data-bearing links. We also assume that the data-bearing links are ports (lambdas). We also assume that the link verification procedure is not enabled. The following example illustrates which rows and corresponding objects might be created to accomplish this.

First, LMP must be enabled between the pair of nodes.


```
In lmpNbrTable:
{
    lmpNbrNodeId          = 'c0000201'H, -- 192.0.2.1
    lmpNbrAdminStatus     = up(1),
    lmpNbrRowStatus       = createAndGo(4),
    lmpNbrStorageType     = nonVolatile(3)
}
```

Then, the control channels must be set up. These are created in the lmpControlChannelTable.

```
In lmpControlChannelTable:
{
    lmpCcId                = 1,
    lmpCcUnderlyingIfIndex = 1,
    lmpCcIsIf              = false(1),
    lmpCcAuthentication    = false(1),
    lmpCcHelloInterval     = 15,
    lmpCcHelloIntervalMin  = 15,
    lmpCcHelloIntervalMax  = 1000,
    lmpCcHelloDeadInterval = 45,
    lmpCcHelloDeadIntervalMin = 45,
    lmpCcHelloDeadIntervalMax = 1000,
    lmpCcAdminStatus       = up(1),
    lmpCcRowStatus         = createAndGo(4),
    lmpCcStorageType       = nonVolatile(3)
}

{
    lmpCcId                = 2,
    lmpCcUnderlyingIfIndex = 2,
    lmpCcIsIf              = false(1),
    lmpCcAuthentication    = false(1),
    lmpCcHelloInterval     = 15,
    lmpCcHelloIntervalMin  = 15,
    lmpCcHelloIntervalMax  = 1000,
    lmpCcHelloDeadInterval = 45,
    lmpCcHelloDeadIntervalMin = 45,
    lmpCcHelloDeadIntervalMax = 1000,
    lmpCcAdminStatus       = up(1),
    lmpCcRowStatus         = createAndGo(4),
    lmpCcStorageType       = nonVolatile(3)
}
```

Next, the three data-bearing links are created. For each data-bearing link, an ifEntry with the same ifIndex needs to be created beforehand.


```
In lmpDataLinkTable:
{
    ifIndex                = 41,
    lmpDataLinkAddressType = unknown(0),
    lmpDataLinkIpAddr      = 'H,
    lmpDataLinkRemoteIpAddress = 'H,
    lmpDataLinkRemoteIfId  = 47,
    lmpDataLinkRowStatus   = createAndGo(4),
    lmpDataLinkStorageType = nonVolatile(3)
}

{
    ifIndex                = 43,
    lmpDataLinkAddressType = unknown(0),
    lmpDataLinkIpAddr      = 'H,
    lmpDataLinkRemoteIpAddress = 'H,
    lmpDataLinkRemoteIfId  = 42,
    lmpDataLinkRowStatus   = createAndGo(4),
    lmpDataLinkStorageType = nonVolatile(3)
}

{
    ifIndex                = 44,
    lmpDataLinkAddressType = unknown(0),
    lmpDataLinkIpAddr      = 'H,
    lmpDataLinkRemoteIpAddress = 'H,
    lmpDataLinkRemoteIfId  = 48,
    lmpDataLinkRowStatus   = createAndGo(4),
    lmpDataLinkStorageType = nonVolatile(3)
}
```

Note that the data-bearing link type (lmpDataLinkType) does not need to be provisioned as it is automatically populated by the node. The definition of the protection role (primary or secondary) for the data-bearing links is stored in the componentLinkTable of the TE Link MIB module [[RFC4220](#)].

Then, a TE link is created as an ifEntry with ifType teLink in the ifTable.

Once the TE link is created in the ifTable, a TE link entry is created in the LMP MIB module to specify TE link information specific to LMP.

```
In lmpTeLinkTable:
{
    ifIndex                = 20,
    lmpTeLinkVerification = true(2),
```



```
    ImpTeLinkFaultManagement      = true(2),
    ImpTeLinkDwdm                 = false(1),
    ImpTeLinkRowStatus             = createAndGo(4),
    ImpTeLinkStorageType          = nonVolatile(3)
}

and in ImpLinkVerificationTable:
{
    ifIndex                        = 20,
    ImpLinkVerifyInterval         = 100,
    ImpLinkVerifyDeadInterval     = 300,
    ImpLinkVerifyTransportMechanism = j0Trace(3),
    ImpLinkVerifyAllLinks         = true(2),
    ImpLinkVerifyTransmissionRate = 100000,
    ImpLinkVerifyWavelength       = 0,
    ImpLinkVerifyRowStatus        = createAndGo(4),
    ImpLinkVerifyStorageType      = nonVolatile(3)
}
```

The association between the data-bearing links and the TE links is stored in the ifStackTable [RFC2863].

In parallel with the entry created in the ImpTeLinkTable, an entry may be created in the teLinkTable of TE Link MIB module [RFC4220].

8. Application of the Interfaces Group to LMP

The Interfaces Group [RFC2863] defines generic managed objects for managing interfaces. This memo contains the media-specific extensions to the Interfaces Group for managing LMP control channels that are modeled as interfaces. If the control channel as defined in the ImpControlChannelTable is modeled as an ifEntry, then the following definition applies. An ImpControlChannelTable entry is designated as being represented as an Interfaces MIB ifEntry if the ImpControlChannelEntry object ImpCcIsIf is set to true (2). In this case, the control channel SHOULD be modeled as an ifEntry and provide appropriate interface stacking as defined below.

This memo assumes the interpretation of the Interfaces Group to be in accordance with [RFC2863], which states that the interfaces table (ifTable) contains information on the managed resource's interfaces and that each sub-layer below the internetwork layer of a network interface is considered an interface. Since the LMP interface only carries control traffic, it is considered to be below the internetwork layer. Thus, the LMP interface may be represented as an entry in the ifTable. The interrelation of entries in the ifTable is defined by Interfaces Stack Group defined in [RFC2863].

When LMP control channels are modeled as interfaces, the interface stack table must appear as follows for the LMP control channel interfaces:

```
+-----+
| LMP-interface ifType = lmp(227)      +
+-----+
| Underlying Layer...                  +
+-----+
```

In the above diagram, "Underlying Layer..." refers to the ifIndex of any interface type over which the LMP interface will transmit its traffic. Note that if the underlying layer provides multiple access to its media (i.e., Ethernet), then it is possible to stack multiple LMP interfaces on top of this interface in parallel.

Note that it is not a requirement that LMP control channels be modeled as interfaces. It is acceptable that control channels simply exist as logical connections between adjacent LMP-capable nodes. In this case, lmpCcIsIf is set to false(2) and no corresponding entry is made in the ifTable.

8.1. Support of the LMP Layer by ifTable

Some specific interpretations of ifTable for the LMP layer follow.

Object	Use for the LMP layer.
ifIndex	Each LMP interface may be represented by an ifEntry.
ifDescr	Description of the LMP interface.
ifType	The value that is allocated for LMP is 227. This number has been assigned by the IANA.
ifSpeed	The total bandwidth in bits per second for use by the LMP layer.
ifPhysAddress	Unused.
ifAdminStatus	This variable indicates the administrator's intent as to whether LMP should be enabled, disabled, or running in some diagnostic testing mode on this interface. Also see [RFC2863].
ifOperStatus	This value reflects the actual or operational status of LMP on this interface.

ifLastChange See [[RFC2863](#)].

ifInOctets The number of received octets over the interface,
 i.e., the number of octets received as LMP
 packets.

ifOutOctets The number of transmitted octets over the
 interface, i.e., the number of octets transmitted
 as LMP packets.

ifInErrors The number of LMP packets dropped due to
 uncorrectable errors.

ifInUnknownProtos
 The number of received packets discarded during
 packet header validation, including packets with
 unrecognized label values.

ifOutErrors See [[RFC2863](#)].

ifName Textual name (unique on this system) of the
 interface or an octet string of zero length.

ifLinkUpDownTrapEnable
 Default is disabled (2).

ifConnectorPresent
 Set to false (2).

ifHighSpeed See [[RFC2863](#)].

ifHCInOctets The 64-bit version of ifInOctets; supported if
 required by the compliance statements in [[RFC2863](#)].

ifHCOctets The 64-bit version of ifOutOctets; supported if
 required by the compliance statements in [[RFC2863](#)].

ifAlias The nonvolatile 'alias' name for the interface as
 specified by a network manager.

ifCounterDiscontinuityTime
 See [[RFC2863](#)].

9. LMP MIB Module Definitions

This MIB module IMPORTs objects from [RFC2578], [RFC2579], [RFC2580], [RFC2863], [RFC4001], and [RFC4220], and it has REFERENCE clauses to [RFC4204], [RFC4207], [RFC4209], [RFC3471], and [RFC2914].

LMP-MIB DEFINITIONS ::= BEGIN

IMPORTS

MODULE-IDENTITY, OBJECT-TYPE, NOTIFICATION-TYPE,
transmission, Unsigned32, Counter32, TimeTicks
FROM SNMPv2-SMI -- [RFC2578]

MODULE-COMPLIANCE, OBJECT-GROUP, NOTIFICATION-GROUP
FROM SNMPv2-CONF -- [RFC2580]

TEXTUAL-CONVENTION, TruthValue, RowStatus, StorageType,
TimeStamp
FROM SNMPv2-TC -- [RFC2579]

InterfaceIndexOrZero, ifIndex
FROM IF-MIB -- [RFC2863]

InetAddressType, InetAddress
FROM INET-ADDRESS-MIB -- [RFC4001]

teLinkRemoteIpAddr, teLinkIncomingIfId, TeLinkEncodingType
FROM TE-LINK-STD-MIB; -- [RFC4220]

ImpMIB MODULE-IDENTITY

LAST-UPDATED "200601110000Z" -- 11 January 2006
ORGANIZATION "Common Control and Measurement Protocols (CCAMP)
Working Group"

CONTACT-INFO

" Martin Dubuc
Email: dubuc.consulting@sympatico.ca

Thomas D. Nadeau
Email: tnadeau@cisco.com

Jonathan P. Lang
Email: jplang@ieee.org

Evan McGinnis
Email: emcginnis@hammerheadsystems.com"

DESCRIPTION

"Copyright (C) 2006 The Internet Society. This version of the MIB module is part of [RFC 4327](#); see the RFC itself for full legal notices.

This MIB module contains managed object definitions for the Link Management Protocol (LMP) as defined in 'Link Management Protocol'."

-- Revision history.

REVISION

"200601110000Z" -- 11 January 2006

DESCRIPTION

"Initial version published as [RFC 4327](#)"

::= { transmission 227 }

-- Textual Conventions

LmpInterval ::= TEXTUAL-CONVENTION

DISPLAY-HINT "d"

STATUS current

DESCRIPTION

"The interval delay in milliseconds."

SYNTAX Unsigned32 (1..65535)

LmpRetransmitInterval ::= TEXTUAL-CONVENTION

DISPLAY-HINT "d"

STATUS current

DESCRIPTION

"The retransmission interval delay in milliseconds."

SYNTAX Unsigned32 (1..4294967295)

LmpNodeId ::= TEXTUAL-CONVENTION

DISPLAY-HINT "1d.1d.1d.1d"

STATUS current

DESCRIPTION

"Represents a Node ID in network byte order. Node ID is an address of type IPv4."

REFERENCE

"[Section 1.1](#) of Link Management Protocol, [RFC 4204](#)"

SYNTAX OCTET STRING(SIZE(4))

-- Top level components of this MIB

-- Notifications

lmpNotifications OBJECT IDENTIFIER ::= { lmpMIB 0 }

-- Tables, Scalars

lmpObjects OBJECT IDENTIFIER ::= { lmpMIB 1 }

-- Conformance

ImpConformance OBJECT IDENTIFIER ::= { ImpMIB 2 }

ImpAdminStatus OBJECT-TYPE

SYNTAX INTEGER { up(1), down(2) }

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"The desired operational status of LMP on the node.
Implementations should save the value of this object in
persistent memory so that it survives restarts or reboot."

DEFVAL { up }

::= { ImpObjects 1 }

ImpOperStatus OBJECT-TYPE

SYNTAX INTEGER { up(1), down(2) }

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The actual operational status of LMP on the node."

::= { ImpObjects 2 }

-- LMP Neighbor Table

ImpNbrTable OBJECT-TYPE

SYNTAX SEQUENCE OF ImpNbrEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"This table specifies the neighbor node(s) to which control
channels may be established."

::= { ImpObjects 3 }

ImpNbrEntry OBJECT-TYPE

SYNTAX ImpNbrEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"An entry in this table is created by a LMP-enabled device for
every pair of nodes that can establish control channels."

INDEX { ImpNbrNodeId }

::= { ImpNbrTable 1 }

ImpNbrEntry ::= SEQUENCE {

ImpNbrNodeId LmpNodeId,

ImpNbrRetransmitInterval LmpRetransmitInterval,


```
    lmpNbrRetryLimit      Unsigned32,
    lmpNbrRetransmitDelta Unsigned32,
    lmpNbrAdminStatus     INTEGER,
    lmpNbrOperStatus      INTEGER,
    lmpNbrRowStatus       RowStatus,
    lmpNbrStorageType     StorageType
}
```

lmpNbrNodeId OBJECT-TYPE

```
SYNTAX      LmpNodeId
MAX-ACCESS  not-accessible
STATUS      current
```

DESCRIPTION

"This is a unique index for an entry in the LmpNbrTable.
This value represents the remote Node ID."

::= { lmpNbrEntry 1 }

lmpNbrRetransmitInterval OBJECT-TYPE

```
SYNTAX      LmpRetransmitInterval
MAX-ACCESS  read-create
STATUS      current
```

DESCRIPTION

"This object specifies the initial retransmission interval that is used for the retransmission of messages that require acknowledgement. This object along with lmpNbrRetryLimit is used to implement congestion-handling mechanism as defined in [Section 10](#) of the Link Management Protocol specification, which is based on [RFC 2914](#)."

REFERENCE

"Link Management Protocol, [RFC 4204](#).

Congestion Control Principles, [RFC 2914](#)."

```
DEFVAL      { 500 }
```

::= { lmpNbrEntry 2 }

lmpNbrRetryLimit OBJECT-TYPE

```
SYNTAX      Unsigned32
MAX-ACCESS  read-create
STATUS      current
```

DESCRIPTION

"This object specifies the maximum number of times a message is transmitted without being acknowledged. A value of 0 is used to indicate that a node should never stop retransmission.

This object along with lmpNbrRetransmitInterval is used to implement congestion-handling mechanism as defined in [Section 10](#) of the Link Management Protocol specification, which is based on [RFC 2914](#)."

REFERENCE

"Link Management Protocol, [RFC 4204](#).

Congestion Control Principles, [RFC 2914](#)."

DEFVAL { 3 }
::= { lmpNbrEntry 3 }

lmpNbrRetransmitDelta OBJECT-TYPE

SYNTAX Unsigned32
MAX-ACCESS read-create
STATUS current

DESCRIPTION

"This object governs the speed with which the sender increases the retransmission interval as explained in [section 10](#) of the Link Management Protocol specification, which is based on [RFC 2914](#). This value is a power used to express the exponential backoff. The ratio of two successive retransmission intervals is (1 + Delta)."

REFERENCE

"Link Management Protocol, [RFC 4204](#).

Congestion Control Principles, [RFC 2914](#)."

DEFVAL { 1 }
::= { lmpNbrEntry 4 }

lmpNbrAdminStatus OBJECT-TYPE

SYNTAX INTEGER { up(1), down(2) }
MAX-ACCESS read-create
STATUS current

DESCRIPTION

"The desired operational status of LMP to this remote node."

::= { lmpNbrEntry 5 }

lmpNbrOperStatus OBJECT-TYPE

SYNTAX INTEGER { up(1), down(2) }
MAX-ACCESS read-only
STATUS current

DESCRIPTION

"The actual operational status of LMP to this remote node."

::= { lmpNbrEntry 6 }

lmpNbrRowStatus OBJECT-TYPE

SYNTAX RowStatus
MAX-ACCESS read-create
STATUS current

DESCRIPTION

"This variable is used to create, modify, and/or delete a row in this table. None of the writable objects in a row can be changed if the status is active(1).

All read-create objects must have valid and consistent values before the row can be activated."

::= { lmpNbrEntry 7 }

lmpNbrStorageType OBJECT-TYPE

SYNTAX StorageType

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The storage type for this conceptual row in the lmpNbrTable. Conceptual rows having the value 'permanent' need not allow write-access to any columnar object in the row."

DEFVAL { nonVolatile }

::= { lmpNbrEntry 8 }

-- End of lmpNbrTable

lmpCcHelloIntervalDefault OBJECT-TYPE

SYNTAX LmpInterval

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"This object specifies the default value for the HelloInterval parameter used in the Hello protocol keep-alive phase. It indicates how frequently LMP Hello messages will be sent. It is used as the default value for lmpCcHelloInterval. Implementations should save the value of this object in persistent memory so that it survives restarts or reboot."

REFERENCE

"Link Management Protocol, [RFC 4204](#)"

::= { lmpObjects 4 }

lmpCcHelloIntervalDefaultMin OBJECT-TYPE

SYNTAX LmpInterval

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"This object specifies the default minimum value for the HelloInterval parameter. It is used as a default value for lmpCcHelloIntervalMin. Implementations should save the value of this object in persistent memory so that it survives restarts or reboot."

::= { lmpObjects 5 }

lmpCcHelloIntervalDefaultMax OBJECT-TYPE

SYNTAX LmpInterval

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"This object specifies the default maximum value for the HelloInterval parameter. It is used as a default value for lmpCcHelloIntervalMax. Implementations should save the value of this object in persistent memory so that it survives restarts or reboot."

::= { lmpObjects 6 }

lmpCcHelloDeadIntervalDefault OBJECT-TYPE

SYNTAX LmpInterval

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"This object specifies the default HelloDeadInterval parameter to use in the Hello protocol keep-alive phase. It indicates how long a device should wait before declaring the control channel dead. The HelloDeadInterval parameter should be at least three times the value of HelloInterval. It is used as a default value for lmpCcHelloDeadInterval. Implementations should save the value of this object in persistent memory so that it survives restarts or reboot."

REFERENCE

"Link Management Protocol, [RFC 4204](#)"

::= { lmpObjects 7 }

lmpCcHelloDeadIntervalDefaultMin OBJECT-TYPE

SYNTAX LmpInterval

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"This object specifies the default minimum value for the HelloDeadInterval parameter. It is used as a default value for lmpCcHelloDeadIntervalMin. Implementations should save the value of this object in persistent memory so that it survives restarts or reboot."

::= { lmpObjects 8 }

lmpCcHelloDeadIntervalDefaultMax OBJECT-TYPE

SYNTAX LmpInterval

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"This object specifies the default maximum value for the HelloDeadInterval parameter. It is used as a default value for lmpCcHelloDeadIntervalMax. Implementations should save the value of this object in persistent memory so that it survives


```

        restarts or reboot."
 ::= { lmpObjects 9 }

```

```
-- LMP Control Channel Table
```

```

lmpControlChannelTable OBJECT-TYPE
    SYNTAX      SEQUENCE OF LmpControlChannelEntry
    MAX-ACCESS  not-accessible
    STATUS      current
    DESCRIPTION
        "This table specifies LMP control channel information."
 ::= { lmpObjects 10 }

```

```

lmpControlChannelEntry OBJECT-TYPE
    SYNTAX      LmpControlChannelEntry
    MAX-ACCESS  not-accessible
    STATUS      current
    DESCRIPTION
        "An entry in this table is created by a LMP-enabled device for
         every control channel. Whenever a new entry is created with
         lmpCcIsIf set to true(2), then a corresponding entry is
         created in ifTable as well (see RFC 2863)."
    INDEX       { lmpCcId }
 ::= { lmpControlChannelTable 1 }

```

```

LmpControlChannelEntry ::= SEQUENCE {
    lmpCcId                Unsigned32,
    lmpCcUnderlyingIfIndex InterfaceIndexOrZero,
    lmpCcIsIf              TruthValue,
    lmpCcNbrNodeId         LmpNodeId,
    lmpCcRemoteId          Unsigned32,
    lmpCcRemoteAddressType InetAddressType,
    lmpCcRemoteIpAddr      InetAddress,
    lmpCcSetupRole         INTEGER,
    lmpCcAuthentication    TruthValue,
    lmpCcHelloInterval     LmpInterval,
    lmpCcHelloIntervalMin  LmpInterval,
    lmpCcHelloIntervalMax  LmpInterval,
    lmpCcHelloIntervalNegotiated LmpInterval,
    lmpCcHelloDeadInterval LmpInterval,
    lmpCcHelloDeadIntervalMin LmpInterval,
    lmpCcHelloDeadIntervalMax LmpInterval,
    lmpCcHelloDeadIntervalNegotiated LmpInterval,
    lmpCcLastChange        TimeTicks,
    lmpCcAdminStatus       INTEGER,
    lmpCcOperStatus        INTEGER,
    lmpCcRowStatus          RowStatus,

```



```
    ImpCcStorageType          StorageType
}
```

ImpCcId OBJECT-TYPE

```
SYNTAX      Unsigned32 (1..4294967295)
MAX-ACCESS  not-accessible
STATUS      current
DESCRIPTION
    "This value represents the local control channel identifier.
    The control channel identifier is a non-zero 32-bit number."
 ::= { lmpControlChannelEntry 1 }
```

ImpCcUnderlyingIfIndex OBJECT-TYPE

```
SYNTAX      InterfaceIndexOrZero
MAX-ACCESS  read-create
STATUS      current
DESCRIPTION
    "If lmpCcIsIf is set to true(1), this object carries the
    index into the ifTable of the entry that represents the
    LMP interface over which LMP will transmit its traffic.
    If this object is set to zero, but lmpCcIsIf is set to
    true(1), the control channel is not currently associated
    with any underlying interface and the control channel's
    operational status must not be up(1), nor should the
    control channel forward or receive traffic.
    If lmpCcIsIf is set to false(2), this object should be set
    to zero and should be ignored."
 ::= { lmpControlChannelEntry 2 }
```

ImpCcIsIf OBJECT-TYPE

```
SYNTAX      TruthValue
MAX-ACCESS  read-create
STATUS      current
DESCRIPTION
    "In implementations where the control channels are modeled
    as interfaces, the value of this object is true(1) and
    this control channel is represented by an interface in
    the interfaces group table as indicated by the value of
    lmpCcUnderlyingIfIndex. If control channels are not
    modeled as interfaces, the value of this object is
    false(2) and there is no corresponding interface for
    this control channel in the interfaces group table,
    and the value of lmpCcUnderlyingIfIndex should be
    ignored."
 ::= { lmpControlChannelEntry 3 }
```

ImpCcNbrNodeId OBJECT-TYPE

```
SYNTAX      LmpNodeId
```


MAX-ACCESS read-create

STATUS current

DESCRIPTION

"This is the Node ID of the control channel remote node.

This value either is configured or gets created by the node when a Config message is received or when an outgoing Config message is acknowledged by the remote node."

::= { lmpControlChannelEntry 4 }

lmpCcRemoteId OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This value represents the remote control channel identifier (32-bit number). It is determined during the negotiation phase. A value of zero means that the remote control channel identifier has not yet been learnt."

::= { lmpControlChannelEntry 5 }

lmpCcRemoteAddressType OBJECT-TYPE

SYNTAX InetAddressType

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"This value represents the remote control channel IP address type. In point-to-point configuration, this value can be set to unknown(0)."

::= { lmpControlChannelEntry 6 }

lmpCcRemoteIpAddr OBJECT-TYPE

SYNTAX InetAddress

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"This value represents the remote control channel Internet address for numbered control channel. The type of this address is determined by lmpCcRemoteAddressType. Control channel must be numbered on non-point-to-point configuration. For point-to-point configuration, the remote control channel address can be of type unknown in which case this object must be a zero-length string. The lmpCcRemoteId object then identifies the unnumbered address."

::= { lmpControlChannelEntry 7 }

lmpCcSetupRole OBJECT-TYPE

SYNTAX INTEGER { active(1), passive(2) }

MAX-ACCESS read-create
STATUS current
DESCRIPTION
 "The role that this node should take during establishment
 of this control channel. An active node will initiate
 establishment. A passive node will wait for the remote node
 to initiate. A pair of nodes that both take the passive role
 will never establish communications."
DEFVAL { active }
::= { lmpControlChannelEntry 8 }

lmpCcAuthentication OBJECT-TYPE

SYNTAX TruthValue
MAX-ACCESS read-create
STATUS current
DESCRIPTION
 "This object indicates whether the control channel must use
 authentication."
REFERENCE
 "Link Management Protocol, [RFC 4204](#)"
::= { lmpControlChannelEntry 9 }

lmpCcHelloInterval OBJECT-TYPE

SYNTAX LmpInterval
MAX-ACCESS read-create
STATUS current
DESCRIPTION
 "This object specifies the value of the HelloInterval
 parameter. The default value for this object should be
 set to lmpCcHelloIntervalDefault."
::= { lmpControlChannelEntry 10 }

lmpCcHelloIntervalMin OBJECT-TYPE

SYNTAX LmpInterval
MAX-ACCESS read-create
STATUS current
DESCRIPTION
 "This object specifies the minimum value for the
 HelloInterval parameter. The default value for this
 object should be set to lmpCcHelloIntervalMinDefault."
::= { lmpControlChannelEntry 11 }

lmpCcHelloIntervalMax OBJECT-TYPE

SYNTAX LmpInterval
MAX-ACCESS read-create
STATUS current
DESCRIPTION
 "This object specifies the maximum value for the

HelloInterval parameter. The default value for this object should be set to lmpCcHelloIntervalMaxDefault."
::= { lmpControlChannelEntry 12 }

lmpCcHelloIntervalNegotiated OBJECT-TYPE

SYNTAX LmpInterval

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Once the control channel is active, this object represents the negotiated HelloInterval value."

::= { lmpControlChannelEntry 13 }

lmpCcHelloDeadInterval OBJECT-TYPE

SYNTAX LmpInterval

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"This object specifies the value of the HelloDeadInterval parameter. The default value for this object should be set to lmpCcHelloDeadIntervalDefault."

::= { lmpControlChannelEntry 14 }

lmpCcHelloDeadIntervalMin OBJECT-TYPE

SYNTAX LmpInterval

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"This object specifies the minimum value for the HelloDeadInterval parameter. The default value for this object should be set to lmpCcHelloDeadIntervalMinDefault."

::= { lmpControlChannelEntry 15 }

lmpCcHelloDeadIntervalMax OBJECT-TYPE

SYNTAX LmpInterval

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"This object specifies the maximum value for the HelloDeadInterval parameter. The default value for this object should be set to lmpCcHelloIntervalMaxDefault."

::= { lmpControlChannelEntry 16 }

lmpCcHelloDeadIntervalNegotiated OBJECT-TYPE

SYNTAX LmpInterval

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Once the control channel is active, this object represents the negotiated HelloDeadInterval value."
 ::= { lmpControlChannelEntry 17 }

lmpCcLastChange OBJECT-TYPE

SYNTAX TimeTicks

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The value of sysUpTime at the time the control channel entered its current operational state. If the current state was entered prior to the last re-initialization of the local network management subsystem, then this object contains a zero value."

::= { lmpControlChannelEntry 18 }

lmpCcAdminStatus OBJECT-TYPE

SYNTAX INTEGER { up(1), down(2) }

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The desired operational status of this control channel."

::= { lmpControlChannelEntry 19 }

lmpCcOperStatus OBJECT-TYPE

SYNTAX INTEGER {
up(1),
down(2),
configSnd(3),
configRcv(4),
active(5),
goingDown(6)
}

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The actual operational status of this control channel."

::= { lmpControlChannelEntry 20 }

lmpCcRowStatus OBJECT-TYPE

SYNTAX RowStatus

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"This variable is used to create, modify, and/or delete a row in this table. None of the writable objects in a row can be changed if the status is active(1). All read-create objects must have valid and consistent

values before the row can be activated."
 ::= { lmpControlChannelEntry 21 }

lmpCcStorageType OBJECT-TYPE

SYNTAX StorageType

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The storage type for this conceptual row in the
 lmpControlChannelTable. Conceptual rows having the value
 'permanent' need not allow write-access to any
 columnar object in the row."

DEFVAL { nonVolatile }

::= { lmpControlChannelEntry 22 }

-- End of lmpControlChannelTable

-- LMP Control Channel Performance Table

lmpControlChannelPerfTable OBJECT-TYPE

SYNTAX SEQUENCE OF LmpControlChannelPerfEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"This table specifies LMP control channel performance
 counters."

::= { lmpObjects 11 }

lmpControlChannelPerfEntry OBJECT-TYPE

SYNTAX LmpControlChannelPerfEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"An entry in this table is created by a LMP-enabled device for
 every control channel. lmpCcCounterDiscontinuityTime is used
 to indicate potential discontinuity for all counter objects
 in this table."

INDEX { lmpCcId }

::= { lmpControlChannelPerfTable 1 }

LmpControlChannelPerfEntry ::= SEQUENCE {

lmpCcInOctets	Counter32,
lmpCcInDiscards	Counter32,
lmpCcInErrors	Counter32,
lmpCcOutOctets	Counter32,
lmpCcOutDiscards	Counter32,
lmpCcOutErrors	Counter32,

lmpCcConfigReceived	Counter32,
lmpCcConfigSent	Counter32,
lmpCcConfigRetransmit	Counter32,
lmpCcConfigAckReceived	Counter32,
lmpCcConfigAckSent	Counter32,
lmpCcConfigNackReceived	Counter32,
lmpCcConfigNackSent	Counter32,
lmpCcHelloReceived	Counter32,
lmpCcHelloSent	Counter32,
lmpCcBeginVerifyReceived	Counter32,
lmpCcBeginVerifySent	Counter32,
lmpCcBeginVerifyRetransmit	Counter32,
lmpCcBeginVerifyAckReceived	Counter32,
lmpCcBeginVerifyAckSent	Counter32,
lmpCcBeginVerifyNackReceived	Counter32,
lmpCcBeginVerifyNackSent	Counter32,
lmpCcEndVerifyReceived	Counter32,
lmpCcEndVerifySent	Counter32,
lmpCcEndVerifyRetransmit	Counter32,
lmpCcEndVerifyAckReceived	Counter32,
lmpCcEndVerifyAckSent	Counter32,
lmpCcTestStatusSuccessReceived	Counter32,
lmpCcTestStatusSuccessSent	Counter32,
lmpCcTestStatusSuccessRetransmit	Counter32,
lmpCcTestStatusFailureReceived	Counter32,
lmpCcTestStatusFailureSent	Counter32,
lmpCcTestStatusFailureRetransmit	Counter32,
lmpCcTestStatusAckReceived	Counter32,
lmpCcTestStatusAckSent	Counter32,
lmpCcLinkSummaryReceived	Counter32,
lmpCcLinkSummarySent	Counter32,
lmpCcLinkSummaryRetransmit	Counter32,
lmpCcLinkSummaryAckReceived	Counter32,
lmpCcLinkSummaryAckSent	Counter32,
lmpCcLinkSummaryNackReceived	Counter32,
lmpCcLinkSummaryNackSent	Counter32,
lmpCcChannelStatusReceived	Counter32,
lmpCcChannelStatusSent	Counter32,
lmpCcChannelStatusRetransmit	Counter32,
lmpCcChannelStatusAckReceived	Counter32,
lmpCcChannelStatusAckSent	Counter32,
lmpCcChannelStatusReqReceived	Counter32,
lmpCcChannelStatusReqSent	Counter32,
lmpCcChannelStatusReqRetransmit	Counter32,
lmpCcChannelStatusRspReceived	Counter32,
lmpCcChannelStatusRspSent	Counter32,
lmpCcCounterDiscontinuityTime	TimeStamp

}

ImpCcInOctets OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The total number of LMP message octets received on the control channel."

::= { ImpControlChannelPerfEntry 1 }

ImpCcInDiscards OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The number of inbound packets that were chosen to be discarded even though no errors had been detected. One possible reason for discarding such a packet could be to free up buffer space."

::= { ImpControlChannelPerfEntry 2 }

ImpCcInErrors OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The number of inbound packets that contained errors preventing them from being processed by LMP."

::= { ImpControlChannelPerfEntry 3 }

ImpCcOutOctets OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The total number of LMP message octets transmitted out of the control channel."

::= { ImpControlChannelPerfEntry 4 }

ImpCcOutDiscards OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The number of outbound packets that were chosen to be discarded even though no errors had been detected to prevent their being transmitted. One possible reason for discarding such a packet could be to free up buffer space."


```
::= { lmpControlChannelPerfEntry 5 }
```

lmpCcOutErrors OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The number of outbound packets that could not be transmitted because of errors."

```
::= { lmpControlChannelPerfEntry 6 }
```

lmpCcConfigReceived OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of Config messages that have been received on this control channel."

```
::= { lmpControlChannelPerfEntry 7 }
```

lmpCcConfigSent OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of Config messages that have been sent on this control channel."

```
::= { lmpControlChannelPerfEntry 8 }
```

lmpCcConfigRetransmit OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of Config messages that have been retransmitted over this control channel."

```
::= { lmpControlChannelPerfEntry 9 }
```

lmpCcConfigAckReceived OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of ConfigAck messages that have been received on this control channel."

```
::= { lmpControlChannelPerfEntry 10 }
```

lmpCcConfigAckSent OBJECT-TYPE

SYNTAX Counter32
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "This object counts the number of ConfigAck messages that have
 been sent on this control channel."
::= { lmpControlChannelPerfEntry 11 }

lmpCcConfigNackReceived OBJECT-TYPE

SYNTAX Counter32
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "This object counts the number of ConfigNack messages that have
 been received on this control channel."
::= { lmpControlChannelPerfEntry 12 }

lmpCcConfigNackSent OBJECT-TYPE

SYNTAX Counter32
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "This object counts the number of ConfigNack messages that have
 been sent on this control channel."
::= { lmpControlChannelPerfEntry 13 }

lmpCcHelloReceived OBJECT-TYPE

SYNTAX Counter32
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "This object counts the number of Hello messages that have
 been received on this control channel."
::= { lmpControlChannelPerfEntry 14 }

lmpCcHelloSent OBJECT-TYPE

SYNTAX Counter32
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "This object counts the number of Hello messages that have
 been sent on this control channel."
::= { lmpControlChannelPerfEntry 15 }

lmpCcBeginVerifyReceived OBJECT-TYPE

SYNTAX Counter32
MAX-ACCESS read-only
STATUS current

DESCRIPTION

"This object counts the number of BeginVerify messages that have been received on this control channel."

::= { lmpControlChannelPerfEntry 16 }

lmpCcBeginVerifySent OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of BeginVerify messages that have been sent on this control channel."

::= { lmpControlChannelPerfEntry 17 }

lmpCcBeginVerifyRetransmit OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of BeginVerify messages that have been retransmitted over this control channel."

::= { lmpControlChannelPerfEntry 18 }

lmpCcBeginVerifyAckReceived OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of BeginVerifyAck messages that have been received on this control channel."

::= { lmpControlChannelPerfEntry 19 }

lmpCcBeginVerifyAckSent OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of BeginVerifyAck messages that have been sent on this control channel."

::= { lmpControlChannelPerfEntry 20 }

lmpCcBeginVerifyNackReceived OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of BeginVerifyNack messages that have been received on this control channel."


```
::= { lmpControlChannelPerfEntry 21 }
```

lmpCcBeginVerifyNackSent OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of BeginVerifyNack messages that have been sent on this control channel."

```
::= { lmpControlChannelPerfEntry 22 }
```

lmpCcEndVerifyReceived OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of EndVerify messages that have been received on this control channel."

```
::= { lmpControlChannelPerfEntry 23 }
```

lmpCcEndVerifySent OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of EndVerify messages that have been sent on this control channel."

```
::= { lmpControlChannelPerfEntry 24 }
```

lmpCcEndVerifyRetransmit OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of EndVerify messages that have been retransmitted over this control channel."

```
::= { lmpControlChannelPerfEntry 25 }
```

lmpCcEndVerifyAckReceived OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of EndVerifyAck messages that have been received on this control channel."

```
::= { lmpControlChannelPerfEntry 26 }
```

lmpCcEndVerifyAckSent OBJECT-TYPE

SYNTAX Counter32
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "This object counts the number of EndVerifyAck messages that
 have been sent on this control channel."
::= { lmpControlChannelPerfEntry 27 }

lmpCcTestStatusSuccessReceived OBJECT-TYPE

SYNTAX Counter32
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "This object counts the number of TestStatusSuccess messages
 that have been received on this control channel."
::= { lmpControlChannelPerfEntry 28 }

lmpCcTestStatusSuccessSent OBJECT-TYPE

SYNTAX Counter32
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "This object counts the number of TestStatusSuccess messages
 that have been sent on this control channel."
::= { lmpControlChannelPerfEntry 29 }

lmpCcTestStatusSuccessRetransmit OBJECT-TYPE

SYNTAX Counter32
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "This object counts the number of TestStatusSuccess messages
 that have been retransmitted over this control channel."
::= { lmpControlChannelPerfEntry 30 }

lmpCcTestStatusFailureReceived OBJECT-TYPE

SYNTAX Counter32
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "This object counts the number of TestStatusFailure messages
 that have been received on this control channel."
::= { lmpControlChannelPerfEntry 31 }

lmpCcTestStatusFailureSent OBJECT-TYPE

SYNTAX Counter32
MAX-ACCESS read-only
STATUS current

DESCRIPTION

"This object counts the number of TestStatusFailure messages that have been sent on this control channel."

::= { lmpControlChannelPerfEntry 32 }

lmpCcTestStatusFailureRetransmit OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of TestStatusFailure messages that have been retransmitted over this control channel."

::= { lmpControlChannelPerfEntry 33 }

lmpCcTestStatusAckReceived OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of TestStatusAck messages that have been received on this control channel."

::= { lmpControlChannelPerfEntry 34 }

lmpCcTestStatusAckSent OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of TestStatusAck messages that have been sent on this control channel."

::= { lmpControlChannelPerfEntry 35 }

lmpCcLinkSummaryReceived OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of LinkSummary messages that have been received on this control channel."

::= { lmpControlChannelPerfEntry 36 }

lmpCcLinkSummarySent OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of LinkSummary messages that have been sent on this control channel."


```
::= { lmpControlChannelPerfEntry 37 }
```

lmpCcLinkSummaryRetransmit OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of LinkSummary messages that have been retransmitted over this control channel."

```
::= { lmpControlChannelPerfEntry 38 }
```

lmpCcLinkSummaryAckReceived OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of LinkSummaryAck messages that have been received on this control channel."

```
::= { lmpControlChannelPerfEntry 39 }
```

lmpCcLinkSummaryAckSent OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of LinkSummaryAck messages that have been sent on this control channel."

```
::= { lmpControlChannelPerfEntry 40 }
```

lmpCcLinkSummaryNackReceived OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of LinkSummaryNack messages that have been received on this control channel."

```
::= { lmpControlChannelPerfEntry 41 }
```

lmpCcLinkSummaryNackSent OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of LinkSummaryNack messages that have been sent on this control channel."

```
::= { lmpControlChannelPerfEntry 42 }
```

lmpCcChannelStatusReceived OBJECT-TYPE

SYNTAX Counter32
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "This object counts the number of ChannelStatus messages
 that have been received on this control channel."
::= { lmpControlChannelPerfEntry 43 }

lmpCcChannelStatusSent OBJECT-TYPE

SYNTAX Counter32
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "This object counts the number of ChannelStatus messages
 that have been sent on this control channel."
::= { lmpControlChannelPerfEntry 44 }

lmpCcChannelStatusRetransmit OBJECT-TYPE

SYNTAX Counter32
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "This object counts the number of ChannelStatus messages
 that have been retransmitted on this control channel."
::= { lmpControlChannelPerfEntry 45 }

lmpCcChannelStatusAckReceived OBJECT-TYPE

SYNTAX Counter32
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "This object counts the number of ChannelStatusAck messages
 that have been received on this control channel."
::= { lmpControlChannelPerfEntry 46 }

lmpCcChannelStatusAckSent OBJECT-TYPE

SYNTAX Counter32
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "This object counts the number of ChannelStatus messages
 that have been sent on this control channel."
::= { lmpControlChannelPerfEntry 47 }

lmpCcChannelStatusReqReceived OBJECT-TYPE

SYNTAX Counter32
MAX-ACCESS read-only
STATUS current

DESCRIPTION

"This object counts the number of ChannelStatusRequest messages that have been received on this control channel."

::= { lmpControlChannelPerfEntry 48 }

lmpCcChannelStatusReqSent OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of ChannelStatusRequest messages that have been sent on this control channel."

::= { lmpControlChannelPerfEntry 49 }

lmpCcChannelStatusReqRetransmit OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of ChannelStatusRequest messages that have been retransmitted on this control channel."

::= { lmpControlChannelPerfEntry 50 }

lmpCcChannelStatusRspReceived OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of ChannelStatusResponse messages that have been received on this control channel."

::= { lmpControlChannelPerfEntry 51 }

lmpCcChannelStatusRspSent OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of ChannelStatusResponse messages that have been sent on this control channel."

::= { lmpControlChannelPerfEntry 52 }

lmpCcCounterDiscontinuityTime OBJECT-TYPE

SYNTAX TimeStamp

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The value of sysUpTime on the most recent occasion at which any one or more of this control channel's counters suffered a

discontinuity. The relevant counters are the specific instances associated with this control channel of any Counter32 object contained in the lmpControlChannelPerfTable. If no such discontinuities have occurred since the last re-initialization of the local management subsystem, then this object contains a zero value."

```
::= { lmpControlChannelPerfEntry 53 }
```

```
-- End of lmpControlChannelPerfTable
```

```
-- LMP TE Link Table
```

```
lmpTeLinkTable OBJECT-TYPE
```

```
    SYNTAX          SEQUENCE OF LmpTeLinkEntry
```

```
    MAX-ACCESS      not-accessible
```

```
    STATUS          current
```

```
    DESCRIPTION
```

"This table specifies the LMP-specific TE link information. Overall TE link information is kept in three separate tables: ifTable for interface-specific information, lmpTeLinkTable for LMP specific information, and teLinkTable for generic TE link information. ifIndex is the common index to all tables."

```
::= { lmpObjects 12 }
```

```
lmpTeLinkEntry OBJECT-TYPE
```

```
    SYNTAX          LmpTeLinkEntry
```

```
    MAX-ACCESS      not-accessible
```

```
    STATUS          current
```

```
    DESCRIPTION
```

"An entry in this table exists for each ifEntry with an ifType of teLink(200) that is managed by LMP. An ifEntry with an ifIndex must exist before the corresponding lmpTeLinkEntry is created. If a TE link entry in the ifTable is destroyed, then so is the corresponding entry in the lmpTeLinkTable. The administrative status value is controlled from the ifEntry. Setting the administrative status to testing prompts LMP to start link verification on the TE link. Information about the TE link that is not LMP specific is contained in teLinkTable of the TE-LINK-STD-MIB MIB module."

```
    INDEX          { ifIndex }
```

```
::= { lmpTeLinkTable 1 }
```

```
LmpTeLinkEntry ::= SEQUENCE {
```

```
    lmpTeLinkNbrRemoteNodeId  LmpNodeId,
```

```
    lmpTeLinkVerification     TruthValue,
```

```
    lmpTeLinkFaultManagement  TruthValue,
```



```
    ImpTeLinkDwdm          TruthValue,
    ImpTeLinkOperStatus    INTEGER,
    ImpTeLinkRowStatus     RowStatus,
    ImpTeLinkStorageType   StorageType
}
```

ImpTeLinkNbrRemoteNodeId OBJECT-TYPE

```
SYNTAX      LmpNodeId
MAX-ACCESS  read-create
STATUS      current
```

DESCRIPTION

"This is the Node ID of the TE link remote node. This value may be learned during control channel parameter negotiation phase (in the Config message). Node ID is an address whose type must be IPv4."

::= { ImpTeLinkEntry 1 }

ImpTeLinkVerification OBJECT-TYPE

```
SYNTAX      TruthValue
MAX-ACCESS  read-create
STATUS      current
```

DESCRIPTION

"This object indicates if the LMP link verification procedure is enabled for this TE link."

REFERENCE

"Link Management Protocol, [RFC 4204](#)"

::= { ImpTeLinkEntry 2 }

ImpTeLinkFaultManagement OBJECT-TYPE

```
SYNTAX      TruthValue
MAX-ACCESS  read-create
STATUS      current
```

DESCRIPTION

"This object indicates if the LMP fault management procedure is enabled on this TE link."

REFERENCE

"Link Management Protocol, [RFC 4204](#)"

::= { ImpTeLinkEntry 3 }

ImpTeLinkDwdm OBJECT-TYPE

```
SYNTAX      TruthValue
MAX-ACCESS  read-create
STATUS      current
```

DESCRIPTION

"This object indicates if the LMP DWDM procedure is enabled on this TE link."

REFERENCE

"Link Management Protocol (LMP) for Dense Wavelength Division

Multiplexing (DWDM) Optical Line Systems, [RFC 4209](#)"
::= { lmpTeLinkEntry 4 }

lmpTeLinkOperStatus OBJECT-TYPE

SYNTAX INTEGER {
up(1), down(2), testing(3), init(4), degraded(5)
}

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The actual operational status of this TE link. The status is set to testing when the TE link is performing link verification. A degraded state indicates that there is no active control channel between the pair of nodes that form the endpoints of the TE link, but yet at least one data-bearing link on the TE link is allocated."

::= { lmpTeLinkEntry 5 }

lmpTeLinkRowStatus OBJECT-TYPE

SYNTAX RowStatus

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"This variable is used to create, modify, and/or delete a row in this table. None of the writable objects in a row can be changed if the status is active(1). All read-create objects must have valid and consistent values before the row can be activated."

::= { lmpTeLinkEntry 6 }

lmpTeLinkStorageType OBJECT-TYPE

SYNTAX StorageType

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The storage type for this conceptual row in the lmpTeLinkTable. Conceptual rows having the value 'permanent' need not allow write-access to any columnar object in the row."

DEFVAL { nonVolatile }

::= { lmpTeLinkEntry 7 }

-- End of lmpTeLinkTable

lmpGlobalLinkVerificationInterval OBJECT-TYPE

SYNTAX Unsigned32

UNITS "milliseconds"

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"This object indicates how often the link verification procedure is executed. The interval is in milliseconds. A value of 0 is used to indicate that the link verification procedure should not be executed. The interval specified in this object should be large enough to allow the verification procedure to be completed before the start of the next interval. Implementations should save the value of this object in persistent memory so that it survives restarts or reboot."

::= { lmpObjects 13 }

-- LMP Link Verification Table

lmpLinkVerificationTable OBJECT-TYPE

SYNTAX SEQUENCE OF LmpLinkVerificationEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"This table specifies TE link information associated with the LMP verification procedure."

::= { lmpObjects 14 }

lmpLinkVerificationEntry OBJECT-TYPE

SYNTAX LmpLinkVerificationEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"An entry in this table is created by an LMP-enabled device for every TE link that supports the LMP verification procedure."

INDEX { ifIndex }

::= { lmpLinkVerificationTable 1 }

LmpLinkVerificationEntry ::= SEQUENCE {

lmpLinkVerifyInterval LmpInterval,

lmpLinkVerifyDeadInterval LmpInterval,

lmpLinkVerifyTransportMechanism BITS,

lmpLinkVerifyAllLinks TruthValue,

lmpLinkVerifyTransmissionRate Unsigned32,

lmpLinkVerifyWavelength Unsigned32,

lmpLinkVerifyRowStatus RowStatus,

lmpLinkVerifyStorageType StorageType

}

ImpLinkVerifyInterval OBJECT-TYPE

SYNTAX LmpInterval
MAX-ACCESS read-create
STATUS current

DESCRIPTION

"This object specifies the VerifyInterval parameter used in the LMP link verification process. It indicates the interval at which the Test messages are sent."

REFERENCE

"Link Management Protocol, [RFC 4204](#)"

::= { ImpLinkVerificationEntry 1 }

ImpLinkVerifyDeadInterval OBJECT-TYPE

SYNTAX LmpInterval
MAX-ACCESS read-create
STATUS current

DESCRIPTION

"This object specifies the VerifyDeadInterval parameter used in the verification of the physical connectivity of data-bearing links. It specifies the observation period used to detect a Test message at the remote node."

REFERENCE

"Link Management Protocol, [RFC 4204](#)"

::= { ImpLinkVerificationEntry 2 }

ImpLinkVerifyTransportMechanism OBJECT-TYPE

SYNTAX BITS {
 -- All encoding types:
 payload(0),
 -- SONET/SDH encoding type:
 dccSectionOverheadBytes(1),
 dccLineOverheadBytes(2),
 j0Trace(3),
 j1Trace(4),
 j2Trace(5)
 }

MAX-ACCESS read-create
STATUS current

DESCRIPTION

"This defines the transport mechanism for the Test messages. The scope of this bit mask is restricted to each link encoding type. The local node will set the bits corresponding to the various mechanisms it can support for transmitting LMP Test messages. The receiver chooses the appropriate mechanism in the BeginVerifyAck message."

REFERENCE

"Link Management Protocol, [RFC 4204](#)"

Synchronous Optical Network (SONET)/Synchronous Digital
Hierarchy (SDH) Encoding for Link Management Protocol (LMP)
Test Messages, [RFC 4207](#)"

::= { lmpLinkVerificationEntry 3 }

lmpLinkVerifyAllLinks OBJECT-TYPE

SYNTAX TruthValue
MAX-ACCESS read-create
STATUS current

DESCRIPTION

"A value of true(2) for this object indicates that the
verification process checks all unallocated links, otherwise
only the new ports or component links that have been added to
this TE link are verified."

::= { lmpLinkVerificationEntry 4 }

lmpLinkVerifyTransmissionRate OBJECT-TYPE

SYNTAX Unsigned32
UNITS "bytes per second"
MAX-ACCESS read-create
STATUS current

DESCRIPTION

"This is the transmission rate of the data link over which
the Test messages will be transmitted and is expressed in
bytes per second."

REFERENCE

"Link Management Protocol, [RFC 4204](#)"

::= { lmpLinkVerificationEntry 5 }

lmpLinkVerifyWavelength OBJECT-TYPE

SYNTAX Unsigned32
UNITS "nanometers"
MAX-ACCESS read-create
STATUS current

DESCRIPTION

"This value corresponds to the wavelength at
which the Test messages will be transmitted and is
measured in nanometers (nm). If each data-bearing link
corresponds to a separate wavelength, then this value should
be set to 0."

REFERENCE

"Link Management Protocol, [RFC 4204](#)"

::= { lmpLinkVerificationEntry 6 }

lmpLinkVerifyRowStatus OBJECT-TYPE

SYNTAX RowStatus
MAX-ACCESS read-create
STATUS current

DESCRIPTION

"This variable is used to create, modify, and/or delete a row in this table. None of the writable objects in a row can be changed if the status is active(1). All read-create objects must have valid and consistent values before the row can be activated."

```
::= { lmpLinkVerificationEntry 7 }
```

lmpLinkVerifyStorageType OBJECT-TYPE

```
SYNTAX      StorageType
```

```
MAX-ACCESS  read-create
```

```
STATUS      current
```

DESCRIPTION

"The storage type for this conceptual row in the lmpLinkVerificationTable. Conceptual rows having the value 'permanent' need not allow write-access to any columnar object in the row."

```
DEFVAL      { nonVolatile }
```

```
::= { lmpLinkVerificationEntry 8 }
```

```
-- End of lmpLinkVerificationTable
```

```
-- LMP TE Link Performance Table
```

lmpTeLinkPerfTable OBJECT-TYPE

```
SYNTAX      SEQUENCE OF LmpTeLinkPerfEntry
```

```
MAX-ACCESS  not-accessible
```

```
STATUS      current
```

DESCRIPTION

"This table specifies LMP TE link performance counters."

```
::= { lmpObjects 15 }
```

lmpTeLinkPerfEntry OBJECT-TYPE

```
SYNTAX      LmpTeLinkPerfEntry
```

```
MAX-ACCESS  not-accessible
```

```
STATUS      current
```

DESCRIPTION

"An entry in this table is created by an LMP-enabled device for every TE link. lmpTeCounterDiscontinuityTime is used to indicate potential discontinuity for all counter objects in this table."

```
INDEX      { ifIndex }
```

```
::= { lmpTeLinkPerfTable 1 }
```

```
LmpTeLinkPerfEntry ::= SEQUENCE {
```

```
    lmpTeInOctets          Counter32,
```

```
    lmpTeOutOctets         Counter32,
```



```

    lmpTeBeginVerifyReceived      Counter32,
    lmpTeBeginVerifySent         Counter32,
    lmpTeBeginVerifyRetransmit   Counter32,
    lmpTeBeginVerifyAckReceived  Counter32,
    lmpTeBeginVerifyAckSent      Counter32,
    lmpTeBeginVerifyNackReceived Counter32,
    lmpTeBeginVerifyNackSent     Counter32,
    lmpTeEndVerifyReceived       Counter32,
    lmpTeEndVerifySent           Counter32,
    lmpTeEndVerifyRetransmit     Counter32,
    lmpTeEndVerifyAckReceived    Counter32,
    lmpTeEndVerifyAckSent        Counter32,
    lmpTeTestStatusSuccessReceived Counter32,
    lmpTeTestStatusSuccessSent   Counter32,
    lmpTeTestStatusSuccessRetransmit Counter32,
    lmpTeTestStatusFailureReceived Counter32,
    lmpTeTestStatusFailureSent   Counter32,
    lmpTeTestStatusFailureRetransmit Counter32,
    lmpTeTestStatusAckReceived   Counter32,
    lmpTeTestStatusAckSent       Counter32,
    lmpTeLinkSummaryReceived     Counter32,
    lmpTeLinkSummarySent         Counter32,
    lmpTeLinkSummaryRetransmit   Counter32,
    lmpTeLinkSummaryAckReceived  Counter32,
    lmpTeLinkSummaryAckSent      Counter32,
    lmpTeLinkSummaryNackReceived Counter32,
    lmpTeLinkSummaryNackSent     Counter32,
    lmpTeChannelStatusReceived   Counter32,
    lmpTeChannelStatusSent       Counter32,
    lmpTeChannelStatusRetransmit Counter32,
    lmpTeChannelStatusAckReceived Counter32,
    lmpTeChannelStatusAckSent     Counter32,
    lmpTeChannelStatusReqReceived Counter32,
    lmpTeChannelStatusReqSent     Counter32,
    lmpTeChannelStatusReqRetransmit Counter32,
    lmpTeChannelStatusRspReceived Counter32,
    lmpTeChannelStatusRspSent     Counter32,
    lmpTeCounterDiscontinuityTime TimeStamp
}

lmpTeInOctets OBJECT-TYPE
    SYNTAX      Counter32
    MAX-ACCESS  read-only
    STATUS      current
    DESCRIPTION
        "The total number of LMP message octets received for
         this TE link."
    ::= { lmpTeLinkPerfEntry 1 }

```


ImpTeOutOctets OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The total number of LMP message octets transmitted out
for this TE link."

::= { ImpTeLinkPerfEntry 2 }

ImpTeBeginVerifyReceived OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of BeginVerify messages that have
been received for this TE link."

::= { ImpTeLinkPerfEntry 3 }

ImpTeBeginVerifySent OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of BeginVerify messages that have
been sent for this TE link."

::= { ImpTeLinkPerfEntry 4 }

ImpTeBeginVerifyRetransmit OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of BeginVerify messages that
have been retransmitted for this TE link."

::= { ImpTeLinkPerfEntry 5 }

ImpTeBeginVerifyAckReceived OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of BeginVerifyAck messages that
have been received for this TE link."

::= { ImpTeLinkPerfEntry 6 }

ImpTeBeginVerifyAckSent OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of BeginVerifyAck messages that have been sent for this TE link."

::= { lmpTeLinkPerfEntry 7 }

lmpTeBeginVerifyNackReceived OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of BeginVerifyNack messages that have been received for this TE link."

::= { lmpTeLinkPerfEntry 8 }

lmpTeBeginVerifyNackSent OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of BeginVerifyNack messages that have been sent for this TE link."

::= { lmpTeLinkPerfEntry 9 }

lmpTeEndVerifyReceived OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of EndVerify messages that have been received for this TE link."

::= { lmpTeLinkPerfEntry 10 }

lmpTeEndVerifySent OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of EndVerify messages that have been sent for this TE link."

::= { lmpTeLinkPerfEntry 11 }

lmpTeEndVerifyRetransmit OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of EndVerify messages that


```
        have been retransmitted over this control channel."
 ::= { lmpTeLinkPerfEntry 12 }
```

lmpTeEndVerifyAckReceived OBJECT-TYPE

```
SYNTAX      Counter32
MAX-ACCESS  read-only
STATUS      current
DESCRIPTION
    "This object counts the number of EndVerifyAck messages that
     have been received for this TE link."
 ::= { lmpTeLinkPerfEntry 13 }
```

lmpTeEndVerifyAckSent OBJECT-TYPE

```
SYNTAX      Counter32
MAX-ACCESS  read-only
STATUS      current
DESCRIPTION
    "This object counts the number of EndVerifyAck messages that
     have been sent for this TE link."
 ::= { lmpTeLinkPerfEntry 14 }
```

lmpTeTestStatusSuccessReceived OBJECT-TYPE

```
SYNTAX      Counter32
MAX-ACCESS  read-only
STATUS      current
DESCRIPTION
    "This object counts the number of TestStatusSuccess messages
     that have been received for this TE link."
 ::= { lmpTeLinkPerfEntry 15 }
```

lmpTeTestStatusSuccessSent OBJECT-TYPE

```
SYNTAX      Counter32
MAX-ACCESS  read-only
STATUS      current
DESCRIPTION
    "This object counts the number of TestStatusSuccess messages
     that have been sent for this TE link."
 ::= { lmpTeLinkPerfEntry 16 }
```

lmpTeTestStatusSuccessRetransmit OBJECT-TYPE

```
SYNTAX      Counter32
MAX-ACCESS  read-only
STATUS      current
DESCRIPTION
    "This object counts the number of TestStatusSuccess messages
     that have been retransmitted for this TE link."
 ::= { lmpTeLinkPerfEntry 17 }
```


ImpTeTestStatusFailureReceived OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of TestStatusFailure messages that have been received for this TE link."

::= { ImpTeLinkPerfEntry 18 }

ImpTeTestStatusFailureSent OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of TestStatusFailure messages that have been sent for this TE link."

::= { ImpTeLinkPerfEntry 19 }

ImpTeTestStatusFailureRetransmit OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of TestStatusFailure messages that have been retransmitted on this TE link."

::= { ImpTeLinkPerfEntry 20 }

ImpTeTestStatusAckReceived OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of TestStatusAck messages that have been received for this TE link."

::= { ImpTeLinkPerfEntry 21 }

ImpTeTestStatusAckSent OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of TestStatusAck messages that have been sent for this TE link."

::= { ImpTeLinkPerfEntry 22 }

ImpTeLinkSummaryReceived OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of LinkSummary messages that have been received for this TE link."

::= { lmpTeLinkPerfEntry 23 }

lmpTeLinkSummarySent OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of LinkSummary messages that have been sent for this TE link."

::= { lmpTeLinkPerfEntry 24 }

lmpTeLinkSummaryRetransmit OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of LinkSummary messages that have been retransmitted over this control channel."

::= { lmpTeLinkPerfEntry 25 }

lmpTeLinkSummaryAckReceived OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of LinkSummaryAck messages that have been received for this TE link."

::= { lmpTeLinkPerfEntry 26 }

lmpTeLinkSummaryAckSent OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of LinkSummaryAck messages that have been sent for this TE link."

::= { lmpTeLinkPerfEntry 27 }

lmpTeLinkSummaryNackReceived OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of LinkSummaryNack messages that


```
        have been received for this TE link."
 ::= { lmpTeLinkPerfEntry 28 }
```

lmpTeLinkSummaryNackSent OBJECT-TYPE

```
SYNTAX      Counter32
MAX-ACCESS   read-only
STATUS       current
DESCRIPTION
    "This object counts the number of LinkSummaryNack messages that
    have been sent for this TE link."
 ::= { lmpTeLinkPerfEntry 29 }
```

lmpTeChannelStatusReceived OBJECT-TYPE

```
SYNTAX      Counter32
MAX-ACCESS   read-only
STATUS       current
DESCRIPTION
    "This object counts the number of ChannelStatus messages that
    have been received for this TE link."
 ::= { lmpTeLinkPerfEntry 30 }
```

lmpTeChannelStatusSent OBJECT-TYPE

```
SYNTAX      Counter32
MAX-ACCESS   read-only
STATUS       current
DESCRIPTION
    "This object counts the number of ChannelStatus messages that
    have been sent for this TE link."
 ::= { lmpTeLinkPerfEntry 31 }
```

lmpTeChannelStatusRetransmit OBJECT-TYPE

```
SYNTAX      Counter32
MAX-ACCESS   read-only
STATUS       current
DESCRIPTION
    "This object counts the number of ChannelStatus messages that
    have been retransmitted for this TE link."
 ::= { lmpTeLinkPerfEntry 32 }
```

lmpTeChannelStatusAckReceived OBJECT-TYPE

```
SYNTAX      Counter32
MAX-ACCESS   read-only
STATUS       current
DESCRIPTION
    "This object counts the number of ChannelStatusAck messages
    that have been received for this TE link."
 ::= { lmpTeLinkPerfEntry 33 }
```


ImpTeChannelStatusAckSent OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of ChannelStatus messages
that have been sent for this TE link."

::= { ImpTeLinkPerfEntry 34 }

ImpTeChannelStatusReqReceived OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of ChannelStatusRequest messages
that have been received for this TE link."

::= { ImpTeLinkPerfEntry 35 }

ImpTeChannelStatusReqSent OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of ChannelStatusRequest messages
that have been sent for this TE link."

::= { ImpTeLinkPerfEntry 36 }

ImpTeChannelStatusReqRetransmit OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of ChannelStatusRequest messages
that have been retransmitted for this TE link."

::= { ImpTeLinkPerfEntry 37 }

ImpTeChannelStatusRspReceived OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of ChannelStatusResponse messages
that have been received for this TE link."

::= { ImpTeLinkPerfEntry 38 }

ImpTeChannelStatusRspSent OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of ChannelStatusResponse messages that have been sent for this TE link."

::= { lmpTeLinkPerfEntry 39 }

lmpTeCounterDiscontinuityTime OBJECT-TYPE

SYNTAX TimeStamp

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The value of sysUpTime on the most recent occasion at which any one or more of this TE link's counters suffered a discontinuity. The relevant counters are the specific instances associated with this TE link of any Counter32 object contained in the lmpTeLinkPerfTable. If no such discontinuities have occurred since the last re-initialization of the local management subsystem, then this object contains a zero value."

::= { lmpTeLinkPerfEntry 40 }

-- End of lmpTeLinkPerfTable

-- LMP Data Link Table

lmpDataLinkTable OBJECT-TYPE

SYNTAX SEQUENCE OF LmpDataLinkEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"This table specifies the data-bearing links managed by the LMP."

::= { lmpObjects 16 }

lmpDataLinkEntry OBJECT-TYPE

SYNTAX LmpDataLinkEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"An entry in this table exists for each ifEntry that represents a data-bearing link. An ifEntry with an ifIndex must exist before the corresponding lmpDataLinkEntry is created. If an entry representing the data-bearing link is destroyed in the ifTable, then so is the corresponding entry in the lmpDataLinkTable. The administrative status value is controlled from the ifEntry. The index to this table is also used to get information in the componentLinkTable

of the TE-LINK-STD-MIB MIB module."

```
INDEX          { ifIndex }
::= { lmpDataLinkTable 1 }
```

```
LmpDataLinkEntry ::= SEQUENCE {
  lmpDataLinkType          INTEGER,
  lmpDataLinkAddressType   InetAddressType,
  lmpDataLinkIpAddr        InetAddress,
  lmpDataLinkRemoteIpAddress  InetAddress,
  lmpDataLinkRemoteIfId    InterfaceIndexOrZero,
  lmpDataLinkEncodingType  TeLinkEncodingType,
  lmpDataLinkActiveOperStatus  INTEGER,
  lmpDataLinkPassiveOperStatus  INTEGER,
  lmpDataLinkRowStatus      RowStatus,
  lmpDataLinkStorageType    StorageType
}
```

lmpDataLinkType OBJECT-TYPE

```
SYNTAX          INTEGER {
                    port(1),
                    componentLink(2)
                  }
```

```
MAX-ACCESS      read-only
STATUS          current
```

DESCRIPTION

"This attribute specifies whether this data-bearing link is a port or a component link. Component link are multiplex capable, whereas ports are not multiplex capable."

REFERENCE

"Link Management Protocol, [RFC 4204](#)"

```
::= { lmpDataLinkEntry 1 }
```

lmpDataLinkAddressType OBJECT-TYPE

```
SYNTAX          InetAddressType
```

```
MAX-ACCESS      read-create
STATUS          current
```

DESCRIPTION

"This attribute specifies the data-bearing link IP address type. If the data-bearing link is unnumbered, the address type must be set to unknown(0)."

```
::= { lmpDataLinkEntry 2 }
```

lmpDataLinkIpAddr OBJECT-TYPE

```
SYNTAX          InetAddress
```

```
MAX-ACCESS      read-create
STATUS          current
```

DESCRIPTION

"The local Internet address for numbered links. The type

of this address is determined by the value of
lmpDataLinkAddressType object.

For IPv4 and IPv6 numbered links, this object represents
the local IP address associated with the data-bearing
link. For an unnumbered link, the local address is
of type unknown and this object is set to the zero-length
string and the ifIndex object then identifies the
unnumbered address."

::= { lmpDataLinkEntry 3 }

lmpDataLinkRemoteIpAddress OBJECT-TYPE

SYNTAX InetAddress
MAX-ACCESS read-create
STATUS current

DESCRIPTION

"The remote Internet address for numbered data-bearing links.
The type of this address is determined by the
lmpDataLinkAddressType object.

For IPv4 and IPv6 numbered links, this object represents the
remote IP address associated with the data-bearing link. For
an unnumbered link, the remote address is of type unknown
and this object is set to the zero-length string and the
lmpDataLinkRemoteIfId object then identifies the unnumbered
address.

This information is either configured manually or
communicated by the remote node during the link verification
procedure."

::= { lmpDataLinkEntry 4 }

lmpDataLinkRemoteIfId OBJECT-TYPE

SYNTAX InterfaceIndexOrZero
MAX-ACCESS read-create
STATUS current

DESCRIPTION

"Interface identifier of the remote end point. This
information is either configured manually or
communicated by the remote node during the link verification
procedure."

::= { lmpDataLinkEntry 5 }

lmpDataLinkEncodingType OBJECT-TYPE

SYNTAX TeLinkEncodingType
MAX-ACCESS read-create
STATUS current

DESCRIPTION

"The encoding type of the data-bearing link."

REFERENCE

"Generalized MPLS Signaling Functional Description, [RFC 3471](#)"

::= { lmpDataLinkEntry 6 }

lmpDataLinkActiveOperStatus OBJECT-TYPE

SYNTAX INTEGER {
upAlloc(1),
upFree(2),
down(3),
testing(4) }

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The actual operational status of this data-bearing link
(active FSM)."

REFERENCE

"Link Management Protocol, [RFC 4204](#)"

::= { lmpDataLinkEntry 7 }

lmpDataLinkPassiveOperStatus OBJECT-TYPE

SYNTAX INTEGER {
upAlloc(1),
upFree(2),
down(3),
psvTst(4) }

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The actual operational status of this data-bearing link
(passive FSM)."

REFERENCE

"Link Management Protocol, [RFC 4204](#)"

::= { lmpDataLinkEntry 8 }

lmpDataLinkRowStatus OBJECT-TYPE

SYNTAX RowStatus

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"This variable is used to create, modify, and/or
delete a row in this table. None of the writable objects
in a row can be changed if the status is active(1).
All read-create objects must have valid and consistent
values before the row can be activated."

::= { lmpDataLinkEntry 9 }

lmpDataLinkStorageType OBJECT-TYPE


```
SYNTAX          StorageType
MAX-ACCESS      read-create
STATUS          current
```

DESCRIPTION

"The storage type for this conceptual row in the
lmpDataLinkTable. Conceptual rows having the value
'permanent' need not allow write-access to any
columnar object in the row."

```
DEFVAL          { nonVolatile }
::= { lmpDataLinkEntry 10 }
```

```
-- End of lmpDataLinkTable
```

```
-- LMP Data Link Performance Table
```

```
lmpDataLinkPerfTable OBJECT-TYPE
```

```
SYNTAX          SEQUENCE OF LmpDataLinkPerfEntry
MAX-ACCESS      not-accessible
STATUS          current
```

DESCRIPTION

"This table specifies the data-bearing links LMP performance
counters."

```
::= { lmpObjects 17 }
```

```
lmpDataLinkPerfEntry OBJECT-TYPE
```

```
SYNTAX          LmpDataLinkPerfEntry
MAX-ACCESS      not-accessible
STATUS          current
```

DESCRIPTION

"An entry in this table contains information about
the LMP performance counters for the data-bearing links.
lmpDataLinkDiscontinuityTime is used to indicate potential
discontinuity for all counter objects in this table."

```
INDEX          { ifIndex }
::= { lmpDataLinkPerfTable 1 }
```

```
LmpDataLinkPerfEntry ::= SEQUENCE {
```

```
    lmpDataLinkTestReceived      Counter32,
    lmpDataLinkTestSent          Counter32,
    lmpDataLinkActiveTestSuccess Counter32,
    lmpDataLinkActiveTestFailure Counter32,
    lmpDataLinkPassiveTestSuccess Counter32,
    lmpDataLinkPassiveTestFailure Counter32,
    lmpDataLinkDiscontinuityTime TimeStamp
```

```
}
```

```
lmpDataLinkTestReceived OBJECT-TYPE
```


SYNTAX Counter32
MAX-ACCESS read-only
STATUS current

DESCRIPTION

"This object counts the number of Test messages that have
been received on this data-bearing link."

::= { lmpDataLinkPerfEntry 1 }

lmpDataLinkTestSent OBJECT-TYPE

SYNTAX Counter32
MAX-ACCESS read-only
STATUS current

DESCRIPTION

"This object counts the number of Test messages that have
been sent on this data-bearing link."

::= { lmpDataLinkPerfEntry 2 }

lmpDataLinkActiveTestSuccess OBJECT-TYPE

SYNTAX Counter32
MAX-ACCESS read-only
STATUS current

DESCRIPTION

"This object counts the number of data-bearing link tests
that were successful on the active side of this data-
bearing link."

::= { lmpDataLinkPerfEntry 3 }

lmpDataLinkActiveTestFailure OBJECT-TYPE

SYNTAX Counter32
MAX-ACCESS read-only
STATUS current

DESCRIPTION

"This object counts the number of data-bearing link tests
that failed on the active side of this data-bearing link."

::= { lmpDataLinkPerfEntry 4 }

lmpDataLinkPassiveTestSuccess OBJECT-TYPE

SYNTAX Counter32
MAX-ACCESS read-only
STATUS current

DESCRIPTION

"This object counts the number of data-bearing link tests
that were successful on the passive side of this data-
bearing link."

::= { lmpDataLinkPerfEntry 5 }

lmpDataLinkPassiveTestFailure OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts the number of data-bearing link tests that failed on the passive side of this data-bearing link."

::= { lmpDataLinkPerfEntry 6 }

lmpDataLinkDiscontinuityTime OBJECT-TYPE

SYNTAX TimeStamp

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The value of sysUpTime on the most recent occasion at which any one or more of this data-bearing link's counters suffered a discontinuity. The relevant counters are the specific instances associated with this data-bearing link of any Counter32 object contained in the lmpDataLinkPerfTable. If no such discontinuities have occurred since the last re-initialization of the local management subsystem, then this object contains a zero value."

::= { lmpDataLinkPerfEntry 7 }

-- End of lmpDataLinkPerfTable

-- Notification Configuration

lmpNotificationMaxRate OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"The LMP notification rate depends on the size of the network, the type of links, the network configuration, the reliability of the network, etc."

When designing this MIB, care has been taken to minimize the amount of notifications generated for LMP purposes. Wherever possible, notifications are state driven, meaning the notifications are sent only when the system changes state. The only notifications that are repeated and could cause a problem as far as congestion is concerned are the ones associated with data link verification.

Without any considerations to handling of these notifications, a problem may arise if the number of data links is high. Since the data link verification notifications can happen only once per data link per link verification interval, the notification rate should be sustainable if one

chooses an appropriate link verification interval for a given network configuration. For instance, a network of 100 nodes with 5 links of 128 wavelengths each and a link verification of 1 minute with no more than 10% of the links failed at any given time would have 1 notification per second sent from each node, or 100 notifications per second for the whole network. The rest of the notifications are negligible compared to this number.

To alleviate the congestion problem, the `ImpNotificationMaxRate` object can be used to implement a throttling mechanism. It is also possible to enable/disable certain type of notifications.

This variable indicates the maximum number of notifications issued per minute. If events occur more rapidly, the implementation may simply fail to emit these notifications during that period, or may queue them until an appropriate time. A value of 0 means no throttling is applied and events may be notified at the rate at which they occur.

Implementations should save the value of this object in persistent memory so that it survives restarts or reboot."

::= { ImpObjects 18 }

`ImpLinkPropertyNotificationsEnabled` OBJECT-TYPE

SYNTAX TruthValue

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"If this object is true, then it enables the generation of `ImpTeLinkPropertyMismatch` and `ImpDataLinkPropertyMismatch` notifications, otherwise these notifications are not emitted. Implementations should save the value of this object in persistent memory so that it survives restarts or reboot."

DEFVAL { false }

::= { ImpObjects 19 }

`ImpUnprotectedNotificationsEnabled` OBJECT-TYPE

SYNTAX TruthValue

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"If this object is true, then it enables the generation of `ImpUnprotected` notifications, otherwise these notifications are not emitted. Implementations should save the value of this object in


```
    persistent memory so that it survives restarts or reboot."
DEFVAL      { false }
::= { lmpObjects 20 }
```

lmpCcUpDownNotificationsEnabled OBJECT-TYPE

```
SYNTAX      TruthValue
MAX-ACCESS   read-write
STATUS       current
DESCRIPTION
    "If this object is true, then it enables the generation of
    lmpControlChannelUp and lmpControlChannelDown notifications,
    otherwise these notifications are not emitted.
    Implementations should save the value of this object in
    persistent memory so that it survives restarts or reboot."
DEFVAL      { false }
::= { lmpObjects 21 }
```

lmpTeLinkNotificationsEnabled OBJECT-TYPE

```
SYNTAX      TruthValue
MAX-ACCESS   read-write
STATUS       current
DESCRIPTION
    "If this object is true, then it enables the
    generation of lmpTeLinkDegraded and lmpTeLinkNotDegraded
    notifications, otherwise these notifications are not emitted.
    Implementations should save the value of this object in
    persistent memory so that it survives restarts or reboot."
DEFVAL      { false }
::= { lmpObjects 22 }
```

lmpDataLinkNotificationsEnabled OBJECT-TYPE

```
SYNTAX      TruthValue
MAX-ACCESS   read-write
STATUS       current
DESCRIPTION
    "If this object is true, then it enables the
    generation of lmpDataLinkVerificationFailure
    notification, otherwise these notifications are not emitted.
    Implementations should save the value of this object in
    persistent memory so that it survives restarts or reboot."
DEFVAL      { false }
::= { lmpObjects 23 }
```

-- Notifications

-- Link Property Mismatch Notifications

ImpTeLinkPropertyMismatch NOTIFICATION-TYPE

OBJECTS { teLinkRemoteIpAddr,
 teLinkIncomingIfId }

STATUS current

DESCRIPTION

"This notification is generated when a TE link property mismatch is detected on the node. The received remote TE link ID of the misconfigured TE link is represented by either teLinkRemoteIpAddr or teLinkIncomingIfId depending on whether the TE link is numbered or unnumbered. This notification should not be sent unless ImpLinkPropertyNotificationsEnabled is true. It is recommended that this notification be reported only the first time a mismatch is detected. Otherwise, for a given TE link, this notification can occur no more than once per verification interval (ImpGlobalLinkVerificationInterval)."

::= { ImpNotifications 1 }

ImpDataLinkPropertyMismatch NOTIFICATION-TYPE

OBJECTS { ImpDataLinkType, ImpDataLinkRemoteIfId }

STATUS current

DESCRIPTION

"This notification is generated when a data-bearing link property mismatch is detected on the node. ImpDataLinkType is used to identify the local identifiers associated with the data link (the data link interface index can be used to determine the TE link interface index as this relationship is captured in the interface stack table). The remote entity interface ID is the remote entity interface ID received in the LinkSummary message. This notification should not be sent unless ImpLinkPropertyNotificationsEnabled is true. It is recommended that this notification be reported only the first time a mismatch is detected. Otherwise, for a given data link, this notification can occur no more than once per verification interval (ImpGlobalLinkVerificationInterval)."

::= { ImpNotifications 2 }

-- Neighbor Notification**ImpUnprotected NOTIFICATION-TYPE**

OBJECTS { ImpCcNbrNodeId }

STATUS current

DESCRIPTION

"This notification is generated when there are more than one control channels between LMP neighbors and the last redundant control channel has failed. If the remaining operational control channel fails, then there will be no more control channels between the pair of nodes and all the TE links


```
        between the pair of nodes will go to degraded state.  This
        notification should not be sent unless
        lmpUnprotectedNotificationsEnabled is set to true."
 ::= { lmpNotifications 3 }
```

-- Control Channel Notifications

```
lmpControlChannelUp NOTIFICATION-TYPE
  OBJECTS      { lmpCcAdminStatus, lmpCcOperStatus }
  STATUS       current
  DESCRIPTION
    "This notification is generated when a control
    channel transitions to the up operational state.  This
    notification should not be sent unless
    lmpCcUpDownNotificationsEnabled is true."
 ::= { lmpNotifications 4 }
```

```
lmpControlChannelDown NOTIFICATION-TYPE
  OBJECTS      { lmpCcAdminStatus, lmpCcOperStatus }
  STATUS       current
  DESCRIPTION
    "This notification is generated when a control channel
    transitions out of the up operational state.  This
    notification should not be sent unless
    lmpCcUpDownNotificationsEnabled is true."
 ::= { lmpNotifications 5 }
```

-- TE Link Notification

```
lmpTeLinkDegraded NOTIFICATION-TYPE
  OBJECTS      { lmpTeLinkOperStatus }
  STATUS       current
  DESCRIPTION
    "This notification is generated when a lmpTeLinkOperStatus
    object for a TE link enters the degraded state.  This
    notification should not be sent unless
    lmpTeLinkNotificationsEnabled is true."
 ::= { lmpNotifications 6 }
```

```
lmpTeLinkNotDegraded NOTIFICATION-TYPE
  OBJECTS      { lmpTeLinkOperStatus }
  STATUS       current
  DESCRIPTION
    "This notification is generated when a lmpTeLinkOperStatus
    object for a TE link leaves the degraded state.  This
    notification should not be sent unless
    lmpTeLinkNotificationsEnabled is true."
 ::= { lmpNotifications 7 }
```


-- Data-bearing Link Notification

ImpDataLinkVerificationFailure NOTIFICATION-TYPE

OBJECTS { ImpDataLinkActiveOperStatus,
ImpDataLinkPassiveOperStatus }

STATUS current

DESCRIPTION

"This notification is generated when a data-bearing link verification fails. This notification should not be sent unless ImpDataLinkNotificationsEnabled is true. For a given data link, this notification can occur no more than once per verification interval (ImpGlobalLinkVerificationInterval)."

::= { ImpNotifications 8 }

-- End of notifications

-- Module compliance

ImpCompliances

OBJECT IDENTIFIER ::= { ImpConformance 1 }

ImpGroups

OBJECT IDENTIFIER ::= { ImpConformance 2 }

ImpModuleFullCompliance MODULE-COMPLIANCE

STATUS current

DESCRIPTION

"Compliance statement for agents that support the configuration and monitoring of LMP MIB."

MODULE -- this module

MANDATORY-GROUPS { ImpNodeGroup,
ImpControlChannelGroup,
ImpLinkPropertyCorrelationGroup,
ImpPerfGroup,
ImpTeLinkGroup,
ImpDataLinkGroup }

GROUP ImpCcIsNotInterfaceGroup

DESCRIPTION

"This group is mandatory for devices that support control channels that are not interfaces, in addition to ImpControlChannelGroup. The following constraints apply: ImpCcIsIf must at least be read-only returning false(1)."

GROUP ImpCcIsInterfaceGroup

DESCRIPTION

"This group is mandatory for devices that support control channels that are interfaces, in addition to `ImpControlChannelGroup`. The following constraints apply: `ImpCcIsIf` must at least be read-only returning `true(2)`."

GROUP `ImpLinkVerificationGroup`

DESCRIPTION

"This group is mandatory for devices that support the link verification procedure."

GROUP `ImpNotificationGroup`

DESCRIPTION

"This group is optional."

-- `ImpNbrTable`

OBJECT `ImpNbrRowStatus`

SYNTAX `RowStatus { active(1), notInService(2) }`

WRITE-SYNTAX `RowStatus { active(1), notInService(2),
createAndGo(4), destroy(6) }`

DESCRIPTION

"Support for `notReady(3)` and `createAndWait(5)` is not required."

-- `ImpControlChannelTable`

OBJECT `ImpCcRemoteAddressType`

SYNTAX `INTEGER { unknown(0), ipv4(1), ipv6(2) }`

DESCRIPTION

"Only `ipv4(1)` and `ipv6(2)` address types need to be supported for non-point-to-point configurations."

OBJECT `ImpCcRemoteIpAddr`

SYNTAX `InetAddress (SIZE(0|4|16))`

DESCRIPTION

"The size of the IP address depends on the address type."

OBJECT `ImpCcRowStatus`

SYNTAX `RowStatus { active(1), notInService(2) }`

WRITE-SYNTAX `RowStatus { active(1), notInService(2),
createAndGo(4), destroy(6) }`

DESCRIPTION

"Support for `notReady(3)` and `createAndWait(5)` is not required."

OBJECT `ImpCcOperStatus`

SYNTAX `INTEGER { up(1), down(2) }`

DESCRIPTION

"A value of configSnd(3), configRcv(4), active(5),
goingDown(6) need not be supported."

-- ImpTeLinkTable

OBJECT ImpTeLinkOperStatus
SYNTAX INTEGER { up(1), down(2), degraded(5) }
DESCRIPTION
 "The testing(3) and init(4) state need not be supported."

OBJECT ImpTeLinkRowStatus
SYNTAX RowStatus { active(1), notInService(2) }
WRITE-SYNTAX RowStatus { active(1), notInService(2),
 createAndGo(4), destroy(6) }
DESCRIPTION
 "Support for notReady(3) and createAndWait(5) is
 not required."

-- ImpDataLinkTable

OBJECT ImpDataLinkActiveOperStatus
SYNTAX INTEGER { upAlloc(1), upFree(2), down(3) }
DESCRIPTION
 "A value of testing(4) need not be supported."

OBJECT ImpDataLinkPassiveOperStatus
SYNTAX INTEGER { upAlloc(1), upFree(2), down(3) }
DESCRIPTION
 "A value of psvTst(4) need not be supported."

OBJECT ImpDataLinkRowStatus
SYNTAX RowStatus { active(1), notInService(2) }
WRITE-SYNTAX RowStatus { active(1), notInService(2),
 createAndGo(4), destroy(6) }
DESCRIPTION
 "Support for notReady(3) and createAndWait(5) is
 not required."

::= { ImpCompliances 1 }

ImpModuleReadOnlyCompliance MODULE-COMPLIANCE

STATUS current

DESCRIPTION

 "Compliance statement for agents that support the
 monitoring of the LMP MIB."

MODULE -- this module

-- The mandatory groups have to be implemented

-- by all LMP-enabled devices. However, they may all be supported
-- as read-only objects in the case where manual
-- configuration is not supported.

MANDATORY-GROUPS { lmpNodeGroup,
 lmpControlChannelGroup,
 lmpLinkPropertyCorrelationGroup,
 lmpPerfGroup,
 lmpTeLinkGroup,
 lmpDataLinkGroup }

GROUP lmpCcIsNotInterfaceGroup

DESCRIPTION

"This group is mandatory for devices that support
control channels that are not interfaces, in addition to
lmpControlChannelGroup. The following constraints apply:
lmpCcIsIf must at least be read-only returning false(1)."

GROUP lmpCcIsInterfaceGroup

DESCRIPTION

"This group is mandatory for devices that support
control channels that are interfaces, in addition to
lmpControlChannelGroup. The following constraints apply:
lmpCcIsIf must at least be read-only returning true(2)."

GROUP lmpLinkVerificationGroup

DESCRIPTION

"This group is mandatory for devices that support
the link verification procedure."

GROUP lmpNotificationGroup

DESCRIPTION

"This group is optional."

-- Scalars

OBJECT lmpAdminStatus

MIN-ACCESS read-only

DESCRIPTION

"Write access is not required."

OBJECT lmpGlobalLinkVerificationInterval

MIN-ACCESS read-only

DESCRIPTION

"Write access is not required."

OBJECT lmpCcHelloIntervalDefault

MIN-ACCESS read-only

DESCRIPTION

"Write access is not required."

OBJECT lmpCcHelloIntervalDefaultMin

MIN-ACCESS read-only

DESCRIPTION

"Write access is not required."

OBJECT lmpCcHelloIntervalDefaultMax

MIN-ACCESS read-only

DESCRIPTION

"Write access is not required."

OBJECT lmpCcHelloDeadIntervalDefault

MIN-ACCESS read-only

DESCRIPTION

"Write access is not required."

OBJECT lmpCcHelloDeadIntervalDefaultMin

MIN-ACCESS read-only

DESCRIPTION

"Write access is not required."

OBJECT lmpCcHelloDeadIntervalDefaultMax

MIN-ACCESS read-only

DESCRIPTION

"Write access is not required."

OBJECT lmpNotificationMaxRate

MIN-ACCESS read-only

DESCRIPTION

"Write access is not required."

-- lmpNbrTable

OBJECT lmpNbrRetransmitInterval

MIN-ACCESS read-only

DESCRIPTION

"Write access is not required."

OBJECT lmpNbrRetryLimit

MIN-ACCESS read-only

DESCRIPTION

"Write access is not required."

OBJECT lmpNbrRetransmitDelta

MIN-ACCESS read-only

DESCRIPTION

"Write access is not required."

OBJECT lmpNbrRowStatus
SYNTAX RowStatus { active(1) }
MIN-ACCESS read-only
DESCRIPTION

"Write access is not required, and active(1) is the only status that needs to be supported."

OBJECT lmpNbrStorageType
MIN-ACCESS read-only
DESCRIPTION

"Write access is not required."

-- lmpControlChannelTable

OBJECT lmpCcUnderlyingIfIndex
MIN-ACCESS read-only
DESCRIPTION

"Write access is not required."

OBJECT lmpCcIsIf
MIN-ACCESS read-only
DESCRIPTION

"Write access is not required."

OBJECT lmpCcNbrNodeId
MIN-ACCESS read-only
DESCRIPTION

"Write access is not required."

OBJECT lmpCcRemoteAddressType
SYNTAX INTEGER { unknown(0), ipv4(1), ipv6(2) }
MIN-ACCESS read-only
DESCRIPTION

"Only ipv4(1) and ipv6(2) address types need to be supported for non-point-to-point configurations."

OBJECT lmpCcRemoteIpAddr
SYNTAX InetAddress (SIZE(0|4|16))
MIN-ACCESS read-only
DESCRIPTION

"The size of the IP address depends on the address type."

OBJECT lmpCcSetupRole
MIN-ACCESS read-only
DESCRIPTION

"Write access is not required."


```
OBJECT      ImpCcAuthentication
MIN-ACCESS  read-only
DESCRIPTION
    "Write access is not required."

OBJECT      ImpCcHelloIntervalMin
MIN-ACCESS  read-only
DESCRIPTION
    "Write access is not required."

OBJECT      ImpCcHelloIntervalMax
MIN-ACCESS  read-only
DESCRIPTION
    "Write access is not required."

OBJECT      ImpCcHelloDeadIntervalMin
MIN-ACCESS  read-only
DESCRIPTION
    "Write access is not required."

OBJECT      ImpCcHelloDeadIntervalMax
MIN-ACCESS  read-only
DESCRIPTION
    "Write access is not required."

OBJECT      ImpCcRowStatus
SYNTAX      RowStatus { active(1) }
MIN-ACCESS  read-only
DESCRIPTION
    "Write access is not required, and active(1) is the
    only status that needs to be supported."

OBJECT      ImpCcOperStatus
SYNTAX      INTEGER { up(1), down(2) }
DESCRIPTION
    "A value of configSnd(3), configRcv(4), active(5),
    goingDown(6) need not be supported."

OBJECT      ImpCcStorageType
MIN-ACCESS  read-only
DESCRIPTION
    "Write access is not required."

-- ImpLinkVerificationTable

OBJECT      ImpLinkVerifyInterval
MIN-ACCESS  read-only
DESCRIPTION
```


"Write access is not required."

OBJECT ImpLinkVerifyDeadInterval
MIN-ACCESS read-only
DESCRIPTION

"Write access is not required."

OBJECT ImpLinkVerifyAllLinks
MIN-ACCESS read-only
DESCRIPTION

"Write access is not required."

-- ImpTeLinkTable

OBJECT ImpTeLinkNbrRemoteNodeId
MIN-ACCESS read-only
DESCRIPTION

"Write access is not required if the link verification
 procedure is enabled."

OBJECT ImpTeLinkVerification
MIN-ACCESS read-only
DESCRIPTION

"Write access is not required."

OBJECT ImpTeLinkFaultManagement
MIN-ACCESS read-only
DESCRIPTION

"Write access is not required."

OBJECT ImpTeLinkDwdm
MIN-ACCESS read-only
DESCRIPTION

"Write access is not required."

OBJECT ImpTeLinkOperStatus
SYNTAX INTEGER { up(1), down(2), degraded(5) }
DESCRIPTION

"The testing(3) and init(4) state need not be supported."

OBJECT ImpTeLinkRowStatus
SYNTAX RowStatus { active(1) }
MIN-ACCESS read-only
DESCRIPTION

"Write access is not required, and active(1) is the
 only status that needs to be supported."

OBJECT ImpTeLinkStorageType


```
MIN-ACCESS  read-only
DESCRIPTION
    "Write access is not required."

-- lmpTeLinkVerificationTable

OBJECT      lmpLinkVerifyTransmissionRate
MIN-ACCESS  read-only
DESCRIPTION
    "Write access is not required."

OBJECT      lmpLinkVerifyWavelength
MIN-ACCESS  read-only
DESCRIPTION
    "Write access is not required."

OBJECT      lmpLinkVerifyRowStatus
SYNTAX      RowStatus { active(1) }
MIN-ACCESS  read-only
DESCRIPTION
    "Write access is not required, and active(1) is the
    only status that needs to be supported."

OBJECT      lmpLinkVerifyStorageType
MIN-ACCESS  read-only
DESCRIPTION
    "Write access is not required."

-- lmpDataLinkTable

OBJECT      lmpDataLinkAddressType
SYNTAX      INTEGER { unknown(0), ipv4(1), ipv6(2) }
MIN-ACCESS  read-only
DESCRIPTION
    "Only ipv4(1) and ipv6(2) address types need to be
    supported for numbered links.  For unnumbered links, the
    unknown(0) address type needs to be supported."

OBJECT      lmpDataLinkIpAddr
SYNTAX      InetAddress (SIZE(0|4|16))
MIN-ACCESS  read-only
DESCRIPTION
    "Size of data-bearing link IP address depends on type
    of data-bearing link.  Data-bearing link IP address size
    is zero if link is unnumbered, four if link IP address is
    IPv4, and sixteen if link IP address is IPv6."

OBJECT      lmpDataLinkRemoteIpAddress
```


SYNTAX InetAddress (SIZE(0|4|16))
MIN-ACCESS read-only
DESCRIPTION
 "Write access is not required if the link verification
 procedure is enabled."

OBJECT ImpDataLinkRemoteIfId
MIN-ACCESS read-only
DESCRIPTION
 "Write access is not required if the link verification
 procedure is enabled."

OBJECT ImpDataLinkEncodingType
MIN-ACCESS read-only
DESCRIPTION
 "Write access is not required."

OBJECT ImpDataLinkActiveOperStatus
SYNTAX INTEGER { upAlloc(1), upFree(2), down(3) }
DESCRIPTION
 "A value of testing(4) need not be supported."

OBJECT ImpDataLinkPassiveOperStatus
SYNTAX INTEGER { upAlloc(1), upFree(2), down(3) }
DESCRIPTION
 "A value of psvTst(4) need not be supported."

OBJECT ImpDataLinkRowStatus
SYNTAX RowStatus { active(1) }
MIN-ACCESS read-only
DESCRIPTION
 "Write access is not required, and active(1) is the
 only status that needs to be supported."

OBJECT ImpDataLinkStorageType
MIN-ACCESS read-only
DESCRIPTION
 "Write access is not required."

::= { ImpCompliances 2 }

-- Units of conformance

ImpNodeGroup OBJECT-GROUP
 OBJECTS { ImpAdminStatus,
 ImpOperStatus,
 ImpNbrAdminStatus,
 ImpNbrOperStatus,


```
        ImpNbrRowStatus,
        ImpNbrStorageType,
        ImpUnprotectedNotificationsEnabled,
        ImpNotificationMaxRate
    }
STATUS    current
DESCRIPTION
    "Collection of objects that represent LMP node
    configuration."
 ::= { lmpGroups 1 }

lmpControlChannelGroup OBJECT-GROUP
OBJECTS {
    ImpNbrRetransmitInterval,
    ImpNbrRetryLimit,
    ImpNbrRetransmitDelta,
    ImpNbrAdminStatus,
    ImpNbrOperStatus,
    ImpNbrRowStatus,
    ImpNbrStorageType,
    ImpCcHelloIntervalDefault,
    ImpCcHelloIntervalDefaultMin,
    ImpCcHelloIntervalDefaultMax,
    ImpCcHelloDeadIntervalDefault,
    ImpCcHelloDeadIntervalDefaultMin,
    ImpCcHelloDeadIntervalDefaultMax,
    ImpCcNbrNodeId,
    ImpCcRemoteId,
    ImpCcRemoteAddressType,
    ImpCcRemoteIpAddr,
    ImpCcSetupRole,
    ImpCcAuthentication,
    ImpCcHelloInterval,
    ImpCcHelloIntervalMin,
    ImpCcHelloIntervalMax,
    ImpCcHelloIntervalNegotiated,
    ImpCcHelloDeadInterval,
    ImpCcHelloDeadIntervalMin,
    ImpCcHelloDeadIntervalMax,
    ImpCcHelloDeadIntervalNegotiated,
    ImpCcOperStatus,
    ImpCcRowStatus,
    ImpCcStorageType,
    ImpCcUpDownNotificationsEnabled
}
STATUS    current
DESCRIPTION
    "Objects that can be used to configure LMP interface."
```



```
::= { lmpGroups 2 }
```

```
lmpCcIsInterfaceGroup OBJECT-GROUP
```

```
OBJECTS { lmpCcIsIf }
```

```
STATUS current
```

```
DESCRIPTION
```

```
    "Objects that can be used to configure control channels  
    that are interfaces."
```

```
::= { lmpGroups 3 }
```

```
lmpCcIsNotInterfaceGroup OBJECT-GROUP
```

```
OBJECTS { lmpCcUnderlyingIfIndex,  
          lmpCcIsIf,  
          lmpCcLastChange,  
          lmpCcAdminStatus  
        }
```

```
STATUS current
```

```
DESCRIPTION
```

```
    "Objects that can be used to configure control channels  
    that are not interfaces."
```

```
::= { lmpGroups 4 }
```

```
lmpLinkPropertyCorrelationGroup OBJECT-GROUP
```

```
OBJECTS { lmpLinkPropertyNotificationsEnabled }
```

```
STATUS current
```

```
DESCRIPTION
```

```
    "Collection of objects used to configure the link  
    property correlation procedure."
```

```
::= { lmpGroups 5 }
```

```
lmpLinkVerificationGroup OBJECT-GROUP
```

```
OBJECTS { lmpGlobalLinkVerificationInterval,  
          lmpLinkVerifyInterval,  
          lmpLinkVerifyDeadInterval,  
          lmpLinkVerifyTransportMechanism,  
          lmpLinkVerifyAllLinks,  
          lmpLinkVerifyTransmissionRate,  
          lmpLinkVerifyWavelength,  
          lmpLinkVerifyRowStatus,  
          lmpLinkVerifyStorageType,  
          lmpDataLinkNotificationsEnabled  
        }
```

```
STATUS current
```

```
DESCRIPTION
```

```
    "Collection of objects that represent the link  
    verification procedure configuration."
```

```
::= { lmpGroups 6 }
```



```
ImpPerfGroup OBJECT-GROUP
  OBJECTS {
    ImpCcInOctets,
    ImpCcInDiscards,
    ImpCcInErrors,
    ImpCcOutOctets,
    ImpCcOutDiscards,
    ImpCcOutErrors,
    ImpCcConfigReceived,
    ImpCcConfigSent,
    ImpCcConfigRetransmit,
    ImpCcConfigAckReceived,
    ImpCcConfigAckSent,
    ImpCcConfigNackSent,
    ImpCcConfigNackReceived,
    ImpCcHelloReceived,
    ImpCcHelloSent,
    ImpCcBeginVerifyReceived,
    ImpCcBeginVerifySent,
    ImpCcBeginVerifyRetransmit,
    ImpCcBeginVerifyAckReceived,
    ImpCcBeginVerifyAckSent,
    ImpCcBeginVerifyNackReceived,
    ImpCcBeginVerifyNackSent,
    ImpCcEndVerifyReceived,
    ImpCcEndVerifySent,
    ImpCcEndVerifyRetransmit,
    ImpCcEndVerifyAckReceived,
    ImpCcEndVerifyAckSent,
    ImpCcTestStatusSuccessReceived,
    ImpCcTestStatusSuccessSent,
    ImpCcTestStatusSuccessRetransmit,
    ImpCcTestStatusFailureReceived,
    ImpCcTestStatusFailureSent,
    ImpCcTestStatusFailureRetransmit,
    ImpCcTestStatusAckReceived,
    ImpCcTestStatusAckSent,
    ImpCcLinkSummaryReceived,
    ImpCcLinkSummarySent,
    ImpCcLinkSummaryRetransmit,
    ImpCcLinkSummaryAckReceived,
    ImpCcLinkSummaryAckSent,
    ImpCcLinkSummaryNackReceived,
    ImpCcLinkSummaryNackSent,
    ImpCcChannelStatusReceived,
    ImpCcChannelStatusSent,
    ImpCcChannelStatusRetransmit,
    ImpCcChannelStatusAckReceived,
    ImpCcChannelStatusAckSent,
  }
```


ImpCcChannelStatusReqReceived,
ImpCcChannelStatusReqSent,
ImpCcChannelStatusReqRetransmit,
ImpCcChannelStatusRspReceived,
ImpCcChannelStatusRspSent,
ImpCcCounterDiscontinuityTime,
ImpTeInOctets,
ImpTeOutOctets,
ImpTeBeginVerifyReceived,
ImpTeBeginVerifySent,
ImpTeBeginVerifyRetransmit,
ImpTeBeginVerifyAckReceived,
ImpTeBeginVerifyAckSent,
ImpTeBeginVerifyNackReceived,
ImpTeBeginVerifyNackSent,
ImpTeEndVerifyReceived,
ImpTeEndVerifySent,
ImpTeEndVerifyRetransmit,
ImpTeEndVerifyAckReceived,
ImpTeEndVerifyAckSent,
ImpTeTestStatusSuccessReceived,
ImpTeTestStatusSuccessSent,
ImpTeTestStatusSuccessRetransmit,
ImpTeTestStatusFailureReceived,
ImpTeTestStatusFailureSent,
ImpTeTestStatusFailureRetransmit,
ImpTeTestStatusAckReceived,
ImpTeTestStatusAckSent,
ImpTeLinkSummaryReceived,
ImpTeLinkSummarySent,
ImpTeLinkSummaryRetransmit,
ImpTeLinkSummaryAckReceived,
ImpTeLinkSummaryAckSent,
ImpTeLinkSummaryNackReceived,
ImpTeLinkSummaryNackSent,
ImpTeChannelStatusReceived,
ImpTeChannelStatusSent,
ImpTeChannelStatusRetransmit,
ImpTeChannelStatusAckReceived,
ImpTeChannelStatusAckSent,
ImpTeChannelStatusReqReceived,
ImpTeChannelStatusReqSent,
ImpTeChannelStatusReqRetransmit,
ImpTeChannelStatusRspSent,
ImpTeChannelStatusRspReceived,
ImpTeCounterDiscontinuityTime,
ImpDataLinkTestReceived,
ImpDataLinkTestSent,


```
        lmpDataLinkActiveTestSuccess,
        lmpDataLinkActiveTestFailure,
        lmpDataLinkPassiveTestSuccess,
        lmpDataLinkPassiveTestFailure,
        lmpDataLinkDiscontinuityTime
    }
    STATUS current
    DESCRIPTION
        "Collection of objects used to provide performance
        information about LMP interfaces and data-bearing links."
    ::= { lmpGroups 7 }
```

lmpTeLinkGroup OBJECT-GROUP

```
    OBJECTS { lmpTeLinkNbrRemoteNodeId,
        lmpTeLinkVerification,
        lmpTeLinkFaultManagement,
        lmpTeLinkDwdm,
        lmpTeLinkOperStatus,
        lmpTeLinkRowStatus,
        lmpTeLinkStorageType,
        lmpTeLinkNotificationsEnabled
    }
    STATUS current
    DESCRIPTION
        "Objects that can be used to configure TE links."
    ::= { lmpGroups 8 }
```

lmpDataLinkGroup OBJECT-GROUP

```
    OBJECTS { lmpDataLinkType,
        lmpDataLinkAddressType,
        lmpDataLinkIpAddr,
        lmpDataLinkRemoteIpAddress,
        lmpDataLinkRemoteIfId,
        lmpDataLinkEncodingType,
        lmpDataLinkActiveOperStatus,
        lmpDataLinkPassiveOperStatus,
        lmpDataLinkRowStatus,
        lmpDataLinkStorageType
    }
    STATUS current
    DESCRIPTION
        "Collection of objects that represent data-bearing link
        configuration."
    ::= { lmpGroups 9 }
```

lmpNotificationGroup NOTIFICATION-GROUP

```
    NOTIFICATIONS { lmpTeLinkPropertyMismatch,
        lmpDataLinkPropertyMismatch,
```



```
        ImpUnprotected,
        ImpControlChannelUp,
        ImpControlChannelDown,
        ImpTeLinkDegraded,
        ImpTeLinkNotDegraded,
        ImpDataLinkVerificationFailure }
STATUS    current
DESCRIPTION
    "Set of notifications defined in this module."
 ::= { lmpGroups 10 }

-- End of LMP-MIB
END
```

10. Security Considerations

There are a number of management objects defined in this MIB module with a MAX-ACCESS clause of read-write and/or read-create. Such objects may be considered sensitive or vulnerable in some network environments. The support for SET operations in a non-secure environment without proper protection can have a negative effect on network operations. These are the tables and objects and their sensitivity/vulnerability:

- Unauthorized changes to the lmpNbrTable, lmpControlChannelTable, lmpTeLinkTable, and lmpDataLinkTable may disrupt allocation of resources in the network.

Some of the readable objects in this MIB module (i.e., objects with a MAX-ACCESS other than not-accessible) may be considered sensitive or vulnerable in some network environments. It is thus important to control even GET and/or NOTIFY access to these objects and possibly to even encrypt the values of these objects when sending them over the network via SNMP. These are the tables and objects and their sensitivity/vulnerability:

- The lmpNbrTable exposes network provider's node IP addresses.
- lmpControlChannelTable exposes network provider's control network.
- lmpDataLinkTable exposes network provider's data network.

SNMP versions prior to SNMPv3 did not include adequate security. Even if the network itself is secure (for example by using IPSec), even then, there is no control as to who on the secure network is allowed to access and GET/SET (read/change/create/delete) the objects in this MIB module.

It is RECOMMENDED that implementers consider the security features as provided by the SNMPv3 framework (see [\[RFC3410\]](#), [section 8](#)), including full support for the SNMPv3 cryptographic mechanisms (for authentication and privacy).

Further, deployment of SNMP versions prior to SNMPv3 is NOT RECOMMENDED. Instead, it is RECOMMENDED to deploy SNMPv3 and to enable cryptographic security. It is then a customer/operator responsibility to ensure that the SNMP entity giving access to an instance of this MIB module is properly configured to give access to the objects only to those principals (users) that have legitimate rights to indeed GET or SET (change/create/delete) them.

[11.](#) Contributors

Sudheer Dharanikota
EMail: sudheer@ieee.org

[12.](#) Acknowledgements

The general structure of this document has been modeled around the MPLS Label Switching Router (LSR) MIB [\[RFC3813\]](#).

The authors wish to thank Dmitry Ryumkin, Baktha Muralidharan and George Wang.

[13.](#) IANA Considerations

Each of the following "IANA Considerations" subsections requested IANA for new assignments. New assignments can only be made via a Standards Action as specified in [\[RFC2434\]](#).

[13.1.](#) IANA Considerations for lmp ifType

The IANA has assigned 227 ifType for LMP interfaces.

[13.2.](#) IANA Considerations for LMP-MIB

The IANA has assigned { transmission 227 } to the LMP-MIB module specified in this document.

14. References

14.1. Normative References

- [RFC2119] Bradner, S., "Key words for use in RFCs to Indicate Requirement Levels", [BCP 14](#), [RFC 2119](#), March 1997.
- [RFC2434] Narten, T. and H. Alvestrand, "Guidelines for Writing an IANA Considerations Section in RFCs", [BCP 26](#), [RFC 2434](#), October 1998.
- [RFC2578] McCloghrie, K., Perkins, D., and J. Schoenwaelder, "Structure of Management Information Version 2 (SMIv2)", STD 58, [RFC 2578](#), April 1999.
- [RFC2579] McCloghrie, K., Perkins, D., and J. Schoenwaelder, "Textual Conventions for SMIv2", STD 58, [RFC 2579](#), April 1999.
- [RFC2580] McCloghrie, K., Perkins, D., and J. Schoenwaelder, "Conformance Statements for SMIv2", STD 58, [RFC 2580](#), April 1999.
- [RFC2863] McCloghrie, K. and F. Kastenholz, "The Interfaces Group MIB", [RFC 2863](#), June 2000.
- [RFC2914] Floyd, S., "Congestion Control Principles", [BCP 41](#), [RFC 2914](#), September 2000.
- [RFC3471] Berger, L., "Generalized Multi-Protocol Label Switching (GMPLS) Signaling Functional Description", [RFC 3471](#), January 2003.
- [RFC4001] Daniele, M., Haberman, B., Routhier, S., and J. Schoenwaelder, "Textual Conventions for Internet Network Addresses", [RFC 4001](#), February 2005.
- [RFC4204] Lang, J., "Link Management Protocol (LMP)", [RFC 4204](#), October 2005.
- [RFC4207] Lang, J. and D. Papadimitriou, "Synchronous Optical Network (SONET)/Synchronous Digital Hierarchy (SDH) Encoding for Link Management Protocol (LMP) Test Messages", [RFC 4207](#), October 2005.

- [RFC4209] Fredette, A., Ed. and J. Lang, Ed., "Link Management Protocol (LMP) for Dense Wavelength Division Multiplexing (DWDM) Optical Line Systems", [RFC 4209](#), October 2005.
- [RFC4220] Dubuc, M., Nadeau, T., and J. Lang, "Traffic Engineering Link Management Information Base", [RFC 4220](#), November 2005.

[14.2.](#) Informative References

- [RFC3410] Case, J., Mundy, R., Partain, D., and B. Stewart, "Introduction and Applicability Statements for Internet-Standard Management Framework", [RFC 3410](#), December 2002.
- [RFC3813] Srinivasan, C., Viswanathan, A., and T. Nadeau, "Multiprotocol Label Switching (MPLS) Traffic Engineering (TE) Management Information Base (MIB)", [RFC 3812](#), June 2004.

Authors' Addresses

Martin Dubuc

E-Mail: dubuc.consulting@sympatico.ca

Thomas D. Nadeau
Cisco Systems, Inc.
1414 Massachusetts Ave.
Boxborough, MA 01719

E-Mail: tnadeau@cisco.com

Jonathan P. Lang
Sonos, Inc.
223 E. De La Guerra St.
Santa Barbara, CA 93101

E-Mail: jplang@ieee.org

Evan McGinnis
Hammerhead Systems
640 Clyde Court
Mountain View, CA 94043

E-Mail: emcginnis@hammerheadsystems.com

Full Copyright Statement

Copyright (C) The Internet Society (2006).

This document is subject to the rights, licenses and restrictions contained in [BCP 78](#), and except as set forth therein, the authors retain all their rights.

This document and the information contained herein are provided on an "AS IS" basis and THE CONTRIBUTOR, THE ORGANIZATION HE/SHE REPRESENTS OR IS SPONSORED BY (IF ANY), THE INTERNET SOCIETY AND THE INTERNET ENGINEERING TASK FORCE DISCLAIM ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTY THAT THE USE OF THE INFORMATION HEREIN WILL NOT INFRINGE ANY RIGHTS OR ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

Intellectual Property

The IETF takes no position regarding the validity or scope of any Intellectual Property Rights or other rights that might be claimed to pertain to the implementation or use of the technology described in this document or the extent to which any license under such rights might or might not be available; nor does it represent that it has made any independent effort to identify any such rights. Information on the procedures with respect to rights in RFC documents can be found in [BCP 78](#) and [BCP 79](#).

Copies of IPR disclosures made to the IETF Secretariat and any assurances of licenses to be made available, or the result of an attempt made to obtain a general license or permission for the use of such proprietary rights by implementers or users of this specification can be obtained from the IETF on-line IPR repository at <http://www.ietf.org/ipr>.

The IETF invites any interested party to bring to its attention any copyrights, patents or patent applications, or other proprietary rights that may cover technology that may be required to implement this standard. Please address the information to the IETF at ietf-ipr@ietf.org.

Acknowledgement

Funding for the RFC Editor function is provided by the IETF Administrative Support Activity (IASA).

