

Network Working Group
Internet-Draft
Expires: April 19, 2006

M. Morgenstern
M. Dodge
ECI Telecom Ltd.
S. Baillie
U. Bonollo
NEC Australia
October 16, 2005

**Definitions of Managed Objects for New Generation Digital Subscriber
Lines (NG-XDSL)
draft-ietf-adslmib-adsl2-04.txt**

Status of this Memo

By submitting this Internet-Draft, each author represents that any applicable patent or other IPR claims of which he or she is aware have been or will be disclosed, and any of which he or she becomes aware will be disclosed, in accordance with [Section 6 of BCP 79](#).

Internet-Drafts are working documents of the Internet Engineering Task Force (IETF), its areas, and its working groups. Note that other groups may also distribute working documents as Internet-Drafts.

Internet-Drafts are draft documents valid for a maximum of six months and may be updated, replaced, or obsoleted by other documents at any time. It is inappropriate to use Internet-Drafts as reference material or to cite them other than as "work in progress."

The list of current Internet-Drafts can be accessed at <http://www.ietf.org/ietf/1id-abstracts.txt>.

The list of Internet-Draft Shadow Directories can be accessed at <http://www.ietf.org/shadow.html>.

This Internet-Draft will expire on April 19, 2006.

Copyright Notice

Copyright (C) The Internet Society (2005).

Abstract

This document defines a Management Information Base (MIB) module for use with network management protocols in the Internet community. In particular, it describes objects used for managing parameters of the "Asymmetric Digital Subscriber Line" family of interface types,

especially including ADSL, ADSL2, and ADSL2+.

Table of Contents

1.	The Internet-Standard Management Framework	3
2.	Overview	3
2.1.	Relationship to other MIBs	4
2.2.	IANA Considerations	6
2.3.	Conventions Used in the MIB Module	6
2.4.	Structure	13
2.5.	Line Topology	15
2.6.	Counters, Interval Buckets, and Thresholds	16
2.7.	Profiles	18
2.8.	Notifications	21
3.	Definitions	23
4.	Implementation Analysis	148
5.	Security Considerations	149
6.	Acknowledgments	156
7.	References	156
7.1.	Normative References	156
7.2.	Informative References	158
	Authors' Addresses	159
	Intellectual Property and Copyright Statements	160

1. The Internet-Standard Management Framework

For a detailed overview of the documents that describe the current Internet-Standard Management Framework, please refer to [Section 7 of RFC 3410](#) [[RFC3410](#)].

Managed objects are accessed via a virtual information store, termed the Management Information Base or MIB. MIB objects are generally accessed through the Simple Network Management Protocol (SNMP). Objects in the MIB are defined using the mechanisms defined in the Structure of Management Information (SMI). This memo specifies a MIB module that is compliant to the SMIV2, which is described in STD 58, [RFC 2578](#) [[RFC2578](#)], STD 58, [RFC 2579](#) [[RFC2579](#)] and STD 58, [RFC 2580](#) [[RFC2580](#)].

The key words "MUST", "MUST NOT", "REQUIRED", "SHALL", "SHALL NOT", "SHOULD", "SHOULD NOT", "RECOMMENDED", "MAY", and "OPTIONAL" in this document are to be interpreted as described in [RFC 2119](#) [[RFC2119](#)].

2. Overview

This document defines a Management Information Base (MIB) module for use with network management protocols in the Internet community for the purpose of managing ADSL, ADSL2, and ADSL2+ lines.

The MIB module described in [RFC 2662](#) [[RFC2662](#)] describes objects used for managing Asymmetric Bit-Rate DSL (ADSL) interfaces per [[T1E1.413](#)], [[G.992.1](#)], and [[G.992.2](#)]. These object descriptions are based upon the specifications for the ADSL Embedded Operations Channel (EOC) as defined in American National Standards Institute (ANSI) T1E1.413/1995 [[T1E1.413](#)] and International Telecommunication Union (ITU-T) G.992.1 [[G.992.1](#)] and G.992.2 [[G.992.2](#)].

This document does not obsolete [RFC 2662](#) [[RFC2662](#)], but rather provides a more comprehensive management model that includes the ADSL2 and ADSL2+ technologies per G.992.3, G.992.4, and G.992.5 ([[G.992.3](#)], [[G.992.4](#)], and [[G.992.5](#)] respectively). In addition, objects have been added to improve the management of ADSL, ADSL2, and ADSL2+ lines.

Additionally, the management framework for New Generation ADSL lines specified [[TR-90](#)] by the Digital Subscriber Line Forum (DSL Forum) has been taken into consideration. That framework is based on ITU-T G.997.1 standard [[G.997.1](#)] as well as on two amendments: ([[G.997.1 am1](#)] and [[G.997.1 am2](#)]). This document refers to all three documents as G.997.1. That is, a MIB attribute whose REFERENCE section provides a paragraph number in ITU-T G.997.1 is actually originated

from either G.997.1 [[G.997.1](#)] or one of its amendment documents.

Note that future revision of ITU-T G.997.1 standard will refer also to next generation of VDSL technology, known as VDSL2, per ITU-T G.993.2 [[G.993.2](#)]. However, managing VDSL2 lines is currently beyond the scope of the MIB this document specifies.

The MIB module is located in the MIB tree under MIB 2 transmission, as discussed in the MIB-2 Integration ([RFC 2863](#) [[RFC2863](#)]) section of this document.

2.1. Relationship to other MIBs

This section outlines the relationship of this MIB module with other MIB modules described in RFCs. Specifically, IF-MIB as presented in [RFC 2863](#) [[RFC2863](#)] is discussed.

2.1.1. General IF-MIB Integration ([RFC 2863](#))

The New Generation xDSL Line MIB specifies the detailed attributes of a data interface. As such, it needs to integrate with [RFC 2863](#) [[RFC2863](#)]. The IANA has assigned the following ifTypes, which may be applicable for ADSL lines:

```
IANAifType ::= TEXTUAL-CONVENTION
    ...
    SYNTAX INTEGER {
        ...
        channel(70),      -- channel
        ADSL (94),        -- Asymmetric Digital Subscriber Loop
        ...
        Interleave(124),  -- Interleaved Channel
        Fast(125),        -- Fast Channel
        ...
        ADSL2 (230),      -- Asymmetric Digital Subscriber Loop 2
        ...
    }
```

ADSL lines that are identified with ifType=ADSL (94) SHOULD be managed with the MIB specified by [RFC2662](#). ADSL, ADSL2, and ADSL2+ lines identified with ifType=ADSL2 (230) SHOULD be managed with the MIB specified by this document.

In any case, the SNMP agent may use either ifType=Interleave (124) or Fast (125) for each channel, e.g., depending on whether or not it is capable of using an interleaver on that channel. It may use the ifType=channel (70) when all channels are capable of using an interleaver (e.g., for ADSL2 xtus).

Note that the `ifFixedLengthGroup` from [RFC 2863](#) [[RFC2863](#)] MUST be supported and that the `ifRcvAddressGroup` does not apply to this MIB module.

2.1.2. Usage of `ifTable`

The MIB branch identified by `ifType` contains tables appropriate for the interface types described above. Most such tables extend the `ifEntry` table, and are indexed by `ifIndex`. For interfaces in systems implementing this MIB module, those table entries indexed by `ifIndex` MUST be persistent.

The following attributes are part of the mandatory `ifGeneralInformationGroup` in the Interfaces MIB [[RFC2863](#)], and are not duplicated in the New Generation DSL MIB.

=====

<code>ifIndex</code>	Interface index.
<code>ifDescr</code>	See interfaces MIB.
<code>ifType</code>	ADSL2 (230) or Channel (70) or Interleave (124) or Fast (125)
<code>ifSpeed</code>	Set as appropriate.
<code>ifPhysAddress</code>	This object MUST have an octet string with zero length.
<code>ifAdminStatus</code>	See interfaces MIB.
<code>ifOperStatus</code>	See interfaces MIB.
<code>ifLastChange</code>	See interfaces MIB.
<code>ifName</code>	See interfaces MIB.
<code>ifAlias</code>	See interfaces MIB.
<code>ifLinkUpDownTrapEnable</code>	Default to enabled(1).
<code>ifHighSpeed</code>	Set as appropriate.
<code>ifConnectorPresent</code>	Set as appropriate.

=====

Figure 1: Use of ifTable Objects

2.2. IANA Considerations

The NGDSL-LINE-MIB module requires the allocation of a new ifType value for Asymmetric Digital Subscriber Loop Version 2, to distinguish between ADSL lines that are managed with the [RFC2662](#) management model and ADSL/ADSL2 and ADSL2+ lines managed with the model defined in this document.

Also the NGDSL-LINE-MIB module requires the allocation of a single object identifier for its MODULE-IDENTITY. The IANA should allocate this object identifier in the transmission subtree.

An assignment was in fact done when [RFC 2662](#) was published, but as this MIB does not obsolete [RFC 2662](#), it requires new assignment from IANA.

2.3. Conventions Used in the MIB Module

2.3.1. Naming Conventions

AtuC	A central site terminal unit
AtuR	A remote site terminal unit
xtu	A terminal unit; either an AtuC or AtuR
CRC	Cyclical redundancy check
DELT	Dual Ended Loop Test
ES	Errored second
FEC	Forward Error Correction
LOF	Loss of framing
LOS	Loss of signal
LOSS	LOS Second
SES	Severely-errored second
SNR	Signal-to-noise ratio
UAS	Unavailable second

2.3.2. Textual Conventions

The following textual conventions are defined to reflect the line topology in the MIB module (further discussed in the following section), the various transmission modes, power states, synchronization states, possible values for various configuration parameters, status parameters, and other parameter types.

o Adsl2Unit:

Attributes with this syntax uniquely identify each unit in the

ADSL/ADSL2/ADSL2+ link. It mirrors the EOC addressing mechanism:

atuc(1)	- central office (CO) terminal unit
atur(2)	- customer premises equipment (CPE) terminal unit

o Adsl2Direction:

Attributes with this syntax uniquely identify a transmission direction in an ADSL/ADSL2/ADSL2+ link. Upstream direction is a transmission from the customer premises equipment (CPE) towards the central office (CO), while downstream direction is a transmission from the CO towards the CPE.

upstream(1)	- Transmission from the CPE to the CO
downstream(2)	- Transmission from the CO to the CPE

o Adsl2TransmissionModeType:

Attributes with this syntax reference the list of possible transmission modes for ADSL/ADSL2 or ADSL2+.

Specified as a BITS construct, there are currently a few dozen transmission modes in the list.

o Adsl2RaMode:

Attributes with this syntax reference if and how Rate-Adaptive synchronization is being used on the respective ADSL/ADSL2 or ADSL2+ link:

manual (1)	- No Rate-Adaptation. The initialization process attempts to synchronize to a specified rate.
rainit (2)	- Rate-Adaptation during initialization process only, which attempts to synchronize to a rate between minimum and maximum specified values.
dynamicRa (3)	- Dynamic Rate-Adaptation during initialization process as well as during SHOWTIME.

o Adsl2InitResult:

Attributes with this syntax reference the recent result of a full initialization attempt:

noFail (0)	- Successful initialization
configError (1)	- Configuration failure
configNotFeasible (2)	- Configuration details not supported
commFail (3)	- Communication failure
noPeerAtu (4)	- Peer ATU not detected
otherCause (5)	- Other initialization failure reason

o Adsl2OperationModes:

Attributes with this syntax uniquely identify an ADSL mode, which is a category associated with each transmission mode defined for the ADSL/ADSL2 or ADSL2+ link. Part of the line configuration profile depends on the ADSL Mode:

defMode (1),	- The default/generic PSD configuration. The default configuration will be used when no other matching mode specific configuration can be found.
adsl (2),	- ADSL (POTS or ISDN)
adsl2Pots (3),	- ADSL2 (ISDN)
adsl2Isdn (4),	- ADSL2 (ISDN)
adsl2PlusPots (5),	- ADSL2+ (POTS)
adsl2PlusIsdn (6),	- ADSL2+ (ISDN)
adsl2ReachExtended (7)	- Reach Extended ADSL2

o Adsl2PowerMngState:

Attributes with this syntax uniquely identify each power management state defined for the ADSL/ADSL2 or ADSL2+ link:

l0(0)	- L0 - Full power management state
l1(1)	- L1 - Low power management state (for G.992.2)
l2(2)	- L2 - Low power management state (for G.992.3, G.992.4, and G.992.5)
l3(3)	- L3 - Idle power management state

o Adsl2ConfPmsForce:

Attributes with this syntax are configuration parameters that reference the desired power management state for the ADSL/ADSL2 or ADSL2+ link:

l3toL0 (1)	- Perform a transition from L3 to L0 (Full power management state)
l0toL2 (2)	- Perform a transition from L0 to L2 (Low power management state)
l0orL2toL3 (3)	- Perform a transition into L3 (Idle power management state)

- o Adsl2LConfProfPmMode:

Attributes with this syntax are configuration parameters that reference the power modes/states into which the ATU-C or ATU-R may autonomously transit.

This is a BITS structure that allows control of the following transit options:

- allowTransitionsToIdle (0) - xTU may autonomously transit to idle (L3) state.
- allowTransitionsToLowPower (1)- xTU may autonomously transit to low-power (L2) state.

- o Adsl2LineLdsf:

Attributes with this syntax are configuration parameters that control the Loop Diagnostic mode for the ADSL/ADSL2 or ADSL2+ link:

- inhibit (0) - Inhibit Loop Diagnostic mode
- force (1) - Force/Initiate Loop Diagnostic mode

- o Adsl2LdsfResult:

Attributes with this syntax are status parameters that report the result of the recent Loop Diagnostic mode issued for the ADSL/ADSL2 or ADSL2+ link:

- | | | |
|-------------|------|--|
| none | (1) | - The default value, in case LDSF was never requested for the associated line. |
| success | (2) | - The recent command completed successfully. |
| inProgress | (3) | - The Loop Diagnostics process is in progress. |
| unsupported | (4) | - The NE or the line card doesn't support LDSF. |
| cannotRun | (5) | - The NE cannot initiate the command, due to a non specific reason. |
| aborted | (6) | - The Loop Diagnostics process aborted. |
| failed | (7) | - The Loop Diagnostics process failed. |
| illegalMode | (8) | - The NE cannot initiate the command, due to the specific mode of the relevant line. |
| adminUp | (9) | - The NE cannot initiate the command because the relevant line is administratively 'Up'. |
| tableFull | (10) | - The NE cannot initiate the command, due to reaching the maximum number of rows in the results table. |
| noResources | (11) | - The NE cannot initiate the command, due to lack of internal memory resources. |

o Adsl2SymbolProtection:

Attributes with this syntax are configuration parameters that reference the minimum length impulse noise protection (INP) in terms of number of symbols:

- | | | |
|-----------------|------|---------------------------|
| noProtection | (1) | - INP not required |
| halfSymbol | (2) | - INP length = 1/2 symbol |
| singleSymbol | (3) | - INP length = 1 symbol |
| twoSymbols | (4) | - INP length = 2 symbols |
| threeSymbols | (5) | - INP length = 3 symbols |
| fourSymbols | (6) | - INP length = 4 symbols |
| fiveSymbols | (7) | - INP length = 5 symbols |
| sixSymbols | (8) | - INP length = 6 symbols |
| sevenSymbols | (9) | - INP length = 7 symbols |
| eightSymbols | (10) | - INP length = 8 symbols |
| nineSymbols | (11) | - INP length = 9 symbols |
| tenSymbols | (12) | - INP length = 10 symbols |
| elevenSymbols | (13) | - INP length = 11 symbols |
| twelveSymbols | (14) | - INP length = 12 symbols |
| thirteenSymbols | (15) | - INP length = 13 symbols |
| fourteenSymbols | (16) | - INP length = 14 symbols |
| fifteenSymbols | (17) | - INP length = 15 symbols |
| sixteenSymbols | (18) | - INP length = 16 symbols |

- o Adsl2MaxBer:

Attributes with this syntax are configuration parameters that reference the maximum Bit Error Rate (BER):

- eminus3 (1) - Maximum $BER=E^{-3}$
- eminus5 (2) - Maximum $BER=E^{-5}$
- eminus7 (3) - Maximum $BER=E^{-7}$

- o Adsl2ScMaskDs:

Attributes with this syntax are configuration parameters that reference the downstream sub-carrier mask. It is a bitmap of up to 512 bits.

- o Adsl2ScMaskUs:

Attributes with this syntax are configuration parameters that reference the upstream sub-carrier mask. It is a bitmap of up to 64 bits.

- o Adsl2RfiDs:

Attributes with this syntax are configuration parameters that reference the downstream notch filters. It is a bitmap of up to 512 bits.

- o Adsl2PsdMaskDs:

Attributes with this syntax are configuration parameters that reference the downstream power spectrum density (PSD) mask. It is a structure of up to 32 breakpoints, where each breakpoint occupies 3 octets.

- o Adsl2PsdMaskUs:

Attributes with this syntax are configuration parameters that reference the upstream power spectrum density (PSD) mask. It is a structure of up to 4 breakpoints, where each breakpoint occupies 3 octets.

- o Adsl2Tssi:

Attributes with this syntax are status parameters that reference the transmit spectrum shaping (TSSI). It is a structure of up to 32 breakpoints, where each breakpoint occupies 3 octets.

- o Adsl2LastTransmittedState:

Attributes with this syntax reference the list of initialization states for ADSL/ADSL2 or ADSL2+ modems. The list of states for CO side modems is different from the list of states for the CPE side modems.

Specified as an enumeration type, there are currently a few dozen states in the list per each unit side (i.e., CO and CPE).

- o Adsl2LineStatus:

Attributes with this syntax are status parameters that reflect the failure status for a given endpoint of ADSL/ADSL2 or ADSL2+ link.

This is a BITS structure that can report the following failures:

- noDefect (0) - This bit position positively reports that no defect or failure exist.
- lossOfFraming (1) - Loss of frame synchronization
- lossOfSignal (2) - Loss of signal
- lossOfPower (3) - Loss of power. Usually this failure may be reported for CPE units only
- initFailure (4) - Recent initialization process failed.

- o Adsl2ChAtmStatus:

Attributes with this syntax are status parameters that reflect the failure status for Transmission Convergence (TC) layer of a given ATM interface (data path over an ADSL/ADSL2 or ADSL2+ link).

This is a BITS structure that can report the following failures:

- noDefect (0) - This bit position positively reports that no defect or failure exist.
- noCellDelineation (1) - The link was successfully initialized but cell delineation was never acquired on the associated ATM data path.
- lossOfCellDelineation (2) - Loss of cell delineation on the associated ATM data path

- o Adsl2ChPtmStatus:

Attributes with this syntax are status parameters that reflect the failure status for a given PTM interface (packet data path over an ADSL/ADSL2 or ADSL2+ link).

This is a BITS structure that can report the following failures:

- noDefect (0) - This bit position positively reports that no defect or failure exist.
- outOfSync (1) - Out of synchronization.

2.4. Structure

The MIB module is structured into following MIB groups:

- o Line Configuration, Maintenance, and Status Group:

This group supports MIB objects for configuring parameters for the ADSL/ADSL2 or ADSL2+ line and retrieving line status information. It also supports MIB objects for configuring a requested power state or initiating a Dual Ended Line Test (DELT) process in the ADSL/ADSL2 or ADSL2+ line. It contains the following table:

- adsl2LineTable

- o Channel Status Group:

This group supports MIB objects for retrieving channel layer status information. It contains the following table:

- adsl2ChannelStatusTable

- o Subcarrier Status Group:

This group supports MIB objects for retrieving the sub-carrier layer status information, mostly collected by a Dual Ended Line Test (DELT) process. It contains the following table:

- adsl2SCStatusTable

- o Unit Inventory Group:

This group supports MIB objects for retrieving Unit inventory information about units in ADSL/ADSL2 or ADSL2+ lines via the EOC. It contains the following table:

- adsl2LineInventoryTable

- o Current Performance Group:

This group supports MIB objects that provide the current performance information relating to ADSL/ADSL2 and ADSL2+ line, units and channels level. It contains the following tables:

- adsl2PMLineCurrTable
- adsl2PMLineCurrInitTable
- adsl2PMChCurrTable

o 15-Minute Interval Performance Group:

This group supports MIB objects that provide historic performance information relating to ADSL/ADSL2 and ADSL2+ line, units and channels level in 15-minute intervals. It contains the following tables:

- adsl2PMLineHist15MinTable
- adsl2PMLineInitHist15MinTable
- adsl2PMChHist15MinTable

o 1-Day Interval Performance Group:

This group supports MIB objects that provide historic performance information relating to ADSL/ADSL2 and ADSL2+ line, units and channels level in 1-day intervals. It contains the following tables:

- adsl2PMLineHist1DayTable
- adsl2PMLineInitHist1DayTable
- adsl2PMChHist1DTable

o Configuration Template and Profile Group:

This group supports MIB objects for defining configuration profiles for ADSL/ADSL2 and ADSL2+ lines and channels, as well as configuration templates. Each configuration template is comprised of one line configuration profile and one or more channel configuration profiles. This group contains the following tables:

- adsl2LineConfTemplateTable
- adsl2LineConfProfTable
- adsl2LineConfProfModeSpecTable
- adsl2ChConfProfileTable

o Alarm Configuration Template and Profile Group:

This group supports MIB objects for defining alarm profiles for ADSL/ADSL2 and ADSL2+ lines and channels, as well as alarm templates. Each alarm template is comprised of one line alarm profile and one or more channel alarm profiles. This group contains the following tables:

- adsl2LineAlarmConfTemplateTable
- adsl2LineAlarmConfProfileTable
- adsl2ChAlarmConfProfileTable

o Notifications Group:

This group defines the notifications supported for ADSL/ADSL2 and ADSL2+ lines:

- adsl2LinePerfFECSThreshAtuc
- adsl2LinePerfFECSThreshAtur
- adsl2LinePerfESThreshAtuc
- adsl2LinePerfESThreshAtur
- adsl2LinePerfSESThreshAtuc
- adsl2LinePerfSESThreshAtur
- adsl2LinePerfLOSSThreshAtuc
- adsl2LinePerfLOSSThreshAtur
- adsl2LinePerfUASThreshAtuc
- adsl2LinePerfUASThreshAtur
- adsl2LinePerfCodingViolationsThreshAtuc
- adsl2LinePerfCodingViolationsThreshAtur
- adsl2LinePerfCorrectedThreshAtuc
- adsl2LinePerfCorrectedThreshAtur
- adsl2LinePerfFailedFullInitThresh
- adsl2LinePerfFailedShortInitThresh
- adsl2LineStatusChangeAtuc
- adsl2LineStatusChangeAtur

2.5. Line Topology

An ADSL/ADSL2 and ADSL2+ Line consists of two units: atuc (the central termination unit) and atur (the remote termination unit). There are up to 4 channels, each carrying an independent information flow, as shown in the figure below.

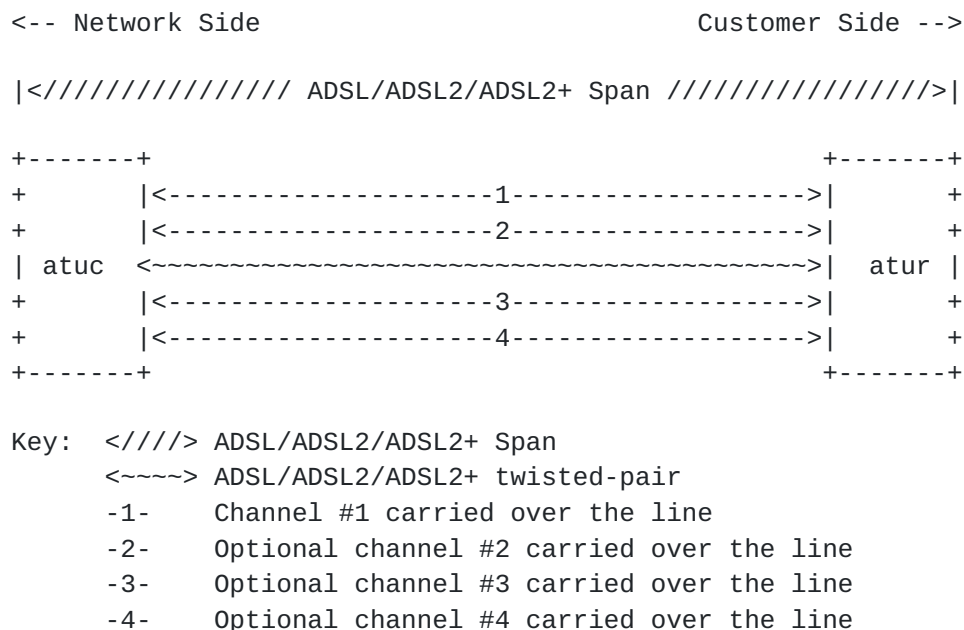


Figure 2: General topology for an ADSL/ADSL2/ADSL2+ Line

2.6. Counters, Interval Buckets, and Thresholds

2.6.1. Counters Managed

There are various types of counters specified in this MIB. Each counter refers either to the whole ADSL/ADSL2/ADSL2+ line, to one of the xtu entities, or to one of the bearer channels.

o On the whole line level

For full initializations, failed full initializations, short initializations, and for failed short initializations there are event counters, current 15-minute and 0 to 96 15-minute history bucket(s) of "interval-counters", as well as current and 0 to 30 previous 1-day interval-counter(s). Each current 15-minute "failed" event bucket has an associated threshold notification.

o On the xtu level

For the LOS Seconds, ES, SES, FEC seconds, and UAS, there are event counters, current 15-minute and 0 to 96 15-minute history bucket(s) of "interval-counters", as well as current and 0 to 30 previous 1-day interval-counter(s). Each current 15-minute event bucket has an associated threshold notification.

- o On the bearer channel level

For the coding violations (CRC anomalies) and corrected blocks (i.e., FEC events) there are event counters, current 15-minute and 0 to 96 15-minute history bucket(s) of "interval-counters", as well as current and 0 to 30 previous 1-day interval-counter(s). Each current 15-minute event bucket has an associated threshold notification.

2.6.2. Minimum Number Of Buckets

Although it is possible to support up to 96 15-minute history buckets of "interval-counters", systems implementing this MIB module SHOULD practically support at least 16 buckets, as specified in ITU-T G.997.1, paragraph 7.2.7.2.

Similarly, it is possible to support up to 30 previous 1-day "interval-counters", but systems implementing this MIB module SHOULD support at least 1 previous day buckets.

2.6.3. Interval Buckets Initialization

There is no requirement for an agent to ensure a fixed relationship between the start of a 15-minute interval and any wall clock; however, some implementations may align the 15-minute intervals with quarter hours. Likewise, an implementation may choose to align one day intervals with the start of a day.

Counters are not reset when an xtU is reinitialized, only when the agent is reset or reinitialized (or under specific request outside the scope of this MIB module).

2.6.4. Interval Buckets Validity

As in [RFC 3593](#) [[RFC3593](#)] and [RFC 2662](#) [[RFC2662](#)], in case the data for an interval is suspect or known to be invalid, the agent MUST report the interval as invalid. If the current 15-minute event bucket is determined to be invalid, the element management system SHOULD ignore its content and the agent MUST NOT generate notifications based upon the value of the event bucket.

A valid 15-minute event bucket SHOULD usually count the events for exactly 15 minutes. Similarly, a valid 1-day event bucket SHOULD usually count the events for exactly 24 hours. However, the following scenarios are exceptional:

- 1) For implementations that align the 15-minute intervals with quarter hours, and the 1-day intervals with start of a day, the management system may still start the PM process not aligned with the wall clock. Such a management system may wish to retrieve even partial information for the first event buckets, rather than declaring them all as invalid.
- 2) For an event bucket that suffered relatively short outages, the management system may wish to retrieve the available PM outcomes, rather than declaring the whole event bucket as invalid. This is more important for 1-day event buckets.
- 3) An event bucket may be shorter or longer than the formal duration if a clock adjustment was performed during the interval.

This MIB allows supporting the exceptional scenarios described above by reporting the actual Monitoring Time of a monitoring interval.

This parameter is relevant only for Valid intervals, but is useful for these exceptional scenarios:

- a) The management system MAY still declare a partial PM interval as Valid and report the actual number of seconds the interval lasted.
- b) If the interval was shortened or extended due to clock corrections, the management system SHOULD report the actual number of seconds the interval lasted, beside reporting that the interval is Valid.

2.7. Profiles

As a managed node can handle a large number of xtUs, (e.g., hundreds or perhaps thousands of lines), provisioning every parameter on every xtU may become burdensome. Moreover, most lines are provisioned identically with the same set of parameters. To simplify the provisioning process, this MIB module makes use of profiles and templates.

A configuration profile is a set of parameters that can be shared by multiple entities. There are configuration profiles to address the line level provisioning and another type of profile that addresses the channel level provisioning parameters.

A configuration template is actually a profile-of-profiles. That is, a template is comprised of one line configuration profile and one or more channel configuration profiles. A template provides the complete configuration of a line. The same configuration can be shared by multiple lines.

Similarly to the configuration profiles and templates, this MIB module makes use of templates and profiles for specifying the alarm thresholds associated with performance parameters. This allows provisioning multiple lines with the same criteria for generating

threshold crossing notifications.

The following paragraphs describe templates and profiles used in this MIB module

2.7.1. Configuration Profiles And Templates

- o Line Configuration Profiles - Line configuration profiles contain parameters for configuring the low layer of ADSL/ADSL2 and ADSL2+ lines. They are defined in the `adsl2LineConfProfTable`.

The line configuration includes issues such as the specific ADSL/ADSL2 or ADSL2+ modes to enable on the respective line, power spectrum parameters, rate adaptation criteria, and SNR margin related parameters. A subset of the line configuration parameters depends upon the specific ADSL Mode allowed (i.e., Does the profile allow ADSL, ADSL2 and/or ADSL2+?) as well as what annex/annexes of the standard are allowed. This is the reason a line profile MUST include one or more mode-specific extensions.

- o Channel Configuration Profiles - Channel configuration profiles contain parameters for configuring bearer channels over the ADSL/ADSL2 and ADSL2+ lines. They are sometimes considered as the service layer configuration of the ADSL/ADSL2 and ADSL2+ lines. They are defined in the `adsl2ChConfProfTable`.

The channel configuration includes issues such as the desired minimum and maximum rate on each traffic flow direction and impulse noise protection parameters.

- o Line Configuration Templates - Line configuration templates allow combining line configuration profiles and channel configuration profiles to a comprehensive configuration of the ADSL/ADSL2 and ADSL2+ line. They are defined in the `adsl2LineConfTemplateTable`.

The line configuration template includes one index (OID) of a line configuration profile and one to four indexes of channel configuration profiles. The template also addresses the issue of distributing the excess available data rate on each traffic flow direction (i.e., the data rate left after each channel is allocated a data rate to satisfy its minimum requested data rate) among the various channels.

2.7.2. Alarm Configuration Profiles And Templates

- o Line Alarm Configuration Profiles - Line level Alarm configuration profiles contain the threshold values for Performance Monitoring (PM) parameters, counted either on the whole line level or on an

xtu level. Thresholds are required only for failures and anomalies. E.g., there are thresholds for failed initializations and LOS seconds, but not for the aggregate number of full initializations. These profiles are defined in the `adsl2LineAlarmConfProfTable`.

- o Channel Alarm Configuration Profiles - Channel level Alarm configuration profiles contain the threshold values for PM parameters counted on a bearer channel level. Thresholds are defined for two types of anomalies: corrected blocks and coding violations. These profiles are defined in the `adsl2ChAlarmConfProfTable`.
- o Line Alarm Configuration Templates - Line Alarm configuration templates allow combining line level alarm configuration profiles and channel level alarm configuration profiles to a comprehensive configuration of the PM thresholds for ADSL/ADSL2 and ADSL2+ line. They are defined in the `adsl2LineAlarmConfTemplateTable`.

The line alarm configuration template includes one index (OID) of a line level alarm configuration profile and one to four indexes of channel level alarm configuration profiles.

2.7.3. Managing Profiles And Templates

The index value for each profile and template is a locally-unique, administratively assigned name having the textual convention 'SnmpAdminString' ([RFC 3411](#) [[RFC3411](#)]).

One or more lines may be configured to share parameters of a single configuration template (e.g., `adsl2LConfTempTemplateName = 'silver'`) by setting its `adsl2LCnfgLineTemplate` objects to the value of this template.

One or more lines may be configured to share parameters of a single Alarm configuration template (e.g., `adsl2LAlarmConfTempTemplateName = 'silver'`) by setting its `adsl2LCnfgAlarmTemplate` objects to the value of this template.

Before a template can be deleted or taken out of service it MUST be first unreferenced from all associated lines. Implementations MAY also reject template modification while it is associated with any line.

Before a profile can be deleted or taken out of service it MUST be first unreferenced from all associated templates. Implementations MAY also reject profile modification while it is referenced by any template.

Implementations MUST provide a default profile whose name is 'DEFVAL' for each profile and template type. The values of the associated parameters will be vendor-specific unless otherwise indicated in this document. Before a line's templates have been set, these templates will be automatically used by setting `adsl2LCnfgLineTemplate` and `adsl2LCnfgAlarmTemplate` to 'DEFVAL' where appropriate. This default profile name, 'DEFVAL', is considered reserved in the context of profiles and templates defined in this MIB module.

Profiles and templates are created, assigned, and deleted dynamically using the profile name and profile row status in each of the profile tables.

If the implementation allows modifying a profile or template while it is associated with a line, then such changes MUST take effect immediately. These changes MAY result in a restart (hard reset or soft restart) of the units on the line.

2.7.4. Managing Multiple Bearer Channels

The number of bearer channels is configured by setting the template attributes `adsl2LConfTempChan1ConfProfile`, `adsl2LConfTempChan2ConfProfile`, `adsl2LConfTempChan3ConfProfile`, and `adsl2LConfTempChan4ConfProfile` and then assigning that template to a DSL line using the `adsl2LineCnfgTemplate` attribute. When the number of bearer channels for a DSL line changes, the SNMP agent will automatically create or destroy rows in channel-related tables associated with that line. For example, when a DSL line is operating with one bearer channel, there will be zero rows in channel-related tables for channels two, three, and four. The SNMP agent MUST create and destroy channel related rows as follows :

- o When the number of bearer channels for a DSL line changes to a higher number, the SNMP agent will automatically create rows in the `adsl2ChannelStatusTable`, and `adsl2PMChCurrTable` tables for that line.
- o When the number of bearer channels for a DSL line changes to a lower number, the SNMP agent will automatically destroy rows in the `adsl2ChannelStatusTable`, `adsl2PMChCurrTable`, `adsl2PMChHist15MinTable` and `adsl2PMChHist1DTable` tables for that line.

2.8. Notifications

The ability to generate the SNMP notifications `coldStart`/`WarmStart` (per [[RFC3418](#)]), which are per agent (e.g., per Digital Subscriber Line Access Multiplexer, or DSLAM, in such a device), and `linkUp`/`linkDown` (per [[RFC2863](#)]), which are per interface (i.e., ADSL/ADSL2

or ADSL2+ line) is required.

A linkDown notification MAY be generated whenever any of ES, SES, CRC Anomaly, LOS, LOF, or UAS event occurs. The corresponding linkUp notification MAY be sent when all link failure conditions are cleared.

The notifications defined in this MIB module are for status change (e.g., initialization failure) and for the threshold crossings associated with the following events: Full initialization failures, short initialization failures, ES, SES, FEC Seconds, LOS Seconds, UAS, FEC Seconds, FEC events, and CRC anomalies. Each threshold has its own enable/threshold value. When that value is 0, the notification is disabled.

The adsl2LStatusStatusAtur and adsl2LStatusStatusAtuc are bitmasks representing all outstanding error conditions associated with the Atur and Atuc (respectively). Note that since the Atur status is obtained via the EOC, this information may be unavailable in case the Atur is unreachable via EOC during a line error condition. Therefore, not all conditions may always be included in its current status. Notifications corresponding to the bit fields in those two status objects are defined.

Note that there are other status parameters that refer to the Atur (e.g., downstream line attenuation). Those parameters also depend on the availability of EOC between the central office xtu and the remote xtu.

A threshold notification occurs whenever the corresponding current 15-minute interval error counter becomes equal to, or exceeds the threshold value. Only one notification SHOULD be sent per interval per interface. Since the current 15-minute counter is reset to 0 every 15 minutes, and if the condition persists, the notification may recur as often as every 15 minutes. For example, to get a notification whenever a "loss of" event occurs (but at most once every 15 minutes), set the corresponding threshold to 1. The agent will generate a notification when the event originally occurs.

Notifications, other than the threshold notifications listed above, SHOULD be rate limited (throttled) such that there is an implementation-specific gap between the generation of consecutive notifications of the same event. When notifications are rate limited, they are dropped and not queued for sending at a future time. This is intended to be a general rate-limiting statement for notifications that otherwise have no explicit rate limiting assertions in this document.

Note that the Network Management System, or NMS, may receive a linkDown notification, as well, if enabled (via ifLinkUpDownTrapEnable [RFC2863]). At the beginning of the next 15 minute interval, the counter is reset. When the first second goes by and the event occurs, the current interval bucket will be 1, which equals the threshold, and the notification will be sent again.

3. Definitions

NGDSL-LINE-TC-MIB DEFINITIONS ::= BEGIN

IMPORTS

MODULE-IDENTITY,
transmission
FROM SNMPv2-SMI

TEXTUAL-CONVENTION
FROM SNMPv2-TC;

ngdslTCMIB MODULE-IDENTITY

LAST-UPDATED "200510090000Z" -- October 9, 2005
ORGANIZATION "ADSLMIB Working Group"
CONTACT-INFO "WG-email: adslmib@ietf.org
Info: <https://www1.ietf.org/mailman/listinfo/adslmib>

Chair: Mike Sneed
Sand Channel Systems
Postal: P.O. Box 37324
Raleigh NC 27627-732
Email: sneedmike@hotmail.com
Phone: +1 206 600 7022

Co-Chair: Bob Ray
PESA Switching Systems, Inc.
Postal: 330-A Wynn Drive
Huntsville, AL 35805
USA
Email: rray@pesa.com
Phone: +1 256 726 9200 ext. 142

Co-editor: Moti Morgenstern
ECI Telecom Ltd.
Postal: 30 Hasivim St.

Petach Tikva 49517,
Israel.
Email: moti.morgenstern@ecitele.com
Phone: +972 3 926 6258

Co-editor: Menachem Dodge
ECI Telecom Ltd.
Postal: 30 Hasivim St.
Petach Tikva 49517,
Israel.
Email: mbdodge@ieee.org
Phone: +972 3 926 8421

Co-editor: Scott Baillie
NEC Australia
Postal: 649-655 Springvale Road,
Mulgrave, Victoria 3170,
Australia.
Email: scott.baillie@nec.com.au
Phone: +61 3 9264 3986

Co-editor: Umberto Bonollo
NEC Australia
Postal: 649-655 Springvale Road,
Mulgrave, Victoria 3170,
Australia.
Email: umberto.bonollo@nec.com.au
Phone: +61 3 9264 3385

"

DESCRIPTION

"This MIB Module provides Textual Conventions to be
used by the NGDSL-LINE-MIB module for the purpose of
managing ADSL, ADSL2 and ADSL2+ lines.

Copyright (C) The Internet Society (2005). This version of
this MIB module is part of RFC XXXX: see the RFC itself for
full legal notices."

-- RFC Ed.: replace XXXX with assigned number & remove this note
REVISION "200510090000Z" -- October 09, 2005
DESCRIPTION "Initial version, published as RFC XXXX."
-- RFC Ed.: replace XX with assigned number & remove this note
::= { transmission xxx }
-- RFC Ed.: we suggest to put it under { transmission 230 } because
-- this is the first available number.

-- Textual Conventions --

Adsl2Unit ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"Identifies a transceiver as being either atuc or atur. An ADSL line consists of two transceivers, an atuc and an atur. Attributes with this syntax reference the two sides of a line. Specified as an INTEGER, the two values are:

atuc(1) -- central site transceiver

atur(2) -- remote site transceiver"

SYNTAX INTEGER {
atuc(1),
atur(2)
}

Adsl2Direction ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"Identifies the direction of a band as being either upstream or downstream. Specified as an INTEGER, the two values are:

upstream(1)

downstream(2)"

SYNTAX INTEGER {
upstream(1),
downstream(2)
}

Adsl2TransmissionModeType ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"A set of ADSL2 line transmission modes, with one bit per mode. The notes (F) and (L) denote Full-Rate and Lite/splitterless respectively:

Bit 00 : Regional Std. (ANSI T1.413) (F)

Bit 01 : Regional Std. (ETSI DTS/TM06006) (F)

Bit 02 : G.992.1 POTS non-overlapped (F)

Bit 03 : G.992.1 POTS overlapped (F)

Bit 04 : G.992.1 ISDN non-overlapped (F)

Bit 05 : G.992.1 ISDN overlapped (F)

Bit 06 : G.992.1 TCM-ISDN non-overlapped (F)

Bit 07 : G.992.1 TCM-ISDN overlapped (F)

Bit 08 : G.992.2 POTS non-overlapped (L)

Bit 09 : G.992.2 POTS overlapped (L)

Bit 10 : G.992.2 with TCM-ISDN non-overlapped (L)
Bit 11 : G.992.2 with TCM-ISDN overlapped (L)
Bit 12 : G.992.1 TCM-ISDN symmetric (F) --- not in G.997.1
Bit 13-17: Reserved
Bit 18 : G.992.3 POTS non-overlapped (F)
Bit 19 : G.992.3 POTS overlapped (F)
Bit 20 : G.992.3 ISDN non-overlapped (F)
Bit 21 : G.992.3 ISDN overlapped (F)
Bit 22-23: Reserved
Bit 24 : G.992.4 POTS non-overlapped (L)
Bit 25 : G.992.4 POTS overlapped (L)
Bit 26-27: Reserved
Bit 28 : G.992.3 Annex I All-Digital non-overlapped (F)
Bit 29 : G.992.3 Annex I All-Digital overlapped (F)
Bit 30 : G.992.3 Annex J All-Digital non-overlapped (F)
Bit 31 : G.992.3 Annex J All-Digital overlapped (F)
Bit 32 : G.992.4 Annex I All-Digital non-overlapped (L)
Bit 33 : G.992.4 Annex I All-Digital overlapped (L)
Bit 34 : G.992.3 Annex L POTS non-overlapped, mode 1,
wide U/S (F)
Bit 35 : G.992.3 Annex L POTS non-overlapped, mode 2,
narrow U/S(F)
Bit 36 : G.992.3 Annex L POTS overlapped, mode 3,
wide U/S (F)
Bit 37 : G.992.3 Annex L POTS overlapped, mode 4,
narrow U/S (F)
Bit 38 : G.992.3 Annex M POTS non-overlapped (F)
Bit 39 : G.992.3 Annex M POTS overlapped (F)
Bit 40 : G.992.5 POTS non-overlapped (F)
Bit 41 : G.992.5 POTS overlapped (F)
Bit 42 : G.992.5 ISDN non-overlapped (F)
Bit 43 : G.992.5 ISDN overlapped (F)
Bit 44-45: Reserved
Bit 46 : G.992.5 Annex I All-Digital non-overlapped (F)
Bit 47 : G.992.5 Annex I All-Digital overlapped (F)
Bit 48 : G.992.5 Annex J All-Digital non-overlapped (F)
Bit 49 : G.992.5 Annex J All-Digital overlapped (F)
Bit 50 : G.992.5 Annex M POTS non-overlapped (F)
Bit 51 : G.992.5 Annex M POTS overlapped (F)
Bit 52-55: Reserved"

SYNTAX BITS {
 ansit1413(0),
 etsi(1),
 q9921PotsNonOverlapped(2),
 q9921PotsOverlapped(3),
 q9921IsdnNonOverlapped(4),
 q9921isdnOverlapped(5),
 q9921tcmIsdnNonOverlapped(6),


```
q9921tcmIsdnOverlapped(7),
q9922potsNonOverlapped(8),
q9922potsOverlapped(9),
q9922tcmIsdnNonOverlapped(10),
q9922tcmIsdnOverlapped(11),
q9921tcmIsdnSymmetric(12),
reserved1(13),
reserved2(14),
reserved3(15),
reserved4(16),
reserved5(17),
q9923PotsNonOverlapped(18),
q9923PotsOverlapped(19),
q9923IsdnNonOverlapped(20),
q9923isdnOverlapped(21),
reserved6(22),
reserved7(23),
q9924potsNonOverlapped(24),
q9924potsOverlapped(25),
reserved8(26),
reserved9(27),
q9923AnnexIAAllDigNonOverlapped(28),
q9923AnnexIAAllDigOverlapped(29),
q9923AnnexJAllDigNonOverlapped(30),
q9923AnnexJAllDigOverlapped(31),
q9924AnnexIAAllDigNonOverlapped(32),
q9924AnnexIAAllDigOverlapped(33),
q9923AnnexLMode1NonOverlapped(34),
q9923AnnexLMode2NonOverlapped(35),
q9923AnnexLMode3Overlapped(36),
q9923AnnexLMode4Overlapped(37),
q9923AnnexMPotsNonOverlapped(38),
q9923AnnexMPotsOverlapped(39),
q9925PotsNonOverlapped(40),
q9925PotsOverlapped(41),
q9925IsdnNonOverlapped(42),
q9925isdnOverlapped(43),
reserved10(44),
reserved11(45),
q9925AnnexIAAllDigNonOverlapped(46),
q9925AnnexIAAllDigOverlapped(47),
q9925AnnexJAllDigNonOverlapped(48),
q9925AnnexJAllDigOverlapped(49),
q9925AnnexMPotsNonOverlapped(50),
q9925AnnexMPotsOverlapped(51),
reserved12(52),
reserved13(53),
reserved14(54),
```



```
        reserved15(55)
    }
```

Adsl2RaMode ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"Specifies the rate adaptation behavior for the line.

The three possible behaviors are:

- manual (1) - No Rate-Adaptation. The initialization process attempts to synchronize to a specified rate.
- rainit (2) - Rate-Adaptation during initialization process only, which attempts to synchronize to a rate between minimum and maximum specified values.
- dynamicRa (3)- Dynamic Rate-Adaptation during initialization process as well as during SHOWTIME"

SYNTAX INTEGER {
manual(1),
raInit(2),
dynamicRa(3)
}

Adsl2InitResult ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"Specifies the result of full initialization attempt; the six possible result values are:

- noFail (0) - Successful initialization
- configError (1) - Configuration failure
- configNotFeasible (2) - Configuration details not supported
- commFail (3) - Communication failure
- noPeerAtu (4) - Peer ATU not detected
- otherCause (5) - Other initialization failure reason"

SYNTAX INTEGER {
noFail(0),
configError(1),
configNotFeasible(2),
commFail(3),
noPeerAtu(4),
otherCause(5)
}

Adsl2OperationModes ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"The ADSL2 management model specified includes an ADSL Mode attribute which identifies an instance of ADSL Mode-Specific PSD Configuration object in the ADSL Line Profile. The

following classes of ADSL operating mode are defined. "

```
SYNTAX      INTEGER {
                defMode (1),
                adsl (2),
                adsl2Pots (3),
                adsl2Isdn (4),
                adsl2PlusPots (5),
                adsl2PlusIsdn (6),
                adsl2ReachExtended (7)
            }
```

Adsl2PowerMngState ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"Attributes with this syntax uniquely identify each power management state defined for the ADSL/ADSL2 or ADSL2+ link.

The possible values are:

- l0(0) - L0 - Full power management state
- l1(1) - L1 - Low power management state (for G.992.2)
- l2(2) - L2 - Low power management state (for G.992.3, G.992.4, and G.992.5)
- l3(3) - L3 - Idle power management state"

```
SYNTAX      INTEGER {
                l0(0),
                l1(1),
                l2(2),
                l3(3)
            }
```

Adsl2ConfPmsForce ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"Attributes with this syntax are configuration parameters that reference the desired power management state for the ADSL/ADSL2 or ADSL2+ link:

- l3toL0 (1) - Perform a transition from L3 to L0 (Full power management state)
- l0toL2 (2) - Perform a transition from L0 to L2 (Low power management state)
- l0orL2toL3 (3) - Perform a transition into L3 (Idle power management state)"

```
SYNTAX      INTEGER {
                l3toL0 (0),
                l0toL2 (2),
                l0orL2toL3 (3)
            }
```


Adsl2LConfProfPmMode ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"Attributes with this syntax are configuration parameters that reference the power modes/states into which the ATU-C or ATU-R may autonomously transit.

It is a BITS structure that allows control of the following transit options:

allowTransitionsToIdle (0) - xTU may autonomously transit to idle (L3) state.
allowTransitionsToLowPower (1)- xTU may autonomously transit to low-power (L2) state."

SYNTAX BITS {

allowTransitionsToIdle(0),
allowTransitionsToLowPower(1)
}

Adsl2LineLdsf ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"Attributes with this syntax are configuration parameters that control the Loop Diagnostic mode for the ADSL/ADSL2 or ADSL2+ link. The possible values are:

inhibit (0) - Inhibit Loop Diagnostic mode
force (1) - Force/Initiate Loop Diagnostic mode"

SYNTAX INTEGER {

inhibit(0),
force(1)
}

Adsl2LdsfResult ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"Possible failure reasons associated with performing Dual Ended Loop Test (DELT) on a DSL line.

Possible values are:

none (1) - The default value in case LDSF was never requested for the associated line.
success (2) - The recent command completed successfully.
inProgress (3) - The Loop Diagnostics process is in progress.
unsupported (4) - The NE or the line card doesn't support LDSF.
cannotRun (5) - The NE cannot initiate the command, due

to a non specific reason.

- aborted (6) - The Loop Diagnostics process aborted.
- failed (7) - The Loop Diagnostics process failed.
- illegalMode (8) - The NE cannot initiate the command, due to the specific mode of the relevant line.
- adminUp (9) - The NE cannot initiate the command, as the relevant line is administratively 'Up'.
- tableFull (10) - The NE cannot initiate the command, due to reaching the maximum number of rows in the results table.
- noResources (11) - The NE cannot initiate the command, due to lack of internal memory resources."

```
SYNTAX INTEGER {  
    none (1),  
    success (2),  
    inProgress (3),  
    unsupported (4),  
    cannotRun (5),  
    aborted (6),  
    failed (7),  
    illegalMode (8),  
    adminUp (9),  
    tableFull (10),  
    noResources (11)  
}
```

Adsl2SymbolProtection ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"Attributes with this syntax are configuration parameters that reference the minimum length impulse noise protection (INP) in terms of number of symbols. The possible values are: noProtection (i.e., INP not required), halfSymbol (i.e., INP length is 1/2 symbol), and 1-16 symbols in steps of 1 symbol"

```
SYNTAX INTEGER {  
    noProtection (1),  
    halfSymbol (2),  
    singleSymbol (3),  
    twoSymbols (4),  
    threeSymbols (5),  
    fourSymbols (6),  
    fiveSymbols (7),  
    sixSymbols (8),  
    sevenSymbols (9),  
    eightSymbols (10),
```



```
        nineSymbols (11),
        tenSymbols (12),
        elevenSymbols (13),
        twelveSymbols (14),
        thirteenSymbols (15),
        fourteenSymbols (16),
        fifteenSymbols (17),
        sixteenSymbols (18)
    }
Adsl2MaxBer ::= TEXTUAL-CONVENTION
    STATUS      current
    DESCRIPTION
        "Attributes with this syntax are configuration parameters
        that reference the maximum Bit Error Rate (BER).
        The possible values are:

            eminus3 (1)  - Maximum BER=E^-3
            eminus5 (2)  - Maximum BER=E^-5
            eminus7 (3)  - Maximum BER=E^-7"
    SYNTAX      INTEGER {
        eminus3(1),
        eminus5(2),
        eminus7(3)
    }

Adsl2ScMaskDs ::= TEXTUAL-CONVENTION
    STATUS      current
    DESCRIPTION
        "Each one of the 512 bits in this OCTET
        STRING array represents the corresponding bin
        in the downstream direction.  A value of one
        indicates that the bin is not in use."
    SYNTAX      OCTET STRING (SIZE(0..64))

Adsl2ScMaskUs ::= TEXTUAL-CONVENTION
    STATUS      current
    DESCRIPTION
        "Each one of the 64 bits in this OCTET
        STRING array represents the corresponding bin
        in the downstream direction.  A value of one
        indicates that the bin is not in use."
    SYNTAX      OCTET STRING (SIZE(0..8))

Adsl2RfiDs ::= TEXTUAL-CONVENTION
    STATUS      current
    DESCRIPTION
        "Each one of the 512 bits in this OCTET
        STRING array represents the corresponding bin
```


in the downstream direction. A value of one indicates that the bin is part of a notch filter."

SYNTAX OCTET STRING (SIZE(0..64))

Adsl2PsdMaskDs ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"This is a structure that represents up to 32 PSD Mask breakpoints. Each breakpoint occupies 3 octets: The first two octets hold the index of the sub-carrier associated with the breakpoint. The third octet holds the PSD reduction at the breakpoint from 0 (0dBm/Hz) to 255 (-127.5 dBm/Hz) using units of 0.5dBm/Hz."

SYNTAX OCTET STRING (SIZE(0..96))

Adsl2PsdMaskUs ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"This is a structure that represents up to 4 PSD Mask breakpoints. Each breakpoint occupies 3 octets: The first two octets hold the index of the sub-carrier associated with the breakpoint. The third octet holds the PSD reduction at the breakpoint from 0 (0dBm/Hz) to 255 (-127.5 dBm/Hz) using units of 0.5dBm/Hz."

SYNTAX OCTET STRING (SIZE(0..12))

Adsl2Tssi ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"This is a structure that represents up to 32 transmit spectrum shaping (TSSi) breakpoints. Each breakpoint occupies 3 octets: The first two octets hold the index of the sub-carrier associated with the breakpoint. The third octet holds the shaping parameter at the breakpoint. It is a value from 0 to 127 (units of -0.5dB). The special value 127 indicates that the sub-carrier is not transmitted."

SYNTAX OCTET STRING (SIZE(0..96))

Adsl2LastTransmittedState ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"This parameter represents the last successful transmitted initialization state in the last full initialization performed on the line."

```
SYNTAX      INTEGER {  
    atucG9941(0),  
    atucQuiet1(1),  
    atucComb1(2),  
    atucQuiet2(3),  
    atucComb2(4),  
    atucIcomb1(5),  
    atucLineprob(6),  
    atucQuiet3(7),  
    atucComb3(8),  
    atucIComb2(9),  
    atucMsgfmt(10),  
    atucMsgpcb(11),  
    atucQuiet4(12),  
    atucReverb1(13),  
    atucTref1(14),  
    atucReverb2(15),  
    atucEct(16),  
    atucReverb3(17),  
    atucTref2(18),  
    atucReverb4(19),  
    atucSegue1(20),  
    atucMsg1(21),  
    atucReverb5(22),  
    atucSegue2(23),  
    atucMedley(24),  
    atucExchmarker(25),  
    atucMsg2(26),  
    atucReverb6(27),  
    atucSegue3(28),  
    atucParams(29),  
    atucReverb7(30),  
    atucSegue4(31),  
    atucShowtime(32),  
    --  
    aturG9941(100),  
    aturQuiet1(101),  
    aturComb1(102),  
    aturQuiet2(103),  
    aturComb2(104),  
    aturIcomb1(105),  
    aturLineprob(106),  
    aturQuiet3(107),  
    aturComb3(108),  
    aturIcomb2(109),
```



```
    aturMsgfmt(110),
    aturMsgpcb(111),
    aturReverb1(112),
    aturQuiet4(113),
    aturReverb2(114),
    aturQuiet5(115),
    aturReverb3(116),
    aturEct(117),
    aturReverb4(118),
    aturSegue1(119),
    aturReverb5(120),
    aturSegue2(121),
    aturMsg1(122),
    aturMedley(123),
    aturExchmarker(124),
    aturMsg2(125),
    aturReverb6(126),
    aturSegue3(127),
    aturParams(128),
    aturReverb7(129),
    aturSegue4(130),
    aturShowtime(131)
}
```

Adsl2LineStatus ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"Attributes with this syntax are status parameters
that reflect the failure status for a given endpoint of
ADSL/ADSL2 or ADSL2+ link.

This BITS structure can report the following failures:

noDefect (0)	- This bit position positively reports that no defect or failure exist.
lossOfFraming (1)	- Loss of frame synchronization
lossOfSignal (2)	- Loss of signal
lossOfPower (3)	- Loss of power. Usually this failure may be reported for CPE units only
initFailure (4)	- Recent initialization process failed."

SYNTAX BITS {

```
    noDefect(0),
    lossOfFraming(1),
    lossOfSignal(2),
    lossOfPower(3),
    initFailure(4)
}
```


Adsl2ChAtmStatus ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"Attributes with this syntax are status parameters that reflect the failure status for Transmission Convergence (TC) layer of a given ATM interface (data path over an ADSL/ADSL2 or ADSL2+ link).

This BITS structure can report the following failures:

- noDefect (0) - This bit position positively reports that no defect or failure exist.
- noCellDelineation (1) - The link was successfully initialized but cell delineation was never acquired on the associated ATM data path.
- lossOfCellDelineation (2)- Loss of cell delineation on the associated ATM data path"

SYNTAX BITS {

noDefect(0),
noCellDelineation(1),
lossOfCellDelineation(2)
}

Adsl2ChPtmStatus ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"Attributes with this syntax are status parameters that reflect the failure status for a given PTM interface (packet data path over an ADSL/ADSL2 or ADSL2+ link).

This BITS structure can report the following failures:

- noDefect (0) - This bit position positively reports that no defect or failure exist.
- outOfSync (1) - Out of synchronization. "

SYNTAX BITS {

noDefect(0),
outOfSync(1)
}

END

NGDSL-LINE-MIB DEFINITIONS ::= BEGIN

IMPORTS

```
MODULE-IDENTITY,  
OBJECT-TYPE,  
transmission,  
Unsigned32,  
NOTIFICATION-TYPE,  
Integer32,  
Counter32  
    FROM SNMPv2-SMI
```

```
ifIndex  
    FROM IF-MIB
```

```
TruthValue,  
RowStatus  
    FROM SNMPv2-TC
```

```
SnmpAdminString  
    FROM SNMP-FRAMEWORK-MIB
```

```
HCPperfIntervalThreshold,  
HCPperfTimeElapsed  
    FROM HC-PerfHist-TC-MIB -- [RFC3705]
```

```
Adsl2Unit,  
Adsl2Direction,  
Adsl2TransmissionModeType,  
Adsl2RaMode,  
Adsl2InitResult,  
Adsl2OperationModes,  
Adsl2PowerMngState,  
Adsl2ConfPmsForce,  
Adsl2LConfProfPmMode,  
Adsl2LineLdsf,  
Adsl2LdsfResult,  
Adsl2SymbolProtection,  
Adsl2MaxBer,  
Adsl2ScMaskDs,  
Adsl2ScMaskUs,  
Adsl2RfiDs,  
Adsl2PsdMaskDs,  
Adsl2PsdMaskUs,  
Adsl2Tssi,  
Adsl2LastTransmittedState,  
Adsl2LineStatus,  
Adsl2ChAtmStatus,  
Adsl2ChPtmStatus  
    FROM NGDSL-LINE-TC-MIB -- [This document]
```


MODULE-COMPLIANCE,
OBJECT-GROUP,
NOTIFICATION-GROUP
FROM SNMPv2-CONF;

ngdslMIB MODULE-IDENTITY

LAST-UPDATED "200510090000Z" -- October 09, 2005
ORGANIZATION "ADSLMIB Working Group"
CONTACT-INFO "WG-email: adslmib@ietf.org
Info: <https://www1.ietf.org/mailman/listinfo/adslmib>

Chair: Mike Sneed
Sand Channel Systems
Postal: P.O. Box 37324
Raleigh NC 27627-732
Email: sneedmike@hotmail.com
Phone: +1 206 600 7022

Co-Chair: Bob Ray
PESA Switching Systems, Inc.
Postal: 330-A Wynn Drive
Huntsville, AL 35805
USA
Email: rray@pesa.com
Phone: +1 256 726 9200 ext. 142

Co-editor: Moti Morgenstern
ECI Telecom Ltd.
Postal: 30 Hasivim St.
Petach Tikva 49517,
Israel.
Email: moti.morgenstern@ecitele.com
Phone: +972 3 926 6258

Co-editor: Menachem Dodge
ECI Telecom Ltd.
Postal: 30 Hasivim St.
Petach Tikva 49517,
Israel.
Email: mbdodge@ieee.org
Phone: +972 3 926 8421

Co-editor: Scott Baillie
NEC Australia
Postal: 649-655 Springvale Road,
Mulgrave, Victoria 3170,
Australia.

Email: scott.baillie@nec.com.au
Phone: +61 3 9264 3986

Co-editor: Umberto Bonollo
NEC Australia

Postal: 649-655 Springvale Road,
Mulgrave, Victoria 3170,
Australia.

Email: umberto.bonollo@nec.com.au
Phone: +61 3 9264 3385

"

DESCRIPTION

"

This document defines a Management Information Base (MIB) module for use with network management protocols in the Internet community for the purpose of managing ADSL, ADSL2, and ADSL2+ lines. The MIB module described in [RFC 2662](#) [[RFC2662](#)] describes objects used for managing Asymmetric Bit-Rate DSL (ADSL) interfaces per [[T1E1.413](#)], [[G.992.1](#)], and [[G.992.2](#)]. These object descriptions are based upon the specifications for the ADSL Embedded Operations Channel (EOC) as defined in American National Standards Institute (ANSI) T1E1.413/1995 [[T1E1.413](#)] and International Telecommunication Union (ITU-T) G.992.1 [[G.992.1](#)] and G.992.2 [[G.992.2](#)].

This document does not obsolete [RFC 2662](#) [[RFC2662](#)], but rather provides a more comprehensive management model that includes the ADSL2 and ADSL2+ technologies per G.992.3, G.992.4, and G.992.5 ([[G.992.3](#)], [[G.992.4](#)], and [[G.992.5](#)], respectively). In addition, objects have been added to improve the management of ADSL, ADSL2, and ADSL2+ lines.

Additionally, the management framework for New Generation ADSL lines specified by the Digital Subscriber Line Forum (DSL Forum) has been taken into consideration [[TR-90](#)]. That framework is based on ITU-T G.997.1 standard [[G.997.1](#)] as well as two amendments: [G.997.1 am1] and [G.997.1 am2].

Note that the revised ITU-T G.997.1 standard refers also to next generation of VDSL technology, known as VDSL2, per ITU-T G.993.2 [[G.993.2](#)]. However, managing VDSL2 lines is currently beyond the scope of this document.

The MIB module is located in the MIB tree under MIB 2 transmission, as discussed in the MIB-2 Integration ([RFC 2863](#) [[RFC2863](#)]) section of this document.

Copyright (C) The Internet Society (2005). This version of this MIB module is part of RFC XXXX: see the RFC itself for full legal notices."

```
-- RFC Ed.: replace XXXX with assigned number & remove this note
REVISION "200510090000Z" --      October 09, 2005
DESCRIPTION "Initial version, published as RFC XXXX."
-- RFC Ed.: replace XX with assigned number & remove this note
::= { transmission xxx }
-- RFC Ed.: we suggest to put it under { transmission 231 } because
--      this is the first available number.
```

```
adsl2          OBJECT IDENTIFIER ::= { ngdslMIB 1 }
-----
adsl2Line      OBJECT IDENTIFIER ::= { adsl2 1 }
adsl2Status    OBJECT IDENTIFIER ::= { adsl2 2 }
adsl2Inventory OBJECT IDENTIFIER ::= { adsl2 3 }
adsl2PM        OBJECT IDENTIFIER ::= { adsl2 4 }
adsl2Profile   OBJECT IDENTIFIER ::= { adsl2 5 }
adsl2Scalar    OBJECT IDENTIFIER ::= { adsl2 6 }
adsl2Notifications OBJECT IDENTIFIER ::= { adsl2 0 }
adsl2Conformance OBJECT IDENTIFIER ::= { adsl2 8 }
-----
adsl2PMLine    OBJECT IDENTIFIER ::= { adsl2PM 1 }
adsl2PMChannel OBJECT IDENTIFIER ::= { adsl2PM 2 }
-----
adsl2ProfileLine OBJECT IDENTIFIER ::= { adsl2Profile 1 }
adsl2ProfileChannel OBJECT IDENTIFIER ::= { adsl2Profile 2 }
adsl2ProfileAlarmConf OBJECT IDENTIFIER ::= { adsl2Profile 3 }
-----
adsl2ScalarSC  OBJECT IDENTIFIER ::= { adsl2Scalar 1 }
-----
```

```
-----
--      adsl2LineTable      --
-----
adsl2LineTable OBJECT-TYPE
    SYNTAX      SEQUENCE OF Adsl2LineEntry
    MAX-ACCESS   not-accessible
    STATUS       current
    DESCRIPTION
        "The table adsl2LineTable contains configuration,
        command and status parameters of the ADSL2 line.
        The index of this table is an interface index where the
        interface has an ifType of adsl2(230)."
```

```
 ::= { adsl2Line 1 }
```



```

adsl2LineEntry  OBJECT-TYPE
    SYNTAX      Adsl2LineEntry
    MAX-ACCESS   not-accessible
    STATUS      current
    DESCRIPTION
        "The table adsl2LineTable contains configuration,
        commands and status parameters of the ADSL2 line"
    INDEX       { ifIndex }
    ::= { adsl2LineTable 1 }

```

```

Adsl2LineEntry ::=
    SEQUENCE {
        adsl2LineCnfgTemplate           SnmpAdminString,
        adsl2LineAlarmCnfgTemplate      SnmpAdminString,
        adsl2LineCmndConfPmsf          Adsl2ConfPmsForce,
        adsl2LineCmndConfLdsf          Adsl2LineLdsf,
        adsl2LineCmndConfLdsfFailReason Adsl2LdsfResult,
        adsl2LineCmndAutomodeColdStart TruthValue,
        adsl2LineStatusAtuTransSys      Adsl2TransmissionModeType,
        adsl2LineStatusPwrMngState      Adsl2PowerMngState,
        adsl2LineStatusInitResult       Adsl2InitResult,
        adsl2LineStatusLastStateDs      Adsl2LastTransmittedState,
        adsl2LineStatusLastStateUs      Adsl2LastTransmittedState,
        adsl2LineStatusAtur             Adsl2LineStatus,
        adsl2LineStatusAtuc             Adsl2LineStatus,
        adsl2LineStatusLnAttenDs        Unsigned32,
        adsl2LineStatusLnAttenUs        Unsigned32,
        adsl2LineStatusSigAttenDs       Unsigned32,
        adsl2LineStatusSigAttenUs       Unsigned32,
        adsl2LineStatusSnrMarginDs      Integer32,
        adsl2LineStatusSnrMarginUs      Integer32,
        adsl2LineStatusAttainableRateDs Unsigned32,
        adsl2LineStatusAttainableRateUs Unsigned32,
        adsl2LineStatusActPsdDs         Integer32,
        adsl2LineStatusActPsdUs         Integer32,
        adsl2LineStatusActAtpDs         Integer32,
        adsl2LineStatusActAtpUs         Integer32
    }

```

```

adsl2LineCnfgTemplate  OBJECT-TYPE
    SYNTAX      SnmpAdminString (SIZE(1..32))
    MAX-ACCESS   read-write
    STATUS      current
    DESCRIPTION
        "The value of this object identifies the row in the ADSL2 Line
        Configuration Templates Table, (Adsl2ConfTemplatesTable),
        which applies for this ADSL2 line."
    REFERENCE    "DSL Forum TR-90, paragraph 5.1.1"

```



```
DEFVAL      { "DEFVAL" }  
::= { adsl2LineEntry 1 }
```

adsl2LineAlarmCnfgTemplate OBJECT-TYPE

```
SYNTAX      SnmpAdminString (SIZE(1..32))  
MAX-ACCESS  read-write  
STATUS      current
```

DESCRIPTION

"The value of this object identifies the row in the ADSL2 Line Alarm Configuration Template Table, (adsl2LineAlarmConfTemplateTable), which applies to this ADSL2 line."

REFERENCE "DSL Forum TR-90, paragraph 5.1.1"

```
DEFVAL      { "DEFVAL" }  
::= { adsl2LineEntry 2 }
```

adsl2LineCmndConfPmsf OBJECT-TYPE

```
SYNTAX      Adsl2ConfPmsForce  
MAX-ACCESS  read-write  
STATUS      current
```

DESCRIPTION

"Power management state forced. Defines the line states to be forced by the near-end ATU on this line. The various possible values are:

```
  l3toL0 (0),  
  l0toL2 (2),  
  l0orL2toL3 (3)."
```

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.1.3"

```
DEFVAL      { l3toL0 }  
::= { adsl2LineEntry 3 }
```

adsl2LineCmndConfLdsf OBJECT-TYPE

```
SYNTAX      Adsl2LineLdsf  
MAX-ACCESS  read-write  
STATUS      current
```

DESCRIPTION

"Loop diagnostics mode forced (LDSF). Defines whether the line should be forced into the loop diagnostics mode by the near-end ATU on this line or only be responsive to loop diagnostics initiated by the far-end ATU. "

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.1.8"

```
DEFVAL      { inhibit }  
::= { adsl2LineEntry 4 }
```

adsl2LineCmndConfLdsfFailReason OBJECT-TYPE

```
SYNTAX      Adsl2LdsfResult  
MAX-ACCESS  read-only  
STATUS      current
```


DESCRIPTION

"The status of the recent occasion the Loop diagnostics mode forced (LDSF) was issued for the associated line. Possible values are:

- none (1) - The default value in case LDSF was never requested for the associated line.
- success (2) - The recent command completed successfully.
- inProgress (3) - The Loop Diagnostics process is in progress.
- unsupported (4) - The NE or the line card doesn't support LDSF.
- cannotRun (5) - The NE cannot initiate the command, due to a non specific reason.
- aborted (6) - The Loop Diagnostics process aborted.
- failed (7) - The Loop Diagnostics process failed.
- illegalMode (8) - The NE cannot initiate the command, due to the specific mode of the relevant line.
- adminUp (9) - The NE cannot initiate the command, as the relevant line is administratively 'Up'.
- tableFull (10) - The NE cannot initiate the command, due to reaching the maximum number of rows in the results table.
- noResources (11) - The NE cannot initiate the command, due to lack of internal memory resources."

DEFVAL { none }

::= { adsl2LineEntry 5 }

adsl2LineCmndAutomodeColdStart OBJECT-TYPE

SYNTAX TruthValue

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"Automode cold start forced. This parameter is defined in order to improve testing of the performance of ATUs supporting automode when it is enabled in the MIB. Change the value of this parameter to 'true' indicates a change in loop conditions applied to the devices under test. The ATUs shall reset any historical information used for automode and for shortening G.994.1 handshake and initialization.

Automode is the case where multiple operation-modes are enabled through the adsl2LConfProfAtuTransSysEna object in the line configuration profile being used for the ADSL line, and where the selection of the actual

operation-mode depends not only on the common capabilities of both ATUs (as exchanged in G.994.1), but also on achievable data rates under given loop conditions. "

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.1.10"
DEFVAL { false }
::= { adsl2LineEntry 6 }

adsl2LineStatusAtuTransSys OBJECT-TYPE

SYNTAX Adsl2TransmissionModeType
MAX-ACCESS read-only
STATUS current
DESCRIPTION

"The ATU Transmission System (ATS) in use.

It is coded in a bit-map representation with one bit set to '1' (the selected coding for the ADSL line). This parameter may be derived from the handshaking procedures defined in Recommendation G.994.1. A set of ADSL2 line transmission modes, with one bit per mode. "

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.1.1"
::= { adsl2LineEntry 7 }

adsl2LineStatusPwrMngState OBJECT-TYPE

SYNTAX Adsl2PowerMngState
MAX-ACCESS read-only
STATUS current
DESCRIPTION

"The current power management state. One of four possible power management states:

- L0 - Synchronized and full transmission (i.e., Showtime),
- L1 - Low Power with reduced net data rate (G.992.2 only),
- L2 - Low Power with reduced net data rate (G.992.3 and G.992.4 only),
- L3 - No power

The various possible values are:l0(0), l1(1), l2(2), l3(3)."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.2"
::= { adsl2LineEntry 8 }

adsl2LineStatusInitResult OBJECT-TYPE

SYNTAX Adsl2InitResult
MAX-ACCESS read-only
STATUS current
DESCRIPTION

"Indicates the result of the last full initialization performed on the line. It is an enumeration type with the following values: noFailure(0), configError(1), configNotFeasible(2), commFail(3), noPeerAtu(4), otherCause(5)."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.3"
::= { adsl2LineEntry 9 }

adsl2LineStatusLastStateDs OBJECT-TYPE

SYNTAX Adsl2LastTransmittedState

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The last successful transmitted initialization state in the downstream direction in the last full initialization performed on the line. States are per the specific ADSL type and are counted from 0 (if G.994.1 is used) or 1 (if G.994.1 is not used) up to Showtime."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.4"
::= { adsl2LineEntry 10 }

adsl2LineStatusLastStateUs OBJECT-TYPE

SYNTAX Adsl2LastTransmittedState

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The last successful transmitted initialization state in the upstream direction in the last full initialization performed on the line. States are per the specific ADSL type and are counted from 0 (if G.994.1 is used) or 1 (if G.994.1 is not used) up to Showtime."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.5"
::= { adsl2LineEntry 11 }

adsl2LineStatusAtur OBJECT-TYPE

SYNTAX Adsl2LineStatus

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Indicates current state (existing failures) of the ATU-R. This is a bit-map of possible conditions. The various bit positions are: noFailure(0), lossOfFraming(1), lossOfSignal(2), lossOfPower(3), initFailure(4) - never active on ATU-R"

REFERENCE "ITU-T G.997.1, paragraph 7.1.1.2"
::= { adsl2LineEntry 12 }

adsl2LineStatusAtuc OBJECT-TYPE

SYNTAX Adsl2LineStatus

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Indicates current state (existing failures) of the ATU-C."

This is a bit-map of possible conditions. The various bit positions are: noFailure(0), lossOfFraming(1), lossOfSignal(2), lossOfPower(3), initFailure(4)"

REFERENCE "ITU-T G.997.1, paragraph 7.1.1.1"

::= { adsl2LineEntry 13 }

adsl2LineStatusLnAttenDs OBJECT-TYPE

SYNTAX Unsigned32

UNITS "0.1 dB"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The measured difference in the total power transmitted by the ATU-C and the total power received by the ATU-R over all sub-carriers during diagnostics mode and initialization. It ranges from 0 to 1270 units of 0.1 dB (Physical values are 0 to 127 dB). A value of all 1's indicates the line attenuation is out of range to be represented."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.6"

::= { adsl2LineEntry 14 }

adsl2LineStatusLnAttenUs OBJECT-TYPE

SYNTAX Unsigned32

UNITS "0.1 dB"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The measured difference in the total power transmitted by the ATU-R and the total power received by the ATU-C over all sub-carriers during diagnostics mode and initialization. It ranges from 0 to 1270 units of 0.1 dB (Physical values are 0 to 127 dB). A value of all 1's indicates the line attenuation is out of range to be represented."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.7"

::= { adsl2LineEntry 15 }

adsl2LineStatusSigAttenDs OBJECT-TYPE

SYNTAX Unsigned32

UNITS "0.1 dB"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The measured difference in the total power transmitted by the ATU-C and the total power received by the ATU-R over all sub-carriers during Showtime. It ranges from 0 to 1270 units of 0.1 dB (Physical values are 0 to 127 dB). A value of all 1's indicates the line attenuation is out of range to be represented."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.8"
::= { adsl2LineEntry 16 }

adsl2LineStatusSigAttenUs OBJECT-TYPE

SYNTAX Unsigned32

UNITS "0.1 dB"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The measured difference in the total power transmitted by the ATU-R and the total power received by the ATU-C over all sub-carriers during Showtime. It ranges from 0 to 1270 units of 0.1 dB (Physical values are 0 to 127 dB). A value of all 1's indicates the line attenuation is out of range to be represented."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.9"

::= { adsl2LineEntry 17 }

adsl2LineStatusSnrMarginDs OBJECT-TYPE

SYNTAX Integer32

UNITS "0.1 dB"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Downstream SNR Margin is the maximum increase in dB of the noise power received at the ATU-R, such that the BER requirements are met for all downstream bearer channels. It ranges from -640 to 630 units of 0.1 dB (Physical values are -64 to 63 dB). A value of all 1's indicates the line attenuation is out of range to be represented."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.10"

::= { adsl2LineEntry 18 }

adsl2LineStatusSnrMarginUs OBJECT-TYPE

SYNTAX Integer32

UNITS "0.1 dB"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Upstream SNR Margin is the maximum increase in dB of the noise power received at the ATU-C, such that the BER requirements are met for all downstream bearer channels. It ranges from -640 to 630 units of 0.1 dB (Physical values are -64 to 63 dB). A value of all 1's indicates the line attenuation is out of range to be represented."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.11"

::= { adsl2LineEntry 19 }

adsl2LineStatusAttainableRateDs OBJECT-TYPE

SYNTAX Unsigned32

UNITS "bits/second"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Maximum Attainable Data Rate Downstream.

The maximum downstream net data rate currently attainable by the ATU-C transmitter and the ATU-R receiver, coded in bit/s."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.12"

::= { adsl2LineEntry 20 }

adsl2LineStatusAttainableRateUs OBJECT-TYPE

SYNTAX Unsigned32

UNITS "bits/second"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Maximum Attainable Data Rate Upstream.

The maximum upstream net data rate currently attainable by the ATU-R transmitter and the ATU-C receiver, coded in bit/s."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.13"

::= { adsl2LineEntry 21 }

adsl2LineStatusActPsdDs OBJECT-TYPE

SYNTAX Integer32

UNITS "0.1 dB"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Actual Power Spectrum Density (PSD) Downstream. The average downstream transmit PSD over the sub-carriers used for downstream. It ranges from -900 to 0 units of 0.1 dB (Physical values are -90 to 0 dBm/Hz). A value of all 1's indicates the measurement is out of range to be represented."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.14"

::= { adsl2LineEntry 22 }

adsl2LineStatusActPsdUs OBJECT-TYPE

SYNTAX Integer32

UNITS "0.1 dB"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Actual Power Spectrum Density (PSD) Upstream. The average upstream transmit PSD over the sub-carriers used for upstream. It ranges from -900 to 0 units of 0.1 dB (Physical values are -90 to 0 dBm/Hz). A value of all 1's indicates the

measurement is out of range to be represented."
REFERENCE "ITU-T G.997.1, paragraph 7.5.1.15"
::= { adsl2LineEntry 23 }

adsl2LineStatusActAtpDs OBJECT-TYPE

SYNTAX Integer32

UNITS "0.1 dB"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Actual Aggregate Transmit Power Downstream. The total amount of transmit power delivered by the ATU-C at the U-C reference point, at the instant of measurement. It ranges from -310 to 310 units of 0.1 dB (Physical values are -31 to 31 dBm). A value of all 1's indicates the measurement is out of range to be represented."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.16"
::= { adsl2LineEntry 24 }

adsl2LineStatusActAtpUs OBJECT-TYPE

SYNTAX Integer32

UNITS "0.1 dB"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Actual Aggregate Transmit Power Upstream. The total amount of transmit power delivered by the ATU-R at the U-R reference point, at the instant of measurement. It ranges from -310 to 310 units of 0.1 dB (Physical values are -31 to 31 dBm). A value of all 1's indicates the measurement is out of range to be represented."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.17"
::= { adsl2LineEntry 25 }

-- adsl2ChannelStatusTable --

adsl2ChannelStatusTable OBJECT-TYPE

SYNTAX SEQUENCE OF Adsl2ChannelStatusEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2ChannelStatusTable contains status parameters of ADSL2 channel."

::= { adsl2Status 1 }

adsl2ChannelStatusEntry OBJECT-TYPE

SYNTAX Adsl2ChannelStatusEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2ChannelStatusTable contains status parameters of ADSL2 channel.

The index of this table is an interface index where the interface has an ifType value that is applicable for a DSL channel and the termination unit."

INDEX { ifIndex, adsl2ChStatusUnit }

::= { adsl2ChannelStatusTable 1 }

Adsl2ChannelStatusEntry ::=

SEQUENCE {

adsl2ChStatusUnit	Adsl2Unit,
adsl2ChStatusChannelNum	Unsigned32,
adsl2ChStatusActDataRate	Unsigned32,
adsl2ChStatusPrevDataRate	Unsigned32,
adsl2ChStatusActDelay	Unsigned32,
adsl2ChStatusAtmStatus	Adsl2ChAtmStatus,
adsl2ChStatusPtmStatus	Adsl2ChPtmStatus

}

adsl2ChStatusUnit OBJECT-TYPE

SYNTAX Adsl2Unit

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The termination unit ATUC(1) or ATUR(2)."

::= { adsl2ChannelStatusEntry 1 }

adsl2ChStatusChannelNum OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Provides the bearer channel number associated with this row (i.e., the channel ifIndex).

This enables determining the channel configuration profile and the channel thresholds profile applicable for this bearer channel."

::= { adsl2ChannelStatusEntry 2 }

adsl2ChStatusActDataRate OBJECT-TYPE

SYNTAX Unsigned32(0..2000000000)

UNITS "bits/second"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The actual net data rate that the bearer channel is operating at, if in L0 power management state. In L1 or L2 states, it relates to the previous L0 state. The data rate is coded in bit/s."

REFERENCE "ITU-T G.997.1, paragraph 7.5.2.1"

::= { adsl2ChannelStatusEntry 3 }

adsl2ChStatusPrevDataRate OBJECT-TYPE

SYNTAX Unsigned32(0..200000000)

UNITS "bits/second"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The previous net data rate that the bearer channel was operating at just before the latest rate change event. This could be a full or short initialization, fast retrain, DRA or power management transitions, excluding transitions between L0 state and L1 or L2 states. The data rate is coded in bit/s."

REFERENCE "ITU-T G.997.1, paragraph 7.5.2.2"

::= { adsl2ChannelStatusEntry 4 }

adsl2ChStatusActDelay OBJECT-TYPE

SYNTAX Unsigned32(0..8176)

UNITS "milliseconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The actual one-way interleaving delay introduced by the PMS-TC in the direction of the bearer channel, if in L0 power management state. In L1 or L2 states, it relates to the previous L0 state. It is coded in ms (rounded to the nearest ms)."

REFERENCE "ITU-T G.997.1, paragraph 7.5.2.3"

::= { adsl2ChannelStatusEntry 5 }

adsl2ChStatusAtmStatus OBJECT-TYPE

SYNTAX Adsl2ChAtmStatus

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Indicates current state (existing failures) of the ADSL channel in case its Data Path is ATM. This is a bit-map of possible conditions. The various bit positions are:

noFailure(0),
noCellDelineation(1),
lossOfCellDelineation(2).

In case the channel is not of ATM Data Path the object is set


```
        to '0'."
```

REFERENCE "ITU-T G.997.1, paragraph 7.1.4"

```
 ::= { adsl2ChannelStatusEntry 6 }
```

adsl2ChStatusPtmStatus OBJECT-TYPE

SYNTAX Adsl2ChPtmStatus

MAX-ACCESS read-only

STATUS current

DESCRIPTION

 "Indicates current state (existing failures) of the ADSL
 channel in case its Data Path is PTM. This is a bit-map of
 possible conditions. The various bit positions are:
 noFailure(0),
 outOfSync (1).
 In case the channel is not of PTM Data Path the object is set
 to '0'."

REFERENCE "ITU-T G.997.1, paragraph 7.1.5"

```
 ::= { adsl2ChannelStatusEntry 7 }
```

-- Scalars that relate to the adsl2SCStatusTable.

adsl2ScalarSCMaxInterfaces OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

 "This value determines the upper size of adsl2SCStatusTable.
 The maximum number of entries in adsl2SCStatusTable is equal
 to two times the value of this attribute."

```
 ::= { adsl2ScalarSC 1 }
```

adsl2ScalarSCAvailInterfaces OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

 "This value determines the amount of space that is
 currently available in adsl2SCStatusTable.
 The number of entries available in adsl2SCStatusTable is equal
 to two times the value of this attribute."

```
 ::= { adsl2ScalarSC 2 }
```

-- adsl2SCStatusTable --

adsl2SCStatusTable OBJECT-TYPE

SYNTAX SEQUENCE OF Adsl2SCStatusEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2SCStatusTable contains status parameters
of ADSL2 sub-carriers."

::= { adsl2Status 2 }

adsl2SCStatusEntry OBJECT-TYPE

SYNTAX Adsl2SCStatusEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table Hfadsl2SCStatusEntry contains status parameters
of ADSL2 sub-carriers.

The index of this table is an interface index where the
interface has an ifType of adsl2(230)."

INDEX { ifIndex, adsl2SCStatusDirection }

::= { adsl2SCStatusTable 1 }

Adsl2SCStatusEntry ::=

SEQUENCE {

adsl2SCStatusDirection	Adsl2Direction,
adsl2SCStatusMtime	Unsigned32,
adsl2SCStatusSnr	OCTET STRING,
adsl2SCStatusBitsAlloc	OCTET STRING,
adsl2SCStatusGainAlloc	OCTET STRING,
adsl2SCStatusTssi	Adsl2Tssi,
adsl2SCStatusLinScale	Unsigned32,
adsl2SCStatusLinReal	OCTET STRING,
adsl2SCStatusLinImg	OCTET STRING,
adsl2SCStatusLogMt	Unsigned32,
adsl2SCStatusLog	OCTET STRING,
adsl2SCStatusQlnMt	Unsigned32,
adsl2SCStatusQln	OCTET STRING,
adsl2SCStatusLnAtten	Unsigned32,
adsl2SCStatusSigAtten	Unsigned32,
adsl2SCStatusSnrMargin	Integer32,
adsl2SCStatusAttainableRate	Unsigned32,
adsl2SCStatusActAtp	Integer32,
adsl2SCStatusRowStatus	RowStatus

}

adsl2SCStatusDirection OBJECT-TYPE

SYNTAX Adsl2Direction

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The direction of the sub-carrier either upstream or downstream"

::= { adsl2SCStatusEntry 1 }

adsl2SCStatusMtime OBJECT-TYPE

SYNTAX Unsigned32

UNITS "symbols"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"SNR Measurement Time. The number of symbols used to measure the SNR values on the respective transmission direction. It should correspond to the value specified in the recommendation (e.g., the number of symbols in 1 second time interval for G.992.3). This parameter corresponds to 1 second in loop diagnostic procedure and should be updated otherwise"

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.20.1 (SNRMTds) and paragraph 7.5.1.20.3 (SNRMTus)"

::= { adsl2SCStatusEntry 2 }

adsl2SCStatusSnr OBJECT-TYPE

SYNTAX OCTET STRING (SIZE(0..512))

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The SNR Margin per sub-carrier, expressing the ratio between the received signal power and received noise power per subscriber. It is an array of 512 bytes, designed for supporting up to 512 (downstream) sub-carriers. The number of utilized octets on downstream direction depends on NSCds, and on upstream direction it depends on NSCus. This value is referred here as NSC.

Byte i ($0 \leq i < \text{NSC}$) is set to a value in the range 0 to 254 to indicate that the respective downstream or upstream sub-carrier i has SNR of: $(-32 + \text{Adsl2SubcarrierSnr}(i)/2)$ in dB (i.e., -32 to 95dB).

The special value 255 means that no measurement could be done for the subcarrier because it is out of the PSD mask passband or that the noise PSD is out of range to be represented.

Each value in this array is 8 bits wide."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.20.2 (SNRpsds) and paragraph 7.5.1.20.4 (SNRpsus)"

::= { adsl2SCStatusEntry 3 }

adsl2SCStatusBitsAlloc OBJECT-TYPE

SYNTAX OCTET STRING (SIZE(0..256))

UNITS "bits"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"The bits allocation per sub-carrier. An array of 256 bytes
(512 nibbles), designed for supporting up to 512 (downstream)
sub-carriers.
The number of utilized nibbles on downstream direction depends
on NSCDs, and on upstream direction it depends on NSCus. This
value is referred here as NSC.
Nibble i ($0 \leq i < \text{NSC}$) is set to a value in the range 0
to 15 to indicate that the respective downstream or upstream
sub-carrier i has the same amount of bits allocation."
REFERENCE "ITU-T G.997.1, paragraph 7.5.1.21.1 (BITSpsds)
and paragraph 7.5.1.21.2 (BITSpsus)"
::= { adsl2SCStatusEntry 4 }

adsl2SCStatusGainAlloc OBJECT-TYPE

SYNTAX OCTET STRING (SIZE(0..1024))
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"The gain allocation per sub-carrier. An array of 512 16-bits
values, designed for supporting up to 512 (downstream) sub-
carriers.
The number of utilized octets on downstream direction depends
on NSCDs, and on upstream direction it depends on NSCus. This
value is referred here as NSC.
Value i ($0 \leq i < \text{NSC}$) is in the range 0 to 4093 to indicate
that the respective downstream or upstream sub-carrier i has the
same amount of gain value.
The gain value is represented as a multiple of 1/512 on
linear scale. Each value in this array is 16 bits wide and is
stored in big endian format."
REFERENCE "ITU-T G.997.1, paragraph 7.5.1.21.3 (GAINSpds)
and paragraph 7.5.1.21.4 (GAINSpus)"
::= { adsl2SCStatusEntry 5 }

adsl2SCStatusTssi OBJECT-TYPE

SYNTAX Adsl2Tssi
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"The transmit spectrum shaping (TSSI) breakpoints expressed
as the set of breakpoints exchanged during G.994.1.
Each breakpoint is a pair of values occupying 3 octets with the
following structure:
First 2 octets - Index of the subcarrier used in the context of

the breakpoint.

Third octet - The shaping parameter at the breakpoint.

Subcarrier index is an unsigned number in the range 1 to either NSCs (downstream direction) or NSCs (upstream direction).

The shaping parameter value is in the range 0 to 127 (units of -0.5dB). The special value 127 indicates that the subcarrier is not transmitted."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.21.5 (TSSpsds)
and paragraph 7.5.1.21.6 (TSSpsus)"

::= { adsl2SCStatusEntry 6 }

adsl2SCStatusLinScale OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The scale factor to be applied to the H(f) linear representation values for the respective transmission direction. This parameter is only available after a loop diagnostic procedure."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.18.1 (HLINSCds)
and paragraph 7.5.1.18.5 (HLINSCus)"

::= { adsl2SCStatusEntry 7 }

adsl2SCStatusLinReal OBJECT-TYPE

SYNTAX OCTET STRING (SIZE(0..1024))

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"An array of up to 512 complex H(f) linear representation values in linear scale for the respective transmission direction. It is designed to support up to 512 (downstream) sub-carriers.

The number of utilized values on downstream direction depends on NSCs, and on upstream direction it depends on NSCs. This value is referred here as NSC.

Each array entry represents the real component [referred here as a(i)] of Hlin(f = i*Df) value for a particular sub-carrier index i (0 <= i < NSC).

Hlin(f) is represented as ((scale/2^15)*((a(i)+j*b(i))/2^15)), where scale is Adsl2SubcarrierLinScale and a(i) and b(i) [provided by the Adsl2SubcarrierLinImg object] are in the range (-2^15+1) to (+2^15-1).

A special value a(i)=b(i)= -2^15 indicates that no measurement could be done for the subcarrier because it is out of the passband or that the attenuation is out of range to be represented. This parameter is only available after a loop diagnostic procedure.

Each value in this array is 16 bits wide and is stored in big endian format."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.18.2 (HLINpsds)
and paragraph 7.5.1.18.6 (HLINpsds)"

::= { adsl2SCStatusEntry 8 }

adsl2SCStatusLinImg OBJECT-TYPE

SYNTAX OCTET STRING (SIZE(0..1024))

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"An array of up to 512 complex $H(f)$ linear representation values in linear scale for the respective transmission direction. It is designed to support up to 512 (downstream) sub-carriers.

The number of utilized values on downstream direction depends on NSCds, and on upstream direction it depends on NSCus. This value is referred here as NSC.

Each array entry represents the imaginary component [referred here as $b(i)$] of $H_{lin}(f = i \cdot \Delta f)$ value for a particular sub-carrier index i ($0 \leq i < NSC$).

$H_{lin}(f)$ is represented as $((scale/2^{15}) * ((a(i) + j * b(i)) / 2^{15}))$, where scale is Adsl2SubcarrierLinScale and $a(i)$ [provided by the Adsl2SubcarrierLinReal object] and $b(i)$ are in the range $(-2^{15}+1)$ to $(+2^{15}-1)$.

A special value $a(i)=b(i)= -2^{15}$ indicates that no measurement could be done for the subcarrier because it is out of the passband or that the attenuation is out of range to be represented. This parameter is only available after a loop diagnostic procedure.

Each value in this array is 16 bits wide and is stored in big endian format."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.18.2 (HLINpsds)
and paragraph 7.5.1.18.6 (HLINpsds)"

::= { adsl2SCStatusEntry 9 }

adsl2SCStatusLogMt OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The number of symbols used to measure the $H(f)$ logarithmic measurement values for the respective transmission direction. This parameter should correspond to the value specified in the recommendation (e.g., the number of symbols in 1 second time interval for G.992.3). This parameter corresponds to 1 second in loop diagnostic procedure and should be updated in initialization"

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.18.3 (HLOGMTds)
and paragraph 7.5.1.18.7 (HLOGMTus)"
::= { adsl2SCStatusEntry 10 }

adsl2SCStatusLog OBJECT-TYPE
SYNTAX OCTET STRING (SIZE(0..1024))
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"An array of up to 512 real H(f) logarithmic representation
values in dB for the respective transmission direction. It is
designed to support up to 512 (downstream) sub-carriers
The number of utilized values on downstream direction depends
on NSCds, and on upstream direction it depends on NSCus. This
value is referred here as NSC.
Each array entry represents the real Hlog($f = i \cdot D_f$) value for a
particular sub-carrier index i, ($0 \leq i < NSC$).
The real Hlog(f) value is represented as $(6 - m(i)/10)$, with m(i)
in the range 0 to 1022. A special value m=1023 indicates that
no measurement could be done for the subcarrier because it is
out of the passband or that the attenuation is out of range to
be represented. This parameter is applicable in loop
diagnostic procedure and initialization.
Each value in this array is 16 bits wide and is stored
in big endian format."
REFERENCE "ITU-T G.997.1, paragraph 7.5.1.18.4 (HLOGpsds)
and paragraph 7.5.1.18.8 (HLOGpsus)"
::= { adsl2SCStatusEntry 11 }

adsl2SCStatusQlnMt OBJECT-TYPE
SYNTAX Unsigned32
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"The number of symbols used to measure the Quiet Line Noise
values on the respective transmission direction. This
parameter should correspond to the value specified in the
recommendation (e.g., the number of symbols in 1 second time
interval for G.992.3). This parameter corresponds to 1 second
in loop diagnostic procedure and should be updated in
initialization "
REFERENCE "ITU-T G.997.1, paragraph 7.5.1.19.1 (QLNMTds)
and paragraph 7.5.1.19.3 (QLNMTus)"
::= { adsl2SCStatusEntry 12 }

adsl2SCStatusQln OBJECT-TYPE
SYNTAX OCTET STRING (SIZE(0..512))
UNITS "dBm/Hz"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"An array of up to 512 real Quiet Line Noise values in dBm/Hz for the respective transmission direction. It is designed for up to 512 (downstream) sub-carriers

The number of utilized values on downstream direction depends on NSCDs, and on upstream direction it depends on NSCus. This value is referred here as NSC.

Each array entry represents the $QLN(f = i \cdot Df)$ value for a particular sub-carrier index i , ($0 \leq i < NSC$).

The $QLN(f)$ is represented as $(-23 - n(i)/2)$, with $n(i)$ in the range 0 to 254. A special value $n(i)=255$ indicates that no measurement could be done for the subcarrier because it is out of the passband or that the noise PSD is out of range to be represented.

This parameter is applicable in loop diagnostic procedure and initialization. Each value in this array is 8 bits wide."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.19.2 (QLNpsds)
and paragraph 7.5.1.19.4 (QLNpsus)"

::= { adsl2SCStatusEntry 13 }

adsl2SCStatusLnAtten OBJECT-TYPE

SYNTAX Unsigned32

UNITS "0.1 dB"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"When referring to the downstream direction, it is the measured difference in the total power transmitted by the ATU-C and the total power received by the ATU-R over all sub-carriers during diagnostics mode.

When referring to the upstream direction, it is the measured difference in the total power transmitted by the ATU-R and the total power received by the ATU-C over all sub-carriers during diagnostics mode.

It ranges from 0 to 1270 units of 0.1 dB (Physical values are 0 to 127 dB). A value of all 1's indicates the line attenuation is out of range to be represented.

This object reflects the value of the parameter following the most recent DELT performed on the associated line. Once the DELT process is over, the parameter no longer changes until the row is deleted or a new DELT process is initiated. "

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.6 (LATNds)
and paragraph 7.5.1.7 (LATNus)"

::= { adsl2SCStatusEntry 14 }

adsl2SCStatusSigAtten OBJECT-TYPE

SYNTAX Unsigned32

UNITS "0.1 dB"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"When referring to the downstream direction, it is the measured difference in the total power transmitted by the ATU-C and the total power received by the ATU-R over all sub carriers during Showtime after the diagnostics mode.

When referring to the upstream direction, it is the measured difference in the total power transmitted by the ATU-R and the total power received by the ATU-C over all sub carriers during Showtime after the diagnostics mode.

It ranges from 0 to 1270 units of 0.1 dB (Physical values are 0 to 127 dB). A value of all 1's indicates the line attenuation is out of range to be represented.

This object reflects the value of the parameter following the most recent DELT performed on the associated line. Once the DELT process is over, the parameter no longer changes until the row is deleted or a new DELT process is initiated. "

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.8 (SATNdS)
 and paragraph 7.5.1.9 (SATNus)"

::= { adsl2SCStatusEntry 15 }

adsl2SCStatusSnrMargin OBJECT-TYPE

SYNTAX Integer32

UNITS "0.1 dB"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"SNR Margin is the maximum increase in dB of the noise power received at the ATU (ATU-R on downstream direction and ATU-C on upstream direction), such that the BER requirements are met for all bearer channels received at the ATU. It ranges from -640 to 630 units of 0.1 dB (Physical values are -64 to 63 dB). A value of all 1's indicates the SNR margin is out of range to be represented.

This object reflects the value of the parameter following the most recent DELT performed on the associated line. Once the DELT process is over, the parameter no longer changes until the row is deleted or a new DELT process is initiated. "

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.10 (SNRMds)
 and paragraph 7.5.1.11 (SNRMus)"

::= { adsl2SCStatusEntry 16 }

adsl2SCStatusAttainableRate OBJECT-TYPE

SYNTAX Unsigned32

UNITS "bits/second"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Maximum Attainable Data Rate. The maximum net data rate currently attainable by the ATU-C transmitter and ATU-R receiver (when referring to downstream direction) or by the ATU-R transmitter and ATU-C receiver (when referring to upstream direction). Value is coded in bits/s. This object reflects the value of the parameter following the most recent DELT performed on the associated line. Once the DELT process is over, the parameter no longer changes until the row is deleted or a new DELT process is initiated. "

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.12 (ATTNDRds)
and paragraph 7.5.1.13 (ATTNDRus)"

::= { adsl2SCStatusEntry 17 }

adsl2SCStatusActAtp OBJECT-TYPE

SYNTAX Integer32

UNITS "0.1 dB"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Actual Aggregate Transmit Power from the ATU (ATU-R on downstream direction and ATU-C on upstream direction), at the instant of measurement. It ranges from -310 to 310 units of 0.1 dB (Physical values are -31 to 31 dBm). A value of all 1's indicates the measurement is out of range to be represented.

This object reflects the value of the parameter following the most recent DELT performed on the associated line. Once the DELT process is over, the parameter no longer changes until the row is deleted or a new DELT process is initiated. "

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.14 (ACTPSDds)
and paragraph 7.5.1.15 (ACTPSDus)"

::= { adsl2SCStatusEntry 18 }

adsl2SCStatusRowStatus OBJECT-TYPE

SYNTAX RowStatus

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"Row Status. The SNMP agent should create a row in this table for storing the results of a DELT performed on the associated line, if such a row does not already exist. The SNMP agent may have limited resources; therefore, if multiple rows co-exist in the table, it may fail to add new rows to the table or allocate memory resources for a new DELT process. If that occurs, the SNMP agent responds with

either the value 'tableFull' or the value
 'noResources' (for adsl2LineCmndConfLdsfFailReason
 object in adsl2LineTable)
 The management system (the operator) may delete rows according
 to any scheme. E.g., after retrieving the results."
 ::= { adsl2SCStatusEntry 19 }

```

-----
--          adsl2LineInventoryTable          --
-----
adsl2LineInventoryTable  OBJECT-TYPE
    SYNTAX      SEQUENCE OF Adsl2LineInventoryEntry
    MAX-ACCESS   not-accessible
    STATUS      current
    DESCRIPTION
        "The table adsl2LineInventoryTable contains inventory of ADSL2
        unit."
    ::= { adsl2Inventory 1 }

adsl2LineInventoryEntry  OBJECT-TYPE
    SYNTAX      Adsl2LineInventoryEntry
    MAX-ACCESS   not-accessible
    STATUS      current
    DESCRIPTION
        "The table adsl2LineInventoryTable contains inventory of ADSL2
        unit.
        The index of this table is an interface index where the
        interface has an ifType of adsl2(230)."
```

```

    INDEX { ifIndex, adsl2LInvUnit }
    ::= { adsl2LineInventoryTable 1 }

Adsl2LineInventoryEntry ::=
    SEQUENCE {
        adsl2LInvUnit                Adsl2Unit,
        adsl2LInvG994VendorId        OCTET STRING,
        adsl2LInvSystemVendorId      OCTET STRING,
        adsl2LInvVersionNumber       OCTET STRING,
        adsl2LInvSerialNumber        OCTET STRING,
        adsl2LInvSelfTestResult      OCTET STRING,
        adsl2LInvTransmissionCapabilities Adsl2TransmissionModeType
    }

adsl2LInvUnit  OBJECT-TYPE
    SYNTAX      Adsl2Unit
    MAX-ACCESS   not-accessible
    STATUS      current
    DESCRIPTION
        "The termination unit ATUC{1} or ATUR{2}."
```



```
::= { adsl2LineInventoryEntry 1 }
```

adsl2LInvG994VendorId OBJECT-TYPE

SYNTAX OCTET STRING (SIZE(0..8))

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The ATU G.994.1 Vendor ID as inserted in the G.994.1 CL/CLR message. It consists of 8 binary octets, including a country code followed by a (regionally allocated) provider code, as defined in Recommendation T.35."

REFERENCE "ITU-T G.997.1, paragraph 7.4"

```
::= { adsl2LineInventoryEntry 2 }
```

adsl2LInvSystemVendorId OBJECT-TYPE

SYNTAX OCTET STRING (SIZE(0..8))

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The ATU System Vendor ID (identifies the ATU system integrator) as inserted in the Overhead Messages (both ATUs for G.992.3 and G.992.4) or in the Embedded Operations Channel (only ATU-R in G.992.1 and G.992.2). It consists of 8 binary octets, with same format as used for Adsl2InvG994VendorId."

REFERENCE "ITU-T G.997.1, paragraph 7.4"

```
::= { adsl2LineInventoryEntry 3 }
```

adsl2LInvVersionNumber OBJECT-TYPE

SYNTAX OCTET STRING (SIZE(0..16))

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The ATU version number (vendor specific information) as inserted in the Overhead Messages (both ATUs for G.992.3 and G.992.4) or in the Embedded Operations Channel (only ATU-R in G.992.1 and G.992.2). It consists of up to 16 binary octets."

REFERENCE "ITU-T G.997.1, paragraph 7.4"

```
::= { adsl2LineInventoryEntry 4 }
```

adsl2LInvSerialNumber OBJECT-TYPE

SYNTAX OCTET STRING (SIZE(0..32))

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The ATU serial number (vendor specific information) as inserted in the Overhead Messages (both ATUs for G.992.3 and G.992.4) or in the Embedded Operations Channel (only ATU-R in

G.992.1 and G.992.2). It is vendor specific information. It consists of up to 32 ASCII characters."
REFERENCE "ITU-T G.997.1, paragraph 7.4"
::= { adsl2LineInventoryEntry 5 }

adsl2LInvSelfTestResult OBJECT-TYPE
SYNTAX OCTET STRING (SIZE(0..4))
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"The ATU self-test result, coded as a 32-bit integer. The most significant octet of this object is '0' if the self-test passed, and '1' if the self-test failed. The interpretation of the other octets is vendor discretionary."
REFERENCE "ITU-T G.997.1, paragraph 7.4"
::= { adsl2LineInventoryEntry 6 }

adsl2LInvTransmissionCapabilities OBJECT-TYPE
SYNTAX Adsl2TransmissionModeType
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"The ATU transmission system capability list of the different coding types. It is coded in a bit-map representation with 1 or more bits set. A bit set to '1' means that the ATU supports the respective coding. The value may be derived from the handshaking procedures defined in G.994.1. A set of ADSL2 line transmission modes, with one bit per mode."
REFERENCE "ITU-T G.997.1, paragraph 7.4"
::= { adsl2LineInventoryEntry 7 }

-- adsl2LineConfTemplateTable --

adsl2LineConfTemplateTable OBJECT-TYPE
SYNTAX SEQUENCE OF Adsl2LineConfTemplateEntry
MAX-ACCESS not-accessible
STATUS current
DESCRIPTION
"The table adsl2LineConfTemplateTable contains ADSL2 line configuration template."
::= { adsl2ProfileLine 1 }

adsl2LineConfTemplateEntry OBJECT-TYPE
SYNTAX Adsl2LineConfTemplateEntry
MAX-ACCESS not-accessible
STATUS current

DESCRIPTION

"The table adsl2LineConfTemplateTable contains ADSL2 line configuration template.

A default template with an index of 'DEFVAL' will always exist and its parameters will be set to vendor-specific values, unless otherwise specified in this document"

INDEX { adsl2LConfTempTemplateName }

::= { adsl2LineConfTemplateTable 1 }

Adsl2LineConfTemplateEntry ::=

```
SEQUENCE {
    adsl2LConfTempTemplateName      SnmpAdminString,
    adsl2LConfTempLineProfile       SnmpAdminString,
    adsl2LConfTempChan1ConfProfile  SnmpAdminString,
    adsl2LConfTempChan1RaRatioDs    Unsigned32,
    adsl2LConfTempChan1RaRatioUs    Unsigned32,
    adsl2LConfTempChan2ConfProfile  SnmpAdminString,
    adsl2LConfTempChan2RaRatioDs    Unsigned32,
    adsl2LConfTempChan2RaRatioUs    Unsigned32,
    adsl2LConfTempChan3ConfProfile  SnmpAdminString,
    adsl2LConfTempChan3RaRatioDs    Unsigned32,
    adsl2LConfTempChan3RaRatioUs    Unsigned32,
    adsl2LConfTempChan4ConfProfile  SnmpAdminString,
    adsl2LConfTempChan4RaRatioDs    Unsigned32,
    adsl2LConfTempChan4RaRatioUs    Unsigned32,
    adsl2LConfTempRowStatus         RowStatus
}
```

adsl2LConfTempTemplateName OBJECT-TYPE

SYNTAX SnmpAdminString (SIZE(1..32))

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"This object identifies a row in this table."

REFERENCE "DSL Forum TR-90, paragraph 5.1.4"

::= { adsl2LineConfTemplateEntry 1 }

adsl2LConfTempLineProfile OBJECT-TYPE

SYNTAX SnmpAdminString (SIZE(1..32))

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The value of this object identifies the row in the ADSL2 Line Configuration Profile Table, (Adsl2LineConfProfileTable), which applies for this ADSL2 line."

REFERENCE "DSL Forum TR-90, paragraph 5.1.4"

DEFVAL { "DEFVAL" }

::= { adsl2LineConfTemplateEntry 2 }

adsl2LConfTempChan1ConfProfile OBJECT-TYPE

SYNTAX SnmpAdminString (SIZE(1..32))

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The value of this object identifies the row in the ADSL2 Channel Configuration Profile Table, (Adsl2ChanConfProfileTable) that applies to ADSL2 bearer channel #1. The channel profile name specified here must match the name of an existing row in the adsl2ChConfProfileTable table."

DEFVAL { "DEFVAL" }

::= { adsl2LineConfTemplateEntry 3 }

adsl2LConfTempChan1RaRatioDs OBJECT-TYPE

SYNTAX Unsigned32(0..100)

UNITS "percents"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Rate Adaptation Ratio. The ratio (in %) that should be taken into account for the bearer channel #1 when performing rate adaptation on Downstream. The ratio refers to the available data rate in excess of the Minimum Data Rate, summed over all bearer channels. Also, the 100 - Adsl2ConfTemplateChan1RaRatioDs is the ratio of excess data rate to be assigned to all other bearer channels on Downstream direction. The sum of rate adaptation ratios over all bearers on the same direction shall be equal to 100%."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.1"

DEFVAL { 100 }

::= { adsl2LineConfTemplateEntry 4 }

adsl2LConfTempChan1RaRatioUs OBJECT-TYPE

SYNTAX Unsigned32(0..100)

UNITS "percents"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Rate Adaptation Ratio. The ratio (in %) that should be taken into account for the bearer channel #1 when performing rate adaptation on Upstream. The ratio refers to the available data rate in excess of the Minimum Data Rate, summed over all bearer channels. Also, the 100 - Adsl2ConfTemplateChan1RaRatioUs is the ratio of excess data rate to be assigned to all other bearer channels on Upstream direction. The sum of rate adaptation ratios over all bearers on the same direction shall be equal to 100 %."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.1"
DEFVAL { 100 }
::= { adsl2LineConfTemplateEntry 5 }

adsl2LConfTempChan2ConfProfile OBJECT-TYPE
SYNTAX SnmpAdminString (SIZE(0..32))
MAX-ACCESS read-create
STATUS current
DESCRIPTION
"The value of this object identifies the row in the ADSL2
Channel Configuration Profile Table,
(Adsl2ChanConfProfileTable) that applies to ADSL2 bearer
channel #2. If the channel is unused, then the object is set
to a zero length string.
This object may be set to a zero length string only if
adsl2LConfTempChan3ConfProfile contains a zero length
string."

DEFVAL { "" }
::= { adsl2LineConfTemplateEntry 6 }

adsl2LConfTempChan2RaRatioDs OBJECT-TYPE
SYNTAX Unsigned32(0..100)
UNITS "percents"
MAX-ACCESS read-create
STATUS current
DESCRIPTION
"Rate Adaptation Ratio. The ratio (in %) that should be taken
into account for the bearer channel #2 when performing rate
adaptation on Downstream. The ratio refers to the available
data rate in excess of the Minimum Data Rate, summed over all
bearer channels. Also, the
100 - Adsl2ConfTemplateChan2RaRatioDs is the ratio of excess
data rate to be assigned to all other bearer channels on
Downstream direction. The sum of rate adaptation ratios
over all bearers on the same direction shall be equal to
100%."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.1"
DEFVAL { 0 }
::= { adsl2LineConfTemplateEntry 7 }

adsl2LConfTempChan2RaRatioUs OBJECT-TYPE
SYNTAX Unsigned32(0..100)
UNITS "percents"
MAX-ACCESS read-create
STATUS current
DESCRIPTION
"Rate Adaptation Ratio. The ratio (in %) that should be taken

into account for the bearer channel #2 when performing rate adaptation on Upstream. The ratio refers to the available data rate in excess of the Minimum Data Rate, summed over all bearer channels. Also, the 100 - Adsl2ConfTemplateChan2RaRatioUs is the ratio of excess data rate to be assigned to all other bearer channels on Upstream direction. The sum of rate adaptation ratios over all bearers on the same direction shall be equal to 100 %."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.1"

DEFVAL { 0 }

::= { adsl2LineConfTemplateEntry 8 }

adsl2LConfTempChan3ConfProfile OBJECT-TYPE

SYNTAX SnmpAdminString (SIZE(0..32))

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The value of this object identifies the row in the ADSL2 Channel Configuration Profile Table, (Adsl2ChanConfProfileTable) that applies to ADSL2 bearer channel #3. If the channel is unused, then the object is set to a zero length string.

This object may be set to a zero length string only if adsl2LConfTempChan4ConfProfile contains a zero length string.

This object may be set to a non-zero length string only if adsl2LConfTempChan2ConfProfile contains a non-zero length string."

DEFVAL { "" }

::= { adsl2LineConfTemplateEntry 9 }

adsl2LConfTempChan3RaRatioDs OBJECT-TYPE

SYNTAX Unsigned32(0..100)

UNITS "percents"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Rate Adaptation Ratio. The ratio (in %) that should be taken into account for the bearer channel #3 when performing rate adaptation on Downstream. The ratio refers to the available data rate in excess of the Minimum Data Rate, summed over all bearer channels. Also, the 100 -

Adsl2ConfTemplateChan3RaRatioDs is the ratio of excess data rate to be assigned to all other bearer channels on Downstream direction. The sum of rate adaptation ratios over all bearers on the same direction shall be equal to 100%."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.1"

DEFVAL { 0 }


```
::= { adsl2LineConfTemplateEntry 10 }
```

```
adsl2LConfTempChan3RaRatioUs OBJECT-TYPE
```

```
SYNTAX      Unsigned32(0..100)
```

```
UNITS       "percents"
```

```
MAX-ACCESS  read-create
```

```
STATUS      current
```

```
DESCRIPTION
```

"Rate Adaptation Ratio. The ratio (in %) that should be taken into account for the bearer channel #3 when performing rate adaptation on Upstream. The ratio refers to the available data rate in excess of the Minimum Data Rate, summed over all bearer channels. Also, the

100 - Adsl2ConfTemplateChan3RaRatioUs is the ratio of excess data rate to be assigned to all other bearer channels on Upstream direction. The sum of rate adaptation ratios over all bearers on the same direction shall be equal to 100%."

```
REFERENCE   "ITU-T G.997.1, paragraph 7.3.2.1"
```

```
DEFVAL      { 0 }
```

```
::= { adsl2LineConfTemplateEntry 11 }
```

```
adsl2LConfTempChan4ConfProfile OBJECT-TYPE
```

```
SYNTAX      SnmpAdminString (SIZE(0..32))
```

```
MAX-ACCESS  read-create
```

```
STATUS      current
```

```
DESCRIPTION
```

"The value of this object identifies the row in the ADSL2 Channel Configuration Profile Table (Adsl2ChanConfProfileTableDs) that applies to ADSL2 bearer channel #4. If the channel is unused, then the object is set to a zero length string.

This object may be set to a non-zero length string only if adsl2LConfTempChan3ConfProfile contains a non-zero length string."

```
DEFVAL      { "" }
```

```
::= { adsl2LineConfTemplateEntry 12 }
```

```
adsl2LConfTempChan4RaRatioDs OBJECT-TYPE
```

```
SYNTAX      Unsigned32(0..100)
```

```
UNITS       "percents"
```

```
MAX-ACCESS  read-create
```

```
STATUS      current
```

```
DESCRIPTION
```

"Rate Adaptation Ratio. The ratio (in %) that should be taken into account for the bearer channel #4 when performing rate adaptation on Downstream. The ratio refers to the available data rate in excess of the Minimum Data Rate, summed over all bearer channels. Also, the 100 -

adsl2LConfTempChan4RaRatioDs is the ratio of excess data rate to be assigned to all other bearer channels. The sum of rate adaptation ratios over all bearers on the same direction shall sum to 100%."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.1"

DEFVAL { 0 }

::= { adsl2LineConfTemplateEntry 13 }

adsl2LConfTempChan4RaRatioUs OBJECT-TYPE

SYNTAX Unsigned32(0..100)

UNITS "percents"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Rate Adaptation Ratio. The ratio (in %) that should be taken into account for the bearer channel #4 when performing rate adaptation on Upstream. The ratio refers to the available data rate in excess of the Minimum Data Rate, summed over all bearer channels. Also, the 100 - adsl2LConfTempChan4RaRatioUs is the ratio of excess data rate to be assigned to all other bearer channels. The sum of rate adaptation ratios over all bearers on the same direction shall sum to 100%."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.1"

DEFVAL { 0 }

::= { adsl2LineConfTemplateEntry 14 }

adsl2LConfTempRowStatus OBJECT-TYPE

SYNTAX RowStatus

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"This object is used to create a new row or to modify or delete an existing row in this table.

A profile is activated by setting this object to 'active'. When 'active' is set, the system will validate the profile.

Before a profile can be deleted or taken out of service (by setting this object to 'destroy' or 'outOfService'), it must be first unreferenced from all associated lines."

::= { adsl2LineConfTemplateEntry 15 }

```
-----
--          adsl2LineConfProfTable          --
-----
```


adsl2LineConfProfTable OBJECT-TYPE

SYNTAX SEQUENCE OF Adsl2LineConfProfEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2LineConfProfTable contains ADSL2 line profile configuration."

::= { adsl2ProfileLine 2 }

adsl2LineConfProfEntry OBJECT-TYPE

SYNTAX Adsl2LineConfProfEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2LineConfProfTable contains ADSL2 line profile configuration."

A default profile with an index of 'DEFVAL' will always exist and its parameters will be set to vendor-specific values, unless otherwise specified in this document"

INDEX { adsl2LConfProfProfileName }

::= { adsl2LineConfProfTable 1 }

Adsl2LineConfProfEntry ::=

SEQUENCE {

adsl2LConfProfProfileName	SnmpAdminString,
adsl2LConfProfScMaskDs	Adsl2ScMaskDs,
adsl2LConfProfScMaskUs	Adsl2ScMaskUs,
adsl2LConfProfRfiBandsDs	Adsl2RfiDs,
adsl2LConfProfRaModeDs	Adsl2RaMode,
adsl2LConfProfRaModeUs	Adsl2RaMode,
adsl2LConfProfRaUsNrmDs	Unsigned32,
adsl2LConfProfRaUsNrmUs	Unsigned32,
adsl2LConfProfRaUsTimeDs	Unsigned32,
adsl2LConfProfRaUsTimeUs	Unsigned32,
adsl2LConfProfRaDsNrmsDs	Unsigned32,
adsl2LConfProfRaDsNrmsUs	Unsigned32,
adsl2LConfProfRaDsTimeDs	Unsigned32,
adsl2LConfProfRaDsTimeUs	Unsigned32,
adsl2LConfProfTargetSnrmDs	Unsigned32,
adsl2LConfProfTargetSnrmUs	Unsigned32,
adsl2LConfProfMaxSnrmDs	Unsigned32,
adsl2LConfProfMaxSnrmUs	Unsigned32,
adsl2LConfProfMinSnrmDs	Unsigned32,
adsl2LConfProfMinSnrmUs	Unsigned32,
adsl2LConfProfMsgMinUs	Unsigned32,
adsl2LConfProfMsgMinDs	Unsigned32,
adsl2LConfProfAtuTransSysEna	Adsl2TransmissionModeType,

adsl2LConfProfPmMode	Adsl2LConfProfPmMode,
adsl2LConfProfL0Time	Unsigned32,
adsl2LConfProfL2Time	Unsigned32,
adsl2LConfProfL2Atpr	Unsigned32,
adsl2LConfProfL2Atprt	Unsigned32,
adsl2LConfProfRowStatus	RowStatus

}

adsl2LConfProfProfileName OBJECT-TYPE

SYNTAX SnmpAdminString (SIZE(1..32))

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"This object identifies a row in this table."

::= { adsl2LineConfProfEntry 1 }

adsl2LConfProfScMaskDs OBJECT-TYPE

SYNTAX Adsl2ScMaskDs

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Sub-carriers mask. A bitmap of 512 bits that allows masking up to 512 downstream sub-carriers, depending on NSCs. If bit i ($0 \leq i < \text{NSCs}$) is set to '1', the respective downstream sub-carrier i is masked, and if set to '0', the respective sub-carrier is unmasked. Note that there should always be unmasked sub-carriers (i.e., the object cannot be all 1's). Also note that if $\text{NSCs} < 512$, all bits i ($\text{NSCs} \leq i < 512$) should be set to '1'."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.2.6"

::= { adsl2LineConfProfEntry 2 }

adsl2LConfProfScMaskUs OBJECT-TYPE

SYNTAX Adsl2ScMaskUs

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Sub-carriers mask. A bitmap of 64 bits that allows masking up to 64 downstream sub-carriers, depending on NSCs. If bit i ($0 \leq i < \text{NSCs}$) is set to '1', the respective upstream sub-carrier i is masked, and if set to '0', the respective sub-carrier is unmasked. Note that there should always be unmasked sub-carriers (i.e., the object cannot be all 1's). Also note that if $\text{NSCs} < 64$, all bits i ($\text{NSCs} \leq i < 64$) should be set to '1'."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.2.7"

::= { adsl2LineConfProfEntry 3 }

adsl2LConfProfRfiBandsDs OBJECT-TYPE

SYNTAX Adsl2RfiDs
MAX-ACCESS read-create
STATUS current
DESCRIPTION

"The subset of downstream PSD mask breakpoints that shall be used to notch an RFI band.

The specific interpolation around these points is defined in G.992.5. It is a bitmap of 512 bits that allows referring to up to 512 downstream sub-carriers, depending on NSCds. If bit i ($0 \leq i < \text{NSCds}$) is set to '1', the respective downstream sub-carrier i is part of a notch filter, and if set to '0', the respective sub-carrier is not part of a notch filter. This information complements the specification provided by adsl2LconfProfPsdMaskDs.

Note that if $\text{NSCds} < 512$, all bits i ($\text{NSCds} < i < 512$) should be set to '0'.

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.2.9"
::= { adsl2LineConfProfEntry 4 }

adsl2LConfProfRaModeDs OBJECT-TYPE

SYNTAX Adsl2RaMode
MAX-ACCESS read-create
STATUS current
DESCRIPTION

"The mode of operation of a rate-adaptive ATU-C in the transmit direction. The parameter can take three values:

 manual (1),
 raInit (2),
 dynamicRa (3)."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.4.1"
DEFVAL { manual }
::= { adsl2LineConfProfEntry 5 }

adsl2LConfProfRaModeUs OBJECT-TYPE

SYNTAX Adsl2RaMode
MAX-ACCESS read-create
STATUS current
DESCRIPTION

"The mode of operation of a rate-adaptive ATU-R in the transmit direction. The parameter can take three values:

 manual (1),
 raInit (2),
 dynamicRa (3)."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.4.2"
DEFVAL { manual }
::= { adsl2LineConfProfEntry 6 }

adsl2LConfProfRaUsNrmDs OBJECT-TYPE

SYNTAX Unsigned32(0..310)

UNITS "0.1 dB"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The Downstream Up-Shift Noise Margin value, to be used when Adsl2LineConfRaModeDs is set to DynamicRa. If the downstream noise margin is above this value and stays above it for more than the time specified by the Adsl2LineConfRaUsTimeDs, the ATU-R shall attempt to increase the downstream net data rate. The Downstream Up-shift Noise Margin ranges from 0 to 310 units of 0.1 dB (Physical values are 0 to 31 dB)."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.4.3"

DEFVAL { 10 }

::= { adsl2LineConfProfEntry 7 }

adsl2LConfProfRaUsNrmUs OBJECT-TYPE

SYNTAX Unsigned32(0..310)

UNITS "0.1 dB"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The Upstream Up-Shift Noise Margin value, to be used when Adsl2LineConfRaModeUs is set to DynamicRa. If the upstream noise margin is above this value and stays above it for more than the time specified by the Adsl2LineConfRaUsTimeUs, the ATU-C shall attempt to increase the upstream net data rate. The Upstream Up-shift Noise Margin ranges from 0 to 310 units of 0.1 dB (Physical values are 0 to 31 dB)."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.4.4"

DEFVAL { 10 }

::= { adsl2LineConfProfEntry 8 }

adsl2LConfProfRaUsTimeDs OBJECT-TYPE

SYNTAX Unsigned32(0..16383)

UNITS "seconds"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The Downstream Up-Shift Time Interval, to be used when Adsl2LineConfRaModeDs is set to DynamicRa. The interval of time that the downstream noise margin should stay above the Downstream Up-shift Noise Margin before the ATU-R shall attempt to increase the downstream net data rate. The time interval ranges from 0 to 16383 seconds."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.4.5"

DEFVAL { 3600 }


```
::= { adsl2LineConfProfEntry 9 }
```

```
adsl2LConfProfRaUsTimeUs OBJECT-TYPE
```

```
SYNTAX      Unsigned32(0..16383)
```

```
UNITS       "seconds"
```

```
MAX-ACCESS  read-create
```

```
STATUS      current
```

```
DESCRIPTION
```

"The Upstream Up-Shift Time Interval, to be used when Adsl2LineConfRaModeUs is set to DynamicRa. The interval of time the upstream noise margin should stay above the Upstream Up-shift Noise Margin before the ATU-C shall attempt to increase the upstream net data rate. The time interval ranges from 0 to 16383 seconds."

```
REFERENCE   "ITU-T G.997.1, paragraph 7.3.1.4.6"
```

```
DEFVAL      { 3600 }
```

```
::= { adsl2LineConfProfEntry 10 }
```

```
adsl2LConfProfRaDsNrmsDs OBJECT-TYPE
```

```
SYNTAX      Unsigned32(0..310)
```

```
UNITS       "0.1 dB"
```

```
MAX-ACCESS  read-create
```

```
STATUS      current
```

```
DESCRIPTION
```

"The Downstream Down-Shift Noise Margin value, to be used when Adsl2LineConfRaModeDs is set to DynamicRa. If the downstream noise margin is below this value and stays below that for more than the time specified by the Adsl2LineConfRaDsTimeDs, the ATU-R shall attempt to decrease the downstream net data rate. The Downstream Down-shift Noise Margin ranges from 0 to 310 units of 0.1 dB (Physical values are 0 to 31 dB)."

```
REFERENCE   "ITU-T G.997.1, paragraph 7.3.1.4.7"
```

```
DEFVAL      { 10 }
```

```
::= { adsl2LineConfProfEntry 11 }
```

```
adsl2LConfProfRaDsNrmsUs OBJECT-TYPE
```

```
SYNTAX      Unsigned32(0..310)
```

```
UNITS       "0.1 dB"
```

```
MAX-ACCESS  read-create
```

```
STATUS      current
```

```
DESCRIPTION
```

"The Upstream Downshift Noise Margin value, to be used when Adsl2LineConfRaModeUs is set to DynamicRa. If the upstream noise margin is below this value and stays below that for more than the time specified by the Adsl2LineConfRaDsTimeUs, the ATU-C shall attempt to decrease the upstream net data rate. The Upstream Down-shift Noise Margin ranges from 0 to 310 units of 0.1 dB (Physical values are 0 to 31 dB)."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.4.8"
DEFVAL { 10 }
::= { adsl2LineConfProfEntry 12 }

adsl2LConfProfRaDsTimeDs OBJECT-TYPE

SYNTAX Unsigned32(0..16383)

UNITS "seconds"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The Downstream Downshift Time Interval, to be used when Adsl2LineConfRaModeDs is set to DynamicRa. The interval of time the downstream noise margin should stay below the Downstream Down-shift Noise Margin before the ATU-R shall attempt to decrease the downstream net data rate. The time interval ranges from 0 to 16383 seconds."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.4.9"

DEFVAL { 3600 }

::= { adsl2LineConfProfEntry 13 }

adsl2LConfProfRaDsTimeUs OBJECT-TYPE

SYNTAX Unsigned32(0..16383)

UNITS "seconds"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The Upstream Down-Shift Time Interval, to be used when Adsl2LineConfRaModeUs is set to DynamicRa. The interval of time the upstream noise margin should stay below the Upstream Down-shift Noise Margin before the ATU-C shall attempt to decrease the upstream net data rate. The time interval ranges from 0 to 16383 seconds."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.4.10"

DEFVAL { 3600 }

::= { adsl2LineConfProfEntry 14 }

adsl2LConfProfTargetSnrmDs OBJECT-TYPE

SYNTAX Unsigned32(0..310)

UNITS "0.1 dB"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The minimum Noise Margin the ATU-R receiver shall achieve, relative to the BER requirement for each of the downstream bearer channels, to successfully complete initialization. The target noise margin ranges from 0 to 310 units of 0.1 dB (Physical values are 0 to 31 dB)."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.3.1"


```
DEFVAL      { 60 }  
::= { adsl2LineConfProfEntry 15 }
```

adsl2LConfProfTargetSnrmUs OBJECT-TYPE

SYNTAX Unsigned32(0..310)

UNITS "0.1 dB"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The minimum Noise Margin the ATU-C receiver shall achieve, relative to the BER requirement for each of the upstream bearer channels, to successfully complete initialization. The target noise margin ranges from 0 to 310 units of 0.1 dB (Physical values are 0 to 31 dB)."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.3.2"

DEFVAL { 60 }

::= { adsl2LineConfProfEntry 16 }

adsl2LConfProfMaxSnrmDs OBJECT-TYPE

SYNTAX Unsigned32

UNITS "0.1 dB"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The maximum Noise Margin the ATU-R receiver shall try to sustain. If the Noise Margin is above this level, the ATU-R shall request that the ATU-C reduce the ATU-C transmit power to get a noise margin below this limit (if this functionality is supported). The maximum noise margin ranges from 0 to 310 units of 0.1 dB (Physical values are 0 to 31 dB). A value of all 1's means that there is no maximum."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.3.3"

DEFVAL { 310 }

::= { adsl2LineConfProfEntry 17 }

adsl2LConfProfMaxSnrmUs OBJECT-TYPE

SYNTAX Unsigned32

UNITS "0.1 dB"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The maximum Noise Margin the ATU-C receiver shall try to sustain. If the Noise Margin is above this level, the ATU-C shall request that the ATU-R reduce the ATU-R transmit power to get a noise margin below this limit (if this functionality is supported). The maximum noise margin ranges from 0 to 310 units of 0.1 dB (Physical values are 0 to 31 dB). A value of all 1's means that there is no maximum."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.3.4"
DEFVAL { 310 }
::= { adsl2LineConfProfEntry 18 }

adsl2LConfProfMinSnrmDs OBJECT-TYPE

SYNTAX Unsigned32(0..310)

UNITS "0.1 dB"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The minimum Noise Margin the ATU-R receiver shall tolerate. If the noise margin falls below this level, the ATU-R shall request that the ATU-C increase the ATU-C transmit power. If an increase to ATU-C transmit power is not possible, a loss-of-margin (LOM) defect occurs, the ATU-R shall fail and attempt to reinitialize and the NMS shall be notified. The minimum noise margin ranges from 0 to 310 units of 0.1 dB (Physical values are 0 to 31 dB). A value of 0 means that there is no minimum."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.3.5"

DEFVAL { 10 }

::= { adsl2LineConfProfEntry 19 }

adsl2LConfProfMinSnrmUs OBJECT-TYPE

SYNTAX Unsigned32(0..310)

UNITS "0.1 dB"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The minimum Noise Margin the ATU-C receiver shall tolerate. If the noise margin falls below this level, the ATU-C shall request that the ATU-R increase the ATU-R transmit power. If an increase of ATU-R transmit power is not possible, a loss-of-margin (LOM) defect occurs, the ATU-C shall fail and attempt to re-initialize and the NMS shall be notified. The minimum noise margin ranges from 0 to 310 units of 0.1 dB (Physical values are 0 to 31 dB). A value of 0 means that there is no minimum."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.3.6"

DEFVAL { 10 }

::= { adsl2LineConfProfEntry 20 }

adsl2LConfProfMsgMinUs OBJECT-TYPE

SYNTAX Unsigned32(4000..63000)

UNITS "bits/second"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Minimum Overhead Rate Upstream. Defines the minimum rate of the message-based overhead that shall be maintained by the ATU in upstream direction. Expressed in bits per second and ranges from 4000 to 63000 bps."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.5.1"

DEFVAL { 4000 }

::= { adsl2LineConfProfEntry 21 }

adsl2LConfProfMsgMinDs OBJECT-TYPE

SYNTAX Unsigned32(4000..63000)

UNITS "bits/second"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Minimum Overhead Rate Downstream. Defines the minimum rate of the message-based overhead that shall be maintained by the ATU in downstream direction. Expressed in bits per second and ranges from 4000 to 63000 bps."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.5.2"

DEFVAL { 4000 }

::= { adsl2LineConfProfEntry 22 }

adsl2LConfProfAtuTransSysEna OBJECT-TYPE

SYNTAX Adsl2TransmissionModeType

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"ATU Transmission System Enabling (ATSE). A list of the different coding types enabled in this profile. It is coded in a bit-map representation with 1 or more bits set. A bit set to '1' means that the ATUs may apply the respective coding for the ADSL line. A bit set to '0' means that the ATUs cannot apply the respective coding for the ADSL line. All 'reserved' bits should be set to '0'."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.1.1"

::= { adsl2LineConfProfEntry 23 }

adsl2LConfProfPmMode OBJECT-TYPE

SYNTAX Adsl2LConfProfPmMode

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Power management state Enabling. Defines the power states the ATU-C or ATU-R may autonomously transition to on this line. The various bit positions are: allowTransitionsToIdle (0) and allowTransitionsToLowPower (1). A bit with a '1' value means that the ATU is allowed to transit into the respective state and a '0' value means that the ATU is not allowed

to transit into the respective state."
REFERENCE "ITU-T G.997.1, paragraph 7.3.1.1.4"
DEFVAL { { allowTransitionsToIdle, allowTransitionsToLowPower } }
::= { adsl2LineConfProfEntry 24 }

adsl2LConfProfL0Time OBJECT-TYPE
SYNTAX Unsigned32 (0..255)
UNITS "seconds"
MAX-ACCESS read-create
STATUS current
DESCRIPTION
"This minimum time (in seconds) between an Exit from the L2
state and the next Entry into the L2 state. It ranges from 0
to 255 seconds."
REFERENCE "ITU-T G.997.1, paragraph 7.3.1.1.5"
DEFVAL { 255 }
::= { adsl2LineConfProfEntry 25 }

adsl2LConfProfL2Time OBJECT-TYPE
SYNTAX Unsigned32 (0..255)
UNITS "seconds"
MAX-ACCESS read-create
STATUS current
DESCRIPTION
"This minimum time (in seconds) between an Entry into the
L2 state and the first Power Trim in the L2 state and between
two consecutive Power Trims in the L2 State.
It ranges from 0 to 255 seconds."
REFERENCE "ITU-T G.997.1, paragraph 7.3.1.1.6"
DEFVAL { 255 }
::= { adsl2LineConfProfEntry 26 }

adsl2LConfProfL2Atpr OBJECT-TYPE
SYNTAX Unsigned32 (0..31)
UNITS "dB"
MAX-ACCESS read-create
STATUS current
DESCRIPTION
"The maximum aggregate transmit power reduction (in dB) that
can be performed at transition of L0 to L2 state or through a
single Power Trim in the L2 state.
It ranges from 0 dB to 31 dB."
REFERENCE "ITU-T G.997.1 (amendment 1), 7.3.1.1.7"
DEFVAL { 10 }
::= { adsl2LineConfProfEntry 27 }

adsl2LConfProfL2Atprt OBJECT-TYPE
SYNTAX Unsigned32 (0..31)

UNITS "dB"
MAX-ACCESS read-create
STATUS current
DESCRIPTION
"The total maximum aggregate transmit power reduction
(in dB) that can be performed in an L2 state. This is the
sum of all reductions of L2 Request (i.e., at transition of
L0 to L2 state) and Power Trims."
REFERENCE "ITU-T G.997.1 (amendment 1), 7.3.1.1.9"
DEFVAL { 31 }
::= { adsl2LineConfProfEntry 28 }

adsl2LConfProfRowStatus OBJECT-TYPE

SYNTAX RowStatus
MAX-ACCESS read-create
STATUS current
DESCRIPTION
"This object is used to create a new row or to modify or
delete an existing row in this table.

A profile is activated by setting this object to 'active'.
When 'active' is set, the system will validate the profile.

Before a profile can be deleted or taken out of service
(by setting this object to 'destroy' or 'outOfService'),
it must be first unreferenced from all associated
templates."
::= { adsl2LineConfProfEntry 29 }

-- adsl2LineConfProfModeSpecTable --

adsl2LineConfProfModeSpecTable OBJECT-TYPE

SYNTAX SEQUENCE OF Adsl2LineConfProfModeSpecEntry
MAX-ACCESS not-accessible
STATUS current
DESCRIPTION
"The table adsl2LineConfProfModeSpecTable extends the
ADSL2 line configuration profile by ADSL Mode Specific
parameters.
A row in this table that has an index of
adsl2LconfProfAdslMode == defMode(1), is called a
'mandatory' row.
A row in this table that has an index such that
adsl2LconfProfAdslMode is not equal to defMode(1),
is called an 'optional' row.
When a row in the adsl2LineConfProfTable table

(the parent row) is created, the SNMP agent will automatically create a 'mandatory' row in this table. When the parent row is deleted, the SNMP agent will automatically delete all associated rows in this table. Any attempt to delete the 'mandatory' row using the adsl2LConfProfModeSpecRowStatus attribute will be rejected by the SNMP agent.

The manager MAY create an 'optional' row in this table using the adsl2LConfProfModeSpecRowStatus attribute if the parent row exists.

The manager MAY delete an 'optional' row in this table using the adsl2LConfProfModeSpecRowStatus attribute at any time.

If the actual transmission mode of a DSL line does not match one of the 'optional' rows in this table, then the line will use the PSD configuration from the 'mandatory' row."

```
::= { adsl2ProfileLine 3 }
```

adsl2LineConfProfModeSpecEntry OBJECT-TYPE

SYNTAX Adsl2LineConfProfModeSpecEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2LineConfProfModeSpecTable extends the ADSL2 line configuration profile by ADSL Mode Specific parameters."

INDEX { adsl2LConfProfProfileName, adsl2LConfProfAdslMode }

```
::= { adsl2LineConfProfModeSpecTable 1 }
```

Adsl2LineConfProfModeSpecEntry ::=

SEQUENCE {

adsl2LConfProfAdslMode	Adsl2OperationModes,
adsl2LConfProfMaxNomPsdDs	Integer32,
adsl2LConfProfMaxNomPsdUs	Integer32,
adsl2LConfProfMaxNomAtpDs	Unsigned32,
adsl2LConfProfMaxNomAtpUs	Unsigned32,
adsl2LConfProfMaxAggRxPwrUs	Integer32,
adsl2LConfProfPsdMaskDs	Adsl2PsdMaskDs,
adsl2LConfProfPsdMaskUs	Adsl2PsdMaskUs,
adsl2LConfProfPsdMaskSelectUs	Unsigned32,
adsl2LConfProfModeSpecRowStatus	RowStatus

}

adsl2LConfProfAdslMode OBJECT-TYPE

SYNTAX Adsl2OperationModes

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The ADSL Mode is a way of categorizing the various ADSL transmission modes into groups, each group (ADSL Mode) shares the same PSD configuration.

There should be multiple entries in this table for a given line profile in case multiple bits are set in adsl2LConfProfAtuTransSysEna for that profile. "

REFERENCE "DSL Forum TR-90, paragraph 5.1.8"

::= { adsl2LineConfProfModeSpecEntry 1 }

adsl2LConfProfMaxNomPsdDs OBJECT-TYPE

SYNTAX Integer32(-600..-300)

UNITS "0.1 dBm/Hz"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The maximum nominal transmit PSD in the downstream direction during initialization and Showtime. It ranges from -600 to -300 units of 0.1 dBm/Hz. (physical values are -60 to -30 dBm/Hz). "

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.2"

DEFVAL { -300 }

::= { adsl2LineConfProfModeSpecEntry 2 }

adsl2LConfProfMaxNomPsdUs OBJECT-TYPE

SYNTAX Integer32(-600..-300)

UNITS "0.1 dBm/Hz"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The maximum nominal transmit PSD in the upstream direction during initialization and Showtime. It ranges from -600 to -300 units of 0.1 dBm/Hz. (physical values are -60 to -30 dBm/Hz). "

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.2"

DEFVAL { -300 }

::= { adsl2LineConfProfModeSpecEntry 3 }

adsl2LConfProfMaxNomAtpDs OBJECT-TYPE

SYNTAX Unsigned32 (0..255)

UNITS "0.1 dBm"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The maximum nominal aggregate transmit power in the downstream direction during initialization and Showtime. It ranges from 0 to 255 units of 0.1 dBm (physical values are 0 to 25.5 dBm)."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.2"
DEFVAL { 255 }
::= { adsl2LineConfProfModeSpecEntry 4 }

adsl2LConfProfMaxNomAtpUs OBJECT-TYPE

SYNTAX Unsigned32 (0..255)

UNITS "0.1 dBm"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The maximum nominal aggregate transmit power in the upstream direction during initialization and Showtime. It ranges from 0 to 255 units of 0.1 dBm (physical values are 0 to 25.5 dBm)."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.2"

DEFVAL { 255 }

::= { adsl2LineConfProfModeSpecEntry 5 }

adsl2LConfProfMaxAggRxPwrUs OBJECT-TYPE

SYNTAX Integer32(-255..2147483647)

UNITS "0.1 dBm"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The maximum upstream aggregate receive power over the relevant set of sub-carriers. The ATU-C should verify that the upstream power cutback is such that this maximum aggregate receive power value is honored. It ranges from -255 to 255 units of 0.1 dBm (physical values are -25.5 to 25.5 dBm).
A value of all ones means that there is no limit."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.2"

DEFVAL { 255 }

::= { adsl2LineConfProfModeSpecEntry 6 }

adsl2LConfProfPsdMaskDs OBJECT-TYPE

SYNTAX Adsl2PsdMaskDs

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The downstream PSD mask applicable at the U-C2 reference point.

This parameter is used only for G.992.5 and it may impose PSD restrictions (breakpoints) in addition to the Limit PSD mask defined in G.992.5.

This is a string of 32 pairs of values in the following structure:

Octets 0+1 - Index of 1st sub-carrier used in the context of a first breakpoint.

Octet 2 - The PSD reduction for the sub-carrier indicated in octets 0 and 1.

Octets 3-5 - Same, for a 2nd breakpoint.

Octets 6-8 - Same, for a 3rd breakpoint.

This architecture continues until octets 94-95, which are associated with a 32nd breakpoint.

Each subcarrier index is an unsigned number in the range 1 and NSCds. Each PSD reduction value is in the range 0 (0dBm/Hz) to 255 (-127.5dBm/Hz) with steps of 0.5dBm/Hz. Valid values are in the range 0 to 190 (0 to -95dBm/Hz).

When the number of breakpoints is less than 32, all remaining octets are set to the value 0. Note that the content of this object should be correlated with the sub-carriers mask and with the RFI setup. "

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.2"

::= { adsl2LineConfProfModeSpecEntry 7 }

adsl2LConfProfPsdMaskUs OBJECT-TYPE

SYNTAX Adsl2PsdMaskUs

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The upstream PSD mask applicable at the U-R2 reference point.

This parameter is used only for G.992.5 and it may impose PSD restrictions (breakpoints) in addition to the Limit PSD mask defined in G.992.5.

This is a string of 4 pairs of values in the following structure:

Octets 0+1 - Index of 1st sub-carrier used in the context of a first breakpoint.

Octet 2 - The PSD reduction for the sub-carrier indicated in octets 0 and 1.

Octets 3-5 - Same, for a 2nd breakpoint.

Octets 6-8 - Same, for a 3rd breakpoint.

This architecture continues until octets 9-11, which are associated with a 4th breakpoint.

Each subcarrier index is an unsigned number in the range 1 and NSCus. Each PSD reduction value is in the range 0 (0dBm/Hz) to 255 (-127.5dBm/Hz) with steps of 0.5dBm/Hz. Valid values are in the range 0 to 190 (0 to -95dBm/Hz).

When the number of breakpoints is less than 4, all remaining octets are set to the value 0. Note that the content of this object should be correlated with the sub-carriers mask and with the RFI setup. "

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.2"

::= { adsl2LineConfProfModeSpecEntry 8 }

adsl2LConfProfPsdMaskSelectUs OBJECT-TYPE

SYNTAX Unsigned32(1..9)

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The selected upstream PSD mask. This parameter is used only for annexes J and M of G.992.3 and G.992.5, and the same selection is used for all relevant enabled bits in adsl2LConfProfAtuTransSysEna. "

REFERENCE "ITU-T G.997.1 (amendment 1), 7.3.1.10"

DEFVAL { 1 }

::= { adsl2LineConfProfModeSpecEntry 9 }

adsl2LConfProfModeSpecRowStatus OBJECT-TYPE

SYNTAX RowStatus

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"This object is used to create a new row or to modify or delete an existing row in this table.

A profile is activated by setting this object to 'active'. When 'active' is set, the system will validate the profile.

Before a profile can be deleted or taken out of service (by setting this object to 'destroy' or 'outOfService'), it must be first unreferenced from all associated templates."

::= { adsl2LineConfProfModeSpecEntry 10 }

-- adsl2ChConfProfileTable --

adsl2ChConfProfileTable OBJECT-TYPE

SYNTAX SEQUENCE OF Adsl2ChConfProfileEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2ChConfProfileTable contains ADSL2 channel profile configuration."

::= { adsl2ProfileChannel 1 }

adsl2ChConfProfileEntry OBJECT-TYPE

SYNTAX Adsl2ChConfProfileEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2ChConfProfileTable contains ADSL2 channel profile configuration.

A default profile with an index of 'DEFVAL' will always exist and its parameters will be set to vendor-specific values, unless otherwise specified in this document"

INDEX { adsl2ChConfProfProfileName }

::= { adsl2ChConfProfileTable 1 }

Adsl2ChConfProfileEntry ::=

SEQUENCE {

adsl2ChConfProfProfileName	SnmpAdminString,
adsl2ChConfProfMinDataRateDs	Unsigned32,
adsl2ChConfProfMinDataRateUs	Unsigned32,
adsl2ChConfProfMinResDataRateDs	Unsigned32,
adsl2ChConfProfMinResDataRateUs	Unsigned32,
adsl2ChConfProfMaxDataRateDs	Unsigned32,
adsl2ChConfProfMaxDataRateUs	Unsigned32,
adsl2ChConfProfMinDataRateLowPwrDs	Unsigned32,
adsl2ChConfProfMinDataRateLowPwrUs	Unsigned32,
adsl2ChConfProfMaxDelayDs	Unsigned32,
adsl2ChConfProfMaxDelayUs	Unsigned32,
adsl2ChConfProfMinProtectionDs	Adsl2SymbolProtection,
adsl2ChConfProfMinProtectionUs	Adsl2SymbolProtection,
adsl2ChConfProfMaxBerDs	Adsl2MaxBer,
adsl2ChConfProfMaxBerUs	Adsl2MaxBer,
adsl2ChConfProfUsDataRateDs	Unsigned32,
adsl2ChConfProfDsDataRateDs	Unsigned32,
adsl2ChConfProfUsDataRateUs	Unsigned32,
adsl2ChConfProfDsDataRateUs	Unsigned32,
adsl2ChConfProfImaEnabled	TruthValue,
adsl2ChConfProfRowStatus	RowStatus

}

adsl2ChConfProfProfileName OBJECT-TYPE

SYNTAX SnmpAdminString (SIZE(1..32))

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"This object identifies a row in this table."

::= { adsl2ChConfProfileEntry 1 }

adsl2ChConfProfMinDataRateDs OBJECT-TYPE

SYNTAX Unsigned32(0..2000000000)

UNITS "bits/second"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Minimum Data Rate on Downstream direction. The minimum net data rate for the bearer channel, coded in bit/s."
REFERENCE "ITU-T G.997.1, paragraph 7.3.2.1"
::= { adsl2ChConfProfileEntry 2 }

adsl2ChConfProfMinDataRateUs OBJECT-TYPE

SYNTAX Unsigned32(0..200000000)
UNITS "bits/second"
MAX-ACCESS read-create
STATUS current
DESCRIPTION
"Minimum Data Rate on Upstream direction. The minimum net data rate for the bearer channel, coded in bit/s."
REFERENCE "ITU-T G.997.1, paragraph 7.3.2.1"
::= { adsl2ChConfProfileEntry 3 }

adsl2ChConfProfMinResDataRateDs OBJECT-TYPE

SYNTAX Unsigned32(0..200000000)
UNITS "bits/second"
MAX-ACCESS read-create
STATUS current
DESCRIPTION
"Minimum Reserved Data Rate on Downstream direction. The minimum reserved net data rate for the bearer channel, coded in bit/s. This parameter is used only if the Rate Adaptation Mode in the direction of the bearer channel (i.e., Adsl2LineConfRaModeDs) is set to DynamicRa."
REFERENCE "ITU-T G.997.1, paragraph 7.3.2.1"
::= { adsl2ChConfProfileEntry 4 }

adsl2ChConfProfMinResDataRateUs OBJECT-TYPE

SYNTAX Unsigned32(0..200000000)
UNITS "bits/second"
MAX-ACCESS read-create
STATUS current
DESCRIPTION
"Minimum Reserved Data Rate on Upstream direction. The minimum reserved net data rate for the bearer channel, coded in bit/s. This parameter is used only if the Rate Adaptation Mode in the direction of the bearer channel (i.e., Adsl2LineConfRaModeUs) is set to DynamicRa."
REFERENCE "ITU-T G.997.1, paragraph 7.3.2.1"
::= { adsl2ChConfProfileEntry 5 }

adsl2ChConfProfMaxDataRateDs OBJECT-TYPE

SYNTAX Unsigned32(0..200000000)
UNITS "bits/second"
MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Maximum Data Rate on Downstream direction. The maximum net data rate for the bearer channel, coded in bit/s."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.1"

::= { adsl2ChConfProfileEntry 6 }

adsl2ChConfProfMaxDataRateUs OBJECT-TYPE

SYNTAX Unsigned32(0..200000000)

UNITS "bits/second"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Maximum Data Rate on Upstream direction. The maximum net data rate for the bearer channel, coded in bit/s."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.1"

::= { adsl2ChConfProfileEntry 7 }

adsl2ChConfProfMinDataRateLowPwrDs OBJECT-TYPE

SYNTAX Unsigned32(0..200000000)

UNITS "bits/second"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Minimum Data Rate in Low Power state on Downstream direction. The minimum net data rate for the bearer channel, coded in bit/s., during the low power state (L1 in G.992.2, L2 in G.992.3)."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.1"

::= { adsl2ChConfProfileEntry 8 }

adsl2ChConfProfMinDataRateLowPwrUs OBJECT-TYPE

SYNTAX Unsigned32(0..200000000)

UNITS "bits/second"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Minimum Data Rate in Low Power state on Upstream direction. The minimum net data rate for the bearer channel, coded in bit/s., during the low power state (L1 in G.992.2, L2 in G.992.3)."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.1"

::= { adsl2ChConfProfileEntry 9 }

adsl2ChConfProfMaxDelayDs OBJECT-TYPE

SYNTAX Unsigned32(0..63)

UNITS "milliseconds"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Maximum Interleave Delay on Downstream direction. The maximum one-way interleaving delay introduced by the PMS-TC on Downstream direction. The ATUs shall choose the S (factor) and D (depth) values such that the actual one-way interleaving delay (Adsl2ChanStatusActDelay) is as close as possible to, but less than or equal to, Adsl2ChanConfMaxDelayDs. The delay is coded in ms, with the value 0 indicating no delay bound is being imposed."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.2"

::= { adsl2ChConfProfileEntry 10 }

adsl2ChConfProfMaxDelayUs OBJECT-TYPE

SYNTAX Unsigned32(0..63)

UNITS "milliseconds"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Maximum Interleave Delay on Upstream direction. The maximum one-way interleaving delay introduced by the PMS-TC on Upstream direction. The ATUs shall choose the S (factor) and D (depth) values such that the actual one-way interleaving delay (Adsl2ChanStatusActDelay) is as close as possible to, but less than or equal to, Adsl2ChanConfMaxDelayUs. The delay is coded in ms, with the value 0 indicating no delay bound is being imposed."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.2"

::= { adsl2ChConfProfileEntry 11 }

adsl2ChConfProfMinProtectionDs OBJECT-TYPE

SYNTAX Adsl2SymbolProtection

UNITS "symbols"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Minimum Impulse Noise Protection on Downstream direction. The minimum impulse noise protection for the bearer channel, expressed in symbols. The parameter can take the following values: noProtection (i.e., INP not required), halfSymbol (i.e., INP length is 1/2 symbol) and 1-16 symbols in steps of 1 symbol."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.3"

DEFVAL { noProtection }

::= { adsl2ChConfProfileEntry 12 }

adsl2ChConfProfMinProtectionUs OBJECT-TYPE

SYNTAX Adsl2SymbolProtection

UNITS "symbols"
MAX-ACCESS read-create
STATUS current
DESCRIPTION
"Minimum Impulse Noise Protection on Upstream direction. The minimum impulse noise protection for the bearer channel, expressed in symbols. The parameter can take the following values:
noProtection (1),
halfSymbol (2),
singleSymbol (3),
twoSymbols (4),
fourSymbols (5),
eightSymbols (6),
sixteenSymbols (7)."
REFERENCE "ITU-T G.997.1, paragraph 7.3.2.3"
DEFVAL { noProtection }
::= { adsl2ChConfProfileEntry 13 }

adsl2ChConfProfMaxBerDs OBJECT-TYPE

SYNTAX Adsl2MaxBer
MAX-ACCESS read-create
STATUS current
DESCRIPTION
"Maximum Bit Error Ratio on Downstream direction. The maximum bit error ratio for the bearer channel. The parameter can take the following values (for 1E-3, 1E-5 or 1E-7):
eminus3 (1),
eminus5 (2),
eminus7 (3)"
REFERENCE "ITU-T G.997.1, paragraph 7.3.2.4"
DEFVAL { eminus5 }
::= { adsl2ChConfProfileEntry 14 }

adsl2ChConfProfMaxBerUs OBJECT-TYPE

SYNTAX Adsl2MaxBer
MAX-ACCESS read-create
STATUS current
DESCRIPTION
"Maximum Bit Error Ratio on Upstream direction. The maximum bit error ratio for the bearer channel. The parameter can take the following values (for 1E-3, 1E-5 or 1E-7):
eminus3 (1),
eminus5 (2),
eminus7 (3)"
REFERENCE "ITU-T G.997.1, paragraph 7.3.2.4"
DEFVAL { eminus5 }
::= { adsl2ChConfProfileEntry 15 }

adsl2ChConfProfUsDataRateDs OBJECT-TYPE

SYNTAX Unsigned32(0..200000000)

UNITS "bits/second"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Data Rate Threshold Up shift for downstream direction. An 'Up-shift rate change' event is triggered when the actual downstream data rate exceeds, by more than the threshold, the data rate at the last entry into Showtime. The parameter is coded in bit/s."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.6"

::= { adsl2ChConfProfileEntry 16 }

adsl2ChConfProfDsDataRateDs OBJECT-TYPE

SYNTAX Unsigned32(0..200000000)

UNITS "bits/second"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Data Rate Threshold Downshift for downstream direction. A 'Down-shift rate change' event is triggered when the actual downstream data rate is below the data rate at the last entry into Showtime, by more than the threshold. The parameter is coded in bit/s."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.6"

::= { adsl2ChConfProfileEntry 17 }

adsl2ChConfProfUsDataRateUs OBJECT-TYPE

SYNTAX Unsigned32(0..200000000)

UNITS "bits/second"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Data Rate Threshold Up shift for upstream direction. An 'Up-shift rate change' event is triggered when the actual upstream data rate exceeds, by more than the threshold, the data rate at the last entry into Showtime. The parameter is coded in bit/s."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.6"

::= { adsl2ChConfProfileEntry 18 }

adsl2ChConfProfDsDataRateUs OBJECT-TYPE

SYNTAX Unsigned32(0..200000000)

UNITS "bits/second"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Data Rate Threshold Downshift for upstream direction. A 'Down-shift rate change' event is triggered when the actual upstream data rate is below the data rate at the last entry into Showtime, by more than the threshold. The parameter is coded in bit/s."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.6"

::= { adsl2ChConfProfileEntry 19 }

adsl2ChConfProfImaEnabled OBJECT-TYPE

SYNTAX TruthValue

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"IMA Mode Enable. The parameter enables the IMA operation mode in the ATM Data Path. Relevant only if the channel is of ATM Data Path. When in 'enable' state, the ATM data path should comply with the requirements for IMA transmission."

REFERENCE "ITU-T G.997.1, paragraph 7.3.4.1"

DEFVAL { false }

::= { adsl2ChConfProfileEntry 20 }

adsl2ChConfProfRowStatus OBJECT-TYPE

SYNTAX RowStatus

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"This object is used to create a new row or to modify or delete an existing row in this table."

A profile is activated by setting this object to 'active'. When 'active' is set, the system will validate the profile.

Before a profile can be deleted or taken out of service (by setting this object to 'destroy' or 'outOfService'), it must be first unreferenced from all associated templates."

::= { adsl2ChConfProfileEntry 21 }

-- adsl2LineAlarmConfTemplateTable --

adsl2LineAlarmConfTemplateTable OBJECT-TYPE

SYNTAX SEQUENCE OF Adsl2LineAlarmConfTemplateEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2LineConfTemplateTable contains ADSL2 line configuration template."


```
::= { adsl2ProfileAlarmConf 1 }
```

adsl2LineAlarmConfTemplateEntry OBJECT-TYPE

SYNTAX Adsl2LineAlarmConfTemplateEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2LineAlarmConfTemplateTable contains ADSL2 line PM thresholds template.

A default template with an index of 'DEFVAL' will always exist and its parameters will be set to vendor specific values, unless otherwise specified in this document"

INDEX { adsl2LAlarmConfTempTemplateName }

```
::= { adsl2LineAlarmConfTemplateTable 1 }
```

Adsl2LineAlarmConfTemplateEntry ::=

SEQUENCE {

adsl2LAlarmConfTempTemplateName SnmpAdminString,

adsl2LAlarmConfTempLineProfile SnmpAdminString,

adsl2LAlarmConfTempChan1ConfProfile SnmpAdminString,

adsl2LAlarmConfTempChan2ConfProfile SnmpAdminString,

adsl2LAlarmConfTempChan3ConfProfile SnmpAdminString,

adsl2LAlarmConfTempChan4ConfProfile SnmpAdminString,

adsl2LAlarmConfTempRowStatus RowStatus

}

adsl2LAlarmConfTempTemplateName OBJECT-TYPE

SYNTAX SnmpAdminString (SIZE(1..32))

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"This object identifies a row in this table."

```
::= { adsl2LineAlarmConfTemplateEntry 1 }
```

adsl2LAlarmConfTempLineProfile OBJECT-TYPE

SYNTAX SnmpAdminString (SIZE(1..32))

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The value of this object identifies the row in the ADSL2 Line Thresholds Configuration Profile Table (adsl2LineAlarmConfProfileTable) that applies to this ADSL2 line."

REFERENCE "DSL Forum TR-90, paragraph 5.4.1"

DEFVAL { "DEFVAL" }

```
::= { adsl2LineAlarmConfTemplateEntry 2 }
```


adsl2LAlarmConfTempChan1ConfProfile OBJECT-TYPE

SYNTAX SnmpAdminString (SIZE(1..32))

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The value of this object identifies the row in the ADSL2 Channel Thresholds Configuration Profile Table (adsl2ChAlarmConfProfileTable) that applies for ADSL2 bearer channel #1. The channel profile name specified here must match the name of an existing row in the adsl2ChAlarmConfProfileTable table."

REFERENCE "DSL Forum TR-90, paragraph 5.4.1"

DEFVAL { "DEFVAL" }

::= { adsl2LineAlarmConfTemplateEntry 3 }

adsl2LAlarmConfTempChan2ConfProfile OBJECT-TYPE

SYNTAX SnmpAdminString (SIZE(0..32))

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The value of this object identifies the row in the ADSL2 Channel Thresholds Configuration Profile Table (adsl2ChAlarmConfProfileTable) that applies for ADSL2 bearer channel #2. The channel profile name specified here must match the name of an existing row in the adsl2ChAlarmConfProfileTable table. If the channel is unused, then the object is set to a zero length string."

REFERENCE "DSL Forum TR-90, paragraph 5.4.1"

DEFVAL { "" }

::= { adsl2LineAlarmConfTemplateEntry 4 }

adsl2LAlarmConfTempChan3ConfProfile OBJECT-TYPE

SYNTAX SnmpAdminString (SIZE(0..32))

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The value of this object identifies the row in the ADSL2 Channel Thresholds Configuration Profile Table (adsl2ChAlarmConfProfileTable) that applies for ADSL2 bearer channel #3. The channel profile name specified here must match the name of an existing row in the adsl2ChAlarmConfProfileTable table.

This object may be set to a non-zero length string only if adsl2LAlarmConfTempChan2ConfProfile contains a non-zero length string."

REFERENCE "DSL Forum TR-90, paragraph 5.4.1"

DEFVAL { "" }

::= { adsl2LineAlarmConfTemplateEntry 5 }

adsl2LAlarmConfTempChan4ConfProfile OBJECT-TYPE

SYNTAX SnmpAdminString (SIZE(0..32))

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The value of this object identifies the row in the ADSL2 Channel Thresholds Configuration Profile Table (adsl2ChAlarmConfProfileTable) that applies for ADSL2 bearer channel #4. The channel profile name specified here must match the name of an existing row in the adsl2ChAlarmConfProfileTable table.

This object may be set to a non-zero length string only if adsl2LAlarmConfTempChan3ConfProfile contains a non-zero length string."

REFERENCE "DSL Forum TR-90, paragraph 5.4.1"

DEFVAL { "" }

::= { adsl2LineAlarmConfTemplateEntry 6 }

adsl2LAlarmConfTempRowStatus OBJECT-TYPE

SYNTAX RowStatus

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"This object is used to create a new row or to modify or delete an existing row in this table.

A profile is activated by setting this object to 'active'. When 'active' is set, the system will validate the profile.

Before a profile can be deleted or taken out of service (by setting this object to 'destroy' or 'outOfService'), it must be first unreferenced from all associated lines."

::= { adsl2LineAlarmConfTemplateEntry 7 }

-- adsl2LineAlarmConfProfileTable --

adsl2LineAlarmConfProfileTable OBJECT-TYPE

SYNTAX SEQUENCE OF Adsl2LineAlarmConfProfileEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2LineAlarmConfProfileTable contains ADSL2 line PM thresholds profiles."

::= { adsl2ProfileAlarmConf 2 }

adsl2LineAlarmConfProfileEntry OBJECT-TYPE

SYNTAX Adsl2LineAlarmConfProfileEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2LineAlarmConfProfileTable contains ADSL2 line PM thresholds profiles.

A default profile with an index of 'DEFVAL' will always exist and its parameters will be set to vendor specific values, unless otherwise specified in this document"

INDEX { adsl2LineAlarmConfProfileName }

::= { adsl2LineAlarmConfProfileTable 1 }

Adsl2LineAlarmConfProfileEntry ::=

SEQUENCE {

adsl2LineAlarmConfProfileName SnmpAdminString,

adsl2LineAlarmConfProfileAtucThresh15MinFecs
HCPerfIntervalThreshold,adsl2LineAlarmConfProfileAtucThresh15MinEs
HCPerfIntervalThreshold,adsl2LineAlarmConfProfileAtucThresh15MinSes
HCPerfIntervalThreshold,adsl2LineAlarmConfProfileAtucThresh15MinLoss
HCPerfIntervalThreshold,adsl2LineAlarmConfProfileAtucThresh15MinUas
HCPerfIntervalThreshold,adsl2LineAlarmConfProfileAturThresh15MinFecs
HCPerfIntervalThreshold,adsl2LineAlarmConfProfileAturThresh15MinEs
HCPerfIntervalThreshold,adsl2LineAlarmConfProfileAturThresh15MinSes
HCPerfIntervalThreshold,adsl2LineAlarmConfProfileAturThresh15MinLoss
HCPerfIntervalThreshold,adsl2LineAlarmConfProfileAturThresh15MinUas
HCPerfIntervalThreshold,

adsl2LineAlarmConfProfileThresh15MinFailedFullInt Unsigned32,

adsl2LineAlarmConfProfileThresh15MinFailedShrtInt Unsigned32,

adsl2LineAlarmConfProfileRowStatus RowStatus

}

adsl2LineAlarmConfProfileName OBJECT-TYPE

SYNTAX SnmpAdminString (SIZE(1..32))

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"This object identifies a row in this table."

::= { adsl2LineAlarmConfProfileEntry 1 }

adsl2LineAlarmConfProfileAtucThresh15MinFecs OBJECT-TYPE

SYNTAX HCPerfIntervalThreshold

UNITS "seconds"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"A threshold for the adsl2PMLCurr15MFecs counter,
when adsl2PMLCurrUnit is ATUC {1}.

The value 0 means that no threshold is specified for the
associated counter."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1"

DEFVAL { 0 }

::= { adsl2LineAlarmConfProfileEntry 2 }

adsl2LineAlarmConfProfileAtucThresh15MinEs OBJECT-TYPE

SYNTAX HCPerfIntervalThreshold

UNITS "seconds"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"A threshold for the adsl2PMLCurr15MEs counter,
when adsl2PMLCurrUnit is ATUC {1}.

The value 0 means that no threshold is specified for the
associated counter."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1"

DEFVAL { 0 }

::= { adsl2LineAlarmConfProfileEntry 3 }

adsl2LineAlarmConfProfileAtucThresh15MinSes OBJECT-TYPE

SYNTAX HCPerfIntervalThreshold

UNITS "seconds"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"A threshold for the adsl2PMLCurr15MSes counter,
when adsl2PMLCurrUnit is ATUC {1}.

The value 0 means that no threshold is specified for the
associated counter."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1"

DEFVAL { 0 }

::= { adsl2LineAlarmConfProfileEntry 4 }

adsl2LineAlarmConfProfileAtucThresh15MinLoss OBJECT-TYPE

SYNTAX HCPerfIntervalThreshold

UNITS "seconds"
MAX-ACCESS read-create
STATUS current
DESCRIPTION
"A threshold for the adsl2PMLCurr15MLoss counter,
when adsl2PMLCurrUnit is ATUC {1}.
The value 0 means that no threshold is specified for the
associated counter."
REFERENCE "ITU-T G.997.1, paragraph 7.3.1"
DEFVAL { 0 }
::= { adsl2LineAlarmConfProfileEntry 5 }

adsl2LineAlarmConfProfileAtucThresh15MinUas OBJECT-TYPE

SYNTAX HCPperfIntervalThreshold
UNITS "seconds"
MAX-ACCESS read-create
STATUS current
DESCRIPTION
"A threshold for the adsl2PMLCurr15MUas counter,
when adsl2PMLCurrUnit is ATUC {1}.
The value 0 means that no threshold is specified for the
associated counter."
REFERENCE "ITU-T G.997.1, paragraph 7.3.1"
DEFVAL { 0 }
::= { adsl2LineAlarmConfProfileEntry 6 }

adsl2LineAlarmConfProfileAturThresh15MinFecs OBJECT-TYPE

SYNTAX HCPperfIntervalThreshold
UNITS "seconds"
MAX-ACCESS read-create
STATUS current
DESCRIPTION
"A threshold for the adsl2PMLCurr15MFecs counter,
when adsl2PMLCurrUnit is ATUR {2}.
The value 0 means that no threshold is specified for the
associated counter."
REFERENCE "ITU-T G.997.1, paragraph 7.3.1"
DEFVAL { 0 }
::= { adsl2LineAlarmConfProfileEntry 7 }

adsl2LineAlarmConfProfileAturThresh15MinEs OBJECT-TYPE

SYNTAX HCPperfIntervalThreshold
UNITS "seconds"
MAX-ACCESS read-create
STATUS current
DESCRIPTION
"A threshold for the adsl2PMLCurr15MEs counter,
when adsl2PMLCurrUnit is ATUR {2}.

The value 0 means that no threshold is specified for the associated counter."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1"

DEFVAL { 0 }

::= { adsl2LineAlarmConfProfileEntry 8 }

adsl2LineAlarmConfProfileAturThresh15MinSes OBJECT-TYPE

SYNTAX HCPerfIntervalThreshold

UNITS "seconds"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"A threshold for the adsl2PMLCurr15MSes counter, when adsl2PMLCurrUnit is ATUR {2}.

The value 0 means that no threshold is specified for the associated counter."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1"

DEFVAL { 0 }

::= { adsl2LineAlarmConfProfileEntry 9 }

adsl2LineAlarmConfProfileAturThresh15MinLoss OBJECT-TYPE

SYNTAX HCPerfIntervalThreshold

UNITS "seconds"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"A threshold for the adsl2PMLCurr15MLoss counter, when adsl2PMLCurrUnit is ATUR {2}.

The value 0 means that no threshold is specified for the associated counter."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1"

DEFVAL { 0 }

::= { adsl2LineAlarmConfProfileEntry 10 }

adsl2LineAlarmConfProfileAturThresh15MinUas OBJECT-TYPE

SYNTAX HCPerfIntervalThreshold

UNITS "seconds"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"A threshold for the adsl2PMLCurr15MUas counter, when adsl2PMLCurrUnit is ATUR {2}.

The value 0 means that no threshold is specified for the associated counter."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1"

DEFVAL { 0 }

::= { adsl2LineAlarmConfProfileEntry 11 }

adsl2LineAlarmConfProfileThresh15MinFailedFullInt OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"A threshold for the adsl2PMLCurrInit15MfailedFullInits counter.

The value 0 means that no threshold is specified for the associated counter."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1"

DEFVAL { 0 }

::= { adsl2LineAlarmConfProfileEntry 12 }

adsl2LineAlarmConfProfileThresh15MinFailedShrtInt OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"A threshold for the adsl2PMLCurrInit15MFailedShortInits counter.

The value 0 means that no threshold is specified for the associated counter."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1"

DEFVAL { 0 }

::= { adsl2LineAlarmConfProfileEntry 13 }

adsl2LineAlarmConfProfileRowStatus OBJECT-TYPE

SYNTAX RowStatus

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"This object is used to create a new row or to modify or delete an existing row in this table.

A profile is activated by setting this object to 'active'. When 'active' is set, the system will validate the profile.

Before a profile can be deleted or taken out of service (by setting this object to 'destroy' or 'outOfService'), it must be first unreferenced from all associated templates."

::= { adsl2LineAlarmConfProfileEntry 14 }

-- adsl2ChAlarmConfProfileTable --

adsl2ChAlarmConfProfileTable OBJECT-TYPE

SYNTAX SEQUENCE OF Adsl2ChAlarmConfProfileEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2ChAlarmConfProfileTable contains ADSL2 channel PM thresholds profiles."

::= { adsl2ProfileAlarmConf 3 }

adsl2ChAlarmConfProfileEntry OBJECT-TYPE

SYNTAX Adsl2ChAlarmConfProfileEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2ChAlarmConfProfileTable contains ADSL2 channel PM thresholds profiles.

A default profile with an index of 'DEFVAL' will always exist and its parameters will be set to vendor-specific values, unless otherwise specified in this document"

INDEX { adsl2ChAlarmConfProfileName }

::= { adsl2ChAlarmConfProfileTable 1 }

Adsl2ChAlarmConfProfileEntry ::=

SEQUENCE {

adsl2ChAlarmConfProfileName

SnmpAdminString,

adsl2ChAlarmConfProfileAtucThresh15MinCodingViolations

Unsigned32,

adsl2ChAlarmConfProfileAtucThresh15MinCorrected Unsigned32,

adsl2ChAlarmConfProfileAturThresh15MinCodingViolations

Unsigned32,

adsl2ChAlarmConfProfileAturThresh15MinCorrected Unsigned32,

adsl2ChAlarmConfProfileRowStatus

RowStatus

}

adsl2ChAlarmConfProfileName OBJECT-TYPE

SYNTAX SnmpAdminString (SIZE(1..32))

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"This object identifies a row in this table."

::= { adsl2ChAlarmConfProfileEntry 1 }

adsl2ChAlarmConfProfileAtucThresh15MinCodingViolations OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"A threshold for the adsl2PMChCurr15MCodingViolations counter, when adsl2PMChCurrUnit is ATUC {1}.

The value 0 means that no threshold is specified for the associated counter."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2"

DEFVAL { 0 }

::= { adsl2ChAlarmConfProfileEntry 2 }

adsl2ChAlarmConfProfileAtucThresh15MinCorrected OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"A threshold for the adsl2PMChCurr15MCorrectedBlocks counter, when adsl2PMChCurrUnit is ATUC {1}.

The value 0 means that no threshold is specified for the associated counter."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2"

DEFVAL { 0 }

::= { adsl2ChAlarmConfProfileEntry 3 }

adsl2ChAlarmConfProfileAturThresh15MinCodingViolations OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"A threshold for the adsl2PMChCurr15MCodingViolations counter, when adsl2PMChCurrUnit is ATUR {2}.

The value 0 means that no threshold is specified for the associated counter."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2"

DEFVAL { 0 }

::= { adsl2ChAlarmConfProfileEntry 4 }

adsl2ChAlarmConfProfileAturThresh15MinCorrected OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"A threshold for the adsl2PMChCurr15MCorrectedBlocks counter, when adsl2PMChCurrUnit is ATUR {2}.

The value 0 means that no threshold is specified for the associated counter."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2"

DEFVAL { 0 }

::= { adsl2ChAlarmConfProfileEntry 5 }

adsl2ChAlarmConfProfileRowStatus OBJECT-TYPE


```

SYNTAX      RowStatus
MAX-ACCESS  read-create
STATUS      current
DESCRIPTION

```

"This object is used to create a new row or to modify or delete an existing row in this table.

A profile is activated by setting this object to 'active'. When 'active' is set, the system will validate the profile.

Before a profile can be deleted or taken out of service (by setting this object to 'destroy' or 'outOfService'), it must be first unreferenced from all associated templates."

```
 ::= { adsl2ChAlarmConfProfileEntry 6 }
```

```

-----
--          PM line current counters          --
-----

```

```

adsl2PMLineCurrTable  OBJECT-TYPE
    SYNTAX      SEQUENCE OF Adsl2PMLineCurrEntry
    MAX-ACCESS  not-accessible
    STATUS      current
    DESCRIPTION
        "The table adsl2PMLineCurrTable contains current Performance
        Monitoring results of ADSL2 line."
    ::= { adsl2PMLine 1 }

```

```

adsl2PMLineCurrEntry  OBJECT-TYPE
    SYNTAX      Adsl2PMLineCurrEntry
    MAX-ACCESS  not-accessible
    STATUS      current
    DESCRIPTION
        "The table adsl2PMLineCurrTable contains current Performance
        Monitoring results of ADSL2 line.
        The index of this table is an interface index where the
        interface has an ifType of adsl2(230) and the termination
        unit."
    INDEX { ifIndex, adsl2PMLCurrUnit }
    ::= { adsl2PMLineCurrTable 1 }

```

```

Adsl2PMLineCurrEntry ::=
    SEQUENCE {
        adsl2PMLCurrUnit                Adsl2Unit,
        adsl2PMLCurrValidIntervals      Unsigned32,
        adsl2PMLCurrInvalidIntervals    Unsigned32,
        adsl2PMLCurr15MTimeElapsed      HCPerfTimeElapsed,
        adsl2PMLCurr15MFecs              Counter32,

```


adsl2PMLCurr15MEs	Counter32,
adsl2PMLCurr15MSes	Counter32,
adsl2PMLCurr15MLoss	Counter32,
adsl2PMLCurr15MUas	Counter32,
adsl2PMLCurr1DayValidIntervals	Unsigned32,
adsl2PMLCurr1DayInvalidIntervals	Unsigned32,
adsl2PMLCurr1DayTimeElapsed	HCPperfTimeElapsed,
adsl2PMLCurr1DayFecs	Counter32,
adsl2PMLCurr1DayEs	Counter32,
adsl2PMLCurr1DaySes	Counter32,
adsl2PMLCurr1DayLoss	Counter32,
adsl2PMLCurr1DayUas	Counter32

}

adsl2PMLCurrUnit OBJECT-TYPE

SYNTAX Adsl2Unit

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The termination unit ATUC{1} or ATUR{2}."

::= { adsl2PMLLineCurrEntry 1 }

adsl2PMLCurrValidIntervals OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Valid intervals."

::= { adsl2PMLLineCurrEntry 2 }

adsl2PMLCurrInvalidIntervals OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Invalid intervals."

::= { adsl2PMLLineCurrEntry 3 }

adsl2PMLCurr15MTimeElapsed OBJECT-TYPE

SYNTAX HCPperfTimeElapsed

UNITS "seconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Total elapsed seconds in this interval"

::= { adsl2PMLLineCurrEntry 4 }

adsl2PMLCurr15MFecs OBJECT-TYPE

SYNTAX Counter32
UNITS "seconds"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"Count of seconds during this interval that there was at least
one FEC correction event for one or more bearer channels in
this line. This parameter is inhibited during UAS or SES."
REFERENCE "ITU-T G.997.1, paragraph 7.2.1"
::= { adsl2PMLLineCurrEntry 5 }

adsl2PMLCurr15MEs OBJECT-TYPE

SYNTAX Counter32
UNITS "seconds"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"Count of seconds during this interval that there was:
ATU-C: CRC-8 >= 1 for one or more bearer channels OR
LOS >= 1 OR SEF >=1 OR LPR >= 1
ATU-R: FEBE >= 1 for one or more bearer channels OR
LOS-FE >=1 OR RDI >=1 OR LPR-FE >=1 .
This parameter is inhibited during UAS."
REFERENCE "ITU-T G.997.1, paragraph 7.2.1"
::= { adsl2PMLLineCurrEntry 6 }

adsl2PMLCurr15MSes OBJECT-TYPE

SYNTAX Counter32
UNITS "seconds"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"Count of seconds during this interval that there was:
ATU-C: (CRC-8 summed over all bearer channels) >= 18 OR
LOS >= 1 OR SEF >= 1 OR LPR >= 1
ATU-R: (FEBE summed over all bearer channels) >= 18 OR
LOS-FE >= 1 OR RDI >= 1 OR LPR-FE >= 1 .
This parameter is inhibited during UAS."
REFERENCE "ITU-T G.997.1, paragraph 7.2.1"
::= { adsl2PMLLineCurrEntry 7 }

adsl2PMLCurr15MLoss OBJECT-TYPE

SYNTAX Counter32
UNITS "seconds"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"Count of seconds during this interval that there was LOS (or

LOS-FE for ATU-R)."
REFERENCE "ITU-T G.997.1, paragraph 7.2.1"
::= { adsl2PMLineCurrEntry 8 }

adsl2PMLCurr15MUas OBJECT-TYPE

SYNTAX Counter32

UNITS "seconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Count of seconds in Unavailability State during this interval. Unavailability begins at the onset of 10 contiguous severely-errored seconds, and ends at the onset of 10 contiguous seconds with no severely-errored seconds."

REFERENCE "ITU-T G.997.1, paragraph 7.2.1"

::= { adsl2PMLineCurrEntry 9 }

adsl2PMLCurr1DayValidIntervals OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Valid intervals."

::= { adsl2PMLineCurrEntry 10 }

adsl2PMLCurr1DayInvalidIntervals OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Invalid intervals."

::= { adsl2PMLineCurrEntry 11 }

adsl2PMLCurr1DayTimeElapsed OBJECT-TYPE

SYNTAX HCPerfTimeElapsed

UNITS "seconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Total elapsed seconds in this interval."

::= { adsl2PMLineCurrEntry 12 }

adsl2PMLCurr1DayFecs OBJECT-TYPE

SYNTAX Counter32

UNITS "seconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Count of seconds during this interval that there was at least one FEC correction event for one or more bearer channels in this line. This parameter is inhibited during UAS or SES."

REFERENCE "ITU-T G.997.1, paragraph 7.2.1"

::= { adsl2PMLineCurrEntry 13 }

adsl2PMLCurr1DayEs OBJECT-TYPE

SYNTAX Counter32

UNITS "seconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Count of seconds during this interval that there was:

ATU-C: CRC-8 >= 1 for one or more bearer channels OR
LOS >= 1 OR SEF >= 1 OR LPR >= 1

ATU-R: FEBE >= 1 for one or more bearer channels OR
LOS-FE >= 1 OR RDI >= 1 OR LPR-FE >= 1.

This parameter is inhibited during UAS."

REFERENCE "ITU-T G.997.1, paragraph 7.2.1"

::= { adsl2PMLineCurrEntry 14 }

adsl2PMLCurr1DaySes OBJECT-TYPE

SYNTAX Counter32

UNITS "seconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Count of seconds during this interval that there was:

ATU-C: (CRC-8 summed over all bearer channels) >= 18 OR
LOS >= 1 OR SEF >= 1 OR LPR >= 1

ATU-R: (FEBE summed over all bearer channels) >= 18 OR
LOS-FE >= 1 OR RDI >= 1 OR LPR-FE >= 1

This parameter is inhibited during UAS."

REFERENCE "ITU-T G.997.1, paragraph 7.2.1"

::= { adsl2PMLineCurrEntry 15 }

adsl2PMLCurr1DayLoss OBJECT-TYPE

SYNTAX Counter32

UNITS "seconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Count of seconds during this interval that there was LOS (or
LOS-FE for ATU-R)."

REFERENCE "ITU-T G.997.1, paragraph 7.2.1"

::= { adsl2PMLineCurrEntry 16 }

adsl2PMLCurr1DayUas OBJECT-TYPE

SYNTAX Counter32

UNITS "seconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Count of seconds in Unavailability State during this interval. Unavailability begins at the onset of 10 contiguous severely errored seconds, and ends at the onset of 10 contiguous seconds with no severely-errored seconds."

REFERENCE "ITU-T G.997.1, paragraph 7.2.1"

::= { adsl2PMLineCurrEntry 17 }

```
-----  
--          PM line init current counters          --  
-----
```

adsl2PMLineCurrInitTable OBJECT-TYPE

SYNTAX SEQUENCE OF Adsl2PMLineCurrInitEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2PMLineCurrInitTable contains current initialization counters of ADSL2 line."

::= { adsl2PMLine 2 }

adsl2PMLineCurrInitEntry OBJECT-TYPE

SYNTAX Adsl2PMLineCurrInitEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2PMLineCurrInitTable contains current initialization counters of ADSL2 line.

The index of this table is an interface index where the interface has an ifType of adsl2(230) and the termination unit."

INDEX { ifIndex }

::= { adsl2PMLineCurrInitTable 1 }

Adsl2PMLineCurrInitEntry ::=

SEQUENCE {

adsl2PMLCurrInit15MTimeElapsed	Unsigned32,
adsl2PMLCurrInit15MFullInits	Unsigned32,
adsl2PMLCurrInit15MFailedFullInits	Unsigned32,
adsl2PMLCurrInit15MShortInits	Unsigned32,
adsl2PMLCurrInit15MFailedShortInits	Unsigned32,
adsl2PMLCurrInit1DayTimeElapsed	Unsigned32,


```
    adsl2PMLCurrInit1DayFullInits      Unsigned32,
    adsl2PMLCurrInit1DayFailedFullInits Unsigned32,
    adsl2PMLCurrInit1DayShortInits     Unsigned32,
    adsl2PMLCurrInit1DayFailedShortInits Unsigned32
}
```

adsl2PMLCurrInit15MTimeElapsed OBJECT-TYPE

```
SYNTAX      Unsigned32
UNITS       "seconds"
MAX-ACCESS  read-only
STATUS      current
DESCRIPTION
    "Total elapsed seconds in this interval."
 ::= { adsl2PMLLineCurrInitEntry 1 }
```

adsl2PMLCurrInit15MFullInits OBJECT-TYPE

```
SYNTAX      Unsigned32
MAX-ACCESS  read-only
STATUS      current
DESCRIPTION
    "Count of full initializations attempted on the line
    (successful and failed) during this interval."
REFERENCE   "ITU-T G.997.1, paragraph 7.2.1"
 ::= { adsl2PMLLineCurrInitEntry 2 }
```

adsl2PMLCurrInit15MFailedFullInits OBJECT-TYPE

```
SYNTAX      Unsigned32
MAX-ACCESS  read-only
STATUS      current
DESCRIPTION
    "Count of failed full initializations on the line during this
    interval."
REFERENCE   "ITU-T G.997.1, paragraph 7.2.1"
 ::= { adsl2PMLLineCurrInitEntry 3 }
```

adsl2PMLCurrInit15MShortInits OBJECT-TYPE

```
SYNTAX      Unsigned32
MAX-ACCESS  read-only
STATUS      current
DESCRIPTION
    "Count of short initializations attempted on the line
    (successful and failed) during this interval."
REFERENCE   "ITU-T G.997.1, paragraph 7.2.1"
 ::= { adsl2PMLLineCurrInitEntry 4 }
```

adsl2PMLCurrInit15MFailedShortInits OBJECT-TYPE

```
SYNTAX      Unsigned32
MAX-ACCESS  read-only
```


STATUS current
DESCRIPTION
"Count of failed short initializations on the line during this interval."
REFERENCE "ITU-T G.997.1, paragraph 7.2.1"
::= { adsl2PMLineCurrInitEntry 5 }

adsl2PMLCurrInit1DayTimeElapsed OBJECT-TYPE
SYNTAX Unsigned32
UNITS "seconds"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"Total elapsed seconds in this interval."
::= { adsl2PMLineCurrInitEntry 6 }

adsl2PMLCurrInit1DayFullInits OBJECT-TYPE
SYNTAX Unsigned32
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"Count of full initializations attempted on the line (successful and failed) during this interval."
REFERENCE "ITU-T G.997.1, paragraph 7.2.1"
::= { adsl2PMLineCurrInitEntry 7 }

adsl2PMLCurrInit1DayFailedFullInits OBJECT-TYPE
SYNTAX Unsigned32
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"Count of failed full initializations on the line during this interval."
REFERENCE "ITU-T G.997.1, paragraph 7.2.1"
::= { adsl2PMLineCurrInitEntry 8 }

adsl2PMLCurrInit1DayShortInits OBJECT-TYPE
SYNTAX Unsigned32
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"Count of short initializations attempted on the line (successful and failed) during this interval."
REFERENCE "ITU-T G.997.1, paragraph 7.2.1"
::= { adsl2PMLineCurrInitEntry 9 }

adsl2PMLCurrInit1DayFailedShortInits OBJECT-TYPE
SYNTAX Unsigned32


```

MAX-ACCESS    read-only
STATUS        current
DESCRIPTION
    "Count of failed short initializations on the line during this
    interval."
REFERENCE     "ITU-T G.997.1, paragraph 7.2.1"
 ::= { adsl2PMLineCurrInitEntry 10 }

```

```

-----
--          PM line history 15 Minutes          --
-----
adsl2PMLineHist15MinTable    OBJECT-TYPE
    SYNTAX      SEQUENCE OF Adsl2PMLineHist15MinEntry
    MAX-ACCESS   not-accessible
    STATUS      current
    DESCRIPTION
        "The table adsl2PMLineHist15MinTable contains PM line history
        for 15min intervals of ADSL2 line."
    ::= { adsl2PMLine 3 }

```

```

adsl2PMLineHist15MinEntry    OBJECT-TYPE
    SYNTAX      Adsl2PMLineHist15MinEntry
    MAX-ACCESS   not-accessible
    STATUS      current
    DESCRIPTION
        "The table adsl2PMLineHist15MinTable contains PM line history
        for 15min intervals of ADSL2 line.
        The index of this table is an interface index where the
        interface has an ifType of adsl2(230), the termination unit,
        and an interval number."
    INDEX { ifIndex,
            adsl2PMLHist15MUnit,
            adsl2PMLHist15MInterval }
    ::= { adsl2PMLineHist15MinTable 1 }

```

```

Adsl2PMLineHist15MinEntry ::=
    SEQUENCE {
        adsl2PMLHist15MUnit           Adsl2Unit,
        adsl2PMLHist15MInterval       Unsigned32,
        adsl2PMLHist15MMonitoredTime  Unsigned32,
        adsl2PMLHist15MFecs           Counter32,
        adsl2PMLHist15MEs             Counter32,
        adsl2PMLHist15MSes            Counter32,
        adsl2PMLHist15MLoss           Counter32,
        adsl2PMLHist15MUas            Counter32,
        adsl2PMLHist15MValidInterval  TruthValue
    }

```


}

adsl2PMLHist15MUnit OBJECT-TYPE

SYNTAX Adsl2Unit

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The termination unit ATUC{1} or ATUR{2}."

::= { adsl2PMLineHist15MinEntry 1 }

adsl2PMLHist15MInterval OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The interval number."

::= { adsl2PMLineHist15MinEntry 2 }

adsl2PMLHist15MMonitoredTime OBJECT-TYPE

SYNTAX Unsigned32

UNITS "seconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Total seconds monitored in this interval."

::= { adsl2PMLineHist15MinEntry 3 }

adsl2PMLHist15MFecs OBJECT-TYPE

SYNTAX Counter32

UNITS "seconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Count of seconds during this interval that there was at least one FEC correction event for one or more bearer channels in this line. This parameter is inhibited during UAS or SES."

REFERENCE "ITU-T G.997.1, paragraph 7.2.1"

::= { adsl2PMLineHist15MinEntry 4 }

adsl2PMLHist15MEs OBJECT-TYPE

SYNTAX Counter32

UNITS "seconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Count of seconds during this interval that there was:

ATU-C: CRC-8 >= 1 for one or more bearer channels OR

LOS >= 1 OR SEF >= 1 OR LPR >= 1

ATU-R: FEBE >= 1 for one or more bearer channels OR
LOS-FE >= 1 OR RDI >= 1 OR LPR-FE >= 1.

This parameter is inhibited during UAS."

REFERENCE "ITU-T G.997.1, paragraph 7.2.1"

::= { adsl2PMLineHist15MinEntry 5 }

adsl2PMLHist15MSes OBJECT-TYPE

SYNTAX Counter32

UNITS "seconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Count of seconds during this interval that there was:

ATU-C: (CRC-8 summed over all bearer channels) >= 18 OR
LOS >= 1 OR SEF >= 1 OR LPR >= 1

ATU-R: (FEBE summed over all bearer channels) >= 18 OR
LOS-FE >= 1 OR RDI >= 1 OR LPR-FE >= 1.

This parameter is inhibited during UAS."

REFERENCE "ITU-T G.997.1, paragraph 7.2.1"

::= { adsl2PMLineHist15MinEntry 6 }

adsl2PMLHist15MLoss OBJECT-TYPE

SYNTAX Counter32

UNITS "seconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Count of seconds during this interval that there was LOS (or
LOS-FE for ATU-R)."

REFERENCE "ITU-T G.997.1, paragraph 7.2.1"

::= { adsl2PMLineHist15MinEntry 7 }

adsl2PMLHist15MUas OBJECT-TYPE

SYNTAX Counter32

UNITS "seconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Count of seconds in Unavailability State during this interval.
Unavailability begins at the onset of 10 contiguous severely
-errored seconds, and ends at the onset of 10 contiguous
seconds with no severely-errored seconds."

REFERENCE "ITU-T G.997.1, paragraph 7.2.1"

::= { adsl2PMLineHist15MinEntry 8 }

adsl2PMLHist15MValidInterval OBJECT-TYPE

SYNTAX TruthValue

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This variable indicates if the data for this interval is valid."

::= { adsl2PMLineHist15MinEntry 9 }

```

-----
--          PM line history 1 Day          --
-----
adsl2PMLineHist1DayTable      OBJECT-TYPE
    SYNTAX          SEQUENCE OF Adsl2PMLineHist1DayEntry
    MAX-ACCESS      not-accessible
    STATUS          current
    DESCRIPTION
        "The table adsl2PMLineHist1DayTable contains PM line history
         for 24 hours intervals of ADSL2 line."
    ::= { adsl2PMLine 4 }

adsl2PMLineHist1DayEntry      OBJECT-TYPE
    SYNTAX          Adsl2PMLineHist1DayEntry
    MAX-ACCESS      not-accessible
    STATUS          current
    DESCRIPTION
        "The table adsl2PMLineHist1DayTable contains PM line history
         for 24 hours intervals of ADSL2 line.
         The indexes of this table is an interface index where the
         interface has an ifType of adsl2(230), the termination unit
         and an interval number."

    INDEX { ifIndex,
            adsl2PMLHist1DUnit,
            adsl2PMLHist1DInterval }
    ::= { adsl2PMLineHist1DayTable 1 }

Adsl2PMLineHist1DayEntry ::=
    SEQUENCE {
        adsl2PMLHist1DUnit          Adsl2Unit,
        adsl2PMLHist1DInterval      Unsigned32,
        adsl2PMLHist1DMonitoredTime Unsigned32,
        adsl2PMLHist1DFecs          Counter32,
        adsl2PMLHist1DEs            Counter32,
        adsl2PMLHist1DSes           Counter32,
        adsl2PMLHist1DLoss          Counter32,
        adsl2PMLHist1DUas           Counter32,
        adsl2PMLHist1DValidInterval TruthValue
    }

```


adsl2PMLHist1DUnit OBJECT-TYPE

SYNTAX Adsl2Unit

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The termination unit."

::= { adsl2PMLineHist1DayEntry 1 }

adsl2PMLHist1DInterval OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The interval number."

::= { adsl2PMLineHist1DayEntry 2 }

adsl2PMLHist1DMonitoredTime OBJECT-TYPE

SYNTAX Unsigned32

UNITS "seconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Total seconds monitored in this interval."

::= { adsl2PMLineHist1DayEntry 3 }

adsl2PMLHist1DFecs OBJECT-TYPE

SYNTAX Counter32

UNITS "seconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Count of seconds during this interval that there was at least one FEC correction event for one or more bearer channels in this line. This parameter is inhibited during UAS or SES."

REFERENCE "ITU-T G.997.1, paragraph 7.2.1"

::= { adsl2PMLineHist1DayEntry 4 }

adsl2PMLHist1DEs OBJECT-TYPE

SYNTAX Counter32

UNITS "seconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Count of seconds during this interval that there was:

ATU-C: CRC-8 >= 1 for one or more bearer channels OR
LOS >= 1 OR SEF >= 1 OR LPR >= 1

ATU-R: FEBE >= 1 for one or more bearer channels OR
LOS-FE >= 1 OR RDI >= 1 OR LPR-FE >= 1.

This parameter is inhibited during UAS."
REFERENCE "ITU-T G.997.1, paragraph 7.2.1"
::= { adsl2PMLineHist1DayEntry 5 }

adsl2PMLHist1DSes OBJECT-TYPE

SYNTAX Counter32

UNITS "seconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Count of seconds during this interval that there was:

ATU-C: (CRC-8 summed over all bearer channels) >= 18 OR

LOS >= 1 OR SEF >> 1 OR LPR >= 1

ATU-R: (FEBE summed over all bearer channels) >= 18 OR

LOS-FE >= 1 OR RDI >= 1 OR LPR-FE >= 1.

This parameter is inhibited during UAS."

REFERENCE "ITU-T G.997.1, paragraph 7.2.1"
::= { adsl2PMLineHist1DayEntry 6 }

adsl2PMLHist1DLoss OBJECT-TYPE

SYNTAX Counter32

UNITS "seconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Count of seconds during this interval that there was LOS (or
LOS-FE for ATU-R)."

REFERENCE "ITU-T G.997.1, paragraph 7.2.1"
::= { adsl2PMLineHist1DayEntry 7 }

adsl2PMLHist1DUas OBJECT-TYPE

SYNTAX Counter32

UNITS "seconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Count of seconds in Unavailability State during this interval.
Unavailability begins at the onset of 10 contiguous severely
-errored seconds, and ends at the onset of 10 contiguous
seconds with no severely-errored seconds."

REFERENCE "ITU-T G.997.1, paragraph 7.2.1"
::= { adsl2PMLineHist1DayEntry 8 }

adsl2PMLHist1DValidInterval OBJECT-TYPE

SYNTAX TruthValue

MAX-ACCESS read-only

STATUS current

DESCRIPTION


```

    "This variable indicates if the data for this interval is
    valid."
 ::= { adsl2PMLineHist1DayEntry 9 }

```

```

-----
--      PM line init history 15 Minutes      --
-----

```

```

adsl2PMLineInitHist15MinTable      OBJECT-TYPE
    SYNTAX      SEQUENCE OF Adsl2PMLineInitHist15MinEntry
    MAX-ACCESS  not-accessible
    STATUS      current
    DESCRIPTION
        "The table adsl2PMLineInitHist15MinTable contains PM line
        initialization history for 15 minutes intervals of ADSL2
        line."
    ::= { adsl2PMLine 5 }

adsl2PMLineInitHist15MinEntry  OBJECT-TYPE
    SYNTAX      Adsl2PMLineInitHist15MinEntry
    MAX-ACCESS  not-accessible
    STATUS      current
    DESCRIPTION
        "The table adsl2PMLineInitHist15MinTable contains PM line
        initialization history for 15 minutes intervals of ADSL2
        line.
        The index of this table is an interface index where the
        interface has an ifType of adsl2(230) and an interval number."

    INDEX { ifIndex,
            adsl2PMLHistInit15MInterval }
    ::= { adsl2PMLineInitHist15MinTable 1 }

```

```

Adsl2PMLineInitHist15MinEntry ::=
    SEQUENCE {
        adsl2PMLHistInit15MInterval      Unsigned32,
        adsl2PMLHistInit15MMonitoredTime Unsigned32,
        adsl2PMLHistInit15MFullInits     Unsigned32,
        adsl2PMLHistInit15MFailedFullInits Unsigned32,
        adsl2PMLHistInit15MShortInits    Unsigned32,
        adsl2PMLHistInit15MFailedShortInits Unsigned32,
        adsl2PMLHistInit15MValidInterval TruthValue
    }

```

```

adsl2PMLHistInit15MInterval  OBJECT-TYPE

```


SYNTAX Unsigned32
MAX-ACCESS not-accessible
STATUS current
DESCRIPTION

 "The interval number."

::= { adsl2PMLineInitHist15MinEntry 1 }

adsl2PMLHistInit15MMonitoredTime OBJECT-TYPE

SYNTAX Unsigned32
UNITS "seconds"
MAX-ACCESS read-only
STATUS current
DESCRIPTION

 "Total seconds monitored in this interval."

::= { adsl2PMLineInitHist15MinEntry 2 }

adsl2PMLHistInit15MFullInits OBJECT-TYPE

SYNTAX Unsigned32
MAX-ACCESS read-only
STATUS current
DESCRIPTION

 "Count of full initializations attempted on the line
 (successful and failed) during this interval."

REFERENCE "ITU-T G.997.1, paragraph 7.2.1"

::= { adsl2PMLineInitHist15MinEntry 3 }

adsl2PMLHistInit15MFailedFullInits OBJECT-TYPE

SYNTAX Unsigned32
MAX-ACCESS read-only
STATUS current
DESCRIPTION

 "Count of failed full initializations on the line during this
 interval."

REFERENCE "ITU-T G.997.1, paragraph 7.2.1"

::= { adsl2PMLineInitHist15MinEntry 4 }

adsl2PMLHistInit15MShortInits OBJECT-TYPE

SYNTAX Unsigned32
MAX-ACCESS read-only
STATUS current
DESCRIPTION

 "Count of short initializations attempted on the line
 (successful and failed) during this interval."

REFERENCE "ITU-T G.997.1, paragraph 7.2.1"

::= { adsl2PMLineInitHist15MinEntry 5 }

adsl2PMLHistInit15MFailedShortInits OBJECT-TYPE

SYNTAX Unsigned32


```
MAX-ACCESS    read-only
STATUS        current
DESCRIPTION
    "Count of failed short initializations on the line during this
    interval."
REFERENCE     "ITU-T G.997.1, paragraph 7.2.1"
 ::= { adsl2PMLineInitHist15MinEntry 6 }
```

```
adsl2PMLHistInit15MValidInterval  OBJECT-TYPE
SYNTAX        TruthValue
MAX-ACCESS    read-only
STATUS        current
DESCRIPTION
    "This variable indicates if the data for this interval is
    valid."
 ::= { adsl2PMLineInitHist15MinEntry 7 }
```

```
-----
--          PM line init history 1 Day          --
-----
```

```
adsl2PMLLineInitHist1DayTable      OBJECT-TYPE
SYNTAX        SEQUENCE OF Adsl2PMLLineInitHist1DayEntry
MAX-ACCESS    not-accessible
STATUS        current
DESCRIPTION
    "The table adsl2PMLLineInitHist1DayTable contains PM line
    initialization history for 24 hours intervals of ADSL2
    line."
 ::= { adsl2PMLLine 6 }
```

```
adsl2PMLLineInitHist1DayEntry  OBJECT-TYPE
SYNTAX        Adsl2PMLLineInitHist1DayEntry
MAX-ACCESS    not-accessible
STATUS        current
DESCRIPTION
    "The table adsl2PMLLineInitHist1DayTable contains PM line
    initialization history for 24 hours intervals of ADSL2
    line.
    The indexes of this table is an interface index where the
    interface has an ifType of adsl2(230) and an interval number."
INDEX { ifIndex,
        adsl2PMLHistinit1DInterval }
 ::= { adsl2PMLLineInitHist1DayTable 1 }
```

```
Adsl2PMLLineInitHist1DayEntry ::=
SEQUENCE {
```


adsl2PMLHistinit1DInterval	Unsigned32,
adsl2PMLHistinit1DMonitoredTime	Unsigned32,
adsl2PMLHistinit1DFullInits	Unsigned32,
adsl2PMLHistinit1DFailedFullInits	Unsigned32,
adsl2PMLHistinit1DShortInits	Unsigned32,
adsl2PMLHistinit1DFailedShortInits	Unsigned32,
adsl2PMLHistinit1DValidInterval	TruthValue

}

adsl2PMLHistinit1DInterval OBJECT-TYPE

SYNTAX Unsigned32
MAX-ACCESS not-accessible
STATUS current
DESCRIPTION
"The interval number."
::= { adsl2PMLLineInitHist1DayEntry 1 }

adsl2PMLHistinit1DMonitoredTime OBJECT-TYPE

SYNTAX Unsigned32
UNITS "seconds"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"Total seconds monitored in this interval."
::= { adsl2PMLLineInitHist1DayEntry 2 }

adsl2PMLHistinit1DFullInits OBJECT-TYPE

SYNTAX Unsigned32
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"Count of full initializations attempted on the line
(successful and failed) during this interval."
REFERENCE "ITU-T G.997.1, paragraph 7.2.1"
::= { adsl2PMLLineInitHist1DayEntry 3 }

adsl2PMLHistinit1DFailedFullInits OBJECT-TYPE

SYNTAX Unsigned32
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"Count of failed full initializations on the line during this
interval."
REFERENCE "ITU-T G.997.1, paragraph 7.2.1"
::= { adsl2PMLLineInitHist1DayEntry 4 }

adsl2PMLHistinit1DShortInits OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "Count of short initializations attempted on the line
 (successful and failed) during this interval."
REFERENCE "ITU-T G.997.1, paragraph 7.2.1"
::= { adsl2PMLineInitHist1DayEntry 5 }

adsl2PMLHistinit1DFailedShortInits OBJECT-TYPE
SYNTAX Unsigned32
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "Count of failed short initializations on the line during this
 interval."
REFERENCE "ITU-T G.997.1, paragraph 7.2.1"
::= { adsl2PMLineInitHist1DayEntry 6 }

adsl2PMLHistinit1DValidInterval OBJECT-TYPE
SYNTAX TruthValue
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "This variable indicates if the data for this interval is
 valid."
::= { adsl2PMLineInitHist1DayEntry 7 }

-- PM channel current counters --

adsl2PMChCurrTable OBJECT-TYPE
SYNTAX SEQUENCE OF Adsl2PMChCurrEntry
MAX-ACCESS not-accessible
STATUS current
DESCRIPTION
 "The table adsl2PMChCurrTable contains current Performance
 Monitoring results of ADSL2 channel."
::= { adsl2PMChannel 1 }

adsl2PMChCurrEntry OBJECT-TYPE
SYNTAX Adsl2PMChCurrEntry
MAX-ACCESS not-accessible
STATUS current
DESCRIPTION
 "The table adsl2PMChCurrTable contains current Performance
 Monitoring results of ADSL2 channel."

The indexes of this table is an interface index where the interface has an ifType value which is applicable for a DSL channel and the termination unit."

INDEX { ifIndex, adsl2PMChCurrUnit }

::= { adsl2PMChCurrTable 1 }

Adsl2PMChCurrEntry ::=

SEQUENCE {

adsl2PMChCurrUnit	Adsl2Unit,
adsl2PMChCurrValidIntervals	Unsigned32,
adsl2PMChCurrInvalidIntervals	Unsigned32,
adsl2PMChCurr15MTimeElapsed	HCPperfTimeElapsed,
adsl2PMChCurr15MCodingViolations	Unsigned32,
adsl2PMChCurr15MCorrectedBlocks	Unsigned32,
adsl2PMChCurr1DayValidIntervals	Unsigned32,
adsl2PMChCurr1DayInvalidIntervals	Unsigned32,
adsl2PMChCurr1DayTimeElapsed	HCPperfTimeElapsed,
adsl2PMChCurr1DayCodingViolations	Unsigned32,
adsl2PMChCurr1DayCorrectedBlocks	Unsigned32

}

adsl2PMChCurrUnit OBJECT-TYPE

SYNTAX Adsl2Unit

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The termination unit."

::= { adsl2PMChCurrEntry 1 }

adsl2PMChCurrValidIntervals OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Valid intervals."

::= { adsl2PMChCurrEntry 2 }

adsl2PMChCurrInvalidIntervals OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Invalid intervals."

::= { adsl2PMChCurrEntry 3 }

adsl2PMChCurr15MTimeElapsed OBJECT-TYPE

SYNTAX HCPperfTimeElapsed

UNITS "seconds"

MAX-ACCESS read-only
STATUS current
DESCRIPTION
"Total elapsed seconds in this interval."
::= { adsl2PMChCurrEntry 4 }

adsl2PMChCurr15MCodingViolations OBJECT-TYPE

SYNTAX Unsigned32
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"Count of CRC-8 (FEBE for ATU-R) anomalies occurring in the channel during the interval. This parameter is inhibited during UAS or SES. If the CRC is applied over multiple channels, then each related CRC-8 (or FEBE) anomaly should increment each of the counters related to the individual channels."
REFERENCE "ITU-T G.997.1, paragraph 7.2.2"
::= { adsl2PMChCurrEntry 5 }

adsl2PMChCurr15MCorrectedBlocks OBJECT-TYPE

SYNTAX Unsigned32
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"Count of FEC (FFEC for ATU-R) anomalies (corrected code words) occurring in the channel during the interval. This parameter is inhibited during UAS or SES. If the FEC is applied over multiple channels, then each related FEC (or FFEC) anomaly should increment each of the counters related to the individual channels."
REFERENCE "ITU-T G.997.1, paragraph 7.2.2"
::= { adsl2PMChCurrEntry 6 }

adsl2PMChCurr1DayValidIntervals OBJECT-TYPE

SYNTAX Unsigned32
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"Valid intervals."
::= { adsl2PMChCurrEntry 7 }

adsl2PMChCurr1DayInvalidIntervals OBJECT-TYPE

SYNTAX Unsigned32
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"Invalid intervals."


```
::= { adsl2PMChCurrEntry 8 }
```

```
adsl2PMChCurr1DayTimeElapsed OBJECT-TYPE
```

```
SYNTAX      HCPperfTimeElapsed
```

```
UNITS       "seconds"
```

```
MAX-ACCESS  read-only
```

```
STATUS      current
```

```
DESCRIPTION
```

```
    "Total elapsed seconds in this interval."
```

```
::= { adsl2PMChCurrEntry 9 }
```

```
adsl2PMChCurr1DayCodingViolations OBJECT-TYPE
```

```
SYNTAX      Unsigned32
```

```
MAX-ACCESS  read-only
```

```
STATUS      current
```

```
DESCRIPTION
```

```
    "Count of CRC-8 (FEBE for ATU-R) anomalies occurring in the  
    channel during the interval. This parameter is inhibited  
    during UAS or SES. If the CRC is applied over multiple  
    channels, then each related CRC-8 (or FEBE) anomaly should  
    increment each of the counters related to the individual  
    channels."
```

```
REFERENCE   "ITU-T G.997.1, paragraph 7.2.2"
```

```
::= { adsl2PMChCurrEntry 10 }
```

```
adsl2PMChCurr1DayCorrectedBlocks OBJECT-TYPE
```

```
SYNTAX      Unsigned32
```

```
MAX-ACCESS  read-only
```

```
STATUS      current
```

```
DESCRIPTION
```

```
    "Count of FEC (FFEC for ATU-R) anomalies (corrected code words)  
    occurring in the channel during the interval. This parameter  
    is inhibited during UAS or SES. If the FEC is applied over  
    multiple channels, then each related FEC (or FFEC) anomaly  
    should increment each of the counters related to the  
    individual channels."
```

```
REFERENCE   "ITU-T G.997.1, paragraph 7.2.2"
```

```
::= { adsl2PMChCurrEntry 11 }
```

```
-----  
--      PM channel history 15 Minutes      --  
-----
```

```
adsl2PMChHist15MinTable          OBJECT-TYPE
```

```
SYNTAX      SEQUENCE OF Adsl2PMChHist15MinEntry
```

```
MAX-ACCESS  not-accessible
```

```
STATUS      current
```


DESCRIPTION

"The table adsl2PMChCurrTable contains current Performance Monitoring results of ADSL2 channel."

::= { adsl2PMChannel 2 }

adsl2PMChHist15MinEntry OBJECT-TYPE

SYNTAX Adsl2PMChHist15MinEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2PMChCurrTable contains current Performance Monitoring results of ADSL2 channel.

The indexes of this table is an interface index where the interface has an ifType value which is applicable for a DSL channel, the termination unit and the interval number."

INDEX { ifIndex,
adsl2PMChHist15MUnit,
adsl2PMChHist15MInterval }

::= { adsl2PMChHist15MinTable 1 }

Adsl2PMChHist15MinEntry ::=

SEQUENCE {

adsl2PMChHist15MUnit	Adsl2Unit,
adsl2PMChHist15MInterval	Unsigned32,
adsl2PMChHist15MMonitoredTime	Unsigned32,
adsl2PMChHist15MCodingViolations	Unsigned32,
adsl2PMChHist15MCorrectedBlocks	Unsigned32,
adsl2PMChHist15MValidInterval	TruthValue

}

adsl2PMChHist15MUnit OBJECT-TYPE

SYNTAX Adsl2Unit

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The termination unit."

::= { adsl2PMChHist15MinEntry 1 }

adsl2PMChHist15MInterval OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The interval number."

::= { adsl2PMChHist15MinEntry 2 }

adsl2PMChHist15MMonitoredTime OBJECT-TYPE

SYNTAX Unsigned32
UNITS "seconds"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "Total seconds monitored in this interval."
 ::= { adsl2PMChHist15MinEntry 3 }

adsl2PMChHist15MCodingViolations OBJECT-TYPE

SYNTAX Unsigned32
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "Count of CRC-8 (FEBE for ATU-R) anomalies occurring in the
 channel during the interval. This parameter is inhibited
 during UAS or SES. If the CRC is applied over multiple
 channels, then each related CRC-8 (or FEBE) anomaly should
 increment each of the counters related to the individual
 channels."
REFERENCE "ITU-T G.997.1, paragraph 7.2.2"
 ::= { adsl2PMChHist15MinEntry 4 }

adsl2PMChHist15MCorrectedBlocks OBJECT-TYPE

SYNTAX Unsigned32
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "Count of FEC (FFEC for ATU-R) anomalies (corrected code words)
 occurring in the channel during the interval. This parameter
 is inhibited during UAS or SES. If the FEC is applied over
 multiple channels, then each related FEC (or FFEC) anomaly
 should increment each of the counters related to the
 individual channels."
REFERENCE "ITU-T G.997.1, paragraph 7.2.2"
 ::= { adsl2PMChHist15MinEntry 5 }

adsl2PMChHist15MValidInterval OBJECT-TYPE

SYNTAX TruthValue
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "This variable indicates if the data for this interval is
 valid."
 ::= { adsl2PMChHist15MinEntry 6 }

```
--          PM channel history 1 Day          --
-----
adsl2PMChHist1DTable      OBJECT-TYPE
    SYNTAX      SEQUENCE OF Adsl2PMChHist1DEntry
    MAX-ACCESS  not-accessible
    STATUS      current
    DESCRIPTION
        "The table adsl2PMChHist1DayTable contains PM channel history
        for 1 day intervals of ADSL2."
    ::= { adsl2PMChannel 3 }

adsl2PMChHist1DEntry      OBJECT-TYPE
    SYNTAX      Adsl2PMChHist1DEntry
    MAX-ACCESS  not-accessible
    STATUS      current
    DESCRIPTION
        "The table adsl2PMChHist1DayTable contains PM channel history
        for 1 day intervals of ADSL2.
        The indexes of this table is an interface index where
        the interface has an ifType value which is applicable
        for a DSL channel, the termination unit and the
        interval number."

    INDEX { ifIndex,
            adsl2PMChHist1DUnit,
            adsl2PMChHist1DInterval }
    ::= { adsl2PMChHist1DTable 1 }

Adsl2PMChHist1DEntry ::=
    SEQUENCE {
        adsl2PMChHist1DUnit                Adsl2Unit,
        adsl2PMChHist1DInterval            Unsigned32,
        adsl2PMChHist1DMonitoredTime       Unsigned32,
        adsl2PMChHist1DCodingViolations    Unsigned32,
        adsl2PMChHist1DCorrectedBlocks     Unsigned32,
        adsl2PMChHist1DValidInterval       TruthValue
    }

adsl2PMChHist1DUnit      OBJECT-TYPE
    SYNTAX      Adsl2Unit
    MAX-ACCESS  not-accessible
    STATUS      current
    DESCRIPTION
        "The termination unit."
    ::= { adsl2PMChHist1DEntry 1 }

adsl2PMChHist1DInterval  OBJECT-TYPE
    SYNTAX      Unsigned32
```


MAX-ACCESS not-accessible
STATUS current
DESCRIPTION
 "The interval number."
 ::= { adsl2PMChHist1DEntry 2 }

adsl2PMChHist1DMonitoredTime OBJECT-TYPE
SYNTAX Unsigned32
UNITS "seconds"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "Total seconds monitored in this interval."
 ::= { adsl2PMChHist1DEntry 3 }

adsl2PMChHist1DCodingViolations OBJECT-TYPE
SYNTAX Unsigned32
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "Count of CRC-8 (FEBE for ATU-R) anomalies occurring in the
 channel during the interval. This parameter is inhibited
 during UAS or SES. If the CRC is applied over multiple
 channels, then each related CRC-8 (or FEBE) anomaly should
 increment each of the counters related to the individual
 channels."
REFERENCE "ITU-T G.997.1, paragraph 7.2.2"
 ::= { adsl2PMChHist1DEntry 4 }

adsl2PMChHist1DCorrectedBlocks OBJECT-TYPE
SYNTAX Unsigned32
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "Count of FEC (FFEC for ATU-R) anomalies (corrected code words)
 occurring in the channel during the interval. This parameter
 is inhibited during UAS or SES. If the FEC is applied over
 multiple channels, then each related FEC (or FFEC) anomaly
 should increment each of the counters related to the
 individual channels."
REFERENCE "ITU-T G.997.1, paragraph 7.2.2"
 ::= { adsl2PMChHist1DEntry 5 }

adsl2PMChHist1DValidInterval OBJECT-TYPE
SYNTAX TruthValue
MAX-ACCESS read-only
STATUS current
DESCRIPTION


```
    "This variable indicates if the data for this interval is
    valid."
 ::= { adsl2PMChHist1DEntry 6 }
```

```
-----
--          Notifications Group          --
-----
```

adsl2LinePerfFECSThreshAtuc NOTIFICATION-TYPE

```
OBJECTS
{
  adsl2PMLCurr15MFecs,
  adsl2LineAlarmConfProfileAtucThresh15MinFecs
}
STATUS      current
DESCRIPTION
  "This notification indicates that the FEC seconds threshold
  has been reached/exceeded for the referred ATU-C."
 ::= { adsl2Notifications 1 }
```

adsl2LinePerfFECSThreshAtur NOTIFICATION-TYPE

```
OBJECTS
{
  adsl2PMLCurr15MFecs,
  adsl2LineAlarmConfProfileAturThresh15MinFecs
}
STATUS      current
DESCRIPTION
  "This notification indicates that the FEC seconds threshold
  has been reached/exceeded for the referred ATU-R."
 ::= { adsl2Notifications 2 }
```

adsl2LinePerfESThreshAtuc NOTIFICATION-TYPE

```
OBJECTS
{
  adsl2PMLCurr15MEs,
  adsl2LineAlarmConfProfileAtucThresh15MinEs
}
STATUS      current
DESCRIPTION
  "This notification indicates that the errored seconds threshold
  has been reached/exceeded for the referred ATU-C."
 ::= { adsl2Notifications 3 }
```

adsl2LinePerfESThreshAtur NOTIFICATION-TYPE

```
OBJECTS
{
  adsl2PMLCurr15MEs,
```



```
adsl2LineAlarmConfProfileAturThresh15MinEs
}
STATUS      current
DESCRIPTION
    "This notification indicates that the errored seconds threshold
    has been reached/exceeded for the referred ATU-R."
 ::= { adsl2Notifications 4 }
```

```
adsl2LinePerfSESThreshAtuc NOTIFICATION-TYPE
OBJECTS
{
    adsl2PMLCurr15MSes,
    adsl2LineAlarmConfProfileAtucThresh15MinSes
}
STATUS      current
DESCRIPTION
    "This notification indicates that the severely-errored seconds
    threshold has been reached/exceeded for the referred ATU-C."
 ::= { adsl2Notifications 5 }
```

```
adsl2LinePerfSESThreshAtur NOTIFICATION-TYPE
OBJECTS
{
    adsl2PMLCurr15MSes,
    adsl2LineAlarmConfProfileAturThresh15MinSes
}
STATUS      current
DESCRIPTION
    "This notification indicates that the severely-errored seconds
    threshold has been reached/exceeded for the referred ATU-R."
 ::= { adsl2Notifications 6 }
```

```
adsl2LinePerfLOSSThreshAtuc NOTIFICATION-TYPE
OBJECTS
{
    adsl2PMLCurr15MLoss,
    adsl2LineAlarmConfProfileAtucThresh15MinLoss
}
STATUS      current
DESCRIPTION
    "This notification indicates that the LOS seconds
    threshold has been reached/exceeded for the referred ATU-C."
 ::= { adsl2Notifications 7 }
```

```
adsl2LinePerfLOSSThreshAtur NOTIFICATION-TYPE
OBJECTS
{
    adsl2PMLCurr15MLoss,
```



```
adsl2LineAlarmConfProfileAturThresh15MinLoss
}
STATUS      current
DESCRIPTION
    "This notification indicates that the LOS seconds
    threshold has been reached/exceeded for the referred ATU-R."
 ::= { adsl2Notifications 8 }
```

```
adsl2LinePerfUASThreshAtuc NOTIFICATION-TYPE
OBJECTS
{
    adsl2PMLCurr15MUas,
    adsl2LineAlarmConfProfileAtucThresh15MinUas
}
STATUS      current
DESCRIPTION
    "This notification indicates that the unavailable seconds
    threshold has been reached/exceeded for the referred ATU-C."
 ::= { adsl2Notifications 9 }
```

```
adsl2LinePerfUASThreshAtur NOTIFICATION-TYPE
OBJECTS
{
    adsl2PMLCurr15MUas,
    adsl2LineAlarmConfProfileAturThresh15MinUas
}
STATUS      current
DESCRIPTION
    "This notification indicates that the unavailable seconds
    threshold has been reached/exceeded for the referred ATU-R."
 ::= { adsl2Notifications 10 }
```

```
adsl2LinePerfCodingViolationsThreshAtuc NOTIFICATION-TYPE
OBJECTS
{
    adsl2PMChCurr15MCodingViolations,
    adsl2ChAlarmConfProfileAtucThresh15MinCodingViolations
}
STATUS      current
DESCRIPTION
    "This notification indicates that the coding violations
    threshold has been reached/exceeded for the referred ATU-C."
 ::= { adsl2Notifications 11 }
```

```
adsl2LinePerfCodingViolationsThreshAtur NOTIFICATION-TYPE
OBJECTS
{
    adsl2PMChCurr15MCodingViolations,
```



```
adsl2ChAlarmConfProfileAturThresh15MinCodingViolations
}
STATUS      current
DESCRIPTION
    "This notification indicates that the coding violations
    threshold has been reached/exceeded for the referred ATU-R."
::= { adsl2Notifications 12 }
```

```
adsl2LinePerfCorrectedThreshAtuc NOTIFICATION-TYPE
OBJECTS
{
    adsl2PMChCurr15MCorrectedBlocks,
    adsl2ChAlarmConfProfileAtucThresh15MinCorrected
}
STATUS      current
DESCRIPTION
    "This notification indicates that the corrected blocks
    (FEC events) threshold has been reached/exceeded for the
    referred ATU-C."
::= { adsl2Notifications 13 }
```

```
adsl2LinePerfCorrectedThreshAtur NOTIFICATION-TYPE
OBJECTS
{
    adsl2PMChCurr15MCorrectedBlocks,
    adsl2ChAlarmConfProfileAturThresh15MinCorrected
}
STATUS      current
DESCRIPTION
    "This notification indicates that the corrected blocks
    (FEC events) threshold has been reached/exceeded for the
    referred ATU-R."
::= { adsl2Notifications 14 }
```

```
adsl2LinePerfFailedFullInitThresh NOTIFICATION-TYPE
OBJECTS
{
    adsl2PMLCurrInit15MFailedFullInits,
    adsl2LineAlarmConfProfileThresh15MinFailedFullInt
}
STATUS      current
DESCRIPTION
    "This notification indicates that the failed full
    initializations threshold has been reached/exceeded for the
    referred ADSL/ADSL2 or ADSL2 line."
::= { adsl2Notifications 15 }
```

```
adsl2LinePerfFailedShortInitThresh NOTIFICATION-TYPE
```


OBJECTS

```
{
adsl2PMLCurrInit15MFailedShortInits,
adsl2LineAlarmConfProfileThresh15MinFailedShrtInt
}
```

STATUS current

DESCRIPTION

"This notification indicates that the failed short initializations threshold has been reached/exceeded for the referred ADSL/ADSL2 or ADSL2 line."

::= { adsl2Notifications 16 }

adsl2LineStatusChangeAtuc NOTIFICATION-TYPE

OBJECTS

```
{
adsl2LineStatusAtuc
}
```

STATUS current

DESCRIPTION

"This notification indicates that a status change is detected for the referred ATU-C."

::= { adsl2Notifications 17 }

adsl2LineStatusChangeAtur NOTIFICATION-TYPE

OBJECTS

```
{
adsl2LineStatusAtur
}
```

STATUS current

DESCRIPTION

"This notification indicates that a status change is detected for the referred ATU-R."

::= { adsl2Notifications 18 }

-- conformance information

adsl2Groups OBJECT IDENTIFIER ::= { adsl2Conformance 1 }

adsl2Compliances OBJECT IDENTIFIER ::= { adsl2Conformance 2 }

adsl2LineMibCompliance MODULE-COMPLIANCE

STATUS current

DESCRIPTION

"The compliance statement for SNMP entities which manage ADSL2 interfaces."

MODULE -- this module

MANDATORY-GROUPS

{


```
    adsl2LineGroup,  
    adsl2ChannelStatusGroup,  
    adsl2SCStatusGroup,  
    adsl2LineInventoryGroup,  
    adsl2LineConfTemplateGroup,  
    adsl2LineConfProfGroup,  
    adsl2LineConfProfModeSpecGroup,  
    adsl2ChConfProfileGroup,  
    adsl2LineAlarmConfTemplateGroup,  
    adsl2PMLineCurrGroup,  
    adsl2PMLineCurrInitGroup,  
    adsl2PMLineHist15MinGroup,  
    adsl2PMLineHist1DayGroup,  
    adsl2PMLineInitHist15MinGroup,  
    adsl2PMLineInitHist1DayGroup,  
    adsl2PMChCurrGroup,  
    adsl2PMChHist15MinGroup,  
    adsl2PMChHist1DGroup  
}
```

GROUP adsl2ChannelStatusAtmGroup

DESCRIPTION

"The group of status objects required when the data path
is ATM."

GROUP adsl2ChannelStatusPtmGroup

DESCRIPTION

"The group of status objects required when the data path
is PTM."

GROUP adsl2LineConfProfRaGroup

DESCRIPTION

"The group of objects required for controlling the rate
adaptive behavior of the line."

GROUP adsl2LineConfProfMsgMinGroup

DESCRIPTION

"The group of objects required for controlling the rate
reserved for Overhead traffic."

GROUP adsl2LineAlarmConfProfileGroup

DESCRIPTION

"The group of objects that define the alarm thresholds
on line level PM counters."

GROUP adsl2ChAlarmConfProfileGroup

DESCRIPTION

"The group of objects that define the alarm thresholds

on channel level PM counters."

GROUP adsl2ChConfProfileAtmGroup

DESCRIPTION

"The group of configuration objects required when the data path is ATM."

GROUP adsl2ChConfProfileMinResGroup

DESCRIPTION

"The group of configuration objects required for the reserved data rate."

GROUP adsl2PMLineCurrInitShortGroup

DESCRIPTION

"The group of PM counters for the current intervals short initializations."

GROUP adsl2PMLineInitHist15MinShortGroup

DESCRIPTION

"The group of PM counters for the previous 15 minutes intervals short initializations."

GROUP adsl2PMLineInitHist1DayShortGroup

DESCRIPTION

"The group of PM counters for the previous 24 hours intervals short initializations."

GROUP adsl2ScalarSCGroup

DESCRIPTION

"The group of objects that report the available memory resources for DELT processes."

GROUP adsl2ThreshNotificationGroup

DESCRIPTION

"The group of thresholds crossing notifications."

GROUP adsl2StatusChangeNotificationGroup

DESCRIPTION

"The group of status change notifications."

::= { adsl2Compliances 1 }

-- units of conformance

adsl2LineGroup OBJECT-GROUP

OBJECTS

{
adsl2LineCnfgTemplate,


```
adsl2LineAlarmCnfgTemplate,
adsl2LineCmndConfPmsf,
adsl2LineCmndConfLdsf,
adsl2LineCmndConfLdsfFailReason,
adsl2LineCmndAutomodeColdStart,
adsl2LineStatusAtuTransSys,
adsl2LineStatusPwrMngState,
adsl2LineStatusInitResult,
adsl2LineStatusLastStateDs,
adsl2LineStatusLastStateUs,
adsl2LineStatusAtur,
adsl2LineStatusAtuc,
adsl2LineStatusLnAttenDs,
adsl2LineStatusLnAttenUs,
adsl2LineStatusSigAttenDs,
adsl2LineStatusSigAttenUs,
adsl2LineStatusSnrMarginDs,
adsl2LineStatusSnrMarginUs,
adsl2LineStatusAttainableRateDs,
adsl2LineStatusAttainableRateUs,
adsl2LineStatusActPsdDs,
adsl2LineStatusActPsdUs,
adsl2LineStatusActAtpDs,
adsl2LineStatusActAtpUs
}
```

STATUS current

DESCRIPTION

"The group of configuration, status, and commands objects
on the line level."

::= { adsl2Groups 1 }

adsl2ChannelStatusGroup OBJECT-GROUP

OBJECTS

```
{
adsl2ChStatusChannelNum,
adsl2ChStatusActDataRate,
adsl2ChStatusPrevDataRate,
adsl2ChStatusActDelay
}
```

STATUS current

DESCRIPTION

"The group of status objects on the channel level."

::= { adsl2Groups 2 }

adsl2ChannelStatusAtmGroup OBJECT-GROUP

OBJECTS

```
{
adsl2ChStatusAtmStatus
```



```
    }
    STATUS      current
    DESCRIPTION
        "The group of status objects on the data path level
        when it is ATM."
    ::= { adsl2Groups 3 }
```

```
adsl2ChannelStatusPtmGroup OBJECT-GROUP
    OBJECTS
        {
            adsl2ChStatusPtmStatus
        }
    STATUS      current
    DESCRIPTION
        "The group of status objects on the data path level
        when it is PTM."
    ::= { adsl2Groups 4 }
```

```
adsl2SCStatusGroup OBJECT-GROUP
    OBJECTS
        {
            adsl2SCStatusMtime,
            adsl2SCStatusSnr,
            adsl2SCStatusBitsAlloc,
            adsl2SCStatusGainAlloc,
            adsl2SCStatusTssi,
            adsl2SCStatusLinScale,
            adsl2SCStatusLinReal,
            adsl2SCStatusLinImg,
            adsl2SCStatusLogMt,
            adsl2SCStatusLog,
            adsl2SCStatusQlnMt,
            adsl2SCStatusQln,
            adsl2SCStatusLnAtten,
            adsl2SCStatusSigAtten,
            adsl2SCStatusSnrMargin,
            adsl2SCStatusAttainableRate,
            adsl2SCStatusActAtp,
            adsl2SCStatusRowStatus
        }
    STATUS      current
    DESCRIPTION
        "The group of status objects on the sub-carrier level.
        They are updated as a result of a DELT process."
    ::= { adsl2Groups 5 }
```

```
adsl2LineInventoryGroup OBJECT-GROUP
    OBJECTS
```



```
    {
      adsl2LInvG994VendorId,
      adsl2LInvSystemVendorId,
      adsl2LInvVersionNumber,
      adsl2LInvSerialNumber,
      adsl2LInvSelfTestResult,
      adsl2LInvTransmissionCapabilities
    }
  STATUS      current
  DESCRIPTION
    "The group of inventory objects per xTU."
  ::= { adsl2Groups 6 }
```

adsl2LineConfTemplateGroup OBJECT-GROUP
OBJECTS

```
    {
      adsl2LConfTempLineProfile,
      adsl2LConfTempChan1ConfProfile,
      adsl2LConfTempChan1RaRatioDs,
      adsl2LConfTempChan1RaRatioUs,
      adsl2LConfTempChan2ConfProfile,
      adsl2LConfTempChan2RaRatioDs,
      adsl2LConfTempChan2RaRatioUs,
      adsl2LConfTempChan3ConfProfile,
      adsl2LConfTempChan3RaRatioDs,
      adsl2LConfTempChan3RaRatioUs,
      adsl2LConfTempChan4ConfProfile,
      adsl2LConfTempChan4RaRatioDs,
      adsl2LConfTempChan4RaRatioUs,
      adsl2LConfTempRowStatus
    }
  STATUS      current
  DESCRIPTION
    "The group of objects in a line configuration template."
  ::= { adsl2Groups 7 }
```

adsl2LineConfProfGroup OBJECT-GROUP
OBJECTS

```
    {
      adsl2LConfProfScMaskDs,
      adsl2LConfProfScMaskUs,
      adsl2LConfProfRfiBandsDs,
      adsl2LConfProfRaModeDs,
      adsl2LConfProfRaModeUs,
      adsl2LConfProfTargetSnrmDs,
      adsl2LConfProfTargetSnrmUs,
      adsl2LConfProfMaxSnrmDs,
      adsl2LConfProfMaxSnrmUs,
    }
```



```
    adsl2LConfProfMinSnrmDs,
    adsl2LConfProfMinSnrmUs,
    adsl2LConfProfAtuTransSysEna,
    adsl2LConfProfPmMode,
    adsl2LConfProfL0Time,
    adsl2LConfProfL2Time,
    adsl2LConfProfL2Atpr,
    adsl2LConfProfL2Atprt,
    adsl2LConfProfRowStatus
  }
STATUS      current
DESCRIPTION
  "The group of objects in a line configuration profile."
 ::= { adsl2Groups 8 }

adsl2LineConfProfRaGroup OBJECT-GROUP
OBJECTS
  {
    adsl2LConfProfRaUsNrmDs,
    adsl2LConfProfRaUsNrmUs,
    adsl2LConfProfRaUsTimeDs,
    adsl2LConfProfRaUsTimeUs,
    adsl2LConfProfRaDsNrmsDs,
    adsl2LConfProfRaDsNrmsUs,
    adsl2LConfProfRaDsTimeDs,
    adsl2LConfProfRaDsTimeUs
  }
STATUS      current
DESCRIPTION
  "The group of objects required for controlling the rate
   adaptive behavior of the line."
 ::= { adsl2Groups 9 }

adsl2LineConfProfMsgMinGroup OBJECT-GROUP
OBJECTS
  {
    adsl2LConfProfMsgMinUs,
    adsl2LConfProfMsgMinDs
  }
STATUS      current
DESCRIPTION
  "The group of objects required for controlling the rate
   reserved for Overhead traffic."
 ::= { adsl2Groups 10 }

adsl2LineConfProfModeSpecGroup OBJECT-GROUP
OBJECTS
  {
```



```
    adsl2LConfProfMaxNomPsdDs,
    adsl2LConfProfMaxNomPsdUs,
    adsl2LConfProfMaxNomAtpDs,
    adsl2LConfProfMaxNomAtpUs,
    adsl2LConfProfMaxAggRxPwrUs,
    adsl2LConfProfPsdMaskDs,
    adsl2LConfProfPsdMaskUs,
    adsl2LConfProfPsdMaskSelectUs,
    adsl2LConfProfModeSpecRowStatus
  }
STATUS      current
DESCRIPTION
  "The group of objects in a line configuration profile
   that have an instance for each operation mode allowed."
 ::= { adsl2Groups 11 }

adsl2ChConfProfileGroup OBJECT-GROUP
OBJECTS
  {
    adsl2ChConfProfMinDataRateDs,
    adsl2ChConfProfMinDataRateUs,
    adsl2ChConfProfMaxDataRateDs,
    adsl2ChConfProfMaxDataRateUs,
    adsl2ChConfProfMinDataRateLowPwrDs,
    adsl2ChConfProfMinDataRateLowPwrUs,
    adsl2ChConfProfMaxDelayDs,
    adsl2ChConfProfMaxDelayUs,
    adsl2ChConfProfMinProtectionDs,
    adsl2ChConfProfMinProtectionUs,
    adsl2ChConfProfMaxBerDs,
    adsl2ChConfProfMaxBerUs,
    adsl2ChConfProfUsDataRateDs,
    adsl2ChConfProfDsDataRateDs,
    adsl2ChConfProfUsDataRateUs,
    adsl2ChConfProfDsDataRateUs,
    adsl2ChConfProfRowStatus
  }
STATUS      current
DESCRIPTION
  "The group of objects in a channel configuration profile."
 ::= { adsl2Groups 12 }

adsl2ChConfProfileAtmGroup OBJECT-GROUP
OBJECTS
  {
    adsl2ChConfProfImaEnabled,
    adsl2ChStatusAtmStatus
  }
```


STATUS current

DESCRIPTION

"The group of configuration objects required when the data path is ATM."

::= { adsl2Groups 13 }

adsl2ChConfProfileMinResGroup OBJECT-GROUP

OBJECTS

{
adsl2ChConfProfMinResDataRateDs,
adsl2ChConfProfMinResDataRateUs
}

STATUS current

DESCRIPTION

"The group of configuration objects required for the reserved data rate."

::= { adsl2Groups 14 }

adsl2LineAlarmConfTemplateGroup OBJECT-GROUP

OBJECTS

{
adsl2LAlarmConfTempLineProfile,
adsl2LAlarmConfTempChan1ConfProfile,
adsl2LAlarmConfTempChan2ConfProfile,
adsl2LAlarmConfTempChan3ConfProfile,
adsl2LAlarmConfTempChan4ConfProfile,
adsl2LAlarmConfTempRowStatus
}

STATUS current

DESCRIPTION

"The group of objects in a line alarm template."

::= { adsl2Groups 15 }

adsl2LineAlarmConfProfileGroup OBJECT-GROUP

OBJECTS

{
adsl2LineAlarmConfProfileAtucThresh15MinFecs,
adsl2LineAlarmConfProfileAtucThresh15MinEs,
adsl2LineAlarmConfProfileAtucThresh15MinSes,
adsl2LineAlarmConfProfileAtucThresh15MinLoss,
adsl2LineAlarmConfProfileAtucThresh15MinUas,
adsl2LineAlarmConfProfileAturThresh15MinFecs,
adsl2LineAlarmConfProfileAturThresh15MinEs,
adsl2LineAlarmConfProfileAturThresh15MinSes,
adsl2LineAlarmConfProfileAturThresh15MinLoss,
adsl2LineAlarmConfProfileAturThresh15MinUas,
adsl2LineAlarmConfProfileThresh15MinFailedFullInt,
}


```
        adsl2LineAlarmConfProfileThresh15MinFailedShrtInt,
        adsl2LineAlarmConfProfileRowStatus
    }
    STATUS      current
    DESCRIPTION
        "The group of objects in a line alarm profile."
    ::= { adsl2Groups 16 }
```

adsl2ChAlarmConfProfileGroup OBJECT-GROUP

```
    OBJECTS
        {
            adsl2ChAlarmConfProfileAtucThresh15MinCodingViolations,
            adsl2ChAlarmConfProfileAtucThresh15MinCorrected,
            adsl2ChAlarmConfProfileAturThresh15MinCodingViolations,
            adsl2ChAlarmConfProfileAturThresh15MinCorrected,
            adsl2ChAlarmConfProfileRowStatus
        }
    STATUS      current
    DESCRIPTION
        "The group of objects in a channel alarm profile."
    ::= { adsl2Groups 17 }
```

adsl2PMLineCurrGroup OBJECT-GROUP

```
    OBJECTS
        {
            adsl2PMLCurrValidIntervals,
            adsl2PMLCurrInvalidIntervals,
            adsl2PMLCurr15MTimeElapsed,
            adsl2PMLCurr15MFecs,
            adsl2PMLCurr15MEs,
            adsl2PMLCurr15MSes,
            adsl2PMLCurr15MLoss,
            adsl2PMLCurr15MUas,
            adsl2PMLCurr1DayValidIntervals,
            adsl2PMLCurr1DayInvalidIntervals,
            adsl2PMLCurr1DayTimeElapsed,
            adsl2PMLCurr1DayFecs,
            adsl2PMLCurr1DayEs,
            adsl2PMLCurr1DaySes,
            adsl2PMLCurr1DayLoss,
            adsl2PMLCurr1DayUas
        }
    STATUS      current
    DESCRIPTION
        "The group of objects that report the line level
        counters for current PM intervals."
    ::= { adsl2Groups 18 }
```


adsl2PMLineCurrInitGroup OBJECT-GROUP

OBJECTS

```
{
  adsl2PMLCurrInit15MTimeElapsed,
  adsl2PMLCurrInit15MFullInits,
  adsl2PMLCurrInit15MFailedFullInits,
  adsl2PMLCurrInit1DayTimeElapsed,
  adsl2PMLCurrInit1DayFullInits,
  adsl2PMLCurrInit1DayFailedFullInits
}
```

STATUS current

DESCRIPTION

"The group of objects that report the full
initializations counters for current PM intervals."
::= { adsl2Groups 19 }

adsl2PMLineCurrInitShortGroup OBJECT-GROUP

OBJECTS

```
{
  adsl2PMLCurrInit15MShortInits,
  adsl2PMLCurrInit15MFailedShortInits,
  adsl2PMLCurrInit1DayShortInits,
  adsl2PMLCurrInit1DayFailedShortInits
}
```

STATUS current

DESCRIPTION

"The group of objects that report the short
initializations counters for current PM intervals."
::= { adsl2Groups 20 }

adsl2PMLineHist15MinGroup OBJECT-GROUP

OBJECTS

```
{
  adsl2PMLHist15MMonitoredTime,
  adsl2PMLHist15MFecs,
  adsl2PMLHist15MEs,
  adsl2PMLHist15MSes,
  adsl2PMLHist15MLoss,
  adsl2PMLHist15MUas,
  adsl2PMLHist15MValidInterval
}
```

STATUS current

DESCRIPTION

"The group of line level PM counters for the previous
15 minutes intervals."
::= { adsl2Groups 21 }

adsl2PMLineHist1DayGroup OBJECT-GROUP

OBJECTS

```
{
  adsl2PMLHist1DMonitoredTime,
  adsl2PMLHist1DFecs,
  adsl2PMLHist1DEs,
  adsl2PMLHist1DSes,
  adsl2PMLHist1DLoss,
  adsl2PMLHist1DUas,
  adsl2PMLHist1DValidInterval
}
```

STATUS current

DESCRIPTION

"The group of line level PM counters for the previous
24 hours intervals."

::= { adsl2Groups 22 }

adsl2PMLLineInitHist15MinGroup OBJECT-GROUP

OBJECTS

```
{
  adsl2PMLHistInit15MMonitoredTime,
  adsl2PMLHistInit15MFullInits,
  adsl2PMLHistInit15MFailedFullInits,
  adsl2PMLHistInit15MValidInterval
}
```

STATUS current

DESCRIPTION

"The group of PM counters for the previous 15 minutes
intervals full initializations."

::= { adsl2Groups 23 }

adsl2PMLLineInitHist15MinShortGroup OBJECT-GROUP

OBJECTS

```
{
  adsl2PMLHistInit15MShortInits,
  adsl2PMLHistInit15MFailedShortInits
}
```

STATUS current

DESCRIPTION

"The group of PM counters for the previous 15 minutes
intervals short initializations."

::= { adsl2Groups 24 }

adsl2PMLLineInitHist1DayGroup OBJECT-GROUP

OBJECTS

```
{
  adsl2PMLHistinit1DMonitoredTime,
  adsl2PMLHistinit1DFullInits,
  adsl2PMLHistinit1DFailedFullInits,
}
```



```
        adsl2PMLHistinit1DValidInterval
    }
    STATUS      current
    DESCRIPTION
        "The group of PM counters for the previous 24 hours
        intervals full initializations."
    ::= { adsl2Groups 25 }

adsl2PMLineInitHist1DayShortGroup OBJECT-GROUP
    OBJECTS
        {
            adsl2PMLHistinit1DShortInits,
            adsl2PMLHistinit1DFailedShortInits
        }
    STATUS      current
    DESCRIPTION
        "The group of PM counters for the previous 24 hours
        intervals short initializations."
    ::= { adsl2Groups 26 }

adsl2PMChCurrGroup OBJECT-GROUP
    OBJECTS
        {
            adsl2PMChCurrValidIntervals,
            adsl2PMChCurrInvalidIntervals,
            adsl2PMChCurr15MTimeElapsed,
            adsl2PMChCurr15MCodingViolations,
            adsl2PMChCurr15MCorrectedBlocks,
            adsl2PMChCurr1DayValidIntervals,
            adsl2PMChCurr1DayInvalidIntervals,
            adsl2PMChCurr1DayTimeElapsed,
            adsl2PMChCurr1DayCodingViolations,
            adsl2PMChCurr1DayCorrectedBlocks
        }
    STATUS      current
    DESCRIPTION
        "The group of objects that report the channel level
        counters for current PM intervals."
    ::= { adsl2Groups 27 }

adsl2PMChHist15MinGroup OBJECT-GROUP
    OBJECTS
        {
            adsl2PMChHist15MMonitoredTime,
            adsl2PMChHist15MCodingViolations,
            adsl2PMChHist15MCorrectedBlocks,
            adsl2PMChHist15MValidInterval
        }
}
```


STATUS current

DESCRIPTION

"The group of objects that report the channel level
counters for previous 15 minutes PM intervals."

::= { adsl2Groups 28 }

adsl2PMChHist1DGroup OBJECT-GROUP

OBJECTS

{
adsl2PMChHist1DMonitoredTime,
adsl2PMChHist1DCodingViolations,
adsl2PMChHist1DCorrectedBlocks,
adsl2PMChHist1DValidInterval
}

STATUS current

DESCRIPTION

"The group of objects that report the channel level
counters for previous 24 hours PM intervals."

::= { adsl2Groups 29 }

adsl2ScalarSCGroup OBJECT-GROUP

OBJECTS

{
adsl2ScalarSCMaxInterfaces,
adsl2ScalarSCAvailInterfaces
}

STATUS current

DESCRIPTION

"The group of objects that report the available memory
resources for DELT processes."

::= { adsl2Groups 30 }

adsl2ThreshNotificationGroup NOTIFICATION-GROUP

NOTIFICATIONS

{
adsl2LinePerfFECSThreshAtuc,
adsl2LinePerfFECSThreshAtur,
adsl2LinePerfESThreshAtuc,
adsl2LinePerfESThreshAtur,
adsl2LinePerfSESThreshAtuc,
adsl2LinePerfSESThreshAtur,
adsl2LinePerfLOSSThreshAtuc,
adsl2LinePerfLOSSThreshAtur,
adsl2LinePerfUASThreshAtuc,
adsl2LinePerfUASThreshAtur,
adsl2LinePerfCodingViolationsThreshAtuc,
adsl2LinePerfCodingViolationsThreshAtur,
adsl2LinePerfCorrectedThreshAtuc,
adsl2LinePerfCorrectedThreshAtur,
}


```
    adsl2LinePerfCorrectedThreshAtur,
    adsl2LinePerfFailedFullInitThresh,
    adsl2LinePerfFailedShortInitThresh
  }
  STATUS      current
  DESCRIPTION
    "This group supports notifications of significant conditions
    associated with ADSL2 lines."
  ::= { adsl2Groups 31 }

adsl2StatusChangeNotificationGroup NOTIFICATION-GROUP
  NOTIFICATIONS
  {
    adsl2LineStatusChangeAtuc,
    adsl2LineStatusChangeAtur
  }
  STATUS      current
  DESCRIPTION
    "This group supports notifications of thresholds crossing
    associated with ADSL2 lines."
  ::= { adsl2Groups 32 }

END
```

4. Implementation Analysis

A management application intended to manage ADSL links (e.g., G.992.1) with this MIB module MUST be modified to adapt itself to certain differences between [RFC 2662](#) [[RFC2662](#)] and this MIB module, including the following aspects:

- o Though the configuration templates/profiles allow referring to 1-4 bearer channels, ADSL links are limited to 2 channels at most
- o Though the channel configuration profile allows higher data rates, ADSL links are limited to downstream/upstream data rate as assumed in [RFC 2662](#) [[RFC2662](#)]
- o The Impulse Noise Protection (INP) configuration parameters are given by minimum protection and maximum delay parameters.
- o The line configuration profile includes a sub-table that addresses mode-specific parameters. For ADSL links, the management application SHOULD create a row in that table for the 'adsl' mode.
- o The line configuration profile includes parameters that are irrelevant for ADSL links. Similarly, many status parameters in the MIB are irrelevant for certain ADSL modes. Therefore, it is advised to consult with ITU G.997.1 standard [[G.997.1](#)] regarding

the scope and relevance of each parameter in this MIB.

5. Security Considerations

There are a number of management objects defined in this MIB module with a MAX-ACCESS clause of read-write and/or read-create. Such objects may be considered sensitive or vulnerable in some network environments. The support for SET operations in a non-secure environment without proper protection can have a negative effect on network operations. These are the tables and objects and their sensitivity/vulnerability:

o adsl2LineTable

The table consists of the following objects that support SET operations:

- * adsl2LineCnfgTemplate
- * adsl2LineAlarmCnfgTemplate
- * adsl2LineCmndConfPmsf
- * adsl2LineCmndConfLdsf
- * adsl2LineCmndAutomodeColdStart

Unauthorized changes to adsl2LineCnfgTemplate could have a major adverse operational effect on many lines simultaneously.

Unauthorized changes to adsl2LineAlarmCnfgTemplate could have a contrary effect on notifications.

Unauthorized changes to adsl2LineCmndConfPmsf could have an adverse affect on the power consumption of a line and may disrupt an operational service.

Unauthorized changes to adsl2LineCmndConfLdsf could cause an unscheduled line test to be carried out on the line.

Unauthorized changes to adsl2LineCmndAutomodeColdStart could cause an unscheduled cold reset to the line.

o adsl2SCStatusTable

This table contains one object, adsl2SCStatusRowStatus, that supports SET operations. Unauthorized changes could result in line test results being deleted prematurely.

o adsl2LineConfTemplateTable

The table consists of the following objects that support SET operations:

- * adsl2LConfTempLineProfile
- * adsl2LConfTempChan1ConfProfile
- * adsl2LConfTempChan1RaRatioDs
- * adsl2LConfTempChan1RaRatioUs
- * adsl2LConfTempChan2ConfProfile
- * adsl2LConfTempChan2RaRatioDs
- * adsl2LConfTempChan2RaRatioUs
- * adsl2LConfTempChan3ConfProfile
- * adsl2LConfTempChan3RaRatioDs
- * adsl2LConfTempChan3RaRatioUs
- * adsl2LConfTempChan4ConfProfile
- * adsl2LConfTempChan4RaRatioDs
- * adsl2LConfTempChan4RaRatioUs
- * adsl2LConfTempRowStatus

Unauthorized changes to adsl2LConfTempLineProfile, adsl2LConfTempChan1ConfProfile, adsl2LConfTempChan2ConfProfile, adsl2LConfTempChan3ConfProfile, or adsl2LConfTempChan4ConfProfile could have an adverse operational effect on several lines; could change several lines over to running in unwanted levels of operation; or could result in several services undergoing changes in the number of channels that carry the service.

Unauthorized changes to adsl2LConfTempChan1RaRatioDs, adsl2LConfTempChan2RaRatioDs, adsl2LConfTempChan3RaRatioDs, or adsl2LConfTempChan4RaRatioDs, would alter the relative rate allocations among all channels belonging to a line. This could have an adverse operational effect on several lines.

Unauthorized changes to adsl2LConfTempRowStatus could result in templates being created or brought into service prematurely; or could result in templates being inadvertently deleted or taken out of service.

o adsl2LineConfProfTable

The table consists of the following objects that support SET operations:

- * adsl2LConfProfScMaskDs
- * adsl2LConfProfScMaskUs

- * adsl2LConfProfRfiBandsDs
- * adsl2LConfProfRaModeDs
- * adsl2LConfProfRaModeUs
- * adsl2LConfProfRaUsNrmDs
- * adsl2LConfProfRaUsNrmUs
- * adsl2LConfProfRaUsTimeDs
- * adsl2LConfProfRaUsTimeUs
- * adsl2LConfProfRaDsNrmsDs
- * adsl2LConfProfRaDsNrmsUs
- * adsl2LConfProfRaDsTimeDs
- * adsl2LConfProfRaDsTimeUs
- * adsl2LConfProfTargetSnrmDs
- * adsl2LConfProfTargetSnrmUs
- * adsl2LConfProfMaxSnrmDs
- * adsl2LConfProfMaxSnrmUs
- * adsl2LConfProfMinSnrmDs
- * adsl2LConfProfMinSnrmUs
- * adsl2LConfProfMsgMinUs
- * adsl2LConfProfMsgMinDs
- * adsl2LConfProfAtuTransSysEna
- * adsl2LConfProfPmMode
- * adsl2LConfProfL0Time
- * adsl2LConfProfL2Time
- * adsl2LConfProfL2Atpr
- * adsl2LConfProfL2Atprt
- * adsl2LConfProfRowStatus

Unauthorized changes resulting in the setting of any of the above objects to an incorrect value could have an adverse operational effect on several lines.

Also, unauthorized changes to adsl2LConfProfRowStatus could result in unwanted line profiles being created or brought into service prematurely; or could result in line profiles being inadvertently deleted or taken out of service.

o adsl2LineConfProfModeSpecTable

The table consists of the following objects that support SET operations:

- * adsl2LConfProfMaxNomPsdDs
- * adsl2LConfProfMaxNomPsdUs
- * adsl2LConfProfMaxNomAtpDs
- * adsl2LConfProfMaxNomAtpUs
- * adsl2LConfProfMaxAggRxPwrUs

- * adsl2LConfProfPsdMaskDs
- * adsl2LConfProfPsdMaskUs
- * adsl2LConfProfPsdMaskSelectUs
- * adsl2LConfProfModeSpecRowStatus

Unauthorized changes resulting in the setting of any of the above objects to an incorrect value could have an adverse operational effect on several lines.

Also, unauthorized changes to adsl2LConfProfModeSpecRowStatus could result in unwanted PSD configurations being created or brought into service prematurely; or could result in PSD configurations being inadvertently deleted or taken out of service.

o adsl2ChConfProfileTable

The table consists of the following objects that support SET operations:

- * adsl2ChConfProfMinDataRateDs
- * adsl2ChConfProfMinDataRateUs
- * adsl2ChConfProfMinResDataRateDs
- * adsl2ChConfProfMinResDataRateUs
- * adsl2ChConfProfMaxDataRateDs
- * adsl2ChConfProfMaxDataRateUs
- * adsl2ChConfProfMinDataRateLowPwrDs
- * adsl2ChConfProfMinDataRateLowPwrUs
- * adsl2ChConfProfMaxDelayDs
- * adsl2ChConfProfMaxDelayUs
- * adsl2ChConfProfMinProtectionDs
- * adsl2ChConfProfMinProtectionUs
- * adsl2ChConfProfMaxBerDs
- * adsl2ChConfProfMaxBerUs
- * adsl2ChConfProfUsDataRateDs
- * adsl2ChConfProfDsDataRateDs
- * adsl2ChConfProfUsDataRateUs
- * adsl2ChConfProfDsDataRateUs
- * adsl2ChConfProfImaEnabled
- * adsl2ChConfProfRowStatus

Unauthorized changes resulting in the setting of any of the above objects to an incorrect value could have an adverse operational effect on several lines.

Also, unauthorized changes to adsl2ChConfProfRowStatus could result in unwanted channel profiles being created or brought into service prematurely; or could result in channel profiles being

inadvertently deleted or taken out of service.

o adsl2LineAlarmConfTemplateTable

The table consists of the following objects that support SET operations:

- * adsl2LAlarmConfTempLineProfile
- * adsl2LAlarmConfTempChan1ConfProfile
- * adsl2LAlarmConfTempChan2ConfProfile
- * adsl2LAlarmConfTempChan3ConfProfile
- * adsl2LAlarmConfTempChan4ConfProfile
- * adsl2LAlarmConfTempRowStatus

Unauthorized changes to adsl2LAlarmConfTempLineProfile, adsl2LAlarmConfTempChan1ConfProfile, adsl2LAlarmConfTempChan2ConfProfile, adsl2LAlarmConfTempChan3ConfProfile, or adsl2LAlarmConfTempChan4ConfProfile could have an adverse effect on the management of notifications generated at the scope of several to many lines; or could change several to many lines over to running with unwanted management rates for generated notifications.

Unauthorized changes to adsl2LAlarmConfTempRowStatus could result in alarm templates being created or brought into service prematurely; or could result in alarm templates being inadvertently deleted or taken out of service.

o adsl2LineAlarmConfProfileTable

The table consists of the following objects that support SET operations:

- * adsl2LineAlarmConfProfileAtucThresh15MinFecs
- * adsl2LineAlarmConfProfileAtucThresh15MinEs
- * adsl2LineAlarmConfProfileAtucThresh15MinSes
- * adsl2LineAlarmConfProfileAtucThresh15MinLoss
- * adsl2LineAlarmConfProfileAtucThresh15MinUas
- * adsl2LineAlarmConfProfileAturThresh15MinFecs
- * adsl2LineAlarmConfProfileAturThresh15MinEs
- * adsl2LineAlarmConfProfileAturThresh15MinSes
- * adsl2LineAlarmConfProfileAturThresh15MinLoss
- * adsl2LineAlarmConfProfileAturThresh15MinUas
- * adsl2LineAlarmConfProfileThresh15MinFailedFullInt
- * adsl2LineAlarmConfProfileThresh15MinFailedShrtInt

- * adsl2LineAlarmConfProfileRowStatus

Increasing any of the threshold values could result in a notification being suppressed or deferred. Setting a threshold to 0 could result in a notification being suppressed. Suppressing or deferring a notification could prevent the timely delivery of important diagnostic information. Decreasing any of the threshold values could result in a notification being sent from the network falsely reporting a threshold crossing.

Changing a threshold value could also have an impact on the amount of notifications the agent sends. The Notifications Section of this document has a paragraph which provides general guidance on the rate limiting of notifications. Agent implementations not providing rate limiting could result in notifications being generated at an uncontrolled rate. Unauthorized changes to a threshold value could result in an undesired notification rate.

Unauthorized changes to row status could result in unwanted line alarm profiles being created or brought into service. Also, changes to the row status could result in line alarm profiles being inadvertently deleted or taken out of service.

- o adsl2ChAlarmConfProfileTable

The table consists of the following objects that support SET operations:

- * adsl2ChAlarmConfProfileAtucThresh15MinCodingViolations
- * adsl2ChAlarmConfProfileAtucThresh15MinCorrected
- * adsl2ChAlarmConfProfileAturThresh15MinCodingViolations
- * adsl2ChAlarmConfProfileAturThresh15MinCorrected
- * adsl2ChAlarmConfProfileRowStatus
- * adsl2LineAlarmConfProfileAturThresh15MinFecs
- * adsl2LineAlarmConfProfileAturThresh15MinEs
- * adsl2LineAlarmConfProfileAturThresh15MinSes
- * adsl2LineAlarmConfProfileAturThresh15MinLoss
- * adsl2LineAlarmConfProfileAturThresh15MinUas
- * adsl2LineAlarmConfProfileThresh15MinFailedFullInt
- * adsl2LineAlarmConfProfileThresh15MinFailedShrtInt
- * adsl2LineAlarmConfProfileRowStatus

Increasing any of the threshold values could result in a notification being suppressed or deferred. Setting a threshold to 0 could result in a notification being suppressed. Suppressing or deferring a notification could prevent the timely delivery of important diagnostic information. Decreasing any of the threshold values could result in a notification being sent from the network

falsely reporting a threshold crossing.

Changing a threshold value could also have an impact on the amount of notifications the agent sends. The Notifications Section of this document has a paragraph which provides general guidance on the rate limiting of notifications. Agent implementations not providing rate limiting could result in notifications being generated at an uncontrolled rate. Unauthorized changes to a threshold value could result in an undesired notification rate.

Unauthorized changes to row status could result in unwanted channel alarm profiles being created or brought into service. Also, changes to the row status could result in channel alarm profiles being inadvertently deleted or taken out of service.

Some of the readable objects in this MIB module (i.e., objects with a MAX-ACCESS other than not-accessible) may be considered sensitive or vulnerable in some network environments. It is thus important to control even GET and/or NOTIFY access to these objects and possibly to even encrypt the values of these objects when sending them over the network via SNMP. These are the tables and objects and their sensitivity/vulnerability:

- o adsl2LineInventoryTable

Access to these objects would allow an intruder to obtain information about which vendor's equipment is in use on the network. Further, such information is considered sensitive in many environments for competitive reasons.

- * adsl2LInvG994VendorId
- * adsl2LInvSystemVendorId
- * adsl2LInvVersionNumber
- * adsl2LInvSerialNumber
- * adsl2LInvSelfTestResult
- * adsl2LInvTransmissionCapabilities

SNMP versions prior to SNMPv3 did not include adequate security. Even if the network itself is secure (for example by using IPsec), even then, there is no control as to who on the secure network is allowed to access and GET/SET (read/change/create/delete) the objects in this MIB module.

It is RECOMMENDED that implementers consider the security features as provided by the SNMPv3 framework (see [\[RFC3410\]](#), [Section 8](#)), including full support for the SNMPv3 cryptographic mechanisms (for authentication and privacy).

It is RECOMMENDED to deploy SNMPv3 and to enable cryptographic security. It is then a customer/operator responsibility to ensure that the SNMP entity giving access to an instance of this MIB module is properly configured to give access only to those objects whose principals (users) have legitimate rights to indeed GET or SET (change/create/delete) them.

6. Acknowledgments

The authors are deeply grateful to the authors of the HDSL2 LINE MIB (RFC xxxx), Clay Sikes and Bob Ray, for contributing to accelerating the work on this document. The structure of this document as well as several paragraphs originate in their document.

Other contributions and advice were received from the following:

Randy Presuhn (Mindspring)
Chen Jian (Huawei)
Bert Wijnen (Lucent)
Clay Sikes (Zhone)

7. References

7.1. Normative References

- [G.992.1] "Asymmetric digital subscriber line (ADSL) transceivers", ITU-T G.992.1, 1999.
- [G.992.2] "Splitterless asymmetric digital subscriber line (ADSL) transceivers", ITU-T G.992.2, 1999.
- [G.992.3] "Asymmetric digital subscriber line transceivers 2 (ADSL2)", ITU-T G.992.3, 2002.
- [G.992.4] "Splitterless asymmetric digital subscriber line transceivers 2 (Splitterless ADSL2)", ITU-T G.992.4, 2002.
- [G.992.5] "Asymmetric digital subscriber line (ADSL) transceivers - Extended bandwidth ADSL2 (ADSL2+)", ITU-T G.992.5, 2003.
- [G.993.2] "Very-high speed Digital Subscriber Line Transceivers 2 (VDSL2 draft)", ITU-T G.993.2, July 2005.
- [G.997.1] "Physical layer management for digital subscriber line (DSL) transceivers", ITU-T G.997.1, May 2003.

[G.997.1 am1]

"Physical layer management for digital subscriber line (DSL) transceivers Amendment 1", ITU-T G.997.1 Amendment 1, December 2003.

[G.997.1 am2]

"Physical layer management for digital subscriber line (DSL) transceivers Amendment 2", ITU-T G.997.1 Amendment 2, January 2005.

[RFC2119] Bradner, S., "Key words for use in RFCs to Indicate Requirement Levels", [BCP 14](#), [RFC 2119](#), March 1997.

[RFC2578] McCloghrie, K., Ed., Perkins, D., Ed., and J. Schoenwaelder, Ed., "Structure of Management Information Version 2 (SMIv2)", STD 58, [RFC 2578](#), April 1999.

[RFC2579] McCloghrie, K., Ed., Perkins, D., Ed., and J. Schoenwaelder, Ed., "Textual Conventions for SMIv2", STD 58, [RFC 2579](#), April 1999.

[RFC2580] McCloghrie, K., Perkins, D., and J. Schoenwaelder, "Conformance Statements for SMIv2", STD 58, [RFC 2580](#), April 1999.

[RFC2863] McCloghrie, K. and F. Kastenholz, "The Interfaces Group MIB", [RFC 2863](#), June 2000.

[RFC3411] Harrington, D., Presuhn, R., and B. Wijnen, "An Architecture for Describing Simple Network Management Protocol (SNMP) Management Frameworks", STD 62, [RFC 3411](#), December 2002.

[RFC3593] Tesink, K., "Textual Conventions for MIB Modules Using Performance History Based on 15 Minute Intervals", [RFC 3593](#), September 2003.

[RFC3705] Ray, B. and R. Abbi, "High Capacity Textual Conventions for MIB Modules Using Performance History Based on 15 Minute Intervals", [RFC 3705](#), February 2004.

[T1E1.413]

J. Bingham & F. Van der Putten, "Network and Customer Installation Interfaces - Asymmetric Digital Subscriber Line (ADSL) Metallic Interface. (T1.413 Issue 2)", ANSI T1E1.413-1998, June 1998.

[TR-90] Abbi, R., "Protocol Independent Object Model for Managing

Next Generation ADSL Technologies", DSL Forum TR-90,
December 2004.

7.2. Informative References

- [RFC2662] Bathrick, G. and F. Ly, "Definitions of Managed Objects for the ADSL Lines", [RFC 2662](#), August 1999.
- [RFC3410] Case, J., Mundy, R., Partain, D., and B. Stewart, "Introduction and Applicability Statements for Internet-Standard Management Framework", [RFC 3410](#), December 2002.
- [RFC3418] Presuhn, R., "Management Information Base (MIB) for the Simple Network Management Protocol (SNMP)", STD 62, [RFC 3418](#), December 2002.

Authors' Addresses

Moti Morgenstern
ECI Telecom Ltd.
30 Hasivim St.
Petach Tikva 49517
Israel

Phone: +972 3 926 6258
Fax: +972 3 928 7342
Email: moti.Morgenstern@ecitele.com

Menachem Dodge
ECI Telecom Ltd.
30 Hasivim St.
Petach Tikva 49517
Israel

Phone: +972 3 926 8421
Fax: +972 3 928 7342
Email: mbdodge@ieee.org

Scott Baillie
NEC Australia
649-655 Springvale Road
Mulgrave, Victoria 3170
Australia

Phone: +61 3 9264 3986
Fax: +61 3 9264 3892
Email: scott.baillie@nec.com.au

Umberto Bonollo
NEC Australia
649-655 Springvale Road
Mulgrave, Victoria 3170
Australia

Phone: +61 3 9264 3385
Fax: +61 3 9264 3892
Email: umberto.bonollo@nec.com.au

Intellectual Property Statement

The IETF takes no position regarding the validity or scope of any Intellectual Property Rights or other rights that might be claimed to pertain to the implementation or use of the technology described in this document or the extent to which any license under such rights might or might not be available; nor does it represent that it has made any independent effort to identify any such rights. Information on the procedures with respect to rights in RFC documents can be found in [BCP 78](#) and [BCP 79](#).

Copies of IPR disclosures made to the IETF Secretariat and any assurances of licenses to be made available, or the result of an attempt made to obtain a general license or permission for the use of such proprietary rights by implementers or users of this specification can be obtained from the IETF on-line IPR repository at <http://www.ietf.org/ipr>.

The IETF invites any interested party to bring to its attention any copyrights, patents or patent applications, or other proprietary rights that may cover technology that may be required to implement this standard. Please address the information to the IETF at ietf-ipr@ietf.org.

Disclaimer of Validity

This document and the information contained herein are provided on an "AS IS" basis and THE CONTRIBUTOR, THE ORGANIZATION HE/SHE REPRESENTS OR IS SPONSORED BY (IF ANY), THE INTERNET SOCIETY AND THE INTERNET ENGINEERING TASK FORCE DISCLAIM ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTY THAT THE USE OF THE INFORMATION HEREIN WILL NOT INFRINGE ANY RIGHTS OR ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

Copyright Statement

Copyright (C) The Internet Society (2005). This document is subject to the rights, licenses and restrictions contained in [BCP 78](#), and except as set forth therein, the authors retain all their rights.

Acknowledgment

Funding for the RFC Editor function is currently provided by the Internet Society.

