

Network Working Group
Internet-Draft
Expires: July 19, 2006

M. Morgenstern
M. Dodge
ECI Telecom Ltd.
S. Baillie
U. Bonollo
NEC Australia
January 15, 2006

Definitions of Managed Objects for Asymmetric Digital Subscriber Line 2
(ADSL2)
<draft-ietf-adslmib-adsl2-05.txt>

Status of this Memo

By submitting this Internet-Draft, each author represents that any applicable patent or other IPR claims of which he or she is aware have been or will be disclosed, and any of which he or she becomes aware will be disclosed, in accordance with [Section 6 of BCP 79](#).

Internet-Drafts are working documents of the Internet Engineering Task Force (IETF), its areas, and its working groups. Note that other groups may also distribute working documents as Internet-Drafts.

Internet-Drafts are draft documents valid for a maximum of six months and may be updated, replaced, or obsoleted by other documents at any time. It is inappropriate to use Internet-Drafts as reference material or to cite them other than as "work in progress."

The list of current Internet-Drafts can be accessed at
<http://www.ietf.org/ietf/1id-abstracts.txt>.

The list of Internet-Draft Shadow Directories can be accessed at
<http://www.ietf.org/shadow.html>.

This Internet-Draft will expire on July 19, 2006.

Copyright Notice

Copyright (C) The Internet Society (2006).

Abstract

This document defines a Management Information Base (MIB) module for use with network management protocols in the Internet community. In particular, it describes objects used for managing parameters of the "Asymmetric Digital Subscriber Line" family of interface types,

especially including ADSL, ADSL2, and ADSL2+.

Table of Contents

1.	The Internet-Standard Management Framework	3
2.	Overview	3
2.1.	Relationship to other MIBs	4
2.2.	IANA Considerations	6
2.3.	Conventions Used in the MIB Module	6
2.4.	Structure	13
2.5.	Persistence	15
2.6.	Line Topology	18
2.7.	Counters, Interval Buckets, and Thresholds	18
2.8.	Profiles	20
2.9.	Notifications	24
3.	Definitions	25
4.	Implementation Analysis	151
5.	Security Considerations	152
6.	Acknowledgments	159
7.	References	159
7.1.	Normative References	159
7.2.	Informative References	161
	Authors' Addresses	162
	Intellectual Property and Copyright Statements	163

1. The Internet-Standard Management Framework

For a detailed overview of the documents that describe the current Internet-Standard Management Framework, please refer to [Section 7 of RFC 3410](#) [[RFC3410](#)].

Managed objects are accessed via a virtual information store, termed the Management Information Base or MIB. MIB objects are generally accessed through the Simple Network Management Protocol (SNMP). Objects in the MIB are defined using the mechanisms defined in the Structure of Management Information (SMI). This memo specifies a MIB module that is compliant to the SMIV2, which is described in STD 58, [RFC 2578](#) [[RFC2578](#)], STD 58, [RFC 2579](#) [[RFC2579](#)] and STD 58, [RFC 2580](#) [[RFC2580](#)].

The key words "MUST", "MUST NOT", "REQUIRED", "SHALL", "SHALL NOT", "SHOULD", "SHOULD NOT", "RECOMMENDED", "MAY", and "OPTIONAL" in this document are to be interpreted as described in [RFC 2119](#) [[RFC2119](#)].

2. Overview

This document defines a Management Information Base (MIB) module for use with network management protocols in the Internet community for the purpose of managing ADSL, ADSL2, and ADSL2+ lines.

The MIB module described in [RFC 2662](#) [[RFC2662](#)] describes objects used for managing Asymmetric Bit-Rate DSL (ADSL) interfaces per [[T1E1.413](#)], [[G.992.1](#)], and [[G.992.2](#)]. These object descriptions are based upon the specifications for the ADSL Embedded Operations Channel (EOC) as defined in American National Standards Institute (ANSI) T1E1.413/1995 [[T1E1.413](#)] and International Telecommunication Union (ITU-T) G.992.1 [[G.992.1](#)] and G.992.2 [[G.992.2](#)].

This document does not obsolete [RFC 2662](#) [[RFC2662](#)], but rather provides a more comprehensive management model that includes the ADSL2 and ADSL2+ technologies per G.992.3, G.992.4, and G.992.5 ([[G.992.3](#)], [[G.992.4](#)], and [[G.992.5](#)] respectively). In addition, objects have been added to improve the management of ADSL, ADSL2, and ADSL2+ lines.

Additionally, the management framework for New Generation ADSL lines specified [[TR-90](#)] by the Digital Subscriber Line Forum (DSL Forum) has been taken into consideration. That framework is based on ITU-T G.997.1 standard [[G.997.1](#)] as well as on two amendments: ([[G.997.1 am1](#)] and [[G.997.1 am2](#)]). This document refers to all three documents as G.997.1. That is, a MIB attribute whose REFERENCE section provides a paragraph number in ITU-T G.997.1 is actually originated

from either G.997.1 [[G.997.1](#)] or one of its amendment documents.

Note that future revision of ITU-T G.997.1 standard will refer also to next generation of VDSL technology, known as VDSL2, per ITU-T G.993.2 [[G.993.2](#)]. However, managing VDSL2 lines is currently beyond the scope of the MIB this document specifies.

The MIB module is located in the MIB tree under MIB 2 transmission, as discussed in the MIB-2 Integration ([RFC 2863](#) [[RFC2863](#)]) section of this document.

2.1. Relationship to other MIBs

This section outlines the relationship of this MIB module with other MIB modules described in RFCs. Specifically, IF-MIB as presented in [RFC 2863](#) [[RFC2863](#)] is discussed.

2.1.1. General IF-MIB Integration ([RFC 2863](#))

The ADSL2 Line MIB specifies the detailed attributes of a data interface. As such, it needs to integrate with [RFC 2863](#) [[RFC2863](#)]. The IANA has assigned the following ifTypes, which may be applicable for ADSL lines:

```
IANAifType ::= TEXTUAL-CONVENTION
    ...
    SYNTAX INTEGER {
        ...
        channel(70),      -- channel
        ADSL (94),        -- Asymmetric Digital Subscriber Loop
        ...
        Interleave(124),  -- Interleaved Channel
        Fast(125),        -- Fast Channel
        ...
        ADSL2 (230),      -- Asymmetric Digital Subscriber Loop 2
        ...
    }
```

ADSL lines that are identified with ifType=ADSL (94) MUST be managed with the MIB specified by [RFC2662](#). ADSL, ADSL2, and ADSL2+ lines identified with ifType=ADSL2 (230) MUST be managed with the MIB specified by this document.

In any case, the SNMP agent may use either ifType=Interleave (124) or Fast (125) for each channel, e.g., depending on whether or not it is capable of using an interleaver on that channel. It may use the ifType=channel (70) when all channels are capable of using an interleaver (e.g., for ADSL2 xtus).

Note that the `ifFixedLengthGroup` from [RFC 2863](#) [[RFC2863](#)] MUST be supported and that the `ifRcvAddressGroup` does not apply to this MIB module.

2.1.2. Usage of `ifTable`

The MIB branch identified by `ifType` contains tables appropriate for the interface types described above. Most such tables extend the `ifEntry` table, and are indexed by `ifIndex`. For interfaces in systems implementing this MIB module, those table entries indexed by `ifIndex` MUST be persistent.

The following attributes are part of the mandatory `ifGeneralInformationGroup` in the Interfaces MIB [[RFC2863](#)], and are not duplicated in the ADSL2 Line MIB.

=====

<code>ifIndex</code>	Interface index.
<code>ifDescr</code>	See interfaces MIB.
<code>ifType</code>	ADSL2 (230) or Channel (70) or Interleave (124) or Fast (125)
<code>ifSpeed</code>	Set as appropriate.
<code>ifPhysAddress</code>	This object MUST have an octet string with zero length.
<code>ifAdminStatus</code>	See interfaces MIB.
<code>ifOperStatus</code>	See interfaces MIB.
<code>ifLastChange</code>	See interfaces MIB.
<code>ifName</code>	See interfaces MIB.
<code>ifAlias</code>	See interfaces MIB.
<code>ifLinkUpDownTrapEnable</code>	Default to enabled(1).
<code>ifHighSpeed</code>	Set as appropriate.
<code>ifConnectorPresent</code>	Set as appropriate.

=====

Figure 1: Use of ifTable Objects

2.2. IANA Considerations

The ADSL2-LINE-MIB module requires the allocation of a new ifType value for Asymmetric Digital Subscriber Loop Version 2, to distinguish between ADSL lines that are managed with the [RFC2662](#) management model and ADSL/ADSL2 and ADSL2+ lines managed with the model defined in this document.

Also the ADSL2-LINE-MIB module requires the allocation of a single object identifier for its MODULE-IDENTITY. The IANA should allocate this object identifier in the transmission subtree.

An assignment was in fact done when [RFC 2662](#) was published, but as this MIB does not obsolete [RFC 2662](#), it requires new assignment from IANA.

2.3. Conventions Used in the MIB Module

2.3.1. Naming Conventions

AtuC	A central site terminal unit
AtuR	A remote site terminal unit
xtu	A terminal unit; either an AtuC or AtuR
CRC	Cyclical redundancy check
DELT	Dual Ended Loop Test
ES	Errored second
FEC	Forward Error Correction
LOF	Loss of framing
LOS	Loss of signal
LOSS	LOS Second
SES	Severely-errored second
SNR	Signal-to-noise ratio
UAS	Unavailable second

2.3.2. Textual Conventions

The following textual conventions are defined to reflect the line topology in the MIB module (further discussed in the following section), the various transmission modes, power states, synchronization states, possible values for various configuration parameters, status parameters, and other parameter types.

- o Adsl2Unit:

Attributes with this syntax uniquely identify each unit in the ADSL/ADSL2/ADSL2+ link. It mirrors the EOC addressing mechanism:

atuc(1)	- central office (CO) terminal unit
atur(2)	- customer premises equipment (CPE) terminal unit

- o Adsl2Direction:

Attributes with this syntax uniquely identify a transmission direction in an ADSL/ADSL2/ADSL2+ link. Upstream direction is a transmission from the customer premises equipment (CPE) towards the central office (CO), while downstream direction is a transmission from the CO towards the CPE.

upstream(1)	- Transmission from the CPE to the CO
downstream(2)	- Transmission from the CO to the CPE

- o Adsl2TransmissionModeType:

Attributes with this syntax reference the list of possible transmission modes for ADSL/ADSL2 or ADSL2+.

Specified as a BITS construct, there are currently a few dozen transmission modes in the list.

- o Adsl2RaMode:

Attributes with this syntax reference if and how Rate-Adaptive synchronization is being used on the respective ADSL/ADSL2 or ADSL2+ link:

manual (1)	- No Rate-Adaptation. The initialization process attempts to synchronize to a specified rate.
rainit (2)	- Rate-Adaptation during initialization process only, which attempts to synchronize to a rate between minimum and maximum specified values.
dynamicRa (3)	- Dynamic Rate-Adaptation during initialization process as well as during SHOWTIME.

- o Adsl2InitResult:

Attributes with this syntax reference the recent result of a full initialization attempt:

noFail (0)	- Successful initialization
configError (1)	- Configuration failure
configNotFeasible (2)	- Configuration details not supported
commFail (3)	- Communication failure
noPeerAtu (4)	- Peer ATU not detected
otherCause (5)	- Other initialization failure reason

o Adsl2OperationModes:

Attributes with this syntax uniquely identify an ADSL mode, which is a category associated with each transmission mode defined for the ADSL/ADSL2 or ADSL2+ link. Part of the line configuration profile depends on the ADSL Mode:

defMode (1),	- The default/generic PSD configuration. The default configuration will be used when no other matching mode specific configuration can be found.
adsl (2),	- ADSL (POTS or ISDN)
adsl2Pots (3),	- ADSL2 (ISDN)
adsl2Isdn (4),	- ADSL2 (ISDN)
adsl2PlusPots (5),	- ADSL2+ (POTS)
adsl2PlusIsdn (6),	- ADSL2+ (ISDN)
adsl2ReachExtended (7)	- Reach Extended ADSL2

o Adsl2PowerMngState:

Attributes with this syntax uniquely identify each power management state defined for the ADSL/ADSL2 or ADSL2+ link:

l0(0)	- L0 - Full power management state
l1(1)	- L1 - Low power management state (for G.992.2)
l2(2)	- L2 - Low power management state (for G.992.3, G.992.4, and G.992.5)
l3(3)	- L3 - Idle power management state

o Adsl2ConfPmsForce:

Attributes with this syntax are configuration parameters that reference the desired power management state for the ADSL/ADSL2 or ADSL2+ link:

l3toL0 (1)	- Perform a transition from L3 to L0 (Full power management state)
l0toL2 (2)	- Perform a transition from L0 to L2 (Low power management state)
l0orL2toL3 (3)	- Perform a transition into L3 (Idle power management state)

o Adsl2LConfProfPmMode:

Attributes with this syntax are configuration parameters that reference the power modes/states into which the ATU-C or ATU-R may autonomously transit.

This is a BITS structure that allows control of the following transit options:

allowTransitionsToIdle (0) - xTU may autonomously transit
to idle (L3) state.
allowTransitionsToLowPower (1)- xTU may autonomously transit
to low-power (L2) state.

o Adsl2LineLdsf:

Attributes with this syntax are configuration parameters that control the Loop Diagnostic mode for the ADSL/ADSL2 or ADSL2+ link:

inhibit (0) - Inhibit Loop Diagnostic mode
force (1) - Force/Initiate Loop Diagnostic mode

o Adsl2LdsfResult:

Attributes with this syntax are status parameters that report the result of the recent Loop Diagnostic mode issued for the ADSL/ADSL2 or ADSL2+ link:

- | | | |
|-------------|------|--|
| none | (1) | - The default value, in case LDSF was never requested for the associated line. |
| success | (2) | - The recent command completed successfully. |
| inProgress | (3) | - The Loop Diagnostics process is in progress. |
| unsupported | (4) | - The NE or the line card doesn't support LDSF. |
| cannotRun | (5) | - The NE cannot initiate the command, due to a non specific reason. |
| aborted | (6) | - The Loop Diagnostics process aborted. |
| failed | (7) | - The Loop Diagnostics process failed. |
| illegalMode | (8) | - The NE cannot initiate the command, due to the specific mode of the relevant line. |
| adminUp | (9) | - The NE cannot initiate the command because the relevant line is administratively 'Up'. |
| tableFull | (10) | - The NE cannot initiate the command, due to reaching the maximum number of rows in the results table. |
| noResources | (11) | - The NE cannot initiate the command, due to lack of internal memory resources. |

o Adsl2SymbolProtection:

Attributes with this syntax are configuration parameters that reference the minimum length impulse noise protection (INP) in terms of number of symbols:

- | | | |
|-----------------|------|---------------------------|
| noProtection | (1) | - INP not required |
| halfSymbol | (2) | - INP length = 1/2 symbol |
| singleSymbol | (3) | - INP length = 1 symbol |
| twoSymbols | (4) | - INP length = 2 symbols |
| threeSymbols | (5) | - INP length = 3 symbols |
| fourSymbols | (6) | - INP length = 4 symbols |
| fiveSymbols | (7) | - INP length = 5 symbols |
| sixSymbols | (8) | - INP length = 6 symbols |
| sevenSymbols | (9) | - INP length = 7 symbols |
| eightSymbols | (10) | - INP length = 8 symbols |
| nineSymbols | (11) | - INP length = 9 symbols |
| tenSymbols | (12) | - INP length = 10 symbols |
| elevenSymbols | (13) | - INP length = 11 symbols |
| twelveSymbols | (14) | - INP length = 12 symbols |
| thirteenSymbols | (15) | - INP length = 13 symbols |
| fourteenSymbols | (16) | - INP length = 14 symbols |
| fifteenSymbols | (17) | - INP length = 15 symbols |
| sixteenSymbols | (18) | - INP length = 16 symbols |

- o Adsl2MaxBer:

Attributes with this syntax are configuration parameters that reference the maximum Bit Error Rate (BER):

- eminus3 (1) - Maximum $BER=E^{-3}$
- eminus5 (2) - Maximum $BER=E^{-5}$
- eminus7 (3) - Maximum $BER=E^{-7}$

- o Adsl2ScMaskDs:

Attributes with this syntax are configuration parameters that reference the downstream sub-carrier mask. It is a bitmap of up to 512 bits.

- o Adsl2ScMaskUs:

Attributes with this syntax are configuration parameters that reference the upstream sub-carrier mask. It is a bitmap of up to 64 bits.

- o Adsl2RfiDs:

Attributes with this syntax are configuration parameters that reference the downstream notch filters. It is a bitmap of up to 512 bits.

- o Adsl2PsdMaskDs:

Attributes with this syntax are configuration parameters that reference the downstream power spectrum density (PSD) mask. It is a structure of up to 32 breakpoints, where each breakpoint occupies 3 octets.

- o Adsl2PsdMaskUs:

Attributes with this syntax are configuration parameters that reference the upstream power spectrum density (PSD) mask. It is a structure of up to 4 breakpoints, where each breakpoint occupies 3 octets.

- o Adsl2Tssi:

Attributes with this syntax are status parameters that reference the transmit spectrum shaping (TSSI). It is a structure of up to 32 breakpoints, where each breakpoint occupies 3 octets.

- o Adsl2LastTransmittedState:

Attributes with this syntax reference the list of initialization states for ADSL/ADSL2 or ADSL2+ modems. The list of states for CO side modems is different from the list of states for the CPE side modems.

Specified as an enumeration type, there are currently a few dozen states in the list per each unit side (i.e., CO and CPE).

- o Adsl2LineStatus:

Attributes with this syntax are status parameters that reflect the failure status for a given endpoint of ADSL/ADSL2 or ADSL2+ link.

This is a BITS structure that can report the following failures:

- noDefect (0) - This bit position positively reports that no defect or failure exist.
- lossOfFraming (1) - Loss of frame synchronization
- lossOfSignal (2) - Loss of signal
- lossOfPower (3) - Loss of power. Usually this failure may be reported for CPE units only
- initFailure (4) - Recent initialization process failed.

- o Adsl2ChAtmStatus:

Attributes with this syntax are status parameters that reflect the failure status for Transmission Convergence (TC) layer of a given ATM interface (data path over an ADSL/ADSL2 or ADSL2+ link).

This is a BITS structure that can report the following failures:

- noDefect (0) - This bit position positively reports that no defect or failure exist.
- noCellDelineation (1) - The link was successfully initialized but cell delineation was never acquired on the associated ATM data path.
- lossOfCellDelineation (2) - Loss of cell delineation on the associated ATM data path

- o Adsl2ChPtmStatus:

Attributes with this syntax are status parameters that reflect the

failure status for a given PTM interface (packet data path over an ADSL/ADSL2 or ADSL2+ link).

This is a BITS structure that can report the following failures:

- noDefect (0) - This bit position positively reports that no defect or failure exist.
- outOfSync (1) - Out of synchronization.

2.4. Structure

The MIB module is structured into following MIB groups:

- o Line Configuration, Maintenance, and Status Group:

This group supports MIB objects for configuring parameters for the ADSL/ADSL2 or ADSL2+ line and retrieving line status information. It also supports MIB objects for configuring a requested power state or initiating a Dual Ended Line Test (DELT) process in the ADSL/ADSL2 or ADSL2+ line. It contains the following table:

- adsl2LineTable

- o Channel Status Group:

This group supports MIB objects for retrieving channel layer status information. It contains the following table:

- adsl2ChannelStatusTable

- o Subcarrier Status Group:

This group supports MIB objects for retrieving the sub-carrier layer status information, mostly collected by a Dual Ended Line Test (DELT) process. It contains the following table:

- adsl2SCStatusTable

- o Unit Inventory Group:

This group supports MIB objects for retrieving Unit inventory information about units in ADSL/ADSL2 or ADSL2+ lines via the EOC. It contains the following table:

- adsl2LineInventoryTable

- o Current Performance Group:

This group supports MIB objects that provide the current performance information relating to ADSL/ADSL2 and ADSL2+ line, units and channels level. It contains the following tables:

- adsl2PMLineCurrTable
- adsl2PMLineCurrInitTable
- adsl2PMChCurrTable

- o 15-Minute Interval Performance Group:

This group supports MIB objects that provide historic performance information relating to ADSL/ADSL2 and ADSL2+ line, units and channels level in 15-minute intervals. It contains the following tables:

- adsl2PMLineHist15MinTable
- adsl2PMLineInitHist15MinTable
- adsl2PMChHist15MinTable

- o 1-Day Interval Performance Group:

This group supports MIB objects that provide historic performance information relating to ADSL/ADSL2 and ADSL2+ line, units and channels level in 1-day intervals. It contains the following tables:

- adsl2PMLineHist1DayTable
- adsl2PMLineInitHist1DayTable
- adsl2PMChHist1DTable

- o Configuration Template and Profile Group:

This group supports MIB objects for defining configuration profiles for ADSL/ADSL2 and ADSL2+ lines and channels, as well as configuration templates. Each configuration template is comprised of one line configuration profile and one or more channel configuration profiles. This group contains the following tables:

- adsl2LineConfTemplateTable
- adsl2LineConfProfTable
- adsl2LineConfProfModeSpecTable
- adsl2ChConfProfileTable

- o Alarm Configuration Template and Profile Group:

This group supports MIB objects for defining alarm profiles for

ADSL/ADSL2 and ADSL2+ lines and channels, as well as alarm templates. Each alarm template is comprised of one line alarm profile and one or more channel alarm profiles. This group contains the following tables:

- adsl2LineAlarmConfTemplateTable
- adsl2LineAlarmConfProfileTable
- adsl2ChAlarmConfProfileTable

o Notifications Group:

This group defines the notifications supported for ADSL/ADSL2 and ADSL2+ lines:

- adsl2LinePerfFECSThreshAtuc
- adsl2LinePerfFECSThreshAtur
- adsl2LinePerfESThreshAtuc
- adsl2LinePerfESThreshAtur
- adsl2LinePerfSESThreshAtuc
- adsl2LinePerfSESThreshAtur
- adsl2LinePerfLOSSThreshAtuc
- adsl2LinePerfLOSSThreshAtur
- adsl2LinePerfUASThreshAtuc
- adsl2LinePerfUASThreshAtur
- adsl2LinePerfCodingViolationsThreshAtuc
- adsl2LinePerfCodingViolationsThreshAtur
- adsl2LinePerfCorrectedThreshAtuc
- adsl2LinePerfCorrectedThreshAtur
- adsl2LinePerfFailedFullInitThresh
- adsl2LinePerfFailedShortInitThresh
- adsl2LineStatusChangeAtuc
- adsl2LineStatusChangeAtur

2.5. Persistence

All read-create objects and most read-write objects defined in this MIB module SHOULD be stored persistently. Following is an exhaustive list of these persistent objects:

```
adsl2LineCnfgTemplate
adsl2LineAlarmCnfgTemplate
adsl2LineCmndConfPmsf
adsl2LineCmndConfLdsf
adsl2LineCmndAutomodeColdStart
adsl2LConfTempTemplateName
adsl2LConfTempLineProfile
adsl2LConfTempChan1ConfProfile
adsl2LConfTempChan1RaRatioDs
```


adsl2LConfTempChan1RaRatioUs
adsl2LConfTempChan2ConfProfile
adsl2LConfTempChan2RaRatioDs
adsl2LConfTempChan2RaRatioUs
adsl2LConfTempChan3ConfProfile
adsl2LConfTempChan3RaRatioDs
adsl2LConfTempChan3RaRatioUs
adsl2LConfTempChan4ConfProfile
adsl2LConfTempChan4RaRatioDs
adsl2LConfTempChan4RaRatioUs
adsl2LConfTempRowStatus
adsl2LConfProfProfileName
adsl2LConfProfScMaskDs
adsl2LConfProfScMaskUs
adsl2LConfProfRfiBandsDs
adsl2LConfProfRaModeDs
adsl2LConfProfRaModeUs
adsl2LConfProfRaUsNrmDs
adsl2LConfProfRaUsNrmUs
adsl2LConfProfRaUsTimeDs
adsl2LConfProfRaUsTimeUs
adsl2LConfProfRaDsNrmsDs
adsl2LConfProfRaDsNrmsUs
adsl2LConfProfRaDsTimeDs
adsl2LConfProfRaDsTimeUs
adsl2LConfProfTargetSnrmDs
adsl2LConfProfTargetSnrmUs
adsl2LConfProfMaxSnrmDs
adsl2LConfProfMaxSnrmUs
adsl2LConfProfMinSnrmDs
adsl2LConfProfMinSnrmUs
adsl2LConfProfMsgMinUs
adsl2LConfProfMsgMinDs
adsl2LConfProfAtuTransSysEna
adsl2LConfProfPmMode
adsl2LConfProfL0Time
adsl2LConfProfL2Time
adsl2LConfProfL2Atpr
adsl2LConfProfL2Atprt
adsl2LConfProfRowStatus
adsl2LConfProfAdslMode
adsl2LConfProfMaxNomPsdDs
adsl2LConfProfMaxNomPsdUs
adsl2LConfProfMaxNomAtpDs
adsl2LConfProfMaxNomAtpUs
adsl2LConfProfMaxAggRxPwrUs
adsl2LConfProfPsdMaskDs
adsl2LConfProfPsdMaskUs

adsl2LConfProfPsdMaskSelectUs
adsl2LConfProfModeSpecRowStatus
adsl2ChConfProfProfileName
adsl2ChConfProfMinDataRateDs
adsl2ChConfProfMinDataRateUs
adsl2ChConfProfMinResDataRateDs
adsl2ChConfProfMinResDataRateUs
adsl2ChConfProfMaxDataRateDs
adsl2ChConfProfMaxDataRateUs
adsl2ChConfProfMinDataRateLowPwrDs
adsl2ChConfProfMaxDelayDs
adsl2ChConfProfMaxDelayUs
adsl2ChConfProfMinProtectionDs
adsl2ChConfProfMinProtectionUs
adsl2ChConfProfMaxBerDs
adsl2ChConfProfMaxBerUs
adsl2ChConfProfUsDataRateDs
adsl2ChConfProfDsDataRateDs
adsl2ChConfProfUsDataRateUs
adsl2ChConfProfDsDataRateUs
adsl2ChConfProfImaEnabled
adsl2ChConfProfRowStatus
adsl2LAlarmConfTempTemplateName
adsl2LAlarmConfTempLineProfile
adsl2LAlarmConfTempChan1ConfProfile
adsl2LAlarmConfTempChan2ConfProfile
adsl2LAlarmConfTempChan3ConfProfile
adsl2LAlarmConfTempChan4ConfProfile
adsl2LAlarmConfTempRowStatus
adsl2LineAlarmConfProfileName
adsl2LineAlarmConfProfileAtucThresh15MinFecs
adsl2LineAlarmConfProfileAtucThresh15MinEs
adsl2LineAlarmConfProfileAtucThresh15MinSes
adsl2LineAlarmConfProfileAtucThresh15MinLoss
adsl2LineAlarmConfProfileAtucThresh15MinUas
adsl2LineAlarmConfProfileAturThresh15MinFecs
adsl2LineAlarmConfProfileAturThresh15MinEs
adsl2LineAlarmConfProfileAturThresh15MinSes
adsl2LineAlarmConfProfileAturThresh15MinLoss
adsl2LineAlarmConfProfileAturThresh15MinUas
adsl2LineAlarmConfProfileThresh15MinFailedFullInt
adsl2LineAlarmConfProfileThresh15MinFailedShrtInt
adsl2LineAlarmConfProfileRowStatus
adsl2ChAlarmConfProfileName
adsl2ChAlarmConfProfileAtucThresh15MinCodingViolations
adsl2ChAlarmConfProfileAtucThresh15MinCorrected
adsl2ChAlarmConfProfileAturThresh15MinCodingViolations
adsl2ChAlarmConfProfileAturThresh15MinCorrected

adsl2ChAlarmConfProfileRowStatus

Note also that the interface indices in this MIB are maintained persistently. View-based Access Control Model (VACM) data relating to these SHOULD be stored persistently as well [[RFC3410](#)].

2.6. Line Topology

An ADSL/ADSL2 and ADSL2+ Line consists of two units: atuc (the central termination unit) and atur (the remote termination unit). There are up to 4 channels, each carrying an independent information flow, as shown in the figure below.

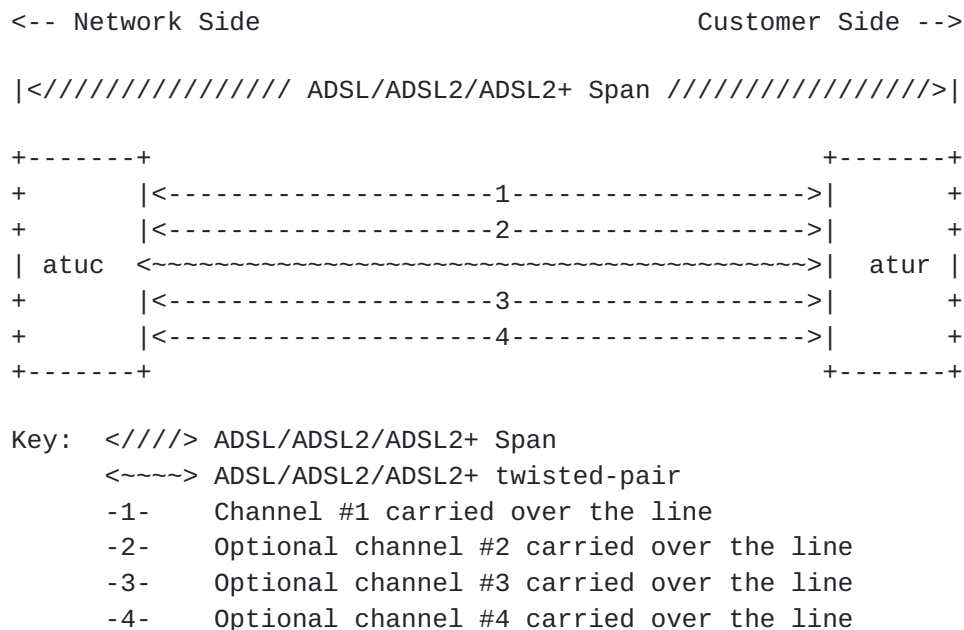


Figure 2: General topology for an ADSL/ADSL2/ADSL2+ Line

2.7. Counters, Interval Buckets, and Thresholds

2.7.1. Counters Managed

There are various types of counters specified in this MIB. Each counter refers either to the whole ADSL/ADSL2/ADSL2+ line, to one of the xtu entities, or to one of the bearer channels.

- o On the whole line level

For full initializations, failed full initializations, short initializations, and for failed short initializations there are event counters, current 15-minute and 0 to 96 15-minute history bucket(s)

of "interval-counters", as well as current and 0 to 30 previous 1-day interval-counter(s). Each current 15-minute "failed" event bucket has an associated threshold notification.

- o On the xtu level

For the LOS Seconds, ES, SES, FEC seconds, and UAS, there are event counters, current 15-minute and 0 to 96 15-minute history bucket(s) of "interval-counters", as well as current and 0 to 30 previous 1-day interval-counter(s). Each current 15-minute event bucket has an associated threshold notification.

- o On the bearer channel level

For the coding violations (CRC anomalies) and corrected blocks (i.e., FEC events) there are event counters, current 15-minute and 0 to 96 15-minute history bucket(s) of "interval-counters", as well as current and 0 to 30 previous 1-day interval-counter(s). Each current 15-minute event bucket has an associated threshold notification.

2.7.2. Minimum Number Of Buckets

Although it is possible to support up to 96 15-minute history buckets of "interval-counters", systems implementing this MIB module SHOULD practically support at least 16 buckets, as specified in ITU-T G.997.1, paragraph 7.2.7.2.

Similarly, it is possible to support up to 30 previous 1-day "interval-counters", but systems implementing this MIB module SHOULD support at least 1 previous day buckets.

2.7.3. Interval Buckets Initialization

There is no requirement for an agent to ensure a fixed relationship between the start of a 15-minute interval and any wall clock; however, some implementations may align the 15-minute intervals with quarter hours. Likewise, an implementation may choose to align one day intervals with the start of a day.

Counters are not reset when an xtu is reinitialized, only when the agent is reset or reinitialized (or under specific request outside the scope of this MIB module).

2.7.4. Interval Buckets Validity

As in [RFC 3593](#) [[RFC3593](#)] and [RFC 2662](#) [[RFC2662](#)], in case the data for an interval is suspect or known to be invalid, the agent MUST report the interval as invalid. If the current 15-minute event bucket is

determined to be invalid, the element management system SHOULD ignore its content and the agent MUST NOT generate notifications based upon the value of the event bucket.

A valid 15-minute event bucket SHOULD usually count the events for exactly 15 minutes. Similarly, a valid 1-day event bucket SHOULD usually count the events for exactly 24 hours. However, the following scenarios are exceptional:

- 1) For implementations that align the 15-minute intervals with quarter hours, and the 1-day intervals with start of a day, the management system may still start the PM process not aligned with the wall clock. Such a management system may wish to retrieve even partial information for the first event buckets, rather than declaring them all as invalid.
- 2) For an event bucket that suffered relatively short outages, the management system may wish to retrieve the available PM outcomes, rather than declaring the whole event bucket as invalid. This is more important for 1-day event buckets.
- 3) An event bucket may be shorter or longer than the formal duration if a clock adjustment was performed during the interval.

This MIB allows supporting the exceptional scenarios described above by reporting the actual Monitoring Time of a monitoring interval. This parameter is relevant only for Valid intervals, but is useful for these exceptional scenarios:

- a) The management system MAY still declare a partial PM interval as Valid and report the actual number of seconds the interval lasted.
- b) If the interval was shortened or extended due to clock corrections, the management system SHOULD report the actual number of seconds the interval lasted, beside reporting that the interval is Valid.

2.8. Profiles

As a managed node can handle a large number of xTUs, (e.g., hundreds or perhaps thousands of lines), provisioning every parameter on every xTU may become burdensome. Moreover, most lines are provisioned identically with the same set of parameters. To simplify the provisioning process, this MIB module makes use of profiles and templates.

A configuration profile is a set of parameters that can be shared by multiple entities. There are configuration profiles to address the line level provisioning and another type of profile that addresses the channel level provisioning parameters.

A configuration template is actually a profile-of-profiles. That is, a template is comprised of one line configuration profile and one or

more channel configuration profiles. A template provides the complete configuration of a line. The same configuration can be shared by multiple lines.

Similarly to the configuration profiles and templates, this MIB module makes use of templates and profiles for specifying the alarm thresholds associated with performance parameters. This allows provisioning multiple lines with the same criteria for generating threshold crossing notifications.

The following paragraphs describe templates and profiles used in this MIB module

2.8.1. Configuration Profiles And Templates

- o Line Configuration Profiles - Line configuration profiles contain parameters for configuring the low layer of ADSL/ADSL2 and ADSL2+ lines. They are defined in the `adsl2LineConfProfTable`.

The line configuration includes issues such as the specific ADSL/ADSL2 or ADSL2+ modes to enable on the respective line, power spectrum parameters, rate adaptation criteria, and SNR margin related parameters. A subset of the line configuration parameters depends upon the specific ADSL Mode allowed (i.e., Does the profile allow ADSL, ADSL2 and/or ADSL2+?) as well as what annex/annexes of the standard are allowed. This is the reason a line profile MUST include one or more mode-specific extensions.

- o Channel Configuration Profiles - Channel configuration profiles contain parameters for configuring bearer channels over the ADSL/ADSL2 and ADSL2+ lines. They are sometimes considered as the service layer configuration of the ADSL/ADSL2 and ADSL2+ lines. They are defined in the `adsl2ChConfProfTable`.

The channel configuration includes issues such as the desired minimum and maximum rate on each traffic flow direction and impulse noise protection parameters.

- o Line Configuration Templates - Line configuration templates allow combining line configuration profiles and channel configuration profiles to a comprehensive configuration of the ADSL/ADSL2 and ADSL2+ line. They are defined in the `adsl2LineConfTemplateTable`.

The line configuration template includes one index (OID) of a line configuration profile and one to four indexes of channel configuration profiles. The template also addresses the issue of distributing the excess available data rate on each traffic flow direction (i.e., the data rate left after each channel is

allocated a data rate to satisfy its minimum requested data rate) among the various channels.

2.8.2. Alarm Configuration Profiles And Templates

- o Line Alarm Configuration Profiles - Line level Alarm configuration** profiles contain the threshold values for Performance Monitoring (PM) parameters, counted either on the whole line level or on an xtu level. Thresholds are required only for failures and anomalies. E.g., there are thresholds for failed initializations and LOS seconds, but not for the aggregate number of full initializations. These profiles are defined in the `adsl2LineAlarmConfProfTable`.
- o Channel Alarm Configuration Profiles - Channel level Alarm** configuration profiles contain the threshold values for PM parameters counted on a bearer channel level. Thresholds are defined for two types of anomalies: corrected blocks and coding violations. These profiles are defined in the `adsl2ChAlarmConfProfTable`.
- o Line Alarm Configuration Templates - Line Alarm configuration** templates allow combining line level alarm configuration profiles and channel level alarm configuration profiles to a comprehensive configuration of the PM thresholds for ADSL/ADSL2 and ADSL2+ line. They are defined in the `adsl2LineAlarmConfTemplateTable`.

The line alarm configuration template includes one index (OID) of a line level alarm configuration profile and one to four indexes of channel level alarm configuration profiles.

2.8.3. Managing Profiles And Templates

The index value for each profile and template is a locally-unique, administratively assigned name having the textual convention 'SnmpAdminString' ([RFC 3411](#) [[RFC3411](#)]).

One or more lines may be configured to share parameters of a single configuration template (e.g., `adsl2LConfTempTemplateName = 'silver'`) by setting its `adsl2LCnfgLineTemplate` objects to the value of this template.

One or more lines may be configured to share parameters of a single Alarm configuration template (e.g., `adsl2LAlarmConfTempTemplateName = 'silver'`) by setting its `adsl2LCnfgAlarmTemplate` objects to the value of this template.

Before a template can be deleted or taken out of service it MUST be

first unreferenced from all associated lines. Implementations MAY also reject template modification while it is associated with any line. Implementations MUST reject template modification while its row status is set to 'active'.

Before a profile can be deleted or taken out of service it MUST be first unreferenced from all associated templates. Implementations MAY also reject profile modification while it is referenced by any template. Implementations MUST reject profile modification while its row status is set to 'active'.

Implementations MUST provide a default profile whose name is 'DEFVAL' for each profile and template type. The values of the associated parameters will be vendor-specific unless otherwise indicated in this document. Before a line's templates have been set, these templates will be automatically used by setting `adsl2LCnfgLineTemplate` and `adsl2LCnfgAlarmTemplate` to 'DEFVAL' where appropriate. This default profile name, 'DEFVAL', is considered reserved in the context of profiles and templates defined in this MIB module.

Profiles and templates are created, assigned, and deleted dynamically using the profile name and profile row status in each of the profile tables.

If the implementation allows modifying a profile or template while it is associated with a line, then such changes MUST take effect immediately. These changes MAY result in a restart (hard reset or soft restart) of the units on the line.

2.8.4. Managing Multiple Bearer Channels

The number of bearer channels is configured by setting the template attributes `adsl2LConfTempChan1ConfProfile`, `adsl2LConfTempChan2ConfProfile`, `adsl2LConfTempChan3ConfProfile`, and `adsl2LConfTempChan4ConfProfile` and then assigning that template to a DSL line using the `adsl2LineCnfgTemplate` attribute. When the number of bearer channels for a DSL line changes, the SNMP agent will automatically create or destroy rows in channel-related tables associated with that line. For example, when a DSL line is operating with one bearer channel, there will be zero rows in channel-related tables for channels two, three, and four. The SNMP agent MUST create and destroy channel related rows as follows :

- o When the number of bearer channels for a DSL line changes to a higher number, the SNMP agent will automatically create rows in the `adsl2ChannelStatusTable`, and `adsl2PMChCurrTable` tables for that line.

- o When the number of bearer channels for a DSL line changes to a lower number, the SNMP agent will automatically destroy rows in the `adsl2ChannelStatusTable`, `adsl2PMChCurrTable`, `adsl2PMChHist15MinTable` and `adsl2PMChHist1DTable` tables for that line.

2.9. Notifications

The ability to generate the SNMP notifications `coldStart/WarmStart` (per [RFC3418]), which are per agent (e.g., per Digital Subscriber Line Access Multiplexer, or DSLAM, in such a device), and `linkUp/linkDown` (per [RFC2863]), which are per interface (i.e., ADSL/ADSL2 or ADSL2+ line) is required.

A `linkDown` notification MAY be generated whenever any of ES, SES, CRC Anomaly, LOS, LOF, or UAS event occurs. The corresponding `linkUp` notification MAY be sent when all link failure conditions are cleared.

The notifications defined in this MIB module are for status change (e.g., initialization failure) and for the threshold crossings associated with the following events: Full initialization failures, short initialization failures, ES, SES, FEC Seconds, LOS Seconds, UAS, FEC Seconds, FEC events, and CRC anomalies. Each threshold has its own enable/threshold value. When that value is 0, the notification is disabled.

The `adsl2LStatusStatusAtur` and `adsl2LStatusStatusAtuc` are bitmasks representing all outstanding error conditions associated with the `AtuR` and `AtuC` (respectively). Note that since the `AtuR` status is obtained via the EOC, this information may be unavailable in case the `AtuR` is unreachable via EOC during a line error condition. Therefore, not all conditions may always be included in its current status. Notifications corresponding to the bit fields in those two status objects are defined.

Note that there are other status parameters that refer to the `AtuR` (e.g., downstream line attenuation). Those parameters also depend on the availability of EOC between the central office xtu and the remote xtu.

A threshold notification occurs whenever the corresponding current 15-minute interval error counter becomes equal to, or exceeds the threshold value. Only one notification SHOULD be sent per interval per interface. Since the current 15-minute counter is reset to 0 every 15 minutes, and if the condition persists, the notification may recur as often as every 15 minutes. For example, to get a notification whenever a "loss of" event occurs (but at most once

every 15 minutes), set the corresponding threshold to 1. The agent will generate a notification when the event originally occurs.

Notifications, other than the threshold notifications listed above, SHOULD be rate limited (throttled) such that there is an implementation-specific gap between the generation of consecutive notifications of the same event. When notifications are rate limited, they are dropped and not queued for sending at a future time. This is intended to be a general rate-limiting statement for notifications that otherwise have no explicit rate limiting assertions in this document.

Note that the Network Management System, or NMS, may receive a linkDown notification, as well, if enabled (via ifLinkUpDownTrapEnable [RFC2863]). At the beginning of the next 15 minute interval, the counter is reset. When the first second goes by and the event occurs, the current interval bucket will be 1, which equals the threshold, and the notification will be sent again.

3. Definitions

ADSL2-LINE-TC-MIB DEFINITIONS ::= BEGIN

IMPORTS

MODULE-IDENTITY,
transmission
FROM SNMPv2-SMI

TEXTUAL-CONVENTION
FROM SNMPv2-TC;

adsl2TCMIB MODULE-IDENTITY

LAST-UPDATED "200601150000Z" -- January 15, 2006
ORGANIZATION "ADSLMIB Working Group"
CONTACT-INFO "WG-email: adslmib@ietf.org
Info: <https://www1.ietf.org/mailman/listinfo/adslmib>

Chair: Mike Sneed
Sand Channel Systems
Postal: P.O. Box 37324
Raleigh NC 27627-732
Email: sneedmike@hotmail.com
Phone: +1 206 600 7022

Co-Chair: Bob Ray
PESA Switching Systems, Inc.
Postal: 330-A Wynn Drive
Huntsville, AL 35805
USA
Email: rray@pesa.com
Phone: +1 256 726 9200 ext. 142

Co-editor: Moti Morgenstern
ECI Telecom Ltd.
Postal: 30 Hasivim St.
Petach Tikva 49517,
Israel.
Email: moti.morgenstern@ecitele.com
Phone: +972 3 926 6258

Co-editor: Menachem Dodge
ECI Telecom Ltd.
Postal: 30 Hasivim St.
Petach Tikva 49517,
Israel.
Email: mbdodge@ieee.org
Phone: +972 3 926 8421

Co-editor: Scott Baillie
NEC Australia
Postal: 649-655 Springvale Road,
Mulgrave, Victoria 3170,
Australia.
Email: scott.baillie@nec.com.au
Phone: +61 3 9264 3986

Co-editor: Umberto Bonollo
NEC Australia
Postal: 649-655 Springvale Road,
Mulgrave, Victoria 3170,
Australia.
Email: umberto.bonollo@nec.com.au
Phone: +61 3 9264 3385

"

DESCRIPTION

"This MIB Module provides Textual Conventions to be used by the ADSL2-LINE-MIB module for the purpose of managing ADSL, ADSL2 and ADSL2+ lines.

Copyright (C) The Internet Society (2006). This version of this MIB module is part of RFC XXXX: see the RFC itself for full legal notices."


```
-- RFC Ed.: replace XXXX with assigned number & remove this note
REVISION "200601150000Z" -- January 15, 2006
DESCRIPTION "Initial version, published as RFC XXXX."
-- RFC Ed.: replace XX with assigned number & remove this note
::= { transmission xxx 2} -- adsl2MIB 2
-- RFC Ed.: we suggest to put it under { transmission 230 } because
-- this is the first available number.
```

```
-----
--          Textual Conventions          --
-----
```

Adsl2Unit ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"Identifies a transceiver as being either atuc or atur. An ADSL line consists of two transceivers, an atuc and an atur. Attributes with this syntax reference the two sides of a line. Specified as an INTEGER, the two values are:

atuc(1) -- central site transceiver

atur(2) -- remote site transceiver"

SYNTAX INTEGER {
atuc(1),
atur(2)
}

Adsl2Direction ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"Identifies the direction of a band as being either upstream or downstream. Specified as an INTEGER, the two values are:

upstream(1)

downstream(2)"

SYNTAX INTEGER {
upstream(1),
downstream(2)
}

Adsl2TransmissionModeType ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"A set of ADSL2 line transmission modes, with one bit per mode. The notes (F) and (L) denote Full-Rate and Lite/splitterless respectively:

Bit 00 : Regional Std. (ANSI T1.413) (F)
Bit 01 : Regional Std. (ETSI DTS/TM06006) (F)
Bit 02 : G.992.1 POTS non-overlapped (F)
Bit 03 : G.992.1 POTS overlapped (F)
Bit 04 : G.992.1 ISDN non-overlapped (F)
Bit 05 : G.992.1 ISDN overlapped (F)
Bit 06 : G.992.1 TCM-ISDN non-overlapped (F)
Bit 07 : G.992.1 TCM-ISDN overlapped (F)
Bit 08 : G.992.2 POTS non-overlapped (L)
Bit 09 : G.992.2 POTS overlapped (L)
Bit 10 : G.992.2 with TCM-ISDN non-overlapped (L)
Bit 11 : G.992.2 with TCM-ISDN overlapped (L)
Bit 12 : G.992.1 TCM-ISDN symmetric (F) --- not in G.997.1
Bit 13-17: Reserved
Bit 18 : G.992.3 POTS non-overlapped (F)
Bit 19 : G.992.3 POTS overlapped (F)
Bit 20 : G.992.3 ISDN non-overlapped (F)
Bit 21 : G.992.3 ISDN overlapped (F)
Bit 22-23: Reserved
Bit 24 : G.992.4 POTS non-overlapped (L)
Bit 25 : G.992.4 POTS overlapped (L)
Bit 26-27: Reserved
Bit 28 : G.992.3 Annex I All-Digital non-overlapped (F)
Bit 29 : G.992.3 Annex I All-Digital overlapped (F)
Bit 30 : G.992.3 Annex J All-Digital non-overlapped (F)
Bit 31 : G.992.3 Annex J All-Digital overlapped (F)
Bit 32 : G.992.4 Annex I All-Digital non-overlapped (L)
Bit 33 : G.992.4 Annex I All-Digital overlapped (L)
Bit 34 : G.992.3 Annex L POTS non-overlapped, mode 1,
wide U/S (F)
Bit 35 : G.992.3 Annex L POTS non-overlapped, mode 2,
narrow U/S(F)
Bit 36 : G.992.3 Annex L POTS overlapped, mode 3,
wide U/S (F)
Bit 37 : G.992.3 Annex L POTS overlapped, mode 4,
narrow U/S (F)
Bit 38 : G.992.3 Annex M POTS non-overlapped (F)
Bit 39 : G.992.3 Annex M POTS overlapped (F)
Bit 40 : G.992.5 POTS non-overlapped (F)
Bit 41 : G.992.5 POTS overlapped (F)
Bit 42 : G.992.5 ISDN non-overlapped (F)
Bit 43 : G.992.5 ISDN overlapped (F)
Bit 44-45: Reserved
Bit 46 : G.992.5 Annex I All-Digital non-overlapped (F)
Bit 47 : G.992.5 Annex I All-Digital overlapped (F)
Bit 48 : G.992.5 Annex J All-Digital non-overlapped (F)
Bit 49 : G.992.5 Annex J All-Digital overlapped (F)
Bit 50 : G.992.5 Annex M POTS non-overlapped (F)

Bit 51 : G.992.5 Annex M POTS overlapped (F)

Bit 52-55: Reserved"

```
SYNTAX      BITS {
    ansit1413(0),
    etsi(1),
    q9921PotsNonOverlapped(2),
    q9921PotsOverlapped(3),
    q9921IsdnNonOverlapped(4),
    q9921isdnOverlapped(5),
    q9921tcmIsdnNonOverlapped(6),
    q9921tcmIsdnOverlapped(7),
    q9922potsNonOverlapped(8),
    q9922potsOverlapped(9),
    q9922tcmIsdnNonOverlapped(10),
    q9922tcmIsdnOverlapped(11),
    q9921tcmIsdnSymmetric(12),
    reserved1(13),
    reserved2(14),
    reserved3(15),
    reserved4(16),
    reserved5(17),
    q9923PotsNonOverlapped(18),
    q9923PotsOverlapped(19),
    q9923IsdnNonOverlapped(20),
    q9923isdnOverlapped(21),
    reserved6(22),
    reserved7(23),
    q9924potsNonOverlapped(24),
    q9924potsOverlapped(25),
    reserved8(26),
    reserved9(27),
    q9923AnnexIAAllDigNonOverlapped(28),
    q9923AnnexIAAllDigOverlapped(29),
    q9923AnnexJAllDigNonOverlapped(30),
    q9923AnnexJAllDigOverlapped(31),
    q9924AnnexIAAllDigNonOverlapped(32),
    q9924AnnexIAAllDigOverlapped(33),
    q9923AnnexLMode1NonOverlapped(34),
    q9923AnnexLMode2NonOverlapped(35),
    q9923AnnexLMode3Overlapped(36),
    q9923AnnexLMode4Overlapped(37),
    q9923AnnexMPotsNonOverlapped(38),
    q9923AnnexMPotsOverlapped(39),
    q9925PotsNonOverlapped(40),
    q9925PotsOverlapped(41),
    q9925IsdnNonOverlapped(42),
    q9925isdnOverlapped(43),
    reserved10(44),
```



```
        reserved11(45),
        q9925AnnexIAAllDigNonOverlapped(46),
        q9925AnnexIAAllDigOverlapped(47),
        q9925AnnexJAllDigNonOverlapped(48),
        q9925AnnexJAllDigOverlapped(49),
        q9925AnnexMPotsNonOverlapped(50),
        q9925AnnexMPotsOverlapped(51),
        reserved12(52),
        reserved13(53),
        reserved14(54),
        reserved15(55)
    }
```

Adsl2RaMode ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"Specifies the rate adaptation behavior for the line.

The three possible behaviors are:

- manual (1) - No Rate-Adaptation. The initialization process attempts to synchronize to a specified rate.
- rainit (2) - Rate-Adaptation during initialization process only, which attempts to synchronize to a rate between minimum and maximum specified values.
- dynamicRa (3)- Dynamic Rate-Adaptation during initialization process as well as during SHOWTIME"

SYNTAX INTEGER {
 manual(1),
 raInit(2),
 dynamicRa(3)
}

Adsl2InitResult ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"Specifies the result of full initialization attempt; the six possible result values are:

- noFail (0) - Successful initialization
- configError (1) - Configuration failure
- configNotFeasible (2) - Configuration details not supported
- commFail (3) - Communication failure
- noPeerAtu (4) - Peer ATU not detected
- otherCause (5) - Other initialization failure reason"

SYNTAX INTEGER {
 noFail(0),
 configError(1),
 configNotFeasible(2),
 commFail(3),


```
        noPeerAtu(4),
        otherCause(5)
    }
```

Adsl2OperationModes ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"The ADSL2 management model specified includes an ADSL Mode attribute which identifies an instance of ADSL Mode-Specific PSD Configuration object in the ADSL Line Profile. The following classes of ADSL operating mode are defined. "

```
SYNTAX      INTEGER {
                defMode (1),
                adsl (2),
                adsl2Pots (3),
                adsl2Isdn (4),
                adsl2PlusPots (5),
                adsl2PlusIsdn (6),
                adsl2ReachExtended (7)
            }
```

Adsl2PowerMngState ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"Attributes with this syntax uniquely identify each power management state defined for the ADSL/ADSL2 or ADSL2+ link.

The possible values are:

```
    10(0) - L0 - Full power management state
    11(1) - L1 - Low power management state (for G.992.2)
    12(2) - L2 - Low power management state (for G.992.3,
                G.992.4, and G.992.5)
    13(3) - L3 - Idle power management state"
```

```
SYNTAX      INTEGER {
                10(0),
                11(1),
                12(2),
                13(3)
            }
```

Adsl2ConfPmsForce ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"Attributes with this syntax are configuration parameters that reference the desired power management state for the ADSL/ADSL2 or ADSL2+ link:

```
    13toL0 (1)      - Perform a transition from L3 to L0
                      (Full power management state)
```


- l0toL2 (2) - Perform a transition from L0 to L2 (Low power management state)
- l0orL2toL3 (3) - Perform a transition into L3 (Idle power management state)"

```
SYNTAX      INTEGER {  
                l3toL0 (0),  
                l0toL2 (2),  
                l0orL2toL3 (3)  
            }
```

Adsl2LConfProfPmMode ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"Attributes with this syntax are configuration parameters that reference the power modes/states into which the ATU-C or ATU-R may autonomously transit.

It is a BITS structure that allows control of the following transit options:

- allowTransitionsToIdle (0) - xTU may autonomously transit to idle (L3) state.
- allowTransitionsToLowPower (1)- xTU may autonomously transit to low-power (L2) state."

```
SYNTAX BITS {  
    allowTransitionsToIdle(0),  
    allowTransitionsToLowPower(1)  
}
```

Adsl2LineLdsf ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"Attributes with this syntax are configuration parameters that control the Loop Diagnostic mode for the ADSL/ADSL2 or ADSL2+ link. The possible values are:

- inhibit (0) - Inhibit Loop Diagnostic mode
- force (1) - Force/Initiate Loop Diagnostic mode"

```
SYNTAX INTEGER {  
    inhibit(0),  
    force(1)  
}
```

Adsl2LdsfResult ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"Possible failure reasons associated with performing

Dual Ended Loop Test (DELT) on a DSL line.

Possible values are:

- none (1) - The default value in case LDSF was never requested for the associated line.
- success (2) - The recent command completed successfully.
- inProgress (3) - The Loop Diagnostics process is in progress.
- unsupported (4) - The NE or the line card doesn't support LDSF.
- cannotRun (5) - The NE cannot initiate the command, due to a non specific reason.
- aborted (6) - The Loop Diagnostics process aborted.
- failed (7) - The Loop Diagnostics process failed.
- illegalMode (8) - The NE cannot initiate the command, due to the specific mode of the relevant line.
- adminUp (9) - The NE cannot initiate the command, as the relevant line is administratively 'Up'.
- tableFull (10) - The NE cannot initiate the command, due to reaching the maximum number of rows in the results table.
- noResources (11) - The NE cannot initiate the command, due to lack of internal memory resources."

```
SYNTAX INTEGER {  
    none (1),  
    success (2),  
    inProgress (3),  
    unsupported (4),  
    cannotRun (5),  
    aborted (6),  
    failed (7),  
    illegalMode (8),  
    adminUp (9),  
    tableFull (10),  
    noResources (11)  
}
```

Adsl2SymbolProtection ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"Attributes with this syntax are configuration parameters that reference the minimum length impulse noise protection (INP) in terms of number of symbols. The possible values are: noProtection (i.e., INP not required), halfSymbol (i.e., INP length is 1/2 symbol), and 1-16 symbols in steps of 1 symbol"


```
SYNTAX      INTEGER {
              noProtection (1),
              halfSymbol (2),
              singleSymbol (3),
              twoSymbols (4),
              threeSymbols (5),
              fourSymbols (6),
              fiveSymbols (7),
              sixSymbols (8),
              sevenSymbols (9),
              eightSymbols (10),
              nineSymbols (11),
              tenSymbols (12),
              elevenSymbols (13),
              twelveSymbols (14),
              thirteenSymbols (15),
              fourteenSymbols (16),
              fifteenSymbols (17),
              sixteenSymbols (18)
            }
```

Adsl2MaxBer ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"Attributes with this syntax are configuration parameters
that reference the maximum Bit Error Rate (BER).
The possible values are:

eminus3 (1) - Maximum BER= E^{-3}
eminus5 (2) - Maximum BER= E^{-5}
eminus7 (3) - Maximum BER= E^{-7} "

```
SYNTAX      INTEGER {
              eminus3(1),
              eminus5(2),
              eminus7(3)
            }
```

Adsl2ScMaskDs ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"Each one of the 512 bits in this OCTET
STRING array represents the corresponding bin
in the downstream direction. A value of one
indicates that the bin is not in use."

SYNTAX OCTET STRING (SIZE(0..64))

Adsl2ScMaskUs ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"Each one of the 64 bits in this OCTET STRING array represents the corresponding bin in the downstream direction. A value of one indicates that the bin is not in use."

SYNTAX OCTET STRING (SIZE(0..8))

Adsl2RfiDs ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"Each one of the 512 bits in this OCTET STRING array represents the corresponding bin in the downstream direction. A value of one indicates that the bin is part of a notch filter."

SYNTAX OCTET STRING (SIZE(0..64))

Adsl2PsdMaskDs ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"This is a structure that represents up to 32 PSD Mask breakpoints. Each breakpoint occupies 3 octets: The first two octets hold the index of the sub-carrier associated with the breakpoint. The third octet holds the PSD reduction at the breakpoint from 0 (0dBm/Hz) to 255 (-127.5 dBm/Hz) using units of 0.5dBm/Hz."

SYNTAX OCTET STRING (SIZE(0..96))

Adsl2PsdMaskUs ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"This is a structure that represents up to 4 PSD Mask breakpoints. Each breakpoint occupies 3 octets: The first two octets hold the index of the sub-carrier associated with the breakpoint. The third octet holds the PSD reduction at the breakpoint from 0 (0dBm/Hz) to 255 (-127.5 dBm/Hz) using units of 0.5dBm/Hz."

SYNTAX OCTET STRING (SIZE(0..12))

Adsl2Tssi ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"This is a structure that represents up to 32 transmit spectrum shaping (TSSi) breakpoints. Each breakpoint occupies 3 octets: The first

two octets hold the index of the sub-carrier associated with the breakpoint. The third octet holds the shaping parameter at the breakpoint. It is a value from 0 to 127 (units of -0.5dB). The special value 127 indicates that the sub-carrier is not transmitted."

SYNTAX OCTET STRING (SIZE(0..96))

Adsl2LastTransmittedState ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"This parameter represents the last successful transmitted initialization state in the last full initialization performed on the line."

SYNTAX INTEGER {

atucG9941(0),
atucQuiet1(1),
atucComb1(2),
atucQuiet2(3),
atucComb2(4),
atucIcomb1(5),
atucLineprob(6),
atucQuiet3(7),
atucComb3(8),
atucIComb2(9),
atucMsgfmt(10),
atucMsgpcb(11),
atucQuiet4(12),
atucReverb1(13),
atucTref1(14),
atucReverb2(15),
atucEct(16),
atucReverb3(17),
atucTref2(18),
atucReverb4(19),
atucSegue1(20),
atucMsg1(21),
atucReverb5(22),
atucSegue2(23),
atucMedley(24),
atucExchmarker(25),
atucMsg2(26),
atucReverb6(27),
atucSegue3(28),
atucParams(29),
atucReverb7(30),
atucSegue4(31),
atucShowtime(32),


```
--
aturG9941(100),
aturQuiet1(101),
aturComb1(102),
aturQuiet2(103),
aturComb2(104),
aturIcomb1(105),
aturLineprob(106),
aturQuiet3(107),
aturComb3(108),
aturIcomb2(109),
aturMsgfmt(110),
aturMsgpcb(111),
aturReverb1(112),
aturQuiet4(113),
aturReverb2(114),
aturQuiet5(115),
aturReverb3(116),
aturEct(117),
aturReverb4(118),
aturSegue1(119),
aturReverb5(120),
aturSegue2(121),
aturMsg1(122),
aturMedley(123),
aturExchmarker(124),
aturMsg2(125),
aturReverb6(126),
aturSegue3(127),
aturParams(128),
aturReverb7(129),
aturSegue4(130),
aturShowtime(131)
}
```

Adsl2LineStatus ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"Attributes with this syntax are status parameters
that reflect the failure status for a given endpoint of
ADSL/ADSL2 or ADSL2+ link.

This BITS structure can report the following failures:

- noDefect (0) - This bit position positively reports
that no defect or failure exist.
- lossOfFraming (1) - Loss of frame synchronization
- lossOfSignal (2) - Loss of signal

- lossOfPower (3) - Loss of power. Usually this failure may be reported for CPE units only
- initFailure (4) - Recent initialization process failed."

```
SYNTAX BITS {  
    noDefect(0),  
    lossOfFraming(1),  
    lossOfSignal(2),  
    lossOfPower(3),  
    initFailure(4)  
}
```

Adsl2ChAtmStatus ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"Attributes with this syntax are status parameters that reflect the failure status for Transmission Convergence (TC) layer of a given ATM interface (data path over an ADSL/ADSL2 or ADSL2+ link).

This BITS structure can report the following failures:

- noDefect (0) - This bit position positively reports that no defect or failure exist.
- noCellDelineation (1) - The link was successfully initialized but cell delineation was never acquired on the associated ATM data path.
- lossOfCellDelineation (2)- Loss of cell delineation on the associated ATM data path"

```
SYNTAX BITS {  
    noDefect(0),  
    noCellDelineation(1),  
    lossOfCellDelineation(2)  
}
```

Adsl2ChPtmStatus ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"Attributes with this syntax are status parameters that reflect the failure status for a given PTM interface (packet data path over an ADSL/ADSL2 or ADSL2+ link).

This BITS structure can report the following failures:


```
noDefect (0)    - This bit position positively
                  reports that no defect or failure exist.
outOfSync (1)   - Out of synchronization. "
```

```
SYNTAX BITS {
    noDefect(0),
    outOfSync(1)
}
```

END

ADSL2-LINE-MIB DEFINITIONS ::= BEGIN

IMPORTS

```
MODULE-IDENTITY,
OBJECT-TYPE,
transmission,
Unsigned32,
NOTIFICATION-TYPE,
Integer32,
Counter32
    FROM SNMPv2-SMI
```

```
ifIndex
    FROM IF-MIB
```

```
TruthValue,
RowStatus
    FROM SNMPv2-TC
```

```
SnmpAdminString
    FROM SNMP-FRAMEWORK-MIB
```

```
HCPperfIntervalThreshold,
HCPperfTimeElapsed
    FROM HC-PerfHist-TC-MIB -- [RFC3705]
```

```
Adsl2Unit,
Adsl2Direction,
Adsl2TransmissionModeType,
Adsl2RaMode,
Adsl2InitResult,
Adsl2OperationModes,
Adsl2PowerMngState,
Adsl2ConfPmsForce,
```


Adsl2LConfProfPmMode,
Adsl2LineLdsf,
Adsl2LdsfResult,
Adsl2SymbolProtection,
Adsl2MaxBer,
Adsl2ScMaskDs,
Adsl2ScMaskUs,
Adsl2RfiDs,
Adsl2PsdMaskDs,
Adsl2PsdMaskUs,
Adsl2Tssi,
Adsl2LastTransmittedState,
Adsl2LineStatus,
Adsl2ChAtmStatus,
Adsl2ChPtmStatus

FROM ADSL2-LINE-TC-MIB -- [This document]

MODULE-COMPLIANCE,
OBJECT-GROUP,
NOTIFICATION-GROUP
FROM SNMPv2-CONF;

adsl2MIB MODULE-IDENTITY

LAST-UPDATED "200601150000Z" -- January 15, 2006
ORGANIZATION "ADSLMIB Working Group"
CONTACT-INFO "WG-email: adslmib@ietf.org
Info: <https://www1.ietf.org/mailman/listinfo/adslmib>

Chair: Mike Sneed
Sand Channel Systems
Postal: P.O. Box 37324
Raleigh NC 27627-732
Email: sneedmike@hotmail.com
Phone: +1 206 600 7022

Co-Chair: Bob Ray
PESA Switching Systems, Inc.
Postal: 330-A Wynn Drive
Huntsville, AL 35805
USA
Email: rray@pesa.com
Phone: +1 256 726 9200 ext. 142

Co-editor: Moti Morgenstern
ECI Telecom Ltd.
Postal: 30 Hasivim St.
Petach Tikva 49517,

Israel.

Email: moti.morgenstern@ecitele.com

Phone: +972 3 926 6258

Co-editor: Menachem Dodge

ECI Telecom Ltd.

Postal: 30 Hasivim St.

Petach Tikva 49517,
Israel.

Email: mbdodge@ieee.org

Phone: +972 3 926 8421

Co-editor: Scott Baillie

NEC Australia

Postal: 649-655 Springvale Road,
Mulgrave, Victoria 3170,
Australia.

Email: scott.baillie@nec.com.au

Phone: +61 3 9264 3986

Co-editor: Umberto Bonollo

NEC Australia

Postal: 649-655 Springvale Road,
Mulgrave, Victoria 3170,
Australia.

Email: umberto.bonollo@nec.com.au

Phone: +61 3 9264 3385

"

DESCRIPTION

"

This document defines a Management Information Base (MIB) module for use with network management protocols in the Internet community for the purpose of managing ADSL, ADSL2, and ADSL2+ lines. The MIB module described in [RFC 2662](#) [[RFC2662](#)] describes objects used for managing Asymmetric Bit-Rate DSL (ADSL) interfaces per [[T1E1.413](#)], [[G.992.1](#)], and [[G.992.2](#)]. These object descriptions are based upon the specifications for the ADSL Embedded Operations Channel (EOC) as defined in American National Standards Institute (ANSI) T1E1.413/1995 [[T1E1.413](#)] and International Telecommunication Union (ITU-T) G.992.1 [[G.992.1](#)] and G.992.2 [[G.992.2](#)].

This document does not obsolete [RFC 2662](#) [[RFC2662](#)], but rather provides a more comprehensive management model that includes the ADSL2 and ADSL2+ technologies per G.992.3, G.992.4, and G.992.5 ([[G.992.3](#)], [[G.992.4](#)], and [[G.992.5](#)], respectively). In addition, objects have been added to

improve the management of ADSL, ADSL2, and ADSL2+ lines.

Additionally, the management framework for New Generation ADSL lines specified by the Digital Subscriber Line Forum (DSL Forum) has been taken into consideration [TR-90]. That framework is based on ITU-T G.997.1 standard [G.997.1] as well as two amendments: [G.997.1 am1] and [G.997.1 am2].

Note that the revised ITU-T G.997.1 standard refers also to next generation of VDSL technology, known as VDSL2, per ITU-T G.993.2 [G.993.2]. However, managing VDSL2 lines is currently beyond the scope of this document.

The MIB module is located in the MIB tree under MIB 2 transmission, as discussed in the MIB-2 Integration ([RFC 2863](#) [[RFC2863](#)]) section of this document.

Copyright (C) The Internet Society (2006). This version of this MIB module is part of RFC XXXX: see the RFC itself for full legal notices."

```
-- RFC Ed.: replace XXXX with assigned number & remove this note
REVISION "200601150000Z" -- January 15, 2006
DESCRIPTION "Initial version, published as RFC XXXX."
-- RFC Ed.: replace XX with assigned number & remove this note
::= { transmission xxx }
-- RFC Ed.: we suggest to put it under { transmission 230 } because
-- this is the first available number.
```

```
adsl2          OBJECT IDENTIFIER ::= { adsl2MIB 1 }
-----
adsl2Line      OBJECT IDENTIFIER ::= { adsl2 1 }
adsl2Status    OBJECT IDENTIFIER ::= { adsl2 2 }
adsl2Inventory OBJECT IDENTIFIER ::= { adsl2 3 }
adsl2PM        OBJECT IDENTIFIER ::= { adsl2 4 }
adsl2Profile   OBJECT IDENTIFIER ::= { adsl2 5 }
adsl2Scalar    OBJECT IDENTIFIER ::= { adsl2 6 }
adsl2Notifications OBJECT IDENTIFIER ::= { adsl2 0 }
adsl2Conformance OBJECT IDENTIFIER ::= { adsl2 8 }
-----
adsl2PMLine    OBJECT IDENTIFIER ::= { adsl2PM 1 }
adsl2PMChannel OBJECT IDENTIFIER ::= { adsl2PM 2 }
-----
adsl2ProfileLine OBJECT IDENTIFIER ::= { adsl2Profile 1 }
adsl2ProfileChannel OBJECT IDENTIFIER ::= { adsl2Profile 2 }
adsl2ProfileAlarmConf OBJECT IDENTIFIER ::= { adsl2Profile 3 }
-----
```



```
adsl2ScalarSC          OBJECT IDENTIFIER ::= { adsl2Scalar 1 }
```

```
-----
--          adsl2LineTable          --
-----
```

```
adsl2LineTable  OBJECT-TYPE
    SYNTAX      SEQUENCE OF Adsl2LineEntry
    MAX-ACCESS   not-accessible
    STATUS       current
    DESCRIPTION
        "The table adsl2LineTable contains configuration,
        command and status parameters of the ADSL2 line.
        The index of this table is an interface index where the
        interface has an ifType of adsl2(230).

        Several objects in this table MUST be maintained in a
        persistent manner. "
    ::= { adsl2Line 1 }
```

```
adsl2LineEntry  OBJECT-TYPE
    SYNTAX       Adsl2LineEntry
    MAX-ACCESS   not-accessible
    STATUS       current
    DESCRIPTION
        "The table adsl2LineTable contains configuration,
        commands and status parameters of the ADSL2 line"
    INDEX { ifIndex }
    ::= { adsl2LineTable 1 }
```

```
Adsl2LineEntry ::=
    SEQUENCE {
        adsl2LineCnfgTemplate           SnmpAdminString,
        adsl2LineAlarmCnfgTemplate      SnmpAdminString,
        adsl2LineCmndConfPmsf           Adsl2ConfPmsForce,
        adsl2LineCmndConfLdsf           Adsl2LineLdsf,
        adsl2LineCmndConfLdsfFailReason Adsl2LdsfResult,
        adsl2LineCmndAutomodeColdStart  TruthValue,
        adsl2LineStatusAtuTransSys      Adsl2TransmissionModeType,
        adsl2LineStatusPwrMngState      Adsl2PowerMngState,
        adsl2LineStatusInitResult       Adsl2InitResult,
        adsl2LineStatusLastStateDs      Adsl2LastTransmittedState,
        adsl2LineStatusLastStateUs      Adsl2LastTransmittedState,
        adsl2LineStatusAtur             Adsl2LineStatus,
        adsl2LineStatusAtuc             Adsl2LineStatus,
        adsl2LineStatusLnAttenDs        Unsigned32,
        adsl2LineStatusLnAttenUs        Unsigned32,
```



```
    adsl2LineStatusSigAttenDs      Unsigned32,
    adsl2LineStatusSigAttenUs      Unsigned32,
    adsl2LineStatusSnrMarginDs     Integer32,
    adsl2LineStatusSnrMarginUs     Integer32,
    adsl2LineStatusAttainableRateDs Unsigned32,
    adsl2LineStatusAttainableRateUs Unsigned32,
    adsl2LineStatusActPsdDs        Integer32,
    adsl2LineStatusActPsdUs        Integer32,
    adsl2LineStatusActAtpDs        Integer32,
    adsl2LineStatusActAtpUs        Integer32
}
```

adsl2LineCnfgTemplate OBJECT-TYPE

SYNTAX SnmpAdminString (SIZE(1..32))

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"The value of this object identifies the row in the ADSL2 Line Configuration Templates Table, (Adsl2ConfTemplatesTable), which applies for this ADSL2 line.

This object MUST be maintained in a persistent manner."

REFERENCE "DSL Forum TR-90, paragraph 5.1.1"

DEFVAL { "DEFVAL" }

::= { adsl2LineEntry 1 }

adsl2LineAlarmCnfgTemplate OBJECT-TYPE

SYNTAX SnmpAdminString (SIZE(1..32))

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"The value of this object identifies the row in the ADSL2 Line Alarm Configuration Template Table, (adsl2LineAlarmConfTemplateTable), which applies to this ADSL2 line.

This object MUST be maintained in a persistent manner."

REFERENCE "DSL Forum TR-90, paragraph 5.1.1"

DEFVAL { "DEFVAL" }

::= { adsl2LineEntry 2 }

adsl2LineCmndConfPmsf OBJECT-TYPE

SYNTAX Adsl2ConfPmsForce

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"Power management state forced. Defines the line states to be forced by the near-end ATU on this line. The various possible

values are:

l3toL0 (0),
l0toL2 (2),
l0orL2toL3 (3).

This object MUST be maintained in a persistent manner."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.1.3"

DEFVAL { l3toL0 }

::= { adsl2LineEntry 3 }

adsl2LineCmndConfLdsf OBJECT-TYPE

SYNTAX Adsl2LineLdsf

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"Loop diagnostics mode forced (LDSF). Defines whether the line should be forced into the loop diagnostics mode by the near-end ATU on this line or only be responsive to loop diagnostics initiated by the far-end ATU.

This object MUST be maintained in a persistent manner.

However, in case the operator forces loop diagnostics mode then the access node should reset the object (inhibit) when loop diagnostics mode procedures are completed."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.1.8"

DEFVAL { inhibit }

::= { adsl2LineEntry 4 }

adsl2LineCmndConfLdsfFailReason OBJECT-TYPE

SYNTAX Adsl2LdsfResult

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The status of the recent occasion the Loop diagnostics mode forced (LDSF) was issued for the associated line. Possible values are:

none	(1) - The default value in case LDSF was never requested for the associated line.
success	(2) - The recent command completed successfully.
inProgress	(3) - The Loop Diagnostics process is in progress.
unsupported	(4) - The NE or the line card doesn't support LDSF.
cannotRun	(5) - The NE cannot initiate the command, due to a non specific reason.
aborted	(6) - The Loop Diagnostics process aborted.
failed	(7) - The Loop Diagnostics process failed.

- illegalMode (8) - The NE cannot initiate the command, due to the specific mode of the relevant line.
- adminUp (9) - The NE cannot initiate the command, as the relevant line is administratively 'Up'.
- tableFull (10)- The NE cannot initiate the command, due to reaching the maximum number of rows in the results table.
- noResources (11)- The NE cannot initiate the command, due to lack of internal memory resources."

DEFVAL { none }
::= { adsl2LineEntry 5 }

adsl2LineCmndAutomodeColdStart OBJECT-TYPE

SYNTAX TruthValue
MAX-ACCESS read-write
STATUS current

DESCRIPTION

"Automode cold start forced. This parameter is defined in order to improve testing of the performance of ATUs supporting automode when it is enabled in the MIB. Change the value of this parameter to 'true' indicates a change in loop conditions applied to the devices under test. The ATUs shall reset any historical information used for automode and for shortening G.994.1 handshake and initialization.

Automode is the case where multiple operation-modes are enabled through the adsl2LConfProfAtuTransSysEna object in the line configuration profile being used for the ADSL line, and where the selection of the actual operation-mode depends not only on the common capabilities of both ATUs (as exchanged in G.994.1), but also on achievable data rates under given loop conditions.

This object MUST be maintained in a persistent manner."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.1.10"
DEFVAL { false }
::= { adsl2LineEntry 6 }

adsl2LineStatusAtuTransSys OBJECT-TYPE

SYNTAX Adsl2TransmissionModeType
MAX-ACCESS read-only
STATUS current

DESCRIPTION

"The ATU Transmission System (ATS) in use.

It is coded in a bit-map representation with one bit set to '1' (the selected coding for the ADSL line). This parameter may be derived from the handshaking procedures defined in Recommendation G.994.1. A set of ADSL2 line transmission modes, with one bit per mode. "

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.1.1"

::= { adsl2LineEntry 7 }

adsl2LineStatusPwrMngState OBJECT-TYPE

SYNTAX Adsl2PowerMngState

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The current power management state. One of four possible power management states:

L0 - Synchronized and full transmission (i.e., Showtime),

L1 - Low Power with reduced net data rate (G.992.2 only),

L2 - Low Power with reduced net data rate (G.992.3 and G.992.4 only),

L3 - No power

The various possible values are:l0(0), l1(1), l2(2), l3(3)."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.2"

::= { adsl2LineEntry 8 }

adsl2LineStatusInitResult OBJECT-TYPE

SYNTAX Adsl2InitResult

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Indicates the result of the last full initialization performed on the line. It is an enumeration type with the following values: noFailure(0), configError(1), configNotFeasible(2), commFail(3), noPeerAtu(4), otherCause(5)."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.3"

::= { adsl2LineEntry 9 }

adsl2LineStatusLastStateDs OBJECT-TYPE

SYNTAX Adsl2LastTransmittedState

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The last successful transmitted initialization state in the downstream direction in the last full initialization performed on the line. States are per the specific ADSL type and are counted from 0 (if G.994.1 is used) or 1 (if G.994.1 is not used) up to Showtime."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.4"
::= { adsl2LineEntry 10 }

adsl2LineStatusLastStateUs OBJECT-TYPE

SYNTAX Adsl2LastTransmittedState

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The last successful transmitted initialization state in the upstream direction in the last full initialization performed on the line. States are per the specific ADSL type and are counted from 0 (if G.994.1 is used) or 1 (if G.994.1 is not used) up to Showtime."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.5"
::= { adsl2LineEntry 11 }

adsl2LineStatusAtur OBJECT-TYPE

SYNTAX Adsl2LineStatus

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Indicates current state (existing failures) of the ATU-R. This is a bit-map of possible conditions. The various bit positions are: noFailure(0), lossOfFraming(1), lossOfSignal(2), lossOfPower(3), initFailure(4) - never active on ATU-R"

REFERENCE "ITU-T G.997.1, paragraph 7.1.1.2"
::= { adsl2LineEntry 12 }

adsl2LineStatusAtuc OBJECT-TYPE

SYNTAX Adsl2LineStatus

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Indicates current state (existing failures) of the ATU-C. This is a bit-map of possible conditions. The various bit positions are: noFailure(0), lossOfFraming(1), lossOfSignal(2), lossOfPower(3), initFailure(4)"

REFERENCE "ITU-T G.997.1, paragraph 7.1.1.1"
::= { adsl2LineEntry 13 }

adsl2LineStatusLnAttenDs OBJECT-TYPE

SYNTAX Unsigned32

UNITS "0.1 dB"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The measured difference in the total power transmitted by the

ATU-C and the total power received by the ATU-R over all sub-carriers during diagnostics mode and initialization. It ranges from 0 to 1270 units of 0.1 dB (Physical values are 0 to 127 dB). A value of all 1's indicates the line attenuation is out of range to be represented."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.6"

::= { adsl2LineEntry 14 }

adsl2LineStatusLnAttenUs OBJECT-TYPE

SYNTAX Unsigned32

UNITS "0.1 dB"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The measured difference in the total power transmitted by the ATU-R and the total power received by the ATU-C over all sub-carriers during diagnostics mode and initialization. It ranges from 0 to 1270 units of 0.1 dB (Physical values are 0 to 127 dB). A value of all 1's indicates the line attenuation is out of range to be represented."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.7"

::= { adsl2LineEntry 15 }

adsl2LineStatusSigAttenDs OBJECT-TYPE

SYNTAX Unsigned32

UNITS "0.1 dB"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The measured difference in the total power transmitted by the ATU-C and the total power received by the ATU-R over all sub-carriers during Showtime. It ranges from 0 to 1270 units of 0.1 dB (Physical values are 0 to 127 dB). A value of all 1's indicates the line attenuation is out of range to be represented."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.8"

::= { adsl2LineEntry 16 }

adsl2LineStatusSigAttenUs OBJECT-TYPE

SYNTAX Unsigned32

UNITS "0.1 dB"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The measured difference in the total power transmitted by the ATU-R and the total power received by the ATU-C over all sub-carriers during Showtime. It ranges from 0 to 1270 units of 0.1 dB (Physical values are 0 to 127 dB). A value of all

1's indicates the line attenuation is out of range to be represented."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.9"

::= { adsl2LineEntry 17 }

adsl2LineStatusSnrMarginDs OBJECT-TYPE

SYNTAX Integer32

UNITS "0.1 dB"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Downstream SNR Margin is the maximum increase in dB of the noise power received at the ATU-R, such that the BER requirements are met for all downstream bearer channels. It ranges from -640 to 630 units of 0.1 dB (Physical values are -64 to 63 dB). A value of all 1's indicates the line attenuation is out of range to be represented."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.10"

::= { adsl2LineEntry 18 }

adsl2LineStatusSnrMarginUs OBJECT-TYPE

SYNTAX Integer32

UNITS "0.1 dB"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Upstream SNR Margin is the maximum increase in dB of the noise power received at the ATU-C, such that the BER requirements are met for all downstream bearer channels. It ranges from -640 to 630 units of 0.1 dB (Physical values are -64 to 63 dB). A value of all 1's indicates the line attenuation is out of range to be represented."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.11"

::= { adsl2LineEntry 19 }

adsl2LineStatusAttainableRateDs OBJECT-TYPE

SYNTAX Unsigned32

UNITS "bits/second"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Maximum Attainable Data Rate Downstream.

The maximum downstream net data rate currently attainable by the ATU-C transmitter and the ATU-R receiver, coded in bit/s."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.12"

::= { adsl2LineEntry 20 }

adsl2LineStatusAttainableRateUs OBJECT-TYPE

SYNTAX Unsigned32
UNITS "bits/second"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "Maximum Attainable Data Rate Upstream.
 The maximum upstream net data rate currently attainable by the
 ATU-R transmitter and the ATU-C receiver, coded in bit/s."
REFERENCE "ITU-T G.997.1, paragraph 7.5.1.13"
::= { adsl2LineEntry 21 }

adsl2LineStatusActPsdDs OBJECT-TYPE

SYNTAX Integer32
UNITS "0.1 dB"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "Actual Power Spectrum Density (PSD) Downstream. The average
 downstream transmit PSD over the sub-carriers used for
 downstream. It ranges from -900 to 0 units of 0.1 dB
 (Physical values are -90 to 0 dBm/Hz). A value of all 1's
 indicates the measurement is out of range to be represented."
REFERENCE "ITU-T G.997.1, paragraph 7.5.1.14"
::= { adsl2LineEntry 22 }

adsl2LineStatusActPsdUs OBJECT-TYPE

SYNTAX Integer32
UNITS "0.1 dB"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "Actual Power Spectrum Density (PSD) Upstream. The average
 upstream transmit PSD over the sub-carriers used for upstream.
 It ranges from -900 to 0 units of 0.1 dB (Physical values
 are -90 to 0 dBm/Hz). A value of all 1's indicates the
 measurement is out of range to be represented."
REFERENCE "ITU-T G.997.1, paragraph 7.5.1.15"
::= { adsl2LineEntry 23 }

adsl2LineStatusActAtpDs OBJECT-TYPE

SYNTAX Integer32
UNITS "0.1 dB"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "Actual Aggregate Transmit Power Downstream. The total amount
 of transmit power delivered by the ATU-C at the U-C reference
 point, at the instant of measurement. It ranges from -310 to

310 units of 0.1 dB (Physical values are -31 to 31 dBm). A value of all 1's indicates the measurement is out of range to be represented."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.16"

::= { adsl2LineEntry 24 }

adsl2LineStatusActAtpUs OBJECT-TYPE

SYNTAX Integer32

UNITS "0.1 dB"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Actual Aggregate Transmit Power Upstream. The total amount of transmit power delivered by the ATU-R at the U-R reference point, at the instant of measurement. It ranges from -310 to 310 units of 0.1 dB (Physical values are -31 to 31 dBm). A value of all 1's indicates the measurement is out of range to be represented."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.17"

::= { adsl2LineEntry 25 }

-- adsl2ChannelStatusTable --

adsl2ChannelStatusTable OBJECT-TYPE

SYNTAX SEQUENCE OF Adsl2ChannelStatusEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2ChannelStatusTable contains status parameters of ADSL2 channel. This table contains live data from equipment. As such, it is NOT persistent."

::= { adsl2Status 1 }

adsl2ChannelStatusEntry OBJECT-TYPE

SYNTAX Adsl2ChannelStatusEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2ChannelStatusTable contains status parameters of ADSL2 channel.

The index of this table is an interface index where the interface has an ifType value that is applicable for a DSL channel and the termination unit."

INDEX { ifIndex, adsl2ChStatusUnit }

::= { adsl2ChannelStatusTable 1 }

Adsl2ChannelStatusEntry ::=

```
SEQUENCE {
    adsl2ChStatusUnit           Adsl2Unit,
    adsl2ChStatusChannelNum     Unsigned32,
    adsl2ChStatusActDataRate    Unsigned32,
    adsl2ChStatusPrevDataRate   Unsigned32,
    adsl2ChStatusActDelay       Unsigned32,
    adsl2ChStatusAtmStatus      Adsl2ChAtmStatus,
    adsl2ChStatusPtmStatus      Adsl2ChPtmStatus
}
```

adsl2ChStatusUnit OBJECT-TYPE

SYNTAX Adsl2Unit

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The termination unit ATUC(1) or ATUR(2)."

::= { adsl2ChannelStatusEntry 1 }

adsl2ChStatusChannelNum OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Provides the bearer channel number associated with this row (i.e., the channel ifIndex).

This enables determining the channel configuration profile and the channel thresholds profile applicable for this bearer channel."

::= { adsl2ChannelStatusEntry 2 }

adsl2ChStatusActDataRate OBJECT-TYPE

SYNTAX Unsigned32(0..200000000)

UNITS "bits/second"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The actual net data rate that the bearer channel is operating at, if in L0 power management state. In L1 or L2 states, it relates to the previous L0 state. The data rate is coded in bit/s."

REFERENCE "ITU-T G.997.1, paragraph 7.5.2.1"

::= { adsl2ChannelStatusEntry 3 }

adsl2ChStatusPrevDataRate OBJECT-TYPE

SYNTAX Unsigned32(0..200000000)

UNITS "bits/second"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The previous net data rate that the bearer channel was operating at just before the latest rate change event. This could be a full or short initialization, fast retrain, DRA or power management transitions, excluding transitions between L0 state and L1 or L2 states. The data rate is coded in bit/s."

REFERENCE "ITU-T G.997.1, paragraph 7.5.2.2"

::= { adsl2ChannelStatusEntry 4 }

adsl2ChStatusActDelay OBJECT-TYPE

SYNTAX Unsigned32(0..8176)

UNITS "milliseconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The actual one-way interleaving delay introduced by the PMS-TC in the direction of the bearer channel, if in L0 power management state. In L1 or L2 states, it relates to the previous L0 state. It is coded in ms (rounded to the nearest ms)."

REFERENCE "ITU-T G.997.1, paragraph 7.5.2.3"

::= { adsl2ChannelStatusEntry 5 }

adsl2ChStatusAtmStatus OBJECT-TYPE

SYNTAX Adsl2ChAtmStatus

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Indicates current state (existing failures) of the ADSL channel in case its Data Path is ATM. This is a bit-map of possible conditions. The various bit positions are:

noFailure(0),
noCellDelineation(1),
lossOfCellDelineation (2).

In case the channel is not of ATM Data Path the object is set to '0'."

REFERENCE "ITU-T G.997.1, paragraph 7.1.4"

::= { adsl2ChannelStatusEntry 6 }

adsl2ChStatusPtmStatus OBJECT-TYPE

SYNTAX Adsl2ChPtmStatus

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Indicates current state (existing failures) of the ADSL channel in case its Data Path is PTM. This is a bit-map of possible conditions. The various bit positions are:


```
        noFailure(0),
        outOfSync (1).
    In case the channel is not of PTM Data Path the object is set
    to '0'."
REFERENCE      "ITU-T G.997.1, paragraph 7.1.5"
::= { adsl2ChannelStatusEntry 7 }
```

```
-----
--          Scalars that relate to the adsl2SCStatusTable.
-----
```

```
adsl2ScalarSCMaxInterfaces  OBJECT-TYPE
    SYNTAX      Unsigned32
    MAX-ACCESS   read-only
    STATUS       current
    DESCRIPTION
        "This value determines the upper size of adsl2SCStatusTable.
        The maximum number of entries in adsl2SCStatusTable is equal
        to two times the value of this attribute."
    ::= { adsl2ScalarSC 1 }
```

```
adsl2ScalarSCAvailInterfaces OBJECT-TYPE
    SYNTAX      Unsigned32
    MAX-ACCESS   read-only
    STATUS       current
    DESCRIPTION
        "This value determines the amount of space that is
        currently available in adsl2SCStatusTable.
        The number of entries available in adsl2SCStatusTable is equal
        to two times the value of this attribute."
    ::= { adsl2ScalarSC 2 }
```

```
-----
--          adsl2SCStatusTable          --
-----
```

```
adsl2SCStatusTable  OBJECT-TYPE
    SYNTAX      SEQUENCE OF Adsl2SCStatusEntry
    MAX-ACCESS   not-accessible
    STATUS       current
    DESCRIPTION
        "The table adsl2SCStatusTable contains status parameters
        of ADSL2 sub-carriers. This table contains live data
        from equipment. As such, it is NOT persistent."
    ::= { adsl2Status 2 }
```

```
adsl2SCStatusEntry  OBJECT-TYPE
```


SYNTAX Adsl2SCStatusEntry
MAX-ACCESS not-accessible
STATUS current
DESCRIPTION
 "The table Hfadsl2SCStatusEntry contains status parameters
 of ADSL2 sub-carriers.
 The index of this table is an interface index where the
 interface has an ifType of adsl2(230)."
INDEX { ifIndex, adsl2SCStatusDirection }
::= { adsl2SCStatusTable 1 }

Adsl2SCStatusEntry ::=

SEQUENCE {	
adsl2SCStatusDirection	Adsl2Direction,
adsl2SCStatusMtime	Unsigned32,
adsl2SCStatusSnr	OCTET STRING,
adsl2SCStatusBitsAlloc	OCTET STRING,
adsl2SCStatusGainAlloc	OCTET STRING,
adsl2SCStatusTssi	Adsl2Tssi,
adsl2SCStatusLinScale	Unsigned32,
adsl2SCStatusLinReal	OCTET STRING,
adsl2SCStatusLinImg	OCTET STRING,
adsl2SCStatusLogMt	Unsigned32,
adsl2SCStatusLog	OCTET STRING,
adsl2SCStatusQlnMt	Unsigned32,
adsl2SCStatusQln	OCTET STRING,
adsl2SCStatusLnAtten	Unsigned32,
adsl2SCStatusSigAtten	Unsigned32,
adsl2SCStatusSnrMargin	Integer32,
adsl2SCStatusAttainableRate	Unsigned32,
adsl2SCStatusActAtp	Integer32,
adsl2SCStatusRowStatus	RowStatus
}	

adsl2SCStatusDirection OBJECT-TYPE
SYNTAX Adsl2Direction
MAX-ACCESS not-accessible
STATUS current
DESCRIPTION
 "The direction of the sub-carrier either
 upstream or downstream"
::= { adsl2SCStatusEntry 1 }

adsl2SCStatusMtime OBJECT-TYPE
SYNTAX Unsigned32
UNITS "symbols"
MAX-ACCESS read-only
STATUS current

DESCRIPTION

"SNR Measurement Time. The number of symbols used to measure the SNR values on the respective transmission direction. It should correspond to the value specified in the recommendation (e.g., the number of symbols in 1 second time interval for G.992.3). This parameter corresponds to 1 second in loop diagnostic procedure and should be updated otherwise"

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.20.1 (SNRMTds)
and paragraph 7.5.1.20.3 (SNRMTus)"

::= { adsl2SCStatusEntry 2 }

adsl2SCStatusSnr OBJECT-TYPE

SYNTAX OCTET STRING (SIZE(0..512))

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The SNR Margin per sub-carrier, expressing the ratio between the received signal power and received noise power per subscriber. It is an array of 512 bytes, designed for supporting up to 512 (downstream) sub-carriers.

The number of utilized octets on downstream direction depends on NSCds, and on upstream direction it depends on NSCus. This value is referred here as NSC.

Byte i ($0 \leq i < \text{NSC}$) is set to a value in the range 0 to 254 to indicate that the respective downstream or upstream sub-carrier i has SNR of: $(-32 + \text{Adsl2SubcarrierSnr}(i)/2)$ in dB (i.e., -32 to 95dB).

The special value 255 means that no measurement could be done for the subcarrier because it is out of the PSD mask passband or that the noise PSD is out of range to be represented.

Each value in this array is 8 bits wide."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.20.2 (SNRpsds)
and paragraph 7.5.1.20.4 (SNRpsus)"

::= { adsl2SCStatusEntry 3 }

adsl2SCStatusBitsAlloc OBJECT-TYPE

SYNTAX OCTET STRING (SIZE(0..256))

UNITS "bits"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The bits allocation per sub-carrier. An array of 256 bytes (512 nibbles), designed for supporting up to 512 (downstream) sub-carriers.

The number of utilized nibbles on downstream direction depends on NSCds, and on upstream direction it depends on NSCus. This value is referred here as NSC.

Nibble i ($0 \leq i < \text{NSC}$) is set to a value in the range 0 to 15 to indicate that the respective downstream or upstream sub-carrier i has the same amount of bits allocation."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.21.1 (BITSpsds)
and paragraph 7.5.1.21.2 (BITSpsus)"

::= { adsl2SCStatusEntry 4 }

adsl2SCStatusGainAlloc OBJECT-TYPE

SYNTAX OCTET STRING (SIZE(0..1024))

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The gain allocation per sub-carrier. An array of 512 16-bits values, designed for supporting up to 512 (downstream) sub-carriers.

The number of utilized octets on downstream direction depends on NSCds, and on upstream direction it depends on NSCus. This value is referred here as NSC.

Value i ($0 \leq i < \text{NSC}$) is in the range 0 to 4093 to indicate that the respective downstream or upstream sub-carrier i has the same amount of gain value.

The gain value is represented as a multiple of 1/512 on linear scale. Each value in this array is 16 bits wide and is stored in big endian format."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.21.3 (GAINSpsds)
and paragraph 7.5.1.21.4 (GAINSpsus)"

::= { adsl2SCStatusEntry 5 }

adsl2SCStatusTssi OBJECT-TYPE

SYNTAX Adsl2Tssi

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The transmit spectrum shaping (TSSi) breakpoints expressed as the set of breakpoints exchanged during G.994.1.

Each breakpoint is a pair of values occupying 3 octets with the following structure:

First 2 octets - Index of the subcarrier used in the context of the breakpoint.

Third octet - The shaping parameter at the breakpoint.

Subcarrier index is an unsigned number in the range 1 to either NSCds (downstream direction) or NSCus (upstream direction).

The shaping parameter value is in the range 0 to 127 (units of -0.5dB). The special value 127 indicates that the subcarrier is not transmitted."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.21.5 (TSSpsds)
and paragraph 7.5.1.21.6 (TSSpsus)"

::= { adsl2SCStatusEntry 6 }

adsl2SCStatusLinScale OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The scale factor to be applied to the H(f) linear representation values for the respective transmission direction. This parameter is only available after a loop diagnostic procedure."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.18.1 (HLINSCds) and paragraph 7.5.1.18.5 (HLINSCus)"

::= { adsl2SCStatusEntry 7 }

adsl2SCStatusLinReal OBJECT-TYPE

SYNTAX OCTET STRING (SIZE(0..1024))

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"An array of up to 512 complex H(f) linear representation values in linear scale for the respective transmission direction. It is designed to support up to 512 (downstream) sub-carriers.

The number of utilized values on downstream direction depends on NSCds, and on upstream direction it depends on NSCus. This value is referred here as NSC.

Each array entry represents the real component [referred here as a(i)] of Hlin(f = i*Df) value for a particular sub-carrier index i (0 <= i < NSC).

Hlin(f) is represented as ((scale/2¹⁵)*((a(i)+j*b(i))/2¹⁵)), where scale is Adsl2SubcarrierLinScale and a(i) and b(i) [provided by the Adsl2SubcarrierLinImg object] are in the range (-2¹⁵+1) to (+2¹⁵-1).

A special value a(i)=b(i)= -2¹⁵ indicates that no measurement could be done for the subcarrier because it is out of the passband or that the attenuation is out of range to be represented. This parameter is only available after a loop diagnostic procedure.

Each value in this array is 16 bits wide and is stored in big endian format."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.18.2 (HLINpsds) and paragraph 7.5.1.18.6 (HLINpsds)"

::= { adsl2SCStatusEntry 8 }

adsl2SCStatusLinImg OBJECT-TYPE

SYNTAX OCTET STRING (SIZE(0..1024))

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"An array of up to 512 complex $H(f)$ linear representation values in linear scale for the respective transmission direction. It is designed to support up to 512 (downstream) sub-carriers.

The number of utilized values on downstream direction depends on NSCds, and on upstream direction it depends on NSCus. This value is referred here as NSC.

Each array entry represents the imaginary component [referred here as $b(i)$] of $H_{lin}(f = i \cdot \Delta f)$ value for a particular sub-carrier index i ($0 \leq i < NSC$).

$H_{lin}(f)$ is represented as $((scale/2^{15}) * ((a(i) + j * b(i)) / 2^{15}))$, where scale is `Adsl2SubcarrierLinScale` and $a(i)$ [provided by the `Adsl2SubcarrierLinReal` object] and $b(i)$ are in the range $(-2^{15}+1)$ to $(+2^{15}-1)$.

A special value $a(i)=b(i)= -2^{15}$ indicates that no measurement could be done for the subcarrier because it is out of the passband or that the attenuation is out of range to be represented. This parameter is only available after a loop diagnostic procedure.

Each value in this array is 16 bits wide and is stored in big endian format."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.18.2 (HLINpsds)
and paragraph 7.5.1.18.6 (HLINpsds)"
::= { adsl2SCStatusEntry 9 }

`adsl2SCStatusLogMt` OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The number of symbols used to measure the $H(f)$ logarithmic measurement values for the respective transmission direction. This parameter should correspond to the value specified in the recommendation (e.g., the number of symbols in 1 second time interval for G.992.3). This parameter corresponds to 1 second in loop diagnostic procedure and should be updated in initialization"

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.18.3 (HLOGMTds)
and paragraph 7.5.1.18.7 (HLOGMTus)"
::= { adsl2SCStatusEntry 10 }

`adsl2SCStatusLog` OBJECT-TYPE

SYNTAX OCTET STRING (SIZE(0..1024))

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"An array of up to 512 real $H(f)$ logarithmic representation values in dB for the respective transmission direction. It is

designed to support up to 512 (downstream) sub-carriers

The number of utilized values on downstream direction depends on NSCds, and on upstream direction it depends on NSCus. This value is referred here as NSC.

Each array entry represents the real $Hlog(f = i \cdot Df)$ value for a particular sub-carrier index i , ($0 \leq i < NSC$).

The real $Hlog(f)$ value is represented as $(6-m(i)/10)$, with $m(i)$ in the range 0 to 1022. A special value $m=1023$ indicates that no measurement could be done for the subcarrier because it is out of the passband or that the attenuation is out of range to be represented. This parameter is applicable in loop diagnostic procedure and initialization.

Each value in this array is 16 bits wide and is stored in big endian format."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.18.4 (HLOGpsds)
and paragraph 7.5.1.18.8 (HLOGpsus)"

::= { adsl2SCStatusEntry 11 }

adsl2SCStatusQlnMt OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The number of symbols used to measure the Quiet Line Noise values on the respective transmission direction. This parameter should correspond to the value specified in the recommendation (e.g., the number of symbols in 1 second time interval for G.992.3). This parameter corresponds to 1 second in loop diagnostic procedure and should be updated in initialization "

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.19.1 (QLNMTds)
and paragraph 7.5.1.19.3 (QLNMTus)"

::= { adsl2SCStatusEntry 12 }

adsl2SCStatusQln OBJECT-TYPE

SYNTAX OCTET STRING (SIZE(0..512))

UNITS "dBm/Hz"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"An array of up to 512 real Quiet Line Noise values in dBm/Hz for the respective transmission direction. It is designed for up to 512 (downstream) sub-carriers

The number of utilized values on downstream direction depends on NSCds, and on upstream direction it depends on NSCus. This value is referred here as NSC.

Each array entry represents the $QLN(f = i \cdot Df)$ value for a particular sub-carrier index i , ($0 \leq i < NSC$).

The $QLN(f)$ is represented as $(-23-n(i)/2)$, with $n(i)$ in the range 0 to 254. A special value $n(i)=255$ indicates that no measurement could be done for the subcarrier because it is out of the passband or that the noise PSD is out of range to be represented.

This parameter is applicable in loop diagnostic procedure and initialization. Each value in this array is 8 bits wide."

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.19.2 (QLNpsds)
and paragraph 7.5.1.19.4 (QLNpsus)"

::= { adsl2SCStatusEntry 13 }

adsl2SCStatusLnAtten OBJECT-TYPE

SYNTAX Unsigned32

UNITS "0.1 dB"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"When referring to the downstream direction, it is the measured difference in the total power transmitted by the ATU-C and the total power received by the ATU-R over all sub-carriers during diagnostics mode.

When referring to the upstream direction, it is the measured difference in the total power transmitted by the ATU-R and the total power received by the ATU-C over all sub-carriers during diagnostics mode.

It ranges from 0 to 1270 units of 0.1 dB (Physical values are 0 to 127 dB). A value of all 1's indicates the line attenuation is out of range to be represented.

This object reflects the value of the parameter following the most recent DELT performed on the associated line. Once the DELT process is over, the parameter no longer changes until the row is deleted or a new DELT process is initiated. "

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.6 (LATNds)
and paragraph 7.5.1.7 (LATNus)"

::= { adsl2SCStatusEntry 14 }

adsl2SCStatusSigAtten OBJECT-TYPE

SYNTAX Unsigned32

UNITS "0.1 dB"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"When referring to the downstream direction, it is the measured difference in the total power transmitted by the ATU-C and the total power received by the ATU-R over all sub carriers during Showtime after the diagnostics mode.

When referring to the upstream direction, it is the measured difference in the total power transmitted by the

ATU-R and the total power received by the ATU-C over all sub carriers during Showtime after the diagnostics mode.

It ranges from 0 to 1270 units of 0.1 dB (Physical values are 0 to 127 dB). A value of all 1's indicates the line attenuation is out of range to be represented.

This object reflects the value of the parameter following the most recent DELT performed on the associated line. Once the DELT process is over, the parameter no longer changes until the row is deleted or a new DELT process is initiated. "

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.8 (SATNdS)
and paragraph 7.5.1.9 (SATNus)"
::= { adsl2SCStatusEntry 15 }

adsl2SCStatusSnrMargin OBJECT-TYPE

SYNTAX Integer32

UNITS "0.1 dB"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"SNR Margin is the maximum increase in dB of the noise power received at the ATU (ATU-R on downstream direction and ATU-C on upstream direction), such that the BER requirements are met for all bearer channels received at the ATU. It ranges from -640 to 630 units of 0.1 dB (Physical values are -64 to 63 dB). A value of all 1's indicates the SNR margin is out of range to be represented.

This object reflects the value of the parameter following the most recent DELT performed on the associated line. Once the DELT process is over, the parameter no longer changes until the row is deleted or a new DELT process is initiated. "

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.10 (SNRMds)
and paragraph 7.5.1.11 (SNRMus)"
::= { adsl2SCStatusEntry 16 }

adsl2SCStatusAttainableRate OBJECT-TYPE

SYNTAX Unsigned32

UNITS "bits/second"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Maximum Attainable Data Rate. The maximum net data rate currently attainable by the ATU-C transmitter and ATU-R receiver (when referring to downstream direction) or by the ATU-R transmitter and ATU-C receiver (when referring to upstream direction). Value is coded in bits/s.

This object reflects the value of the parameter following the most recent DELT performed on the associated line. Once the DELT process is over, the parameter no longer changes

until the row is deleted or a new DELT process is initiated. "
REFERENCE "ITU-T G.997.1, paragraph 7.5.1.12 (ATTNDRds)
and paragraph 7.5.1.13 (ATTNDRus)"
::= { adsl2SCStatusEntry 17 }

adsl2SCStatusActAtp OBJECT-TYPE

SYNTAX Integer32

UNITS "0.1 dB"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Actual Aggregate Transmit Power from the ATU (ATU-R on downstream direction and ATU-C on upstream direction), at the instant of measurement. It ranges from -310 to 310 units of 0.1 dB (Physical values are -31 to 31 dBm). A value of all 1's indicates the measurement is out of range to be represented.

This object reflects the value of the parameter following the most recent DELT performed on the associated line. Once the DELT process is over, the parameter no longer changes until the row is deleted or a new DELT process is initiated. "

REFERENCE "ITU-T G.997.1, paragraph 7.5.1.14 (ACTPSDds)
and paragraph 7.5.1.15 (ACTPSDus)"

::= { adsl2SCStatusEntry 18 }

adsl2SCStatusRowStatus OBJECT-TYPE

SYNTAX RowStatus

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"Row Status. The SNMP agent should create a row in this table for storing the results of a DELT performed on the associated line, if such a row does not already exist. The SNMP agent may have limited resources; therefore, if multiple rows co-exist in the table, it may fail to add new rows to the table or allocate memory resources for a new DELT process. If that occurs, the SNMP agent responds with either the value 'tableFull' or the value

'noResources' (for adsl2LineCmndConfLdsfFailReason object in adsl2LineTable)

The management system (the operator) may delete rows according to any scheme. E.g., after retrieving the results."

::= { adsl2SCStatusEntry 19 }

-- adsl2LineInventoryTable --

adsl2LineInventoryTable OBJECT-TYPE

SYNTAX SEQUENCE OF Adsl2LineInventoryEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2LineInventoryTable contains inventory of ADSL2 unit. The objects in this table are NOT persistent."

::= { adsl2Inventory 1 }

adsl2LineInventoryEntry OBJECT-TYPE

SYNTAX Adsl2LineInventoryEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2LineInventoryTable contains inventory of ADSL2 unit.

The index of this table is an interface index where the interface has an ifType of adsl2(230)."

INDEX { ifIndex, adsl2LInvUnit }

::= { adsl2LineInventoryTable 1 }

Adsl2LineInventoryEntry ::=

SEQUENCE {

adsl2LInvUnit	Adsl2Unit,
adsl2LInvG994VendorId	OCTET STRING,
adsl2LInvSystemVendorId	OCTET STRING,
adsl2LInvVersionNumber	OCTET STRING,
adsl2LInvSerialNumber	OCTET STRING,
adsl2LInvSelfTestResult	OCTET STRING,
adsl2LInvTransmissionCapabilities	Adsl2TransmissionModeType

}

adsl2LInvUnit OBJECT-TYPE

SYNTAX Adsl2Unit

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The termination unit ATUC{1} or ATUR{2}."

::= { adsl2LineInventoryEntry 1 }

adsl2LInvG994VendorId OBJECT-TYPE

SYNTAX OCTET STRING (SIZE(0..8))

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The ATU G.994.1 Vendor ID as inserted in the G.994.1 CL/CLR message. It consists of 8 binary octets, including a country code followed by a (regionally allocated) provider code, as defined in Recommendation T.35."

REFERENCE "ITU-T G.997.1, paragraph 7.4"
::= { adsl2LineInventoryEntry 2 }

adsl2LInvSystemVendorId OBJECT-TYPE

SYNTAX OCTET STRING (SIZE(0..8))

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The ATU System Vendor ID (identifies the ATU system integrator) as inserted in the Overhead Messages (both ATUs for G.992.3 and G.992.4) or in the Embedded Operations Channel (only ATU-R in G.992.1 and G.992.2). It consists of 8 binary octets, with same format as used for Adsl2InvG994VendorId."

REFERENCE "ITU-T G.997.1, paragraph 7.4"
::= { adsl2LineInventoryEntry 3 }

adsl2LInvVersionNumber OBJECT-TYPE

SYNTAX OCTET STRING (SIZE(0..16))

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The ATU version number (vendor specific information) as inserted in the Overhead Messages (both ATUs for G.992.3 and G.992.4) or in the Embedded Operations Channel (only ATU-R in G.992.1 and G.992.2). It consists of up to 16 binary octets."

REFERENCE "ITU-T G.997.1, paragraph 7.4"
::= { adsl2LineInventoryEntry 4 }

adsl2LInvSerialNumber OBJECT-TYPE

SYNTAX OCTET STRING (SIZE(0..32))

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The ATU serial number (vendor specific information) as inserted in the Overhead Messages (both ATUs for G.992.3 and G.992.4) or in the Embedded Operations Channel (only ATU-R in G.992.1 and G.992.2). It is vendor specific information. It consists of up to 32 ASCII characters."

REFERENCE "ITU-T G.997.1, paragraph 7.4"
::= { adsl2LineInventoryEntry 5 }

adsl2LInvSelfTestResult OBJECT-TYPE

SYNTAX OCTET STRING (SIZE(0..4))

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The ATU self-test result, coded as a 32-bit integer. The

most significant octet of this object is '0' if the self-test passed, and '1' if the self-test failed. The interpretation of the other octets is vendor discretionary."

REFERENCE "ITU-T G.997.1, paragraph 7.4"

::= { adsl2LineInventoryEntry 6 }

adsl2LInvTransmissionCapabilities OBJECT-TYPE

SYNTAX Adsl2TransmissionModeType

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The ATU transmission system capability list of the different coding types. It is coded in a bit-map representation with 1 or more bits set. A bit set to '1' means that the ATU supports the respective coding. The value may be derived from the handshaking procedures defined in G.994.1. A set of ADSL2 line transmission modes, with one bit per mode."

REFERENCE "ITU-T G.997.1, paragraph 7.4"

::= { adsl2LineInventoryEntry 7 }

-- adsl2LineConfTemplateTable --

adsl2LineConfTemplateTable OBJECT-TYPE

SYNTAX SEQUENCE OF Adsl2LineConfTemplateEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2LineConfTemplateTable contains ADSL2 line configuration template.

Entries in this table MUST be maintained in a persistent manner."

::= { adsl2ProfileLine 1 }

adsl2LineConfTemplateEntry OBJECT-TYPE

SYNTAX Adsl2LineConfTemplateEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2LineConfTemplateTable contains ADSL2 line configuration template.

A default template with an index of 'DEFVAL' will always exist and its parameters will be set to vendor-specific values, unless otherwise specified in this document"

INDEX { adsl2LConfTempTemplateName }

::= { adsl2LineConfTemplateTable 1 }


```
Adsl2LineConfTemplateEntry ::=
    SEQUENCE {
        adsl2LConfTempTemplateName      SnmpAdminString,
        adsl2LConfTempLineProfile        SnmpAdminString,
        adsl2LConfTempChan1ConfProfile   SnmpAdminString,
        adsl2LConfTempChan1RaRatioDs     Unsigned32,
        adsl2LConfTempChan1RaRatioUs     Unsigned32,
        adsl2LConfTempChan2ConfProfile   SnmpAdminString,
        adsl2LConfTempChan2RaRatioDs     Unsigned32,
        adsl2LConfTempChan2RaRatioUs     Unsigned32,
        adsl2LConfTempChan3ConfProfile   SnmpAdminString,
        adsl2LConfTempChan3RaRatioDs     Unsigned32,
        adsl2LConfTempChan3RaRatioUs     Unsigned32,
        adsl2LConfTempChan4ConfProfile   SnmpAdminString,
        adsl2LConfTempChan4RaRatioDs     Unsigned32,
        adsl2LConfTempChan4RaRatioUs     Unsigned32,
        adsl2LConfTempRowStatus          RowStatus
    }
```

```
adsl2LConfTempTemplateName OBJECT-TYPE
    SYNTAX      SnmpAdminString (SIZE(1..32))
    MAX-ACCESS   not-accessible
    STATUS       current
    DESCRIPTION
        "This object identifies a row in this table."
    REFERENCE    "DSL Forum TR-90, paragraph 5.1.4"
    ::= { adsl2LineConfTemplateEntry 1 }
```

```
adsl2LConfTempLineProfile OBJECT-TYPE
    SYNTAX      SnmpAdminString (SIZE(1..32))
    MAX-ACCESS   read-create
    STATUS       current
    DESCRIPTION
        "The value of this object identifies the row in the ADSL2 Line
        Configuration Profile Table, (Adsl2LineConfProfileTable),
        which applies for this ADSL2 line."
    REFERENCE    "DSL Forum TR-90, paragraph 5.1.4"
    DEFVAL       { "DEFVAL" }
    ::= { adsl2LineConfTemplateEntry 2 }
```

```
adsl2LConfTempChan1ConfProfile OBJECT-TYPE
    SYNTAX      SnmpAdminString (SIZE(1..32))
    MAX-ACCESS   read-create
    STATUS       current
    DESCRIPTION
        "The value of this object identifies the row in the ADSL2
        Channel Configuration Profile Table,
        (Adsl2ChanConfProfileTable) that applies to ADSL2 bearer
```


channel #1. The channel profile name specified here must match the name of an existing row in the adsl2ChConfProfileTable table."

DEFVAL { "DEFVAL" }

::= { adsl2LineConfTemplateEntry 3 }

adsl2LConfTempChan1RaRatioDs OBJECT-TYPE

SYNTAX Unsigned32(0..100)

UNITS "percents"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Rate Adaptation Ratio. The ratio (in %) that should be taken into account for the bearer channel #1 when performing rate adaptation on Downstream. The ratio refers to the available data rate in excess of the Minimum Data Rate, summed over all bearer channels. Also, the 100 - Adsl2ConfTemplateChan1RaRatioDs is the ratio of excess data rate to be assigned to all other bearer channels on Downstream direction. The sum of rate adaptation ratios over all bearers on the same direction shall be equal to 100%."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.1"

DEFVAL { 100 }

::= { adsl2LineConfTemplateEntry 4 }

adsl2LConfTempChan1RaRatioUs OBJECT-TYPE

SYNTAX Unsigned32(0..100)

UNITS "percents"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Rate Adaptation Ratio. The ratio (in %) that should be taken into account for the bearer channel #1 when performing rate adaptation on Upstream. The ratio refers to the available data rate in excess of the Minimum Data Rate, summed over all bearer channels. Also, the 100 - Adsl2ConfTemplateChan1RaRatioUs is the ratio of excess data rate to be assigned to all other bearer channels on Upstream direction. The sum of rate adaptation ratios over all bearers on the same direction shall be equal to 100 %."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.1"

DEFVAL { 100 }

::= { adsl2LineConfTemplateEntry 5 }

adsl2LConfTempChan2ConfProfile OBJECT-TYPE

SYNTAX SnmpAdminString (SIZE(0..32))

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The value of this object identifies the row in the ADSL2 Channel Configuration Profile Table, (Adsl2ChanConfProfileTable) that applies to ADSL2 bearer channel #2. If the channel is unused, then the object is set to a zero length string.

This object may be set to a zero length string only if adsl2LConfTempChan3ConfProfile contains a zero length string."

DEFVAL { "" }

::= { adsl2LineConfTemplateEntry 6 }

adsl2LConfTempChan2RaRatioDs OBJECT-TYPE

SYNTAX Unsigned32(0..100)

UNITS "percents"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Rate Adaptation Ratio. The ratio (in %) that should be taken into account for the bearer channel #2 when performing rate adaptation on Downstream. The ratio refers to the available data rate in excess of the Minimum Data Rate, summed over all bearer channels. Also, the

100 - Adsl2ConfTemplateChan2RaRatioDs is the ratio of excess data rate to be assigned to all other bearer channels on Downstream direction. The sum of rate adaptation ratios over all bearers on the same direction shall be equal to 100%."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.1"

DEFVAL { 0 }

::= { adsl2LineConfTemplateEntry 7 }

adsl2LConfTempChan2RaRatioUs OBJECT-TYPE

SYNTAX Unsigned32(0..100)

UNITS "percents"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Rate Adaptation Ratio. The ratio (in %) that should be taken into account for the bearer channel #2 when performing rate adaptation on Upstream. The ratio refers to the available data rate in excess of the Minimum Data Rate, summed over all bearer channels. Also, the

100 - Adsl2ConfTemplateChan2RaRatioUs is the ratio of excess data rate to be assigned to all other bearer channels on Upstream direction. The sum of rate adaptation ratios over all bearers on the same direction shall be equal to 100 %."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.1"
DEFVAL { 0 }
::= { adsl2LineConfTemplateEntry 8 }

adsl2LConfTempChan3ConfProfile OBJECT-TYPE

SYNTAX SnmpAdminString (SIZE(0..32))

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The value of this object identifies the row in the ADSL2 Channel Configuration Profile Table, (Adsl2ChanConfProfileTable) that applies to ADSL2 bearer channel #3. If the channel is unused, then the object is set to a zero length string.

This object may be set to a zero length string only if adsl2LConfTempChan4ConfProfile contains a zero length string.

This object may be set to a non-zero length string only if adsl2LConfTempChan2ConfProfile contains a non-zero length string."

DEFVAL { "" }

::= { adsl2LineConfTemplateEntry 9 }

adsl2LConfTempChan3RaRatioDs OBJECT-TYPE

SYNTAX Unsigned32(0..100)

UNITS "percents"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Rate Adaptation Ratio. The ratio (in %) that should be taken into account for the bearer channel #3 when performing rate adaptation on Downstream. The ratio refers to the available data rate in excess of the Minimum Data Rate, summed over all bearer channels. Also, the 100 - Adsl2ConfTemplateChan3RaRatioDs is the ratio of excess data rate to be assigned to all other bearer channels on Downstream direction. The sum of rate adaptation ratios over all bearers on the same direction shall be equal to 100%."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.1"

DEFVAL { 0 }

::= { adsl2LineConfTemplateEntry 10 }

adsl2LConfTempChan3RaRatioUs OBJECT-TYPE

SYNTAX Unsigned32(0..100)

UNITS "percents"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Rate Adaptation Ratio. The ratio (in %) that should be taken into account for the bearer channel #3 when performing rate adaptation on Upstream. The ratio refers to the available data rate in excess of the Minimum Data Rate, summed over all bearer channels. Also, the 100 - Adsl2ConfTemplateChan3RaRatioUs is the ratio of excess data rate to be assigned to all other bearer channels on Upstream direction. The sum of rate adaptation ratios over all bearers on the same direction shall be equal to 100%."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.1"

DEFVAL { 0 }

::= { adsl2LineConfTemplateEntry 11 }

adsl2LConfTempChan4ConfProfile OBJECT-TYPE

SYNTAX SnmpAdminString (SIZE(0..32))

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The value of this object identifies the row in the ADSL2 Channel Configuration Profile Table (Adsl2ChanConfProfileTableDs) that applies to ADSL2 bearer channel #4. If the channel is unused, then the object is set to a zero length string.

This object may be set to a non-zero length string only if adsl2LConfTempChan3ConfProfile contains a non-zero length string."

DEFVAL { "" }

::= { adsl2LineConfTemplateEntry 12 }

adsl2LConfTempChan4RaRatioDs OBJECT-TYPE

SYNTAX Unsigned32(0..100)

UNITS "percents"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Rate Adaptation Ratio. The ratio (in %) that should be taken into account for the bearer channel #4 when performing rate adaptation on Downstream. The ratio refers to the available data rate in excess of the Minimum Data Rate, summed over all bearer channels. Also, the 100 -

adsl2LConfTempChan4RaRatioDs is the ratio of excess data rate to be assigned to all other bearer channels. The sum of rate adaptation ratios over all bearers on the same direction shall sum to 100%."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.1"

DEFVAL { 0 }

::= { adsl2LineConfTemplateEntry 13 }

adsl2LConfTempChan4RaRatioUs OBJECT-TYPE

SYNTAX Unsigned32(0..100)

UNITS "percents"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Rate Adaptation Ratio. The ratio (in %) that should be taken into account for the bearer channel #4 when performing rate adaptation on Upstream. The ratio refers to the available data rate in excess of the Minimum Data Rate, summed over all bearer channels. Also, the 100 -

adsl2LConfTempChan4RaRatioUs is the ratio of excess data rate to be assigned to all other bearer channels. The sum of rate adaptation ratios over all bearers on the same direction shall sum to 100%."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.1"

DEFVAL { 0 }

::= { adsl2LineConfTemplateEntry 14 }

adsl2LConfTempRowStatus OBJECT-TYPE

SYNTAX RowStatus

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"This object is used to create a new row or to modify or delete an existing row in this table.

A template is activated by setting this object to 'active'. When 'active' is set, the system will validate the template. Template modification is prohibited while this object is set to 'active'.

Before a template can be deleted or taken out of service (by setting this object to 'destroy' or 'notInService'), it must be first unreferenced from all associated lines."

::= { adsl2LineConfTemplateEntry 15 }

```
-----  
--          adsl2LineConfProfTable          --  
-----
```

adsl2LineConfProfTable OBJECT-TYPE

SYNTAX SEQUENCE OF Adsl2LineConfProfEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2LineConfProfTable contains ADSL2 line profile configuration.

Entries in this table MUST be maintained in a persistent manner."

::= { adsl2ProfileLine 2 }

adsl2LineConfProfEntry OBJECT-TYPE

SYNTAX Adsl2LineConfProfEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2LineConfProfTable contains ADSL2 line profile configuration.

A default profile with an index of 'DEFVAL' will always exist and its parameters will be set to vendor-specific values, unless otherwise specified in this document"

INDEX { adsl2LConfProfProfileName }

::= { adsl2LineConfProfTable 1 }

Adsl2LineConfProfEntry ::=

SEQUENCE {

adsl2LConfProfProfileName	SnmpAdminString,
adsl2LConfProfScMaskDs	Adsl2ScMaskDs,
adsl2LConfProfScMaskUs	Adsl2ScMaskUs,
adsl2LConfProfRfiBandsDs	Adsl2RfiDs,
adsl2LConfProfRaModeDs	Adsl2RaMode,
adsl2LConfProfRaModeUs	Adsl2RaMode,
adsl2LConfProfRaUsNrmDs	Unsigned32,
adsl2LConfProfRaUsNrmUs	Unsigned32,
adsl2LConfProfRaUsTimeDs	Unsigned32,
adsl2LConfProfRaUsTimeUs	Unsigned32,
adsl2LConfProfRaDsNrmsDs	Unsigned32,
adsl2LConfProfRaDsNrmsUs	Unsigned32,
adsl2LConfProfRaDsTimeDs	Unsigned32,
adsl2LConfProfRaDsTimeUs	Unsigned32,
adsl2LConfProfTargetSnrmDs	Unsigned32,
adsl2LConfProfTargetSnrmUs	Unsigned32,
adsl2LConfProfMaxSnrmDs	Unsigned32,
adsl2LConfProfMaxSnrmUs	Unsigned32,
adsl2LConfProfMinSnrmDs	Unsigned32,
adsl2LConfProfMinSnrmUs	Unsigned32,
adsl2LConfProfMsgMinUs	Unsigned32,
adsl2LConfProfMsgMinDs	Unsigned32,
adsl2LConfProfAtuTransSysEna	Adsl2TransmissionModeType,
adsl2LConfProfPmMode	Adsl2LConfProfPmMode,
adsl2LConfProfL0Time	Unsigned32,


```
    adsl2LConfProfL2Time           Unsigned32,
    adsl2LConfProfL2Atpr           Unsigned32,
    adsl2LConfProfL2Atprt          Unsigned32,
    adsl2LConfProfRowStatus        RowStatus
}
```

adsl2LConfProfProfileName OBJECT-TYPE

```
SYNTAX      SnmpAdminString (SIZE(1..32))
MAX-ACCESS  not-accessible
STATUS      current
DESCRIPTION
```

"This object identifies a row in this table."

::= { adsl2LineConfProfEntry 1 }

adsl2LConfProfScMaskDs OBJECT-TYPE

```
SYNTAX      Adsl2ScMaskDs
MAX-ACCESS  read-create
STATUS      current
DESCRIPTION
```

"Sub-carriers mask. A bitmap of 512 bits that allows masking up to 512 downstream sub-carriers, depending on NSCds. If bit i ($0 \leq i < \text{NSCds}$) is set to '1', the respective downstream sub-carrier i is masked, and if set to '0', the respective sub-carrier is unmasked. Note that there should always be unmasked sub-carriers (i.e., the object cannot be all 1's). Also note that if $\text{NSCds} < 512$, all bits i ($\text{NSCds} \leq i < 512$) should be set to '1'."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.2.6"

::= { adsl2LineConfProfEntry 2 }

adsl2LConfProfScMaskUs OBJECT-TYPE

```
SYNTAX      Adsl2ScMaskUs
MAX-ACCESS  read-create
STATUS      current
DESCRIPTION
```

"Sub-carriers mask. A bitmap of 64 bits that allows masking up to 64 downstream sub-carriers, depending on NSCds. If bit i ($0 \leq i < \text{NSCus}$) is set to '1', the respective upstream sub-carrier i is masked, and if set to '0', the respective sub-carrier is unmasked. Note that there should always be unmasked sub-carriers (i.e., the object cannot be all 1's). Also note that if $\text{NSCus} < 64$, all bits i ($\text{NSCus} \leq i < 64$) should be set to '1'."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.2.7"

::= { adsl2LineConfProfEntry 3 }

adsl2LConfProfRfiBandsDs OBJECT-TYPE

```
SYNTAX      Adsl2RfiDs
```


MAX-ACCESS read-create
STATUS current
DESCRIPTION

"The subset of downstream PSD mask breakpoints that shall be used to notch an RFI band.

The specific interpolation around these points is defined in G.992.5. It is a bitmap of 512 bits that allows referring to up to 512 downstream sub-carriers, depending on NSCds. If bit i ($0 \leq i < \text{NSCds}$) is set to '1', the respective downstream sub-carrier i is part of a notch filter, and if set to '0', the respective sub-carrier is not part of a notch filter. This information complements the specification provided by adsl2LconfProfPsdMaskDs.

Note that if $\text{NSCds} < 512$, all bits i ($\text{NSCds} < i < 512$) should be set to '0'. "

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.2.9"
::= { adsl2LineConfProfEntry 4 }

adsl2LConfProfRaModeDs OBJECT-TYPE

SYNTAX Adsl2RaMode
MAX-ACCESS read-create
STATUS current
DESCRIPTION

"The mode of operation of a rate-adaptive ATU-C in the transmit direction. The parameter can take three values:

manual (1),
raInit (2),
dynamicRa (3)."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.4.1"
DEFVAL { manual }
::= { adsl2LineConfProfEntry 5 }

adsl2LConfProfRaModeUs OBJECT-TYPE

SYNTAX Adsl2RaMode
MAX-ACCESS read-create
STATUS current
DESCRIPTION

"The mode of operation of a rate-adaptive ATU-R in the transmit direction. The parameter can take three values:

manual (1),
raInit (2),
dynamicRa (3)."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.4.2"
DEFVAL { manual }
::= { adsl2LineConfProfEntry 6 }

adsl2LConfProfRaUsNrmDs OBJECT-TYPE

SYNTAX Unsigned32(0..310)

UNITS "0.1 dB"
MAX-ACCESS read-create
STATUS current
DESCRIPTION
"The Downstream Up-Shift Noise Margin value, to be used when
Adsl2LineConfRaModeDs is set to DynamicRa. If the downstream
noise margin is above this value and stays above it for
more than the time specified by the Adsl2LineConfRaUsTimeDs,
the ATU-R shall attempt to increase the downstream net data
rate. The Downstream Up-shift Noise Margin ranges from 0 to
310 units of 0.1 dB (Physical values are 0 to 31 dB)."
REFERENCE "ITU-T G.997.1, paragraph 7.3.1.4.3"
DEFVAL { 10 }
::= { adsl2LineConfProfEntry 7 }

adsl2LConfProfRaUsNrmUs OBJECT-TYPE

SYNTAX Unsigned32(0..310)
UNITS "0.1 dB"
MAX-ACCESS read-create
STATUS current
DESCRIPTION
"The Upstream Up-Shift Noise Margin value, to be used when
Adsl2LineConfRaModeUs is set to DynamicRa. If the upstream
noise margin is above this value and stays above it for more
than the time specified by the Adsl2LineConfRaUsTimeUs, the
ATU-C shall attempt to increase the upstream net data rate.
The Upstream Up-shift Noise Margin ranges from 0 to 310 units
of 0.1 dB (Physical values are 0 to 31 dB)."
REFERENCE "ITU-T G.997.1, paragraph 7.3.1.4.4"
DEFVAL { 10 }
::= { adsl2LineConfProfEntry 8 }

adsl2LConfProfRaUsTimeDs OBJECT-TYPE

SYNTAX Unsigned32(0..16383)
UNITS "seconds"
MAX-ACCESS read-create
STATUS current
DESCRIPTION
"The Downstream Up-Shift Time Interval, to be used when
Adsl2LineConfRaModeDs is set to DynamicRa. The interval of
time that the downstream noise margin should stay above the
Downstream Up-shift Noise Margin before the ATU-R shall
attempt to increase the downstream net data rate. The time
interval ranges from 0 to 16383 seconds."
REFERENCE "ITU-T G.997.1, paragraph 7.3.1.4.5"
DEFVAL { 3600 }
::= { adsl2LineConfProfEntry 9 }

adsl2LConfProfRaUsTimeUs OBJECT-TYPE

SYNTAX Unsigned32(0..16383)

UNITS "seconds"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The Upstream Up-Shift Time Interval, to be used when Adsl2LineConfRaModeUs is set to DynamicRa. The interval of time the upstream noise margin should stay above the Upstream Up-shift Noise Margin before the ATU-C shall attempt to increase the upstream net data rate. The time interval ranges from 0 to 16383 seconds."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.4.6"

DEFVAL { 3600 }

::= { adsl2LineConfProfEntry 10 }

adsl2LConfProfRaDsNrmsDs OBJECT-TYPE

SYNTAX Unsigned32(0..310)

UNITS "0.1 dB"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The Downstream Down-Shift Noise Margin value, to be used when Adsl2LineConfRaModeDs is set to DynamicRa. If the downstream noise margin is below this value and stays below that for more than the time specified by the Adsl2LineConfRaDsTimeDs, the ATU-R shall attempt to decrease the downstream net data rate. The Downstream Down-shift Noise Margin ranges from 0 to 310 units of 0.1 dB (Physical values are 0 to 31 dB)."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.4.7"

DEFVAL { 10 }

::= { adsl2LineConfProfEntry 11 }

adsl2LConfProfRaDsNrmsUs OBJECT-TYPE

SYNTAX Unsigned32(0..310)

UNITS "0.1 dB"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The Upstream Downshift Noise Margin value, to be used when Adsl2LineConfRaModeUs is set to DynamicRa. If the upstream noise margin is below this value and stays below that for more than the time specified by the Adsl2LineConfRaDsTimeUs, the ATU-C shall attempt to decrease the upstream net data rate. The Upstream Down-shift Noise Margin ranges from 0 to 310 units of 0.1 dB (Physical values are 0 to 31 dB)."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.4.8"

DEFVAL { 10 }


```
::= { adsl2LineConfProfEntry 12 }
```

```
adsl2LConfProfRaDsTimeDs OBJECT-TYPE
```

```
SYNTAX      Unsigned32(0..16383)
```

```
UNITS       "seconds"
```

```
MAX-ACCESS  read-create
```

```
STATUS      current
```

```
DESCRIPTION
```

"The Downstream Downshift Time Interval, to be used when Adsl2LineConfRaModeDs is set to DynamicRa. The interval of time the downstream noise margin should stay below the Downstream Down-shift Noise Margin before the ATU-R shall attempt to decrease the downstream net data rate. The time interval ranges from 0 to 16383 seconds."

```
REFERENCE   "ITU-T G.997.1, paragraph 7.3.1.4.9"
```

```
DEFVAL      { 3600 }
```

```
::= { adsl2LineConfProfEntry 13 }
```

```
adsl2LConfProfRaDsTimeUs OBJECT-TYPE
```

```
SYNTAX      Unsigned32(0..16383)
```

```
UNITS       "seconds"
```

```
MAX-ACCESS  read-create
```

```
STATUS      current
```

```
DESCRIPTION
```

"The Upstream Down-Shift Time Interval, to be used when Adsl2LineConfRaModeUs is set to DynamicRa. The interval of time the upstream noise margin should stay below the Upstream Down-shift Noise Margin before the ATU-C shall attempt to decrease the upstream net data rate. The time interval ranges from 0 to 16383 seconds."

```
REFERENCE   "ITU-T G.997.1, paragraph 7.3.1.4.10"
```

```
DEFVAL      { 3600 }
```

```
::= { adsl2LineConfProfEntry 14 }
```

```
adsl2LConfProfTargetSnrmDs OBJECT-TYPE
```

```
SYNTAX      Unsigned32(0..310)
```

```
UNITS       "0.1 dB"
```

```
MAX-ACCESS  read-create
```

```
STATUS      current
```

```
DESCRIPTION
```

"The minimum Noise Margin the ATU-R receiver shall achieve, relative to the BER requirement for each of the downstream

bearer channels, to successfully complete initialization.

The target noise margin ranges from 0 to 310 units of 0.1 dB (Physical values are 0 to 31 dB)."

```
REFERENCE   "ITU-T G.997.1, paragraph 7.3.1.3.1"
```



```
DEFVAL      { 60 }  
::= { adsl2LineConfProfEntry 15 }
```

adsl2LConfProfTargetSnrmUs OBJECT-TYPE

SYNTAX Unsigned32(0..310)

UNITS "0.1 dB"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The minimum Noise Margin the ATU-C receiver shall achieve,

relative to the BER requirement for each of the upstream

bearer channels, to successfully complete initialization.

The target noise margin ranges from 0 to 310 units of 0.1 dB
(Physical values are 0 to 31 dB)."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.3.2"

DEFVAL { 60 }

::= { adsl2LineConfProfEntry 16 }

adsl2LConfProfMaxSnrmDs OBJECT-TYPE

SYNTAX Unsigned32

UNITS "0.1 dB"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The maximum Noise Margin the ATU-R receiver shall try to
sustain. If the Noise Margin is above this level, the ATU-R
shall request that the ATU-C reduce the ATU-C transmit power
to get a noise margin below this limit (if this functionality
is supported). The maximum noise margin ranges from 0 to 310
units of 0.1 dB (Physical values are 0 to 31 dB). A value of
all 1's means that there is no maximum."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.3.3"

DEFVAL { 310 }

::= { adsl2LineConfProfEntry 17 }

adsl2LConfProfMaxSnrmUs OBJECT-TYPE

SYNTAX Unsigned32

UNITS "0.1 dB"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The maximum Noise Margin the ATU-C receiver shall try to
sustain. If the Noise Margin is above this level, the ATU-C
shall request that the ATU-R reduce the ATU-R transmit power
to get a noise margin below this limit (if this functionality
is supported). The maximum noise margin ranges from 0 to 310

units of 0.1 dB (Physical values are 0 to 31 dB). A value of all 1's means that there is no maximum."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.3.4"

DEFVAL { 310 }

::= { adsl2LineConfProfEntry 18 }

adsl2LConfProfMinSnrmDs OBJECT-TYPE

SYNTAX Unsigned32(0..310)

UNITS "0.1 dB"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The minimum Noise Margin the ATU-R receiver shall tolerate. If the noise margin falls below this level, the ATU-R shall request that the ATU-C increase the ATU-C transmit power. If an increase to ATU-C transmit power is not possible, a loss-of-margin (LOM) defect occurs, the ATU-R shall fail and attempt to reinitialize and the NMS shall be notified. The minimum noise margin ranges from 0 to 310 units of 0.1 dB (Physical values are 0 to 31 dB). A value of 0 means that there is no minimum."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.3.5"

DEFVAL { 10 }

::= { adsl2LineConfProfEntry 19 }

adsl2LConfProfMinSnrmUs OBJECT-TYPE

SYNTAX Unsigned32(0..310)

UNITS "0.1 dB"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The minimum Noise Margin the ATU-C receiver shall tolerate. If the noise margin falls below this level, the ATU-C shall request that the ATU-R increase the ATU-R transmit power. If an increase of ATU-R transmit power is not possible, a loss-of-margin (LOM) defect occurs, the ATU-C shall fail and attempt to re-initialize and the NMS shall be notified. The minimum noise margin ranges from 0 to 310 units of 0.1 dB (Physical values are 0 to 31 dB). A value of 0 means that there is no minimum."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.3.6"

DEFVAL { 10 }

::= { adsl2LineConfProfEntry 20 }

adsl2LConfProfMsgMinUs OBJECT-TYPE

SYNTAX Unsigned32(4000..63000)

UNITS "bits/second"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Minimum Overhead Rate Upstream. Defines the minimum rate of the message-based overhead that shall be maintained by the ATU in upstream direction. Expressed in bits per second and ranges from 4000 to 63000 bps."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.5.1"

DEFVAL { 4000 }

::= { adsl2LineConfProfEntry 21 }

adsl2LConfProfMsgMinDs OBJECT-TYPE

SYNTAX Unsigned32(4000..63000)

UNITS "bits/second"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Minimum Overhead Rate Downstream. Defines the minimum rate of the message-based overhead that shall be maintained by the ATU in downstream direction. Expressed in bits per second and ranges from 4000 to 63000 bps."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.5.2"

DEFVAL { 4000 }

::= { adsl2LineConfProfEntry 22 }

adsl2LConfProfAtuTransSysEna OBJECT-TYPE

SYNTAX Adsl2TransmissionModeType

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"ATU Transmission System Enabling (ATSE). A list of the different coding types enabled in this profile. It is coded in a bit-map representation with 1 or more bits set. A bit set to '1' means that the ATUs may apply the respective coding for the ADSL line. A bit set to '0' means that the ATUs cannot apply the respective coding for the ADSL line. All 'reserved' bits should be set to '0'."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.1.1"

::= { adsl2LineConfProfEntry 23 }

adsl2LConfProfPmMode OBJECT-TYPE

SYNTAX Adsl2LConfProfPmMode

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Power management state Enabling. Defines the power states the ATU-C or ATU-R may autonomously transition to on this line. The various bit positions are: allowTransitionsToIdle (0) and allowTransitionsToLowPower (1). A bit with a '1' value means

that the ATU is allowed to transit into the respective state and a '0' value means that the ATU is not allowed to transit into the respective state."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.1.4"

DEFVAL { { allowTransitionsToIdle, allowTransitionsToLowPower } }
::= { adsl2LineConfProfEntry 24 }

adsl2LConfProfL0Time OBJECT-TYPE

SYNTAX Unsigned32 (0..255)

UNITS "seconds"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"This minimum time (in seconds) between an Exit from the L2 state and the next Entry into the L2 state. It ranges from 0 to 255 seconds."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.1.5"

DEFVAL { 255 }

::= { adsl2LineConfProfEntry 25 }

adsl2LConfProfL2Time OBJECT-TYPE

SYNTAX Unsigned32 (0..255)

UNITS "seconds"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"This minimum time (in seconds) between an Entry into the L2 state and the first Power Trim in the L2 state and between two consecutive Power Trims in the L2 State. It ranges from 0 to 255 seconds."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.1.6"

DEFVAL { 255 }

::= { adsl2LineConfProfEntry 26 }

adsl2LConfProfL2Atpr OBJECT-TYPE

SYNTAX Unsigned32 (0..31)

UNITS "dB"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The maximum aggregate transmit power reduction (in dB) that can be performed at transition of L0 to L2 state or through a single Power Trim in the L2 state. It ranges from 0 dB to 31 dB."

REFERENCE "ITU-T G.997.1 (amendment 1), 7.3.1.1.7"

DEFVAL { 10 }

::= { adsl2LineConfProfEntry 27 }

adsl2LConfProfL2Atprt OBJECT-TYPE

SYNTAX Unsigned32 (0..31)

UNITS "dB"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The total maximum aggregate transmit power reduction (in dB) that can be performed in an L2 state. This is the sum of all reductions of L2 Request (i.e., at transition of L0 to L2 state) and Power Trims."

REFERENCE "ITU-T G.997.1 (amendment 1), 7.3.1.1.9"

DEFVAL { 31 }

::= { adsl2LineConfProfEntry 28 }

adsl2LConfProfRowStatus OBJECT-TYPE

SYNTAX RowStatus

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"This object is used to create a new row or to modify or delete an existing row in this table.

A profile is activated by setting this object to 'active'. When 'active' is set, the system will validate the profile. Profile modification is prohibited while this object is set to 'active'.

Before a profile can be deleted or taken out of service (by setting this object to 'destroy' or 'notInService'), it must be first unreferenced from all associated templates."

::= { adsl2LineConfProfEntry 29 }

-- adsl2LineConfProfModeSpecTable --

adsl2LineConfProfModeSpecTable OBJECT-TYPE

SYNTAX SEQUENCE OF Adsl2LineConfProfModeSpecEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2LineConfProfModeSpecTable extends the ADSL2 line configuration profile by ADSL Mode Specific parameters.

A row in this table that has an index of adsl2LconfProfAdslMode == defMode(1), is called a 'mandatory' row.

A row in this table that has an index such that `adsl2LconfProfAdslMode` is not equal to `defMode(1)`, is called an 'optional' row.

When a row in the `adsl2LineConfProfTable` table (the parent row) is created, the SNMP agent will automatically create a 'mandatory' row in this table. When the parent row is deleted, the SNMP agent will automatically delete all associated rows in this table. Any attempt to delete the 'mandatory' row using the `adsl2LconfProfModeSpecRowStatus` attribute will be rejected by the SNMP agent.

The manager MAY create an 'optional' row in this table using the `adsl2LconfProfModeSpecRowStatus` attribute if the parent row exists.

The manager MAY delete an 'optional' row in this table using the `adsl2LconfProfModeSpecRowStatus` attribute at any time.

If the actual transmission mode of a DSL line does not match one of the 'optional' rows in this table, then the line will use the PSD configuration from the 'mandatory' row.

Entries in this table MUST be maintained in a persistent manner."

```
::= { adsl2ProfileLine 3 }
```

```
adsl2LineConfProfModeSpecEntry OBJECT-TYPE
```

```
SYNTAX      Adsl2LineConfProfModeSpecEntry
```

```
MAX-ACCESS  not-accessible
```

```
STATUS      current
```

```
DESCRIPTION
```

```
"The table adsl2LineConfProfModeSpecTable extends the
ADSL2 line configuration profile by ADSL Mode Specific
parameters."
```

```
INDEX { adsl2LconfProfProfileName, adsl2LconfProfAdslMode }
```

```
::= { adsl2LineConfProfModeSpecTable 1 }
```

```
Adsl2LineConfProfModeSpecEntry ::=
```

```
SEQUENCE {
```

<code>adsl2LconfProfAdslMode</code>	<code>Adsl2OperationModes,</code>
<code>adsl2LconfProfMaxNomPsdDs</code>	<code>Integer32,</code>
<code>adsl2LconfProfMaxNomPsdUs</code>	<code>Integer32,</code>
<code>adsl2LconfProfMaxNomAtpDs</code>	<code>Unsigned32,</code>
<code>adsl2LconfProfMaxNomAtpUs</code>	<code>Unsigned32,</code>
<code>adsl2LconfProfMaxAggRxPwrUs</code>	<code>Integer32,</code>
<code>adsl2LconfProfPsdMaskDs</code>	<code>Adsl2PsdMaskDs,</code>
<code>adsl2LconfProfPsdMaskUs</code>	<code>Adsl2PsdMaskUs,</code>
<code>adsl2LconfProfPsdMaskSelectUs</code>	<code>Unsigned32,</code>


```
        adsl2LConfProfModeSpecRowStatus      RowStatus
    }

adsl2LconfProfAdslMode      OBJECT-TYPE
    SYNTAX      Adsl2OperationModes
    MAX-ACCESS   not-accessible
    STATUS      current
    DESCRIPTION
        "The ADSL Mode is a way of categorizing the various ADSL
        transmission modes into groups, each group (ADSL Mode) shares
        the same PSD configuration.
        There should be multiple entries in this table for a given
        line profile in case multiple bits are set in
        adsl2LConfProfAtuTransSysEna for that profile. "
    REFERENCE    "DSL Forum TR-90, paragraph 5.1.8"
    ::= { adsl2LineConfProfModeSpecEntry 1 }

adsl2LConfProfMaxNomPsdDs   OBJECT-TYPE
    SYNTAX      Integer32(-600..-300)
    UNITS        "0.1 dBm/Hz"
    MAX-ACCESS   read-create
    STATUS      current
    DESCRIPTION
        "The maximum nominal transmit PSD in the downstream
        direction during initialization and Showtime. It ranges from
        -600 to -300 units of 0.1 dBm/Hz. (physical values are -60 to
        -30 dBm/Hz). "
    REFERENCE    "ITU-T G.997.1, paragraph 7.3.1.2"
    DEFVAL       { -300 }
    ::= { adsl2LineConfProfModeSpecEntry 2 }

adsl2LConfProfMaxNomPsdUs   OBJECT-TYPE
    SYNTAX      Integer32(-600..-300)
    UNITS        "0.1 dBm/Hz"
    MAX-ACCESS   read-create
    STATUS      current
    DESCRIPTION
        "The maximum nominal transmit PSD in the upstream direction
        during initialization and Showtime. It ranges from -600 to
        -300 units of 0.1 dBm/Hz. (physical values are -60 to
        -30 dBm/Hz). "
    REFERENCE    "ITU-T G.997.1, paragraph 7.3.1.2"
    DEFVAL       { -300 }
    ::= { adsl2LineConfProfModeSpecEntry 3 }

adsl2LConfProfMaxNomAtpDs   OBJECT-TYPE
    SYNTAX      Unsigned32 (0..255)
    UNITS        "0.1 dBm"
```


MAX-ACCESS read-create
STATUS current
DESCRIPTION
 "The maximum nominal aggregate transmit power in the downstream direction during initialization and Showtime. It ranges from 0 to 255 units of 0.1 dBm (physical values are 0 to 25.5 dBm)."
REFERENCE "ITU-T G.997.1, paragraph 7.3.1.2"
DEFVAL { 255 }
::= { adsl2LineConfProfModeSpecEntry 4 }

adsl2LConfProfMaxNomAtpUs OBJECT-TYPE
SYNTAX Unsigned32 (0..255)
UNITS "0.1 dBm"
MAX-ACCESS read-create
STATUS current
DESCRIPTION
 "The maximum nominal aggregate transmit power in the upstream direction during initialization and Showtime. It ranges from 0 to 255 units of 0.1 dBm (physical values are 0 to 25.5 dBm)."
REFERENCE "ITU-T G.997.1, paragraph 7.3.1.2"
DEFVAL { 255 }
::= { adsl2LineConfProfModeSpecEntry 5 }

adsl2LConfProfMaxAggRxPwrUs OBJECT-TYPE
SYNTAX Integer32(-255..2147483647)
UNITS "0.1 dBm"
MAX-ACCESS read-create
STATUS current
DESCRIPTION
 "The maximum upstream aggregate receive power over the relevant set of sub-carriers. The ATU-C should verify that the upstream power cutback is such that this maximum aggregate receive power value is honored. It ranges from -255 to 255 units of 0.1 dBm (physical values are -25.5 to 25.5 dBm). A value of all ones means that there is no limit."
REFERENCE "ITU-T G.997.1, paragraph 7.3.1.2"
DEFVAL { 255 }
::= { adsl2LineConfProfModeSpecEntry 6 }

adsl2LConfProfPsdMaskDs OBJECT-TYPE
SYNTAX Adsl2PsdMaskDs
MAX-ACCESS read-create
STATUS current
DESCRIPTION
 "The downstream PSD mask applicable at the U-C2 reference point."

This parameter is used only for G.992.5 and it may impose PSD restrictions (breakpoints) in addition to the Limit PSD mask defined in G.992.5.

This is a string of 32 pairs of values in the following structure:

Octets 0+1 - Index of 1st sub-carrier used in the context of a first breakpoint.

Octet 2 - The PSD reduction for the sub-carrier indicated in octets 0 and 1.

Octets 3-5 - Same, for a 2nd breakpoint.

Octets 6-8 - Same, for a 3rd breakpoint.

This architecture continues until octets 94-95, which are associated with a 32nd breakpoint.

Each subcarrier index is an unsigned number in the range 1 and NSCs. Each PSD reduction value is in the range 0 (0dBm/Hz) to 255 (-127.5dBm/Hz) with steps of 0.5dBm/Hz. Valid values are in the range 0 to 190 (0 to -95dBm/Hz).

When the number of breakpoints is less than 32, all remaining octets are set to the value 0. Note that the content of this object should be correlated with the sub-carriers mask and with the RFI setup. "

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.2"

::= { adsl2LineConfProfModeSpecEntry 7 }

adsl2LConfProfPsdMaskUs OBJECT-TYPE

SYNTAX Adsl2PsdMaskUs

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The upstream PSD mask applicable at the U-R2 reference point.

This parameter is used only for G.992.5 and it may impose PSD restrictions (breakpoints) in addition to the Limit PSD mask defined in G.992.5.

This is a string of 4 pairs of values in the following structure:

Octets 0+1 - Index of 1st sub-carrier used in the context of a first breakpoint.

Octet 2 - The PSD reduction for the sub-carrier indicated in octets 0 and 1.

Octets 3-5 - Same, for a 2nd breakpoint.

Octets 6-8 - Same, for a 3rd breakpoint.

This architecture continues until octets 9-11, which are associated with a 4th breakpoint.

Each subcarrier index is an unsigned number in the range 1 and NSCs. Each PSD reduction value is in the range 0 (0dBm/Hz) to 255 (-127.5dBm/Hz) with steps of 0.5dBm/Hz. Valid values are in the range 0 to 190 (0 to -95dBm/Hz).

When the number of breakpoints is less than 4, all remaining octets are set to the value 0. Note that the content of this object should be correlated with the sub-carriers mask and with the RFI setup. "

REFERENCE "ITU-T G.997.1, paragraph 7.3.1.2"
::= { adsl2LineConfProfModeSpecEntry 8 }

adsl2LConfProfPsdMaskSelectUs OBJECT-TYPE

SYNTAX Unsigned32(1..9)

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The selected upstream PSD mask. This parameter is used only for annexes J and M of G.992.3 and G.992.5, and the same selection is used for all relevant enabled bits in adsl2LConfProfAtuTransSysEna. "

REFERENCE "ITU-T G.997.1 (amendment 1), 7.3.1.10"

DEFVAL { 1 }

::= { adsl2LineConfProfModeSpecEntry 9 }

adsl2LConfProfModeSpecRowStatus OBJECT-TYPE

SYNTAX RowStatus

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"This object is used to create a new row or to modify or delete an existing row in this table.

A profile is activated by setting this object to 'active'. When 'active' is set, the system will validate the profile. Profile modification is prohibited while this object is set to 'active'.

Before a profile can be deleted or taken out of service (by setting this object to 'destroy' or 'notInService'), it must be first unreferenced from all associated templates."

::= { adsl2LineConfProfModeSpecEntry 10 }

-- adsl2ChConfProfileTable --

adsl2ChConfProfileTable OBJECT-TYPE

SYNTAX SEQUENCE OF Adsl2ChConfProfileEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2ChConfProfileTable contains ADSL2 channel profile configuration.

Entries in this table MUST be maintained in a persistent manner."

```
::= { adsl2ProfileChannel 1 }
```

adsl2ChConfProfileEntry OBJECT-TYPE

SYNTAX Adsl2ChConfProfileEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2ChConfProfileTable contains ADSL2 channel profile configuration.

A default profile with an index of 'DEFVAL' will always exist and its parameters will be set to vendor-specific values, unless otherwise specified in this document"

INDEX { adsl2ChConfProfProfileName }

```
::= { adsl2ChConfProfileTable 1 }
```

Adsl2ChConfProfileEntry ::=

SEQUENCE {

adsl2ChConfProfProfileName	SnmpAdminString,
adsl2ChConfProfMinDataRateDs	Unsigned32,
adsl2ChConfProfMinDataRateUs	Unsigned32,
adsl2ChConfProfMinResDataRateDs	Unsigned32,
adsl2ChConfProfMinResDataRateUs	Unsigned32,
adsl2ChConfProfMaxDataRateDs	Unsigned32,
adsl2ChConfProfMaxDataRateUs	Unsigned32,
adsl2ChConfProfMinDataRateLowPwrDs	Unsigned32,
adsl2ChConfProfMaxDelayDs	Unsigned32,
adsl2ChConfProfMaxDelayUs	Unsigned32,
adsl2ChConfProfMinProtectionDs	Adsl2SymbolProtection,
adsl2ChConfProfMinProtectionUs	Adsl2SymbolProtection,
adsl2ChConfProfMaxBerDs	Adsl2MaxBer,
adsl2ChConfProfMaxBerUs	Adsl2MaxBer,
adsl2ChConfProfUsDataRateDs	Unsigned32,
adsl2ChConfProfDsDataRateDs	Unsigned32,
adsl2ChConfProfUsDataRateUs	Unsigned32,
adsl2ChConfProfDsDataRateUs	Unsigned32,
adsl2ChConfProfImaEnabled	TruthValue,
adsl2ChConfProfRowStatus	RowStatus

```
}
```

adsl2ChConfProfProfileName OBJECT-TYPE

SYNTAX SnmpAdminString (SIZE(1..32))

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"This object identifies a row in this table."

::= { adsl2ChConfProfileEntry 1 }

adsl2ChConfProfMinDataRateDs OBJECT-TYPE

SYNTAX Unsigned32(0..200000000)

UNITS "bits/second"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Minimum Data Rate on Downstream direction. The minimum net data rate for the bearer channel, coded in bit/s."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.1"

::= { adsl2ChConfProfileEntry 2 }

adsl2ChConfProfMinDataRateUs OBJECT-TYPE

SYNTAX Unsigned32(0..200000000)

UNITS "bits/second"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Minimum Data Rate on Upstream direction. The minimum net data rate for the bearer channel, coded in bit/s."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.1"

::= { adsl2ChConfProfileEntry 3 }

adsl2ChConfProfMinResDataRateDs OBJECT-TYPE

SYNTAX Unsigned32(0..200000000)

UNITS "bits/second"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Minimum Reserved Data Rate on Downstream direction. The minimum reserved net data rate for the bearer channel, coded in bit/s. This parameter is used only if the Rate Adaptation Mode in the direction of the bearer channel (i.e., Adsl2LineConfRaModeDs) is set to DynamicRa."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.1"

::= { adsl2ChConfProfileEntry 4 }

adsl2ChConfProfMinResDataRateUs OBJECT-TYPE

SYNTAX Unsigned32(0..200000000)

UNITS "bits/second"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Minimum Reserved Data Rate on Upstream direction. The minimum

reserved net data rate for the bearer channel, coded in bit/s. This parameter is used only if the Rate Adaptation Mode in the direction of the bearer channel (i.e., Adsl2LineConfRaModeUs) is set to DynamicRa."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.1"

::= { adsl2ChConfProfileEntry 5 }

adsl2ChConfProfMaxDataRateDs OBJECT-TYPE

SYNTAX Unsigned32(0..200000000)

UNITS "bits/second"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Maximum Data Rate on Downstream direction. The maximum net data rate for the bearer channel, coded in bit/s."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.1"

::= { adsl2ChConfProfileEntry 6 }

adsl2ChConfProfMaxDataRateUs OBJECT-TYPE

SYNTAX Unsigned32(0..200000000)

UNITS "bits/second"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Maximum Data Rate on Upstream direction. The maximum net data rate for the bearer channel, coded in bit/s."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.1"

::= { adsl2ChConfProfileEntry 7 }

adsl2ChConfProfMinDataRateLowPwrDs OBJECT-TYPE

SYNTAX Unsigned32(0..200000000)

UNITS "bits/second"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Minimum Data Rate in Low Power state on Downstream direction. The minimum net data rate for the bearer channel, coded in bit/s., during the low power state (L1 in G.992.2, L2 in G.992.3)."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.1"

::= { adsl2ChConfProfileEntry 8 }

adsl2ChConfProfMaxDelayDs OBJECT-TYPE

SYNTAX Unsigned32(0..63)

UNITS "milliseconds"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Maximum Interleave Delay on Downstream direction. The maximum one-way interleaving delay introduced by the PMS-TC on Downstream direction. The ATUs shall choose the S (factor) and D (depth) values such that the actual one-way interleaving delay (Adsl2ChanStatusActDelay) is as close as possible to, but less than or equal to, Adsl2ChanConfMaxDelayDs. The delay is coded in ms, with the value 0 indicating no delay bound is being imposed."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.2"

::= { adsl2ChConfProfileEntry 9 }

adsl2ChConfProfMaxDelayUs OBJECT-TYPE

SYNTAX Unsigned32(0..63)

UNITS "milliseconds"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Maximum Interleave Delay on Upstream direction. The maximum one-way interleaving delay introduced by the PMS-TC on Upstream direction. The ATUs shall choose the S (factor) and D (depth) values such that the actual one-way interleaving delay (Adsl2ChanStatusActDelay) is as close as possible to, but less than or equal to, Adsl2ChanConfMaxDelayUs. The delay is coded in ms, with the value 0 indicating no delay bound is being imposed."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.2"

::= { adsl2ChConfProfileEntry 10 }

adsl2ChConfProfMinProtectionDs OBJECT-TYPE

SYNTAX Adsl2SymbolProtection

UNITS "symbols"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Minimum Impulse Noise Protection on Downstream direction. The minimum impulse noise protection for the bearer channel, expressed in symbols. The parameter can take the following values: noProtection (i.e., INP not required), halfSymbol (i.e., INP length is 1/2 symbol) and 1-16 symbols in steps of 1 symbol."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.3"

DEFVAL { noProtection }

::= { adsl2ChConfProfileEntry 11 }

adsl2ChConfProfMinProtectionUs OBJECT-TYPE

SYNTAX Adsl2SymbolProtection

UNITS "symbols"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Minimum Impulse Noise Protection on Upstream direction. The minimum impulse noise protection for the bearer channel, expressed in symbols. The parameter can take the following values:

noProtection (1),
halfSymbol (2),
singleSymbol (3),
twoSymbols (4),
fourSymbols (5),
eightSymbols (6),
sixteenSymbols (7)."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.3"

DEFVAL { noProtection }

::= { adsl2ChConfProfileEntry 12 }

adsl2ChConfProfMaxBerDs OBJECT-TYPE

SYNTAX Adsl2MaxBer

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Maximum Bit Error Ratio on Downstream direction. The maximum bit error ratio for the bearer channel. The parameter can take the following values (for 1E-3, 1E-5 or 1E-7):

eminus3 (1),
eminus5 (2),
eminus7 (3)"

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.4"

DEFVAL { eminus5 }

::= { adsl2ChConfProfileEntry 13 }

adsl2ChConfProfMaxBerUs OBJECT-TYPE

SYNTAX Adsl2MaxBer

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Maximum Bit Error Ratio on Upstream direction. The maximum bit error ratio for the bearer channel. The parameter can take the following values (for 1E-3, 1E-5 or 1E-7):

eminus3 (1),
eminus5 (2),
eminus7 (3)"

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.4"

DEFVAL { eminus5 }

::= { adsl2ChConfProfileEntry 14 }

adsl2ChConfProfUsDataRateDs OBJECT-TYPE

SYNTAX Unsigned32(0..2000000000)
UNITS "bits/second"
MAX-ACCESS read-create
STATUS current
DESCRIPTION
 "Data Rate Threshold Up shift for downstream direction. An
 'Up-shift rate change' event is triggered when the actual
 downstream data rate exceeds, by more than the threshold, the
 data rate at the last entry into Showtime. The parameter is
 coded in bit/s."
REFERENCE "ITU-T G.997.1, paragraph 7.3.2.6"
::= { adsl2ChConfProfileEntry 15 }

adsl2ChConfProfDsDataRateDs OBJECT-TYPE

SYNTAX Unsigned32(0..2000000000)
UNITS "bits/second"
MAX-ACCESS read-create
STATUS current
DESCRIPTION
 "Data Rate Threshold Downshift for downstream direction. A
 'Down-shift rate change' event is triggered when the actual
 downstream data rate is below the data rate at the last entry
 into Showtime, by more than the threshold. The parameter is
 coded in bit/s."
REFERENCE "ITU-T G.997.1, paragraph 7.3.2.6"
::= { adsl2ChConfProfileEntry 16 }

adsl2ChConfProfUsDataRateUs OBJECT-TYPE

SYNTAX Unsigned32(0..2000000000)
UNITS "bits/second"
MAX-ACCESS read-create
STATUS current
DESCRIPTION
 "Data Rate Threshold Up shift for upstream direction. An
 'Up-shift rate change' event is triggered when the actual
 upstream data rate exceeds, by more than the threshold, the
 data rate at the last entry into Showtime. The parameter is
 coded in bit/s."
REFERENCE "ITU-T G.997.1, paragraph 7.3.2.6"
::= { adsl2ChConfProfileEntry 17 }

adsl2ChConfProfDsDataRateUs OBJECT-TYPE

SYNTAX Unsigned32(0..2000000000)
UNITS "bits/second"
MAX-ACCESS read-create
STATUS current
DESCRIPTION
 "Data Rate Threshold Downshift for upstream direction. A

'Down-shift rate change' event is triggered when the actual upstream data rate is below the data rate at the last entry into Showtime, by more than the threshold. The parameter is coded in bit/s."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2.6"

::= { adsl2ChConfProfileEntry 18 }

adsl2ChConfProfImaEnabled OBJECT-TYPE

SYNTAX TruthValue

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"IMA Mode Enable. The parameter enables the IMA operation mode in the ATM Data Path. Relevant only if the channel is of ATM Data Path. When in 'enable' state, the ATM data path should comply with the requirements for IMA transmission."

REFERENCE "ITU-T G.997.1, paragraph 7.3.4.1"

DEFVAL { false }

::= { adsl2ChConfProfileEntry 19 }

adsl2ChConfProfRowStatus OBJECT-TYPE

SYNTAX RowStatus

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"This object is used to create a new row or to modify or delete an existing row in this table.

A profile is activated by setting this object to 'active'. When 'active' is set, the system will validate the profile. Profile modification is prohibited while this object is set to 'active'.

Before a profile can be deleted or taken out of service (by setting this object to 'destroy' or 'notInService'), it must be first unreferenced from all associated templates."

::= { adsl2ChConfProfileEntry 20 }

-- adsl2LineAlarmConfTemplateTable --

adsl2LineAlarmConfTemplateTable OBJECT-TYPE

SYNTAX SEQUENCE OF Adsl2LineAlarmConfTemplateEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2LineConfTemplateTable contains ADSL2 line

configuration template.

Entries in this table MUST be maintained in a persistent manner."

::= { adsl2ProfileAlarmConf 1 }

adsl2LineAlarmConfTemplateEntry OBJECT-TYPE

SYNTAX Adsl2LineAlarmConfTemplateEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2LineAlarmConfTemplateTable contains ADSL2 line PM thresholds template.

A default template with an index of 'DEFVAL' will always exist and its parameters will be set to vendor specific values, unless otherwise specified in this document"

INDEX { adsl2LAlarmConfTempTemplateName }

::= { adsl2LineAlarmConfTemplateTable 1 }

Adsl2LineAlarmConfTemplateEntry ::=

SEQUENCE {

adsl2LAlarmConfTempTemplateName	SnmpAdminString,
adsl2LAlarmConfTempLineProfile	SnmpAdminString,
adsl2LAlarmConfTempChan1ConfProfile	SnmpAdminString,
adsl2LAlarmConfTempChan2ConfProfile	SnmpAdminString,
adsl2LAlarmConfTempChan3ConfProfile	SnmpAdminString,
adsl2LAlarmConfTempChan4ConfProfile	SnmpAdminString,
adsl2LAlarmConfTempRowStatus	RowStatus

}

adsl2LAlarmConfTempTemplateName OBJECT-TYPE

SYNTAX SnmpAdminString (SIZE(1..32))

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"This object identifies a row in this table."

::= { adsl2LineAlarmConfTemplateEntry 1 }

adsl2LAlarmConfTempLineProfile OBJECT-TYPE

SYNTAX SnmpAdminString (SIZE(1..32))

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The value of this object identifies the row in the ADSL2 Line Thresholds Configuration Profile Table (adsl2LineAlarmConfProfileTable) that applies to this ADSL2 line."


```
REFERENCE      "DSL Forum TR-90, paragraph 5.4.1"
DEFVAL         { "DEFVAL" }
::= { adsl2LineAlarmConfTemplateEntry 2 }
```

```
adsl2LAlarmConfTempChan1ConfProfile  OBJECT-TYPE
SYNTAX          SnmpAdminString (SIZE(1..32))
MAX-ACCESS      read-create
STATUS          current
DESCRIPTION
    "The value of this object identifies the row in the ADSL2
    Channel Thresholds Configuration Profile Table
    (adsl2ChAlarmConfProfileTable) that applies for ADSL2
    bearer channel #1. The channel profile name specified here
    must match the name of an existing row in the
    adsl2ChAlarmConfProfileTable table."
REFERENCE      "DSL Forum TR-90, paragraph 5.4.1"
DEFVAL         { "DEFVAL" }
::= { adsl2LineAlarmConfTemplateEntry 3 }
```

```
adsl2LAlarmConfTempChan2ConfProfile  OBJECT-TYPE
SYNTAX          SnmpAdminString (SIZE(0..32))
MAX-ACCESS      read-create
STATUS          current
DESCRIPTION
    "The value of this object identifies the row in the ADSL2
    Channel Thresholds Configuration Profile Table
    (adsl2ChAlarmConfProfileTable) that applies for ADSL2
    bearer channel #2. The channel profile name specified here
    must match the name of an existing row in the
    adsl2ChAlarmConfProfileTable table. If the channel is unused,
    then the object is set to a zero length string."
REFERENCE      "DSL Forum TR-90, paragraph 5.4.1"
DEFVAL         { "" }
::= { adsl2LineAlarmConfTemplateEntry 4 }
```

```
adsl2LAlarmConfTempChan3ConfProfile  OBJECT-TYPE
SYNTAX          SnmpAdminString (SIZE(0..32))
MAX-ACCESS      read-create
STATUS          current
DESCRIPTION
    "The value of this object identifies the row in the ADSL2
    Channel Thresholds Configuration Profile Table
    (adsl2ChAlarmConfProfileTable) that applies for ADSL2
    bearer channel #3. The channel profile name specified here
    must match the name of an existing row in the
    adsl2ChAlarmConfProfileTable table.
    This object may be set to a non-zero length string only if
    adsl2LAlarmConfTempChan2ConfProfile contains a non-zero
```



```
length string."
REFERENCE    "DSL Forum TR-90, paragraph 5.4.1"
DEFVAL      { "" }
::= { adsl2LineAlarmConfTemplateEntry 5 }
```

```
adsl2LAlarmConfTempChan4ConfProfile  OBJECT-TYPE
SYNTAX      SnmpAdminString (SIZE(0..32))
MAX-ACCESS  read-create
STATUS      current
DESCRIPTION
    "The value of this object identifies the row in the ADSL2
    Channel Thresholds Configuration Profile Table
    (adsl2ChAlarmConfProfileTable) that applies for ADSL2
    bearer channel #4. The channel profile name specified here
    must match the name of an existing row in the
    adsl2ChAlarmConfProfileTable table.
    This object may be set to a non-zero length string only if
    adsl2LAlarmConfTempChan3ConfProfile contains a non-zero
    length string."
REFERENCE    "DSL Forum TR-90, paragraph 5.4.1"
DEFVAL      { "" }
::= { adsl2LineAlarmConfTemplateEntry 6 }
```

```
adsl2LAlarmConfTempRowStatus  OBJECT-TYPE
SYNTAX      RowStatus
MAX-ACCESS  read-create
STATUS      current
DESCRIPTION
    "This object is used to create a new row or to modify or
    delete an existing row in this table.

    A template is activated by setting this object to 'active'.
    When 'active' is set, the system will validate the template.
    Template modification is prohibited while this object is set
    to 'active'.

    Before a template can be deleted or taken out of service
    (by setting this object to 'destroy' or 'notInService'),
    it must be first unreferenced from all associated
    lines."
::= { adsl2LineAlarmConfTemplateEntry 7 }
```

```
-----
--      adsl2LineAlarmConfProfileTable      --
-----
```

```
adsl2LineAlarmConfProfileTable  OBJECT-TYPE
SYNTAX      SEQUENCE OF Adsl2LineAlarmConfProfileEntry
```


MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table `ads12LineAlarmConfProfileTable` contains ADSL2 line PM thresholds profiles.

Entries in this table MUST be maintained in a persistent manner."

```
 ::= { ads12ProfileAlarmConf 2 }
```

ads12LineAlarmConfProfileEntry OBJECT-TYPE

SYNTAX Adsl2LineAlarmConfProfileEntry

MAX-ACCESS not-accessible

```
STATUS      current
```

DESCRIPTION

"The table `ads12LineAlarmConfProfileTable` contains ADSL2 line PM thresholds profiles.

A default profile with an index of 'DEFVAL' will always exist and its parameters will be set to vendor specific values, unless otherwise specified in this document"

INDEX { ads12LineAlarmConfProfileName }

```
 ::= { ads12LineAlarmConfProfileTable 1 }
```

```
Adsl2LineAlarmConfProfileEntry ::=
```

SEQUENCE {

```

adsl2LineAlarmConfProfileName                               SnmpAdminString,
adsl2LineAlarmConfProfileAtucThresh15MinFecs              HCPperfIntervalThreshold,
adsl2LineAlarmConfProfileAtucThresh15MinEs                HCPperfIntervalThreshold,
adsl2LineAlarmConfProfileAtucThresh15MinSes               HCPperfIntervalThreshold,
adsl2LineAlarmConfProfileAtucThresh15MinLoss              HCPperfIntervalThreshold,
adsl2LineAlarmConfProfileAtucThresh15MinUas              HCPperfIntervalThreshold,
adsl2LineAlarmConfProfileAturThresh15MinFecs              HCPperfIntervalThreshold,
adsl2LineAlarmConfProfileAturThresh15MinEs                HCPperfIntervalThreshold,
adsl2LineAlarmConfProfileAturThresh15MinSes               HCPperfIntervalThreshold,
adsl2LineAlarmConfProfileAturThresh15MinLoss              HCPperfIntervalThreshold,
adsl2LineAlarmConfProfileAturThresh15MinUas              HCPperfIntervalThreshold,

```



```
adsl2LineAlarmConfProfileThresh15MinFailedFullInt Unsigned32,
adsl2LineAlarmConfProfileThresh15MinFailedShrtInt Unsigned32,

adsl2LineAlarmConfProfileRowStatus RowStatus
}
```

adsl2LineAlarmConfProfileName OBJECT-TYPE

```
SYNTAX      SnmpAdminString (SIZE(1..32))
MAX-ACCESS  not-accessible
STATUS      current
DESCRIPTION
    "This object identifies a row in this table."
    ::= { adsl2LineAlarmConfProfileEntry 1 }
```

adsl2LineAlarmConfProfileAtucThresh15MinFecs OBJECT-TYPE

```
SYNTAX      HCPeIntervalThreshold
UNITS       "seconds"
MAX-ACCESS  read-create
STATUS      current
DESCRIPTION
    "A threshold for the adsl2PMLCurr15MFecs counter,
    when adsl2PMLCurrUnit is ATUC {1}.
    The value 0 means that no threshold is specified for the
    associated counter."
REFERENCE   "ITU-T G.997.1, paragraph 7.3.1"
DEFVAL      { 0 }
    ::= { adsl2LineAlarmConfProfileEntry 2 }
```

adsl2LineAlarmConfProfileAtucThresh15MinEs OBJECT-TYPE

```
SYNTAX      HCPeIntervalThreshold
UNITS       "seconds"
MAX-ACCESS  read-create
STATUS      current
DESCRIPTION
    "A threshold for the adsl2PMLCurr15MEs counter,
    when adsl2PMLCurrUnit is ATUC {1}.
    The value 0 means that no threshold is specified for the
    associated counter."
REFERENCE   "ITU-T G.997.1, paragraph 7.3.1"
DEFVAL      { 0 }
    ::= { adsl2LineAlarmConfProfileEntry 3 }
```

adsl2LineAlarmConfProfileAtucThresh15MinSes OBJECT-TYPE

```
SYNTAX      HCPeIntervalThreshold
UNITS       "seconds"
MAX-ACCESS  read-create
STATUS      current
DESCRIPTION
```


"A threshold for the adsl2PMLCurr15MSes counter,
when adsl2PMLCurrUnit is ATUC {1}.
The value 0 means that no threshold is specified for the
associated counter."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1"

DEFVAL { 0 }

::= { adsl2LineAlarmConfProfileEntry 4 }

adsl2LineAlarmConfProfileAtucThresh15MinLoss OBJECT-TYPE

SYNTAX HCPerfIntervalThreshold

UNITS "seconds"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"A threshold for the adsl2PMLCurr15MLoss counter,
when adsl2PMLCurrUnit is ATUC {1}.

The value 0 means that no threshold is specified for the
associated counter."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1"

DEFVAL { 0 }

::= { adsl2LineAlarmConfProfileEntry 5 }

adsl2LineAlarmConfProfileAtucThresh15MinUas OBJECT-TYPE

SYNTAX HCPerfIntervalThreshold

UNITS "seconds"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"A threshold for the adsl2PMLCurr15MUas counter,
when adsl2PMLCurrUnit is ATUC {1}.

The value 0 means that no threshold is specified for the
associated counter."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1"

DEFVAL { 0 }

::= { adsl2LineAlarmConfProfileEntry 6 }

adsl2LineAlarmConfProfileAturThresh15MinFecs OBJECT-TYPE

SYNTAX HCPerfIntervalThreshold

UNITS "seconds"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"A threshold for the adsl2PMLCurr15MFecs counter,
when adsl2PMLCurrUnit is ATUR {2}.

The value 0 means that no threshold is specified for the
associated counter."

REFERENCE "ITU-T G.997.1, paragraph 7.3.1"

DEFVAL { 0 }


```
::= { adsl2LineAlarmConfProfileEntry 7 }
```

```
adsl2LineAlarmConfProfileAturThresh15MinEs OBJECT-TYPE
```

```
SYNTAX      HCPerfIntervalThreshold
```

```
UNITS       "seconds"
```

```
MAX-ACCESS  read-create
```

```
STATUS      current
```

```
DESCRIPTION
```

```
"A threshold for the adsl2PMLCurr15MEs counter,  
when adsl2PMLCurrUnit is ATUR {2}.
```

```
The value 0 means that no threshold is specified for the  
associated counter."
```

```
REFERENCE   "ITU-T G.997.1, paragraph 7.3.1"
```

```
DEFVAL      { 0 }
```

```
::= { adsl2LineAlarmConfProfileEntry 8 }
```

```
adsl2LineAlarmConfProfileAturThresh15MinSes OBJECT-TYPE
```

```
SYNTAX      HCPerfIntervalThreshold
```

```
UNITS       "seconds"
```

```
MAX-ACCESS  read-create
```

```
STATUS      current
```

```
DESCRIPTION
```

```
"A threshold for the adsl2PMLCurr15MSes counter,  
when adsl2PMLCurrUnit is ATUR {2}.
```

```
The value 0 means that no threshold is specified for the  
associated counter."
```

```
REFERENCE   "ITU-T G.997.1, paragraph 7.3.1"
```

```
DEFVAL      { 0 }
```

```
::= { adsl2LineAlarmConfProfileEntry 9 }
```

```
adsl2LineAlarmConfProfileAturThresh15MinLoss OBJECT-TYPE
```

```
SYNTAX      HCPerfIntervalThreshold
```

```
UNITS       "seconds"
```

```
MAX-ACCESS  read-create
```

```
STATUS      current
```

```
DESCRIPTION
```

```
"A threshold for the adsl2PMLCurr15MLoss counter,  
when adsl2PMLCurrUnit is ATUR {2}.
```

```
The value 0 means that no threshold is specified for the  
associated counter."
```

```
REFERENCE   "ITU-T G.997.1, paragraph 7.3.1"
```

```
DEFVAL      { 0 }
```

```
::= { adsl2LineAlarmConfProfileEntry 10 }
```

```
adsl2LineAlarmConfProfileAturThresh15MinUas OBJECT-TYPE
```

```
SYNTAX      HCPerfIntervalThreshold
```

```
UNITS       "seconds"
```

```
MAX-ACCESS  read-create
```


STATUS current
DESCRIPTION
"A threshold for the adsl2PMLCurr15MUas counter,
when adsl2PMLCurrUnit is ATUR {2}.
The value 0 means that no threshold is specified for the
associated counter."
REFERENCE "ITU-T G.997.1, paragraph 7.3.1"
DEFVAL { 0 }
::= { adsl2LineAlarmConfProfileEntry 11 }

adsl2LineAlarmConfProfileThresh15MinFailedFullInt OBJECT-TYPE

SYNTAX Unsigned32
MAX-ACCESS read-create
STATUS current
DESCRIPTION
"A threshold for the adsl2PMLCurrInit15MfailedFullInits
counter.
The value 0 means that no threshold is specified for the
associated counter."
REFERENCE "ITU-T G.997.1, paragraph 7.3.1"
DEFVAL { 0 }
::= { adsl2LineAlarmConfProfileEntry 12 }

adsl2LineAlarmConfProfileThresh15MinFailedShrtInt OBJECT-TYPE

SYNTAX Unsigned32
MAX-ACCESS read-create
STATUS current
DESCRIPTION
"A threshold for the adsl2PMLCurrInit15MFailedShortInits
counter.
The value 0 means that no threshold is specified for the
associated counter."
REFERENCE "ITU-T G.997.1, paragraph 7.3.1"
DEFVAL { 0 }
::= { adsl2LineAlarmConfProfileEntry 13 }

adsl2LineAlarmConfProfileRowStatus OBJECT-TYPE

SYNTAX RowStatus
MAX-ACCESS read-create
STATUS current
DESCRIPTION
"This object is used to create a new row or to modify or
delete an existing row in this table.

A profile is activated by setting this object to 'active'.
When 'active' is set, the system will validate the profile.
Profile modification is prohibited while this object is set
to 'active'."

Before a profile can be deleted or taken out of service (by setting this object to 'destroy' or 'notInService'), it must be first unreferenced from all associated templates."

```
::= { adsl2LineAlarmConfProfileEntry 14 }
```

```
-----
--      adsl2ChAlarmConfProfileTable      --
-----
```

adsl2ChAlarmConfProfileTable OBJECT-TYPE

SYNTAX SEQUENCE OF Adsl2ChAlarmConfProfileEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2ChAlarmConfProfileTable contains ADSL2 channel PM thresholds profiles.

Entries in this table MUST be maintained in a persistent manner."

```
::= { adsl2ProfileAlarmConf 3 }
```

adsl2ChAlarmConfProfileEntry OBJECT-TYPE

SYNTAX Adsl2ChAlarmConfProfileEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2ChAlarmConfProfileTable contains ADSL2 channel PM thresholds profiles.

A default profile with an index of 'DEFVAL' will always exist and its parameters will be set to vendor-specific values, unless otherwise specified in this document"

INDEX { adsl2ChAlarmConfProfileName }

```
::= { adsl2ChAlarmConfProfileTable 1 }
```

Adsl2ChAlarmConfProfileEntry ::=

SEQUENCE {

adsl2ChAlarmConfProfileName

SnmpAdminString,

adsl2ChAlarmConfProfileAtucThresh15MinCodingViolations

Unsigned32,

adsl2ChAlarmConfProfileAtucThresh15MinCorrected Unsigned32,

adsl2ChAlarmConfProfileAturThresh15MinCodingViolations

Unsigned32,

adsl2ChAlarmConfProfileAturThresh15MinCorrected Unsigned32,

adsl2ChAlarmConfProfileRowStatus

RowStatus

}

adsl2ChAlarmConfProfileName OBJECT-TYPE

SYNTAX SnmpAdminString (SIZE(1..32))

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"This object identifies a row in this table."

::= { adsl2ChAlarmConfProfileEntry 1 }

adsl2ChAlarmConfProfileAtucThresh15MinCodingViolations OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"A threshold for the adsl2PMChCurr15MCodingViolations counter, when adsl2PMChCurrUnit is ATUC {1}.

The value 0 means that no threshold is specified for the associated counter."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2"

DEFVAL { 0 }

::= { adsl2ChAlarmConfProfileEntry 2 }

adsl2ChAlarmConfProfileAtucThresh15MinCorrected OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"A threshold for the adsl2PMChCurr15MCorrectedBlocks counter, when adsl2PMChCurrUnit is ATUC {1}.

The value 0 means that no threshold is specified for the associated counter."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2"

DEFVAL { 0 }

::= { adsl2ChAlarmConfProfileEntry 3 }

adsl2ChAlarmConfProfileAturThresh15MinCodingViolations OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"A threshold for the adsl2PMChCurr15MCodingViolations counter, when adsl2PMChCurrUnit is ATUR {2}.

The value 0 means that no threshold is specified for the associated counter."

REFERENCE "ITU-T G.997.1, paragraph 7.3.2"

DEFVAL { 0 }

::= { adsl2ChAlarmConfProfileEntry 4 }

adsl2ChAlarmConfProfileAturThresh15MinCorrected OBJECT-TYPE

SYNTAX Unsigned32
MAX-ACCESS read-create
STATUS current
DESCRIPTION
"A threshold for the adsl2PMChCurr15MCorrectedBlocks
counter, when adsl2PMChCurrUnit is ATUR {2}.
The value 0 means that no threshold is specified for the
associated counter."
REFERENCE "ITU-T G.997.1, paragraph 7.3.2"
DEFVAL { 0 }
::= { adsl2ChAlarmConfProfileEntry 5 }

adsl2ChAlarmConfProfileRowStatus OBJECT-TYPE

SYNTAX RowStatus
MAX-ACCESS read-create
STATUS current
DESCRIPTION
"This object is used to create a new row or to modify or
delete an existing row in this table.

A profile is activated by setting this object to 'active'.
When 'active' is set, the system will validate the profile.
Profile modification is prohibited while this object is set
to 'active'.

Before a profile can be deleted or taken out of service
(by setting this object to 'destroy' or 'notInService'),
it must be first unreferenced from all associated
templates."
::= { adsl2ChAlarmConfProfileEntry 6 }

-- PM line current counters --

adsl2PMLineCurrTable OBJECT-TYPE

SYNTAX SEQUENCE OF Adsl2PMLineCurrEntry
MAX-ACCESS not-accessible
STATUS current
DESCRIPTION
"The table adsl2PMLineCurrTable contains current Performance
Monitoring results of ADSL2 line. The objects in this table
are NOT persistent."
::= { adsl2PMLine 1 }

adsl2PMLineCurrEntry OBJECT-TYPE

SYNTAX Adsl2PMLineCurrEntry
MAX-ACCESS not-accessible
STATUS current

DESCRIPTION

"The table adsl2PMLineCurrTable contains current Performance Monitoring results of ADSL2 line.

The index of this table is an interface index where the interface has an ifType of adsl2(230) and the termination unit."

INDEX { ifIndex, adsl2PMLCurrUnit }
 ::= { adsl2PMLineCurrTable 1 }

Adsl2PMLineCurrEntry ::=

SEQUENCE {
 adsl2PMLCurrUnit Adsl2Unit,
 adsl2PMLCurrValidIntervals Unsigned32,
 adsl2PMLCurrInvalidIntervals Unsigned32,
 adsl2PMLCurr15MTimeElapsed HCPerfTimeElapsed,
 adsl2PMLCurr15MFecs Counter32,
 adsl2PMLCurr15MEs Counter32,
 adsl2PMLCurr15MSes Counter32,
 adsl2PMLCurr15MLoss Counter32,
 adsl2PMLCurr15MUas Counter32,
 adsl2PMLCurr1DayValidIntervals Unsigned32,
 adsl2PMLCurr1DayInvalidIntervals Unsigned32,
 adsl2PMLCurr1DayTimeElapsed HCPerfTimeElapsed,
 adsl2PMLCurr1DayFecs Counter32,
 adsl2PMLCurr1DayEs Counter32,
 adsl2PMLCurr1DaySes Counter32,
 adsl2PMLCurr1DayLoss Counter32,
 adsl2PMLCurr1DayUas Counter32
}

adsl2PMLCurrUnit OBJECT-TYPE

SYNTAX Adsl2Unit

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The termination unit ATUC{1} or ATUR{2}."

::= { adsl2PMLineCurrEntry 1 }

adsl2PMLCurrValidIntervals OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Valid intervals."

::= { adsl2PMLineCurrEntry 2 }

adsl2PMLCurrInvalidIntervals OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "Invalid intervals."
 ::= { adsl2PMLineCurrEntry 3 }

adsl2PMLCurr15MTimeElapsed OBJECT-TYPE
SYNTAX HCPerfTimeElapsed
UNITS "seconds"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "Total elapsed seconds in this interval"
 ::= { adsl2PMLineCurrEntry 4 }

adsl2PMLCurr15MFecs OBJECT-TYPE
SYNTAX Counter32
UNITS "seconds"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "Count of seconds during this interval that there was at least
 one FEC correction event for one or more bearer channels in
 this line. This parameter is inhibited during UAS or SES."
REFERENCE "ITU-T G.997.1, paragraph 7.2.1"
 ::= { adsl2PMLineCurrEntry 5 }

adsl2PMLCurr15MEs OBJECT-TYPE
SYNTAX Counter32
UNITS "seconds"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "Count of seconds during this interval that there was:
 ATU-C: CRC-8 >= 1 for one or more bearer channels OR
 LOS >= 1 OR SEF >=1 OR LPR >= 1
 ATU-R: FEBE >= 1 for one or more bearer channels OR
 LOS-FE >=1 OR RDI >=1 OR LPR-FE >=1 .
 This parameter is inhibited during UAS."
REFERENCE "ITU-T G.997.1, paragraph 7.2.1"
 ::= { adsl2PMLineCurrEntry 6 }

adsl2PMLCurr15MSes OBJECT-TYPE
SYNTAX Counter32
UNITS "seconds"
MAX-ACCESS read-only
STATUS current
DESCRIPTION

"Count of seconds during this interval that there was:

ATU-C: (CRC-8 summed over all bearer channels) >= 18 OR
LOS >= 1 OR SEF >= 1 OR LPR >= 1

ATU-R: (FEFE summed over all bearer channels) >= 18 OR
LOS-FE >= 1 OR RDI >= 1 OR LPR-FE >= 1 .

This parameter is inhibited during UAS."

REFERENCE "ITU-T G.997.1, paragraph 7.2.1"

::= { adsl2PMLineCurrEntry 7 }

adsl2PMLCurr15MLoss OBJECT-TYPE

SYNTAX Counter32

UNITS "seconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Count of seconds during this interval that there was LOS (or
LOS-FE for ATU-R)."

REFERENCE "ITU-T G.997.1, paragraph 7.2.1"

::= { adsl2PMLineCurrEntry 8 }

adsl2PMLCurr15MUas OBJECT-TYPE

SYNTAX Counter32

UNITS "seconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Count of seconds in Unavailability State during this
interval. Unavailability begins at the onset of 10
contiguous severely-errored seconds, and ends at the
onset of 10 contiguous seconds with no severely-errored
seconds."

REFERENCE "ITU-T G.997.1, paragraph 7.2.1"

::= { adsl2PMLineCurrEntry 9 }

adsl2PMLCurr1DayValidIntervals OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Valid intervals."

::= { adsl2PMLineCurrEntry 10 }

adsl2PMLCurr1DayInvalidIntervals OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Invalid intervals."


```
::= { adsl2PMLineCurrEntry 11 }
```

adsl2PMLCurr1DayTimeElapsed OBJECT-TYPE

SYNTAX HCPperfTimeElapsed

UNITS "seconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

 "Total elapsed seconds in this interval."

```
::= { adsl2PMLineCurrEntry 12 }
```

adsl2PMLCurr1DayFecs OBJECT-TYPE

SYNTAX Counter32

UNITS "seconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

 "Count of seconds during this interval that there was at least
 one FEC correction event for one or more bearer channels in
 this line. This parameter is inhibited during UAS or SES."

REFERENCE "ITU-T G.997.1, paragraph 7.2.1"

```
::= { adsl2PMLineCurrEntry 13 }
```

adsl2PMLCurr1DayEs OBJECT-TYPE

SYNTAX Counter32

UNITS "seconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

 "Count of seconds during this interval that there was:

 ATU-C: CRC-8 >= 1 for one or more bearer channels OR
 LOS >= 1 OR SEF >= 1 OR LPR >= 1

 ATU-R: FEBE >= 1 for one or more bearer channels OR
 LOS-FE >= 1 OR RDI >= 1 OR LPR-FE >= 1.

 This parameter is inhibited during UAS."

REFERENCE "ITU-T G.997.1, paragraph 7.2.1"

```
::= { adsl2PMLineCurrEntry 14 }
```

adsl2PMLCurr1DaySes OBJECT-TYPE

SYNTAX Counter32

UNITS "seconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

 "Count of seconds during this interval that there was:

 ATU-C: (CRC-8 summed over all bearer channels) >= 18 OR
 LOS >= 1 OR SEF >= 1 OR LPR >= 1

 ATU-R: (FEBE summed over all bearer channels) >= 18 OR

LOS-FE >= 1 OR RDI >= 1 OR LPR-FE >= 1

This parameter is inhibited during UAS."

REFERENCE "ITU-T G.997.1, paragraph 7.2.1"

::= { adsl2PMLineCurrEntry 15 }

adsl2PMLCurr1DayLoss OBJECT-TYPE

SYNTAX Counter32

UNITS "seconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Count of seconds during this interval that there was LOS (or
LOS-FE for ATU-R)."

REFERENCE "ITU-T G.997.1, paragraph 7.2.1"

::= { adsl2PMLineCurrEntry 16 }

adsl2PMLCurr1DayUas OBJECT-TYPE

SYNTAX Counter32

UNITS "seconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Count of seconds in Unavailability State during this interval.
Unavailability begins at the onset of 10 contiguous severely
-errored seconds, and ends at the onset of 10 contiguous
seconds with no severely-errored seconds."

REFERENCE "ITU-T G.997.1, paragraph 7.2.1"

::= { adsl2PMLineCurrEntry 17 }

-- PM line init current counters --

adsl2PMLineCurrInitTable OBJECT-TYPE

SYNTAX SEQUENCE OF Adsl2PMLineCurrInitEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2PMLineCurrInitTable contains current
initialization counters of ADSL2 line. The objects in
this table are NOT persistent."

::= { adsl2PMLine 2 }

adsl2PMLineCurrInitEntry OBJECT-TYPE

SYNTAX Adsl2PMLineCurrInitEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2PMLineCurrInitTable contains current initialization counters of ADSL2 line.

The index of this table is an interface index where the interface has an ifType of adsl2(230) and the termination unit."

INDEX { ifIndex }

::= { adsl2PMLineCurrInitTable 1 }

Adsl2PMLineCurrInitEntry ::=

SEQUENCE {

adsl2PMLCurrInit15MTimeElapsed	Unsigned32,
adsl2PMLCurrInit15MFullInits	Unsigned32,
adsl2PMLCurrInit15MFailedFullInits	Unsigned32,
adsl2PMLCurrInit15MShortInits	Unsigned32,
adsl2PMLCurrInit15MFailedShortInits	Unsigned32,
adsl2PMLCurrInit1DayTimeElapsed	Unsigned32,
adsl2PMLCurrInit1DayFullInits	Unsigned32,
adsl2PMLCurrInit1DayFailedFullInits	Unsigned32,
adsl2PMLCurrInit1DayShortInits	Unsigned32,
adsl2PMLCurrInit1DayFailedShortInits	Unsigned32

}

adsl2PMLCurrInit15MTimeElapsed OBJECT-TYPE

SYNTAX Unsigned32

UNITS "seconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Total elapsed seconds in this interval."

::= { adsl2PMLineCurrInitEntry 1 }

adsl2PMLCurrInit15MFullInits OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Count of full initializations attempted on the line (successful and failed) during this interval."

REFERENCE "ITU-T G.997.1, paragraph 7.2.1"

::= { adsl2PMLineCurrInitEntry 2 }

adsl2PMLCurrInit15MFailedFullInits OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Count of failed full initializations on the line during this


```
        interval."
REFERENCE      "ITU-T G.997.1, paragraph 7.2.1"
::= { adsl2PMLineCurrInitEntry 3 }

adsl2PMLCurrInit15MShortInits  OBJECT-TYPE
    SYNTAX      Unsigned32
    MAX-ACCESS   read-only
    STATUS      current
    DESCRIPTION
        "Count of short initializations attempted on the line
        (successful and failed) during this interval."
    REFERENCE    "ITU-T G.997.1, paragraph 7.2.1"
    ::= { adsl2PMLineCurrInitEntry 4 }

adsl2PMLCurrInit15MFailedShortInits  OBJECT-TYPE
    SYNTAX      Unsigned32
    MAX-ACCESS   read-only
    STATUS      current
    DESCRIPTION
        "Count of failed short initializations on the line during this
        interval."
    REFERENCE    "ITU-T G.997.1, paragraph 7.2.1"
    ::= { adsl2PMLineCurrInitEntry 5 }

adsl2PMLCurrInit1DayTimeElapsed  OBJECT-TYPE
    SYNTAX      Unsigned32
    UNITS       "seconds"
    MAX-ACCESS   read-only
    STATUS      current
    DESCRIPTION
        "Total elapsed seconds in this interval."
    ::= { adsl2PMLineCurrInitEntry 6 }

adsl2PMLCurrInit1DayFullInits  OBJECT-TYPE
    SYNTAX      Unsigned32
    MAX-ACCESS   read-only
    STATUS      current
    DESCRIPTION
        "Count of full initializations attempted on the line
        (successful and failed) during this interval."
    REFERENCE    "ITU-T G.997.1, paragraph 7.2.1"
    ::= { adsl2PMLineCurrInitEntry 7 }

adsl2PMLCurrInit1DayFailedFullInits  OBJECT-TYPE
    SYNTAX      Unsigned32
    MAX-ACCESS   read-only
    STATUS      current
    DESCRIPTION
```


"Count of failed full initializations on the line during this interval."

REFERENCE "ITU-T G.997.1, paragraph 7.2.1"

::= { adsl2PMLineCurrInitEntry 8 }

adsl2PMLCurrInit1DayShortInits OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Count of short initializations attempted on the line (successful and failed) during this interval."

REFERENCE "ITU-T G.997.1, paragraph 7.2.1"

::= { adsl2PMLineCurrInitEntry 9 }

adsl2PMLCurrInit1DayFailedShortInits OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Count of failed short initializations on the line during this interval."

REFERENCE "ITU-T G.997.1, paragraph 7.2.1"

::= { adsl2PMLineCurrInitEntry 10 }

-- PM line history 15 Minutes --

adsl2PMLineHist15MinTable OBJECT-TYPE

SYNTAX SEQUENCE OF Adsl2PMLineHist15MinEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2PMLineHist15MinTable contains PM line history for 15min intervals of ADSL2 line. The objects in this table are NOT persistent."

::= { adsl2PMLine 3 }

adsl2PMLineHist15MinEntry OBJECT-TYPE

SYNTAX Adsl2PMLineHist15MinEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2PMLineHist15MinTable contains PM line history for 15min intervals of ADSL2 line.

The index of this table is an interface index where the


```
        interface has an ifType of adsl2(230), the termination unit,
        and an interval number."
INDEX   { ifIndex,
          adsl2PMLHist15MUnit,
          adsl2PMLHist15MInterval }
 ::= { adsl2PMLLineHist15MinTable 1 }

Adsl2PMLLineHist15MinEntry ::=
SEQUENCE {
    adsl2PMLHist15MUnit           Adsl2Unit,
    adsl2PMLHist15MInterval       Unsigned32,
    adsl2PMLHist15MMonitoredTime Unsigned32,
    adsl2PMLHist15MFecs           Counter32,
    adsl2PMLHist15MEs             Counter32,
    adsl2PMLHist15MSes            Counter32,
    adsl2PMLHist15MLoss           Counter32,
    adsl2PMLHist15MUas            Counter32,
    adsl2PMLHist15MValidInterval  TruthValue
}

adsl2PMLHist15MUnit OBJECT-TYPE
SYNTAX      Adsl2Unit
MAX-ACCESS  not-accessible
STATUS      current
DESCRIPTION
    "The termination unit ATUC{1} or ATUR{2}."
 ::= { adsl2PMLLineHist15MinEntry 1 }

adsl2PMLHist15MInterval OBJECT-TYPE
SYNTAX      Unsigned32 (1..96)
MAX-ACCESS  not-accessible
STATUS      current
DESCRIPTION
    "The interval number."
 ::= { adsl2PMLLineHist15MinEntry 2 }

adsl2PMLHist15MMonitoredTime OBJECT-TYPE
SYNTAX      Unsigned32
UNITS       "seconds"
MAX-ACCESS  read-only
STATUS      current
DESCRIPTION
    "Total seconds monitored in this interval."
 ::= { adsl2PMLLineHist15MinEntry 3 }

adsl2PMLHist15MFecs OBJECT-TYPE
SYNTAX      Counter32
UNITS       "seconds"
```


MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "Count of seconds during this interval that there was at least
 one FEC correction event for one or more bearer channels in
 this line. This parameter is inhibited during UAS or SES."
REFERENCE "ITU-T G.997.1, paragraph 7.2.1"
::= { adsl2PMLineHist15MinEntry 4 }

adsl2PMLHist15MEs OBJECT-TYPE

SYNTAX Counter32
UNITS "seconds"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "Count of seconds during this interval that there was:
 ATU-C: CRC-8 >= 1 for one or more bearer channels OR
 LOS >= 1 OR SEF >= 1 OR LPR >= 1
 ATU-R: FEBE >= 1 for one or more bearer channels OR
 LOS-FE >= 1 OR RDI >= 1 OR LPR-FE >= 1.
 This parameter is inhibited during UAS."
REFERENCE "ITU-T G.997.1, paragraph 7.2.1"
::= { adsl2PMLineHist15MinEntry 5 }

adsl2PMLHist15MSes OBJECT-TYPE

SYNTAX Counter32
UNITS "seconds"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "Count of seconds during this interval that there was:
 ATU-C: (CRC-8 summed over all bearer channels) >= 18 OR
 LOS >= 1 OR SEF >= 1 OR LPR >= 1
 ATU-R: (FEBE summed over all bearer channels) >= 18 OR
 LOS-FE >= 1 OR RDI >= 1 OR LPR-FE >= 1.
 This parameter is inhibited during UAS."
REFERENCE "ITU-T G.997.1, paragraph 7.2.1"
::= { adsl2PMLineHist15MinEntry 6 }

adsl2PMLHist15MLoss OBJECT-TYPE

SYNTAX Counter32
UNITS "seconds"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "Count of seconds during this interval that there was LOS (or
 LOS-FE for ATU-R)."
REFERENCE "ITU-T G.997.1, paragraph 7.2.1"


```
::= { adsl2PMLineHist15MinEntry 7 }
```

```
adsl2PMLHist15MUas OBJECT-TYPE
```

```
SYNTAX Counter32
```

```
UNITS "seconds"
```

```
MAX-ACCESS read-only
```

```
STATUS current
```

```
DESCRIPTION
```

```
"Count of seconds in Unavailability State during this interval.
Unavailability begins at the onset of 10 contiguous severely
-errored seconds, and ends at the onset of 10 contiguous
seconds with no severely-errored seconds."
```

```
REFERENCE "ITU-T G.997.1, paragraph 7.2.1"
```

```
::= { adsl2PMLineHist15MinEntry 8 }
```

```
adsl2PMLHist15MValidInterval OBJECT-TYPE
```

```
SYNTAX TruthValue
```

```
MAX-ACCESS read-only
```

```
STATUS current
```

```
DESCRIPTION
```

```
"This variable indicates if the data for this interval is
valid."
```

```
::= { adsl2PMLineHist15MinEntry 9 }
```

```
-----
--          PM line history 1 Day          --
-----
```

```
adsl2PMLineHist1DayTable OBJECT-TYPE
```

```
SYNTAX SEQUENCE OF Adsl2PMLineHist1DayEntry
```

```
MAX-ACCESS not-accessible
```

```
STATUS current
```

```
DESCRIPTION
```

```
"The table adsl2PMLineHist1DayTable contains PM line history
for 24 hours intervals of ADSL2 line. The objects in this
table are NOT persistent."
```

```
::= { adsl2PMLine 4 }
```

```
adsl2PMLineHist1DayEntry OBJECT-TYPE
```

```
SYNTAX Adsl2PMLineHist1DayEntry
```

```
MAX-ACCESS not-accessible
```

```
STATUS current
```

```
DESCRIPTION
```

```
"The table adsl2PMLineHist1DayTable contains PM line history
for 24 hours intervals of ADSL2 line.
The indexes of this table is an interface index where the
interface has an ifType of adsl2(230), the termination unit
```


and an interval number."

```
INDEX { ifIndex,
        adsl2PMLHist1DUnit,
        adsl2PMLHist1DInterval }
 ::= { adsl2PMLLineHist1DayTable 1 }
```

```
Adsl2PMLLineHist1DayEntry ::=
  SEQUENCE {
    adsl2PMLHist1DUnit           Adsl2Unit,
    adsl2PMLHist1DInterval       Unsigned32,
    adsl2PMLHist1DMonitoredTime  Unsigned32,
    adsl2PMLHist1DFecs           Counter32,
    adsl2PMLHist1DEs             Counter32,
    adsl2PMLHist1DSes            Counter32,
    adsl2PMLHist1DLoss           Counter32,
    adsl2PMLHist1DUas            Counter32,
    adsl2PMLHist1DValidInterval  TruthValue
  }
```

```
adsl2PMLHist1DUnit  OBJECT-TYPE
    SYNTAX      Adsl2Unit
    MAX-ACCESS   not-accessible
    STATUS       current
    DESCRIPTION
        "The termination unit."
    ::= { adsl2PMLLineHist1DayEntry 1 }
```

```
adsl2PMLHist1DInterval  OBJECT-TYPE
    SYNTAX      Unsigned32 (1..30)
    MAX-ACCESS   not-accessible
    STATUS       current
    DESCRIPTION
        "The interval number."
    ::= { adsl2PMLLineHist1DayEntry 2 }
```

```
adsl2PMLHist1DMonitoredTime  OBJECT-TYPE
    SYNTAX      Unsigned32
    UNITS        "seconds"
    MAX-ACCESS   read-only
    STATUS       current
    DESCRIPTION
        "Total seconds monitored in this interval."
    ::= { adsl2PMLLineHist1DayEntry 3 }
```

```
adsl2PMLHist1DFecs  OBJECT-TYPE
    SYNTAX      Counter32
    UNITS        "seconds"
```


MAX-ACCESS read-only
STATUS current
DESCRIPTION
"Count of seconds during this interval that there was at least
one FEC correction event for one or more bearer channels in
this line. This parameter is inhibited during UAS or SES."
REFERENCE "ITU-T G.997.1, paragraph 7.2.1"
::= { adsl2PMLineHist1DayEntry 4 }

adsl2PMLHist1DEs OBJECT-TYPE

SYNTAX Counter32
UNITS "seconds"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"Count of seconds during this interval that there was:
ATU-C: CRC-8 >= 1 for one or more bearer channels OR
LOS >= 1 OR SEF >= 1 OR LPR >= 1
ATU-R: FEBE >= 1 for one or more bearer channels OR
LOS-FE >= 1 OR RDI >= 1 OR LPR-FE >= 1.
This parameter is inhibited during UAS."
REFERENCE "ITU-T G.997.1, paragraph 7.2.1"
::= { adsl2PMLineHist1DayEntry 5 }

adsl2PMLHist1DSes OBJECT-TYPE

SYNTAX Counter32
UNITS "seconds"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"Count of seconds during this interval that there was:
ATU-C: (CRC-8 summed over all bearer channels) >= 18 OR
LOS >= 1 OR SEF >> 1 OR LPR >= 1
ATU-R: (FEBE summed over all bearer channels) >= 18 OR
LOS-FE >= 1 OR RDI >= 1 OR LPR-FE >= 1.
This parameter is inhibited during UAS."
REFERENCE "ITU-T G.997.1, paragraph 7.2.1"
::= { adsl2PMLineHist1DayEntry 6 }

adsl2PMLHist1DLoss OBJECT-TYPE

SYNTAX Counter32
UNITS "seconds"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"Count of seconds during this interval that there was LOS (or
LOS-FE for ATU-R)."
REFERENCE "ITU-T G.997.1, paragraph 7.2.1"


```
::= { adsl2PMLineHist1DayEntry 7 }
```

```
adsl2PMLHist1DUas OBJECT-TYPE
```

```
SYNTAX Counter32
```

```
UNITS "seconds"
```

```
MAX-ACCESS read-only
```

```
STATUS current
```

```
DESCRIPTION
```

```
"Count of seconds in Unavailability State during this interval.
Unavailability begins at the onset of 10 contiguous severely
-errored seconds, and ends at the onset of 10 contiguous
seconds with no severely-errored seconds."
```

```
REFERENCE "ITU-T G.997.1, paragraph 7.2.1"
```

```
::= { adsl2PMLineHist1DayEntry 8 }
```

```
adsl2PMLHist1DValidInterval OBJECT-TYPE
```

```
SYNTAX TruthValue
```

```
MAX-ACCESS read-only
```

```
STATUS current
```

```
DESCRIPTION
```

```
"This variable indicates if the data for this interval is
valid."
```

```
::= { adsl2PMLineHist1DayEntry 9 }
```

```
-----
--      PM line init history 15 Minutes      --
-----
```

```
adsl2PMLineInitHist15MinTable OBJECT-TYPE
```

```
SYNTAX SEQUENCE OF Adsl2PMLineInitHist15MinEntry
```

```
MAX-ACCESS not-accessible
```

```
STATUS current
```

```
DESCRIPTION
```

```
"The table adsl2PMLineInitHist15MinTable contains PM line
initialization history for 15 minutes intervals of ADSL2
line. The objects in this table are NOT persistent."
```

```
::= { adsl2PMLine 5 }
```

```
adsl2PMLineInitHist15MinEntry OBJECT-TYPE
```

```
SYNTAX Adsl2PMLineInitHist15MinEntry
```

```
MAX-ACCESS not-accessible
```

```
STATUS current
```

```
DESCRIPTION
```

```
"The table adsl2PMLineInitHist15MinTable contains PM line
initialization history for 15 minutes intervals of ADSL2
```


line.

The index of this table is an interface index where the interface has an ifType of adsl2(230) and an interval number."

```
INDEX { ifIndex,
        adsl2PMLHistInit15MInterval }
 ::= { adsl2PMLLineInitHist15MinTable 1 }
```

```
Adsl2PMLLineInitHist15MinEntry ::=
SEQUENCE {
    adsl2PMLHistInit15MInterval          Unsigned32,
    adsl2PMLHistInit15MMonitoredTime     Unsigned32,
    adsl2PMLHistInit15MFullInits         Unsigned32,
    adsl2PMLHistInit15MFailedFullInits   Unsigned32,
    adsl2PMLHistInit15MShortInits        Unsigned32,
    adsl2PMLHistInit15MFailedShortInits   Unsigned32,
    adsl2PMLHistInit15MValidInterval      TruthValue
}
```

```
adsl2PMLHistInit15MInterval OBJECT-TYPE
SYNTAX      Unsigned32 (1..96)
MAX-ACCESS  not-accessible
STATUS      current
DESCRIPTION
    "The interval number."
 ::= { adsl2PMLLineInitHist15MinEntry 1 }
```

```
adsl2PMLHistInit15MMonitoredTime OBJECT-TYPE
SYNTAX      Unsigned32
UNITS       "seconds"
MAX-ACCESS  read-only
STATUS      current
DESCRIPTION
    "Total seconds monitored in this interval."
 ::= { adsl2PMLLineInitHist15MinEntry 2 }
```

```
adsl2PMLHistInit15MFullInits OBJECT-TYPE
SYNTAX      Unsigned32
MAX-ACCESS  read-only
STATUS      current
DESCRIPTION
    "Count of full initializations attempted on the line
    (successful and failed) during this interval."
REFERENCE   "ITU-T G.997.1, paragraph 7.2.1"
 ::= { adsl2PMLLineInitHist15MinEntry 3 }
```

```
adsl2PMLHistInit15MFailedFullInits OBJECT-TYPE
SYNTAX      Unsigned32
```


MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "Count of failed full initializations on the line during this
 interval."
REFERENCE "ITU-T G.997.1, paragraph 7.2.1"
::= { adsl2PMLineInitHist15MinEntry 4 }

adsl2PMLHistInit15MShortInits OBJECT-TYPE
SYNTAX Unsigned32
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "Count of short initializations attempted on the line
 (successful and failed) during this interval."
REFERENCE "ITU-T G.997.1, paragraph 7.2.1"
::= { adsl2PMLineInitHist15MinEntry 5 }

adsl2PMLHistInit15MFailedShortInits OBJECT-TYPE
SYNTAX Unsigned32
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "Count of failed short initializations on the line during this
 interval."
REFERENCE "ITU-T G.997.1, paragraph 7.2.1"
::= { adsl2PMLineInitHist15MinEntry 6 }

adsl2PMLHistInit15MValidInterval OBJECT-TYPE
SYNTAX TruthValue
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "This variable indicates if the data for this interval is
 valid."
::= { adsl2PMLineInitHist15MinEntry 7 }

-- PM line init history 1 Day --

adsl2PMLLineInitHist1DayTable OBJECT-TYPE
SYNTAX SEQUENCE OF Adsl2PMLLineInitHist1DayEntry
MAX-ACCESS not-accessible
STATUS current
DESCRIPTION
 "The table adsl2PMLLineInitHist1DayTable contains PM line

initialization history for 24 hours intervals of ADSL2 line. The objects in this table are NOT persistent."
 ::= { adsl2PMLine 6 }

adsl2PMLineInitHist1DayEntry OBJECT-TYPE

SYNTAX Adsl2PMLineInitHist1DayEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2PMLineInitHist1DayTable contains PM line initialization history for 24 hours intervals of ADSL2 line.

The indexes of this table is an interface index where the interface has an ifType of adsl2(230) and an interval number."

INDEX { ifIndex,
 adsl2PMLHistinit1DInterval }

::= { adsl2PMLineInitHist1DayTable 1 }

Adsl2PMLineInitHist1DayEntry ::=

SEQUENCE {

adsl2PMLHistinit1DInterval Unsigned32,

adsl2PMLHistinit1DMonitoredTime Unsigned32,

adsl2PMLHistinit1DFullInits Unsigned32,

adsl2PMLHistinit1DFailedFullInits Unsigned32,

adsl2PMLHistinit1DShortInits Unsigned32,

adsl2PMLHistinit1DFailedShortInits Unsigned32,

adsl2PMLHistinit1DValidInterval TruthValue

}

adsl2PMLHistinit1DInterval OBJECT-TYPE

SYNTAX Unsigned32 (1..30)

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The interval number."

::= { adsl2PMLineInitHist1DayEntry 1 }

adsl2PMLHistinit1DMonitoredTime OBJECT-TYPE

SYNTAX Unsigned32

UNITS "seconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Total seconds monitored in this interval."

::= { adsl2PMLineInitHist1DayEntry 2 }

adsl2PMLHistinit1DFullInits OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "Count of full initializations attempted on the line
 (successful and failed) during this interval."
REFERENCE "ITU-T G.997.1, paragraph 7.2.1"
::= { adsl2PMLineInitHist1DayEntry 3 }

adsl2PMLHistinit1DFailedFullInits OBJECT-TYPE
SYNTAX Unsigned32
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "Count of failed full initializations on the line during this
 interval."
REFERENCE "ITU-T G.997.1, paragraph 7.2.1"
::= { adsl2PMLineInitHist1DayEntry 4 }

adsl2PMLHistinit1DShortInits OBJECT-TYPE
SYNTAX Unsigned32
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "Count of short initializations attempted on the line
 (successful and failed) during this interval."
REFERENCE "ITU-T G.997.1, paragraph 7.2.1"
::= { adsl2PMLineInitHist1DayEntry 5 }

adsl2PMLHistinit1DFailedShortInits OBJECT-TYPE
SYNTAX Unsigned32
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "Count of failed short initializations on the line during this
 interval."
REFERENCE "ITU-T G.997.1, paragraph 7.2.1"
::= { adsl2PMLineInitHist1DayEntry 6 }

adsl2PMLHistinit1DValidInterval OBJECT-TYPE
SYNTAX TruthValue
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "This variable indicates if the data for this interval is
 valid."
::= { adsl2PMLineInitHist1DayEntry 7 }


```

-----
--          PM channel current counters          --
-----
adsl2PMChCurrTable      OBJECT-TYPE
    SYNTAX      SEQUENCE OF Adsl2PMChCurrEntry
    MAX-ACCESS   not-accessible
    STATUS      current
    DESCRIPTION
        "The table adsl2PMChCurrTable contains current Performance
        Monitoring results of ADSL2 channel.  The objects in this
        table are NOT persistent."
    ::= { adsl2PMChannel 1 }

adsl2PMChCurrEntry      OBJECT-TYPE
    SYNTAX      Adsl2PMChCurrEntry
    MAX-ACCESS   not-accessible
    STATUS      current
    DESCRIPTION
        "The table adsl2PMChCurrTable contains current Performance
        Monitoring results of ADSL2 channel.
        The indexes of this table is an interface index where
        the interface has an ifType value which is applicable
        for a DSL channel and the termination unit."
    INDEX { ifIndex, adsl2PMChCurrUnit }
    ::= { adsl2PMChCurrTable 1 }

Adsl2PMChCurrEntry ::=
    SEQUENCE {
        adsl2PMChCurrUnit                Adsl2Unit,
        adsl2PMChCurrValidIntervals      Unsigned32,
        adsl2PMChCurrInvalidIntervals    Unsigned32,
        adsl2PMChCurr15MTimeElapsed      HCPerfTimeElapsed,
        adsl2PMChCurr15MCodingViolations Unsigned32,
        adsl2PMChCurr15MCorrectedBlocks  Unsigned32,
        adsl2PMChCurr1DayValidIntervals  Unsigned32,
        adsl2PMChCurr1DayInvalidIntervals Unsigned32,
        adsl2PMChCurr1DayTimeElapsed      HCPerfTimeElapsed,
        adsl2PMChCurr1DayCodingViolations Unsigned32,
        adsl2PMChCurr1DayCorrectedBlocks  Unsigned32
    }

adsl2PMChCurrUnit      OBJECT-TYPE
    SYNTAX      Adsl2Unit
    MAX-ACCESS   not-accessible
    STATUS      current
    DESCRIPTION
        "The termination unit."
    ::= { adsl2PMChCurrEntry 1 }

```


adsl2PMChCurrValidIntervals OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Valid intervals."

::= { adsl2PMChCurrEntry 2 }

adsl2PMChCurrInvalidIntervals OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Invalid intervals."

::= { adsl2PMChCurrEntry 3 }

adsl2PMChCurr15MTimeElapsed OBJECT-TYPE

SYNTAX HCPerfTimeElapsed

UNITS "seconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Total elapsed seconds in this interval."

::= { adsl2PMChCurrEntry 4 }

adsl2PMChCurr15MCodingViolations OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Count of CRC-8 (FEBE for ATU-R) anomalies occurring in the channel during the interval. This parameter is inhibited during UAS or SES. If the CRC is applied over multiple channels, then each related CRC-8 (or FEBE) anomaly should increment each of the counters related to the individual channels."

REFERENCE "ITU-T G.997.1, paragraph 7.2.2"

::= { adsl2PMChCurrEntry 5 }

adsl2PMChCurr15MCorrectedBlocks OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Count of FEC (FFEC for ATU-R) anomalies (corrected code words) occurring in the channel during the interval. This parameter is inhibited during UAS or SES. If the FEC is applied over multiple channels, then each related FEC (or FFEC) anomaly

should increment each of the counters related to the individual channels."

REFERENCE "ITU-T G.997.1, paragraph 7.2.2"

::= { adsl2PMChCurrEntry 6 }

adsl2PMChCurr1DayValidIntervals OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Valid intervals."

::= { adsl2PMChCurrEntry 7 }

adsl2PMChCurr1DayInvalidIntervals OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Invalid intervals."

::= { adsl2PMChCurrEntry 8 }

adsl2PMChCurr1DayTimeElapsed OBJECT-TYPE

SYNTAX HCPperfTimeElapsed

UNITS "seconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Total elapsed seconds in this interval."

::= { adsl2PMChCurrEntry 9 }

adsl2PMChCurr1DayCodingViolations OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Count of CRC-8 (FEBE for ATU-R) anomalies occurring in the channel during the interval. This parameter is inhibited during UAS or SES. If the CRC is applied over multiple channels, then each related CRC-8 (or FEBE) anomaly should increment each of the counters related to the individual channels."

REFERENCE "ITU-T G.997.1, paragraph 7.2.2"

::= { adsl2PMChCurrEntry 10 }

adsl2PMChCurr1DayCorrectedBlocks OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Count of FEC (FFEC for ATU-R) anomalies (corrected code words) occurring in the channel during the interval. This parameter is inhibited during UAS or SES. If the FEC is applied over multiple channels, then each related FEC (or FFEC) anomaly should increment each of the counters related to the individual channels."

REFERENCE "ITU-T G.997.1, paragraph 7.2.2"

::= { adsl2PMChCurrEntry 11 }

 -- PM channel history 15 Minutes --

adsl2PMChHist15MinTable OBJECT-TYPE
 SYNTAX SEQUENCE OF Adsl2PMChHist15MinEntry
 MAX-ACCESS not-accessible
 STATUS current
 DESCRIPTION

"The table adsl2PMChCurrTable contains current Performance Monitoring results of ADSL2 channel. The objects in this table are NOT persistent."

::= { adsl2PMChannel 2 }

adsl2PMChHist15MinEntry OBJECT-TYPE
 SYNTAX Adsl2PMChHist15MinEntry
 MAX-ACCESS not-accessible
 STATUS current
 DESCRIPTION

"The table adsl2PMChCurrTable contains current Performance Monitoring results of ADSL2 channel.

The indexes of this table is an interface index where the interface has an ifType value which is applicable for a DSL channel, the termination unit and the interval number."

INDEX { ifIndex,
 adsl2PMChHist15MUnit,
 adsl2PMChHist15MInterval }
 ::= { adsl2PMChHist15MinTable 1 }

Adsl2PMChHist15MinEntry ::=

SEQUENCE {	
adsl2PMChHist15MUnit	Adsl2Unit,
adsl2PMChHist15MInterval	Unsigned32,
adsl2PMChHist15MMonitoredTime	Unsigned32,
adsl2PMChHist15MCodingViolations	Unsigned32,
adsl2PMChHist15MCorrectedBlocks	Unsigned32,


```
        adsl2PMChHist15MValidInterval      TruthValue
    }

adsl2PMChHist15MUnit OBJECT-TYPE
    SYNTAX      Adsl2Unit
    MAX-ACCESS  not-accessible
    STATUS      current
    DESCRIPTION
        "The termination unit."
    ::= { adsl2PMChHist15MinEntry 1 }

adsl2PMChHist15MInterval OBJECT-TYPE
    SYNTAX      Unsigned32 (1..96)
    MAX-ACCESS  not-accessible
    STATUS      current
    DESCRIPTION
        "The interval number."
    ::= { adsl2PMChHist15MinEntry 2 }

adsl2PMChHist15MMonitoredTime OBJECT-TYPE
    SYNTAX      Unsigned32
    UNITS       "seconds"
    MAX-ACCESS  read-only
    STATUS      current
    DESCRIPTION
        "Total seconds monitored in this interval."
    ::= { adsl2PMChHist15MinEntry 3 }

adsl2PMChHist15MCodingViolations OBJECT-TYPE
    SYNTAX      Unsigned32
    MAX-ACCESS  read-only
    STATUS      current
    DESCRIPTION
        "Count of CRC-8 (FEBE for ATU-R) anomalies occurring in the
        channel during the interval. This parameter is inhibited
        during UAS or SES. If the CRC is applied over multiple
        channels, then each related CRC-8 (or FEBE) anomaly should
        increment each of the counters related to the individual
        channels."
    REFERENCE   "ITU-T G.997.1, paragraph 7.2.2"
    ::= { adsl2PMChHist15MinEntry 4 }

adsl2PMChHist15MCorrectedBlocks OBJECT-TYPE
    SYNTAX      Unsigned32
    MAX-ACCESS  read-only
    STATUS      current
    DESCRIPTION
        "Count of FEC (FFEC for ATU-R) anomalies (corrected code words)
```


occurring in the channel during the interval. This parameter is inhibited during UAS or SES. If the FEC is applied over multiple channels, then each related FEC (or FFEC) anomaly should increment each of the counters related to the individual channels."

REFERENCE "ITU-T G.997.1, paragraph 7.2.2"

::= { adsl2PMChHist15MinEntry 5 }

adsl2PMChHist15MValidInterval OBJECT-TYPE

SYNTAX TruthValue

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This variable indicates if the data for this interval is valid."

::= { adsl2PMChHist15MinEntry 6 }

```
-----
--          PM channel history 1 Day          --
-----
```

adsl2PMChHist1DTable OBJECT-TYPE

SYNTAX SEQUENCE OF Adsl2PMChHist1DEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2PMChHist1DayTable contains PM channel history for 1 day intervals of ADSL2. The objects in this table are NOT persistent."

::= { adsl2PMChannel 3 }

adsl2PMChHist1DEntry OBJECT-TYPE

SYNTAX Adsl2PMChHist1DEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The table adsl2PMChHist1DayTable contains PM channel history for 1 day intervals of ADSL2.

The indexes of this table is an interface index where the interface has an ifType value which is applicable for a DSL channel, the termination unit and the interval number."

INDEX { ifIndex,
 adsl2PMChHist1DUnit,
 adsl2PMChHist1DInterval }

::= { adsl2PMChHist1DTable 1 }

Adsl2PMChHist1DEntry ::=

```
SEQUENCE {
    adsl2PMChHist1DUnit           Adsl2Unit,
    adsl2PMChHist1DInterval       Unsigned32,
    adsl2PMChHist1DMonitoredTime  Unsigned32,
    adsl2PMChHist1DCodingViolations Unsigned32,
    adsl2PMChHist1DCorrectedBlocks Unsigned32,
    adsl2PMChHist1DValidInterval  TruthValue
}
```

adsl2PMChHist1DUnit OBJECT-TYPE

```
SYNTAX      Adsl2Unit
MAX-ACCESS  not-accessible
STATUS      current
DESCRIPTION
    "The termination unit."
    ::= { adsl2PMChHist1DEntry 1 }
```

adsl2PMChHist1DInterval OBJECT-TYPE

```
SYNTAX      Unsigned32 (1..30)
MAX-ACCESS  not-accessible
STATUS      current
DESCRIPTION
    "The interval number."
    ::= { adsl2PMChHist1DEntry 2 }
```

adsl2PMChHist1DMonitoredTime OBJECT-TYPE

```
SYNTAX      Unsigned32
UNITS       "seconds"
MAX-ACCESS  read-only
STATUS      current
DESCRIPTION
    "Total seconds monitored in this interval."
    ::= { adsl2PMChHist1DEntry 3 }
```

adsl2PMChHist1DCodingViolations OBJECT-TYPE

```
SYNTAX      Unsigned32
MAX-ACCESS  read-only
STATUS      current
DESCRIPTION
    "Count of CRC-8 (FEBE for ATU-R) anomalies occurring in the
    channel during the interval. This parameter is inhibited
    during UAS or SES. If the CRC is applied over multiple
    channels, then each related CRC-8 (or FEBE) anomaly should
    increment each of the counters related to the individual
    channels."
REFERENCE   "ITU-T G.997.1, paragraph 7.2.2"
    ::= { adsl2PMChHist1DEntry 4 }
```


adsl2PMChHist1DCorrectedBlocks OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Count of FEC (FFEC for ATU-R) anomalies (corrected code words) occurring in the channel during the interval. This parameter is inhibited during UAS or SES. If the FEC is applied over multiple channels, then each related FEC (or FFEC) anomaly should increment each of the counters related to the individual channels."

REFERENCE "ITU-T G.997.1, paragraph 7.2.2"

::= { adsl2PMChHist1DEntry 5 }

adsl2PMChHist1DValidInterval OBJECT-TYPE

SYNTAX TruthValue

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This variable indicates if the data for this interval is valid."

::= { adsl2PMChHist1DEntry 6 }

-- Notifications Group --

adsl2LinePerfFECSThreshAtuc NOTIFICATION-TYPE

OBJECTS

{
adsl2PMLCurr15MFecs,
adsl2LineAlarmConfProfileAtucThresh15MinFecs
}

STATUS current

DESCRIPTION

"This notification indicates that the FEC seconds threshold has been reached/exceeded for the referred ATU-C."

::= { adsl2Notifications 1 }

adsl2LinePerfFECSThreshAtur NOTIFICATION-TYPE

OBJECTS

{
adsl2PMLCurr15MFecs,
adsl2LineAlarmConfProfileAturThresh15MinFecs
}

STATUS current

DESCRIPTION

"This notification indicates that the FEC seconds threshold

has been reached/exceeded for the referred ATU-R."
 ::= { adsl2Notifications 2 }

adsl2LinePerfESThreshAtuc NOTIFICATION-TYPE

OBJECTS

{
 adsl2PMLCurr15MEs,
 adsl2LineAlarmConfProfileAtucThresh15MinEs
 }

STATUS current

DESCRIPTION

"This notification indicates that the errored seconds threshold
 has been reached/exceeded for the referred ATU-C."
 ::= { adsl2Notifications 3 }

adsl2LinePerfESThreshAtur NOTIFICATION-TYPE

OBJECTS

{
 adsl2PMLCurr15MEs,
 adsl2LineAlarmConfProfileAturThresh15MinEs
 }

STATUS current

DESCRIPTION

"This notification indicates that the errored seconds threshold
 has been reached/exceeded for the referred ATU-R."
 ::= { adsl2Notifications 4 }

adsl2LinePerfSESThreshAtuc NOTIFICATION-TYPE

OBJECTS

{
 adsl2PMLCurr15MSes,
 adsl2LineAlarmConfProfileAtucThresh15MinSes
 }

STATUS current

DESCRIPTION

"This notification indicates that the severely-errored seconds
 threshold has been reached/exceeded for the referred ATU-C."
 ::= { adsl2Notifications 5 }

adsl2LinePerfSESThreshAtur NOTIFICATION-TYPE

OBJECTS

{
 adsl2PMLCurr15MSes,
 adsl2LineAlarmConfProfileAturThresh15MinSes
 }

STATUS current

DESCRIPTION

"This notification indicates that the severely-errored seconds

threshold has been reached/exceeded for the referred ATU-R."
 ::= { adsl2Notifications 6 }

adsl2LinePerfLOSSThreshAtuc NOTIFICATION-TYPE

OBJECTS

{
 adsl2PMLCurr15MLoss,
 adsl2LineAlarmConfProfileAtucThresh15MinLoss
}

STATUS current

DESCRIPTION

"This notification indicates that the LOS seconds
 threshold has been reached/exceeded for the referred ATU-C."
 ::= { adsl2Notifications 7 }

adsl2LinePerfLOSSThreshAtur NOTIFICATION-TYPE

OBJECTS

{
 adsl2PMLCurr15MLoss,
 adsl2LineAlarmConfProfileAturThresh15MinLoss
}

STATUS current

DESCRIPTION

"This notification indicates that the LOS seconds
 threshold has been reached/exceeded for the referred ATU-R."
 ::= { adsl2Notifications 8 }

adsl2LinePerfUASThreshAtuc NOTIFICATION-TYPE

OBJECTS

{
 adsl2PMLCurr15MUas,
 adsl2LineAlarmConfProfileAtucThresh15MinUas
}

STATUS current

DESCRIPTION

"This notification indicates that the unavailable seconds
 threshold has been reached/exceeded for the referred ATU-C."
 ::= { adsl2Notifications 9 }

adsl2LinePerfUASThreshAtur NOTIFICATION-TYPE

OBJECTS

{
 adsl2PMLCurr15MUas,
 adsl2LineAlarmConfProfileAturThresh15MinUas
}

STATUS current

DESCRIPTION

"This notification indicates that the unavailable seconds

threshold has been reached/exceeded for the referred ATU-R."
::= { adsl2Notifications 10 }

adsl2LinePerfCodingViolationsThreshAtuc NOTIFICATION-TYPE

OBJECTS

{
adsl2PMChCurr15MCodingViolations,
adsl2ChAlarmConfProfileAtucThresh15MinCodingViolations
}

STATUS current

DESCRIPTION

"This notification indicates that the coding violations
threshold has been reached/exceeded for the referred ATU-C."
::= { adsl2Notifications 11 }

adsl2LinePerfCodingViolationsThreshAtur NOTIFICATION-TYPE

OBJECTS

{
adsl2PMChCurr15MCodingViolations,
adsl2ChAlarmConfProfileAturThresh15MinCodingViolations
}

STATUS current

DESCRIPTION

"This notification indicates that the coding violations
threshold has been reached/exceeded for the referred ATU-R."
::= { adsl2Notifications 12 }

adsl2LinePerfCorrectedThreshAtuc NOTIFICATION-TYPE

OBJECTS

{
adsl2PMChCurr15MCorrectedBlocks,
adsl2ChAlarmConfProfileAtucThresh15MinCorrected
}

STATUS current

DESCRIPTION

"This notification indicates that the corrected blocks
(FEC events) threshold has been reached/exceeded for the
referred ATU-C."
::= { adsl2Notifications 13 }

adsl2LinePerfCorrectedThreshAtur NOTIFICATION-TYPE

OBJECTS

{
adsl2PMChCurr15MCorrectedBlocks,
adsl2ChAlarmConfProfileAturThresh15MinCorrected
}

STATUS current

DESCRIPTION

"This notification indicates that the corrected blocks
(FEC events) threshold has been reached/exceeded for the
referred ATU-R."

::= { adsl2Notifications 14 }

adsl2LinePerfFailedFullInitThresh NOTIFICATION-TYPE

OBJECTS

{
adsl2PMLCurrInit15MFailedFullInits,
adsl2LineAlarmConfProfileThresh15MinFailedFullInt
}

STATUS current

DESCRIPTION

"This notification indicates that the failed full
initializations threshold has been reached/exceeded for the
referred ADSL/ADSL2 or ADSL2 line."

::= { adsl2Notifications 15 }

adsl2LinePerfFailedShortInitThresh NOTIFICATION-TYPE

OBJECTS

{
adsl2PMLCurrInit15MFailedShortInits,
adsl2LineAlarmConfProfileThresh15MinFailedShrtInt
}

STATUS current

DESCRIPTION

"This notification indicates that the failed short
initializations threshold has been reached/exceeded for the
referred ADSL/ADSL2 or ADSL2 line."

::= { adsl2Notifications 16 }

adsl2LineStatusChangeAtuc NOTIFICATION-TYPE

OBJECTS

{
adsl2LineStatusAtuc
}

STATUS current

DESCRIPTION

"This notification indicates that a status change is
detected for the referred ATU-C."

::= { adsl2Notifications 17 }

adsl2LineStatusChangeAtur NOTIFICATION-TYPE

OBJECTS

{
adsl2LineStatusAtur
}

STATUS current

DESCRIPTION

"This notification indicates that a status change is detected for the referred ATU-R."

::= { adsl2Notifications 18 }

-- conformance information

adsl2Groups OBJECT IDENTIFIER ::= { adsl2Conformance 1 }

adsl2Compliances OBJECT IDENTIFIER ::= { adsl2Conformance 2 }

adsl2LineMibCompliance MODULE-COMPLIANCE

STATUS current

DESCRIPTION

"The compliance statement for SNMP entities which manage ADSL2 interfaces."

MODULE -- this module

MANDATORY-GROUPS

```
{
  adsl2LineGroup,
  adsl2ChannelStatusGroup,
  adsl2SCStatusGroup,
  adsl2LineInventoryGroup,
  adsl2LineConfTemplateGroup,
  adsl2LineConfProfGroup,
  adsl2LineConfProfModeSpecGroup,
  adsl2ChConfProfileGroup,
  adsl2LineAlarmConfTemplateGroup,
  adsl2PMLineCurrGroup,
  adsl2PMLineCurrInitGroup,
  adsl2PMLineHist15MinGroup,
  adsl2PMLineHist1DayGroup,
  adsl2PMLineInitHist15MinGroup,
  adsl2PMLineInitHist1DayGroup,
  adsl2PMChCurrGroup,
  adsl2PMChHist15MinGroup,
  adsl2PMChHist1DGroup
}
```

GROUP adsl2ChannelStatusAtmGroup

DESCRIPTION

"The group of status objects required when the data path is ATM."

GROUP adsl2ChannelStatusPtmGroup

DESCRIPTION

"The group of status objects required when the data path is PTM."

GROUP adsl2LineConfProfRaGroup

DESCRIPTION

"The group of objects required for controlling the rate adaptive behavior of the line."

GROUP adsl2LineConfProfMsgMinGroup

DESCRIPTION

"The group of objects required for controlling the rate reserved for Overhead traffic."

GROUP adsl2LineAlarmConfProfileGroup

DESCRIPTION

"The group of objects that define the alarm thresholds on line level PM counters."

GROUP adsl2ChAlarmConfProfileGroup

DESCRIPTION

"The group of objects that define the alarm thresholds on channel level PM counters."

GROUP adsl2ChConfProfileAtmGroup

DESCRIPTION

"The group of configuration objects required when the data path is ATM."

GROUP adsl2ChConfProfileMinResGroup

DESCRIPTION

"The group of configuration objects required for the reserved data rate."

GROUP adsl2PMLineCurrInitShortGroup

DESCRIPTION

"The group of PM counters for the current intervals short initializations."

GROUP adsl2PMLineInitHist15MinShortGroup

DESCRIPTION

"The group of PM counters for the previous 15 minutes intervals short initializations."

GROUP adsl2PMLineInitHist1DayShortGroup

DESCRIPTION

"The group of PM counters for the previous 24 hours intervals short initializations."

GROUP adsl2ScalarSCGroup

DESCRIPTION

"The group of objects that report the available memory


```
resources for DELT processes."

GROUP adsl2ThreshNotificationGroup
DESCRIPTION
    "The group of thresholds crossing notifications."

GROUP adsl2StatusChangeNotificationGroup
DESCRIPTION
    "The group of status change notifications."

::= { adsl2Compliances 1 }

-- units of conformance

adsl2LineGroup OBJECT-GROUP
OBJECTS
    {
        adsl2LineCnfgTemplate,
        adsl2LineAlarmCnfgTemplate,
        adsl2LineCmndConfPmsf,
        adsl2LineCmndConfLdsf,
        adsl2LineCmndConfLdsfFailReason,
        adsl2LineCmndAutomodeColdStart,
        adsl2LineStatusAtuTransSys,
        adsl2LineStatusPwrMngState,
        adsl2LineStatusInitResult,
        adsl2LineStatusLastStateDs,
        adsl2LineStatusLastStateUs,
        adsl2LineStatusAtur,
        adsl2LineStatusAtuc,
        adsl2LineStatusLnAttenDs,
        adsl2LineStatusLnAttenUs,
        adsl2LineStatusSigAttenDs,
        adsl2LineStatusSigAttenUs,
        adsl2LineStatusSnrMarginDs,
        adsl2LineStatusSnrMarginUs,
        adsl2LineStatusAttainableRateDs,
        adsl2LineStatusAttainableRateUs,
        adsl2LineStatusActPsdDs,
        adsl2LineStatusActPsdUs,
        adsl2LineStatusActAtpDs,
        adsl2LineStatusActAtpUs
    }
STATUS      current
DESCRIPTION
    "The group of configuration, status, and commands objects
    on the line level."
::= { adsl2Groups 1 }
```


adsl2ChannelStatusGroup OBJECT-GROUP

OBJECTS

```
{
    adsl2ChStatusChannelNum,
    adsl2ChStatusActDataRate,
    adsl2ChStatusPrevDataRate,
    adsl2ChStatusActDelay
}
```

STATUS current

DESCRIPTION

"The group of status objects on the channel level."
::= { adsl2Groups 2 }

adsl2ChannelStatusAtmGroup OBJECT-GROUP

OBJECTS

```
{
    adsl2ChStatusAtmStatus
}
```

STATUS current

DESCRIPTION

"The group of status objects on the data path level
when it is ATM."
::= { adsl2Groups 3 }

adsl2ChannelStatusPtmGroup OBJECT-GROUP

OBJECTS

```
{
    adsl2ChStatusPtmStatus
}
```

STATUS current

DESCRIPTION

"The group of status objects on the data path level
when it is PTM."
::= { adsl2Groups 4 }

adsl2SCStatusGroup OBJECT-GROUP

OBJECTS

```
{
    adsl2SCStatusMtime,
    adsl2SCStatusSnr,
    adsl2SCStatusBitsAlloc,
    adsl2SCStatusGainAlloc,
    adsl2SCStatusTssi,
    adsl2SCStatusLinScale,
    adsl2SCStatusLinReal,
    adsl2SCStatusLinImg,
    adsl2SCStatusLogMt,
    adsl2SCStatusLog,
}
```



```
    adsl2SCStatusQlnMt,
    adsl2SCStatusQln,
    adsl2SCStatusLnAtten,
    adsl2SCStatusSigAtten,
    adsl2SCStatusSnrMargin,
    adsl2SCStatusAttainableRate,
    adsl2SCStatusActAtp,
    adsl2SCStatusRowStatus
  }
STATUS      current
DESCRIPTION
  "The group of status objects on the sub-carrier level.
  They are updated as a result of a DELT process."
 ::= { adsl2Groups 5 }
```

adsl2LineInventoryGroup OBJECT-GROUP

```
OBJECTS
{
  adsl2LInvG994VendorId,
  adsl2LInvSystemVendorId,
  adsl2LInvVersionNumber,
  adsl2LInvSerialNumber,
  adsl2LInvSelfTestResult,
  adsl2LInvTransmissionCapabilities
}
STATUS      current
DESCRIPTION
  "The group of inventory objects per xTU."
 ::= { adsl2Groups 6 }
```

adsl2LineConfTemplateGroup OBJECT-GROUP

```
OBJECTS
{
  adsl2LConfTempLineProfile,
  adsl2LConfTempChan1ConfProfile,
  adsl2LConfTempChan1RaRatioDs,
  adsl2LConfTempChan1RaRatioUs,
  adsl2LConfTempChan2ConfProfile,
  adsl2LConfTempChan2RaRatioDs,
  adsl2LConfTempChan2RaRatioUs,
  adsl2LConfTempChan3ConfProfile,
  adsl2LConfTempChan3RaRatioDs,
  adsl2LConfTempChan3RaRatioUs,
  adsl2LConfTempChan4ConfProfile,
  adsl2LConfTempChan4RaRatioDs,
  adsl2LConfTempChan4RaRatioUs,
  adsl2LConfTempRowStatus
}
```


STATUS current

DESCRIPTION

"The group of objects in a line configuration template."

::= { adsl2Groups 7 }

adsl2LineConfProfGroup OBJECT-GROUP

OBJECTS

```
{
  adsl2LConfProfScMaskDs,
  adsl2LConfProfScMaskUs,
  adsl2LConfProfRfiBandsDs,
  adsl2LConfProfRaModeDs,
  adsl2LConfProfRaModeUs,
  adsl2LConfProfTargetSnrmDs,
  adsl2LConfProfTargetSnrmUs,
  adsl2LConfProfMaxSnrmDs,
  adsl2LConfProfMaxSnrmUs,
  adsl2LConfProfMinSnrmDs,
  adsl2LConfProfMinSnrmUs,
  adsl2LConfProfAtuTransSysEna,
  adsl2LConfProfPmMode,
  adsl2LConfProfL0Time,
  adsl2LConfProfL2Time,
  adsl2LConfProfL2Atpr,
  adsl2LConfProfL2Atprt,
  adsl2LConfProfRowStatus
}
```

STATUS current

DESCRIPTION

"The group of objects in a line configuration profile."

::= { adsl2Groups 8 }

adsl2LineConfProfRaGroup OBJECT-GROUP

OBJECTS

```
{
  adsl2LConfProfRaUsNrmDs,
  adsl2LConfProfRaUsNrmUs,
  adsl2LConfProfRaUsTimeDs,
  adsl2LConfProfRaUsTimeUs,
  adsl2LConfProfRaDsNrmsDs,
  adsl2LConfProfRaDsNrmsUs,
  adsl2LConfProfRaDsTimeDs,
  adsl2LConfProfRaDsTimeUs
}
```

STATUS current

DESCRIPTION

"The group of objects required for controlling the rate
adaptive behavior of the line."


```
::= { adsl2Groups 9 }
```

```
adsl2LineConfProfMsgMinGroup OBJECT-GROUP
```

```
OBJECTS
```

```
{  
    adsl2LConfProfMsgMinUs,  
    adsl2LConfProfMsgMinDs  
}
```

```
STATUS      current
```

```
DESCRIPTION
```

```
"The group of objects required for controlling the rate  
reserved for Overhead traffic."
```

```
::= { adsl2Groups 10 }
```

```
adsl2LineConfProfModeSpecGroup OBJECT-GROUP
```

```
OBJECTS
```

```
{  
    adsl2LConfProfMaxNomPsdDs,  
    adsl2LConfProfMaxNomPsdUs,  
    adsl2LConfProfMaxNomAtpDs,  
    adsl2LConfProfMaxNomAtpUs,  
    adsl2LConfProfMaxAggRxPwrUs,  
    adsl2LConfProfPsdMaskDs,  
    adsl2LConfProfPsdMaskUs,  
    adsl2LConfProfPsdMaskSelectUs,  
    adsl2LConfProfModeSpecRowStatus  
}
```

```
STATUS      current
```

```
DESCRIPTION
```

```
"The group of objects in a line configuration profile  
that have an instance for each operation mode allowed."
```

```
::= { adsl2Groups 11 }
```

```
adsl2ChConfProfileGroup OBJECT-GROUP
```

```
OBJECTS
```

```
{  
    adsl2ChConfProfMinDataRateDs,  
    adsl2ChConfProfMinDataRateUs,  
    adsl2ChConfProfMaxDataRateDs,  
    adsl2ChConfProfMaxDataRateUs,  
    adsl2ChConfProfMinDataRateLowPwrDs,  
    adsl2ChConfProfMaxDelayDs,  
    adsl2ChConfProfMaxDelayUs,  
    adsl2ChConfProfMinProtectionDs,  
    adsl2ChConfProfMinProtectionUs,  
    adsl2ChConfProfMaxBerDs,  
    adsl2ChConfProfMaxBerUs,  
    adsl2ChConfProfUsDataRateDs,  
}
```



```
        adsl2ChConfProfDsDataRateDs,
        adsl2ChConfProfUsDataRateUs,
        adsl2ChConfProfDsDataRateUs,
        adsl2ChConfProfRowStatus
    }
    STATUS      current
    DESCRIPTION
        "The group of objects in a channel configuration profile."
    ::= { adsl2Groups 12 }

adsl2ChConfProfileAtmGroup OBJECT-GROUP
    OBJECTS
        {
            adsl2ChConfProfImaEnabled,
            adsl2ChStatusAtmStatus
        }
    STATUS      current
    DESCRIPTION
        "The group of configuration objects required when the data
        path is ATM."
    ::= { adsl2Groups 13 }

adsl2ChConfProfileMinResGroup OBJECT-GROUP
    OBJECTS
        {
            adsl2ChConfProfMinResDataRateDs,
            adsl2ChConfProfMinResDataRateUs
        }
    STATUS      current
    DESCRIPTION
        "The group of configuration objects required for the
        reserved data rate."
    ::= { adsl2Groups 14 }

adsl2LineAlarmConfTemplateGroup OBJECT-GROUP
    OBJECTS
        {
            adsl2LAlarmConfTempLineProfile,
            adsl2LAlarmConfTempChan1ConfProfile,
            adsl2LAlarmConfTempChan2ConfProfile,
            adsl2LAlarmConfTempChan3ConfProfile,
            adsl2LAlarmConfTempChan4ConfProfile,
            adsl2LAlarmConfTempRowStatus
        }
    STATUS      current
    DESCRIPTION
        "The group of objects in a line alarm
        template."
```



```
::= { adsl2Groups 15 }
```

```
adsl2LineAlarmConfProfileGroup OBJECT-GROUP
```

```
OBJECTS
```

```
{
    adsl2LineAlarmConfProfileAtucThresh15MinFecs,
    adsl2LineAlarmConfProfileAtucThresh15MinEs,
    adsl2LineAlarmConfProfileAtucThresh15MinSes,
    adsl2LineAlarmConfProfileAtucThresh15MinLoss,
    adsl2LineAlarmConfProfileAtucThresh15MinUas,
    adsl2LineAlarmConfProfileAturThresh15MinFecs,
    adsl2LineAlarmConfProfileAturThresh15MinEs,
    adsl2LineAlarmConfProfileAturThresh15MinSes,
    adsl2LineAlarmConfProfileAturThresh15MinLoss,
    adsl2LineAlarmConfProfileAturThresh15MinUas,
    adsl2LineAlarmConfProfileThresh15MinFailedFullInt,
    adsl2LineAlarmConfProfileThresh15MinFailedShrtInt,
    adsl2LineAlarmConfProfileRowStatus
}
```

```
STATUS      current
```

```
DESCRIPTION
```

```
"The group of objects in a line alarm profile."
```

```
::= { adsl2Groups 16 }
```

```
adsl2ChAlarmConfProfileGroup OBJECT-GROUP
```

```
OBJECTS
```

```
{
    adsl2ChAlarmConfProfileAtucThresh15MinCodingViolations,
    adsl2ChAlarmConfProfileAtucThresh15MinCorrected,
    adsl2ChAlarmConfProfileAturThresh15MinCodingViolations,
    adsl2ChAlarmConfProfileAturThresh15MinCorrected,
    adsl2ChAlarmConfProfileRowStatus
}
```

```
STATUS      current
```

```
DESCRIPTION
```

```
"The group of objects in a channel alarm profile."
```

```
::= { adsl2Groups 17 }
```

```
adsl2PMLineCurrGroup OBJECT-GROUP
```

```
OBJECTS
```

```
{
    adsl2PMLCurrValidIntervals,
    adsl2PMLCurrInvalidIntervals,
    adsl2PMLCurr15MTimeElapsed,
    adsl2PMLCurr15MFecs,
    adsl2PMLCurr15MEs,
    adsl2PMLCurr15MSes,
    adsl2PMLCurr15MLoss,
}
```



```
    adsl2PMLCurr15MUas,
    adsl2PMLCurr1DayValidIntervals,
    adsl2PMLCurr1DayInvalidIntervals,
    adsl2PMLCurr1DayTimeElapsed,
    adsl2PMLCurr1DayFecs,
    adsl2PMLCurr1DayEs,
    adsl2PMLCurr1DaySes,
    adsl2PMLCurr1DayLoss,
    adsl2PMLCurr1DayUas
  }
STATUS      current
DESCRIPTION
  "The group of objects that report the line level
   counters for current PM intervals."
 ::= { adsl2Groups 18 }

adsl2PMLLineCurrInitGroup OBJECT-GROUP
OBJECTS
  {
    adsl2PMLCurrInit15MTimeElapsed,
    adsl2PMLCurrInit15MFullInits,
    adsl2PMLCurrInit15MFailedFullInits,
    adsl2PMLCurrInit1DayTimeElapsed,
    adsl2PMLCurrInit1DayFullInits,
    adsl2PMLCurrInit1DayFailedFullInits
  }
STATUS      current
DESCRIPTION
  "The group of objects that report the full
   initializations counters for current PM intervals."
 ::= { adsl2Groups 19 }

adsl2PMLLineCurrInitShortGroup OBJECT-GROUP
OBJECTS
  {
    adsl2PMLCurrInit15MShortInits,
    adsl2PMLCurrInit15MFailedShortInits,
    adsl2PMLCurrInit1DayShortInits,
    adsl2PMLCurrInit1DayFailedShortInits
  }
STATUS      current
DESCRIPTION
  "The group of objects that report the short
   initializations counters for current PM intervals."
 ::= { adsl2Groups 20 }

adsl2PMLLineHist15MinGroup OBJECT-GROUP
OBJECTS
```



```
    {
      adsl2PMLHist15MMonitoredTime,
      adsl2PMLHist15MFecs,
      adsl2PMLHist15MEs,
      adsl2PMLHist15MSes,
      adsl2PMLHist15MLoss,
      adsl2PMLHist15MUas,
      adsl2PMLHist15MValidInterval
    }
  STATUS      current
  DESCRIPTION
    "The group of line level PM counters for the previous
    15 minutes intervals."
  ::= { adsl2Groups 21 }
```

adsl2PMLLineHist1DayGroup OBJECT-GROUP

```
  OBJECTS
    {
      adsl2PMLHist1DMonitoredTime,
      adsl2PMLHist1DFecs,
      adsl2PMLHist1DEs,
      adsl2PMLHist1DSes,
      adsl2PMLHist1DLoss,
      adsl2PMLHist1DUas,
      adsl2PMLHist1DValidInterval
    }
  STATUS      current
  DESCRIPTION
    "The group of line level PM counters for the previous
    24 hours intervals."
  ::= { adsl2Groups 22 }
```

adsl2PMLLineInitHist15MinGroup OBJECT-GROUP

```
  OBJECTS
    {
      adsl2PMLHistInit15MMonitoredTime,
      adsl2PMLHistInit15MFullInits,
      adsl2PMLHistInit15MFailedFullInits,
      adsl2PMLHistInit15MValidInterval
    }
  STATUS      current
  DESCRIPTION
    "The group of PM counters for the previous 15 minutes
    intervals full initializations."
  ::= { adsl2Groups 23 }
```

adsl2PMLLineInitHist15MinShortGroup OBJECT-GROUP

```
  OBJECTS
```



```
    {
      adsl2PMLHistInit15MShortInits,
      adsl2PMLHistInit15MFailedShortInits
    }
  STATUS      current
  DESCRIPTION
    "The group of PM counters for the previous 15 minutes
    intervals short initializations."
  ::= { adsl2Groups 24 }

adsl2PMLLineInitHist1DayGroup OBJECT-GROUP
  OBJECTS
    {
      adsl2PMLHistinit1DMonitoredTime,
      adsl2PMLHistinit1DFullInits,
      adsl2PMLHistinit1DFailedFullInits,
      adsl2PMLHistinit1DValidInterval
    }
  STATUS      current
  DESCRIPTION
    "The group of PM counters for the previous 24 hours
    intervals full initializations."
  ::= { adsl2Groups 25 }

adsl2PMLLineInitHist1DayShortGroup OBJECT-GROUP
  OBJECTS
    {
      adsl2PMLHistinit1DShortInits,
      adsl2PMLHistinit1DFailedShortInits
    }
  STATUS      current
  DESCRIPTION
    "The group of PM counters for the previous 24 hours
    intervals short initializations."
  ::= { adsl2Groups 26 }

adsl2PMChCurrGroup OBJECT-GROUP
  OBJECTS
    {
      adsl2PMChCurrValidIntervals,
      adsl2PMChCurrInvalidIntervals,
      adsl2PMChCurr15MTimeElapsed,
      adsl2PMChCurr15MCodingViolations,
      adsl2PMChCurr15MCorrectedBlocks,
      adsl2PMChCurr1DayValidIntervals,
      adsl2PMChCurr1DayInvalidIntervals,
      adsl2PMChCurr1DayTimeElapsed,
      adsl2PMChCurr1DayCodingViolations,
```



```
        adsl2PMChCurr1DayCorrectedBlocks
    }
    STATUS      current
    DESCRIPTION
        "The group of objects that report the channel level
        counters for current PM intervals."
    ::= { adsl2Groups 27 }

adsl2PMChHist15MinGroup OBJECT-GROUP
    OBJECTS
        {
            adsl2PMChHist15MMonitoredTime,
            adsl2PMChHist15MCodingViolations,
            adsl2PMChHist15MCorrectedBlocks,
            adsl2PMChHist15MValidInterval
        }
    STATUS      current
    DESCRIPTION
        "The group of objects that report the channel level
        counters for previous 15 minutes PM intervals."
    ::= { adsl2Groups 28 }

adsl2PMChHist1DGroup OBJECT-GROUP
    OBJECTS
        {
            adsl2PMChHist1DMonitoredTime,
            adsl2PMChHist1DCodingViolations,
            adsl2PMChHist1DCorrectedBlocks,
            adsl2PMChHist1DValidInterval
        }
    STATUS      current
    DESCRIPTION
        "The group of objects that report the channel level
        counters for previous 24 hours PM intervals."
    ::= { adsl2Groups 29 }

adsl2ScalarSCGroup OBJECT-GROUP
    OBJECTS
        {
            adsl2ScalarSCMaxInterfaces,
            adsl2ScalarSCAvailInterfaces
        }
    STATUS      current
    DESCRIPTION
        "The group of objects that report the available memory
        resources for DELT processes."
    ::= { adsl2Groups 30 }
```



```
adsl2ThreshNotificationGroup NOTIFICATION-GROUP
  NOTIFICATIONS
  {
    adsl2LinePerfFECSThreshAtuc,
    adsl2LinePerfFECSThreshAtur,
    adsl2LinePerfESThreshAtuc,
    adsl2LinePerfESThreshAtur,
    adsl2LinePerfSESThreshAtuc,
    adsl2LinePerfSESThreshAtur,
    adsl2LinePerfLOSSThreshAtuc,
    adsl2LinePerfLOSSThreshAtur,
    adsl2LinePerfUASThreshAtuc,
    adsl2LinePerfUASThreshAtur,
    adsl2LinePerfCodingViolationsThreshAtuc,
    adsl2LinePerfCodingViolationsThreshAtur,
    adsl2LinePerfCorrectedThreshAtuc,
    adsl2LinePerfCorrectedThreshAtur,
    adsl2LinePerfFailedFullInitThresh,
    adsl2LinePerfFailedShortInitThresh
  }
  STATUS      current
  DESCRIPTION
    "This group supports notifications of significant conditions
    associated with ADSL2 lines."
    ::= { adsl2Groups 31 }

adsl2StatusChangeNotificationGroup NOTIFICATION-GROUP
  NOTIFICATIONS
  {
    adsl2LineStatusChangeAtuc,
    adsl2LineStatusChangeAtur
  }
  STATUS      current
  DESCRIPTION
    "This group supports notifications of thresholds crossing
    associated with ADSL2 lines."
    ::= { adsl2Groups 32 }

END
```

4. Implementation Analysis

A management application intended to manage ADSL links (e.g., G.992.1) with this MIB module MUST be modified to adapt itself to certain differences between [RFC 2662](#) [[RFC2662](#)] and this MIB module,

including the following aspects:

- o Though the configuration templates/profiles allow referring to 1-4 bearer channels, ADSL links are limited to 2 channels at most
- o Though the channel configuration profile allows higher data rates, ADSL links are limited to downstream/upstream data rate as assumed in [RFC 2662](#) [[RFC2662](#)]
- o The Impulse Noise Protection (INP) configuration parameters are given by minimum protection and maximum delay parameters.
- o The line configuration profile includes a sub-table that addresses mode-specific parameters. For ADSL links, the management application SHOULD create a row in that table for the 'adsl' mode.
- o The line configuration profile includes parameters that are irrelevant for ADSL links. Similarly, many status parameters in the MIB are irrelevant for certain ADSL modes. Therefore, it is advised to consult with ITU G.997.1 standard [[G.997.1](#)] regarding the scope and relevance of each parameter in this MIB.

5. Security Considerations

There are a number of management objects defined in this MIB module with a MAX-ACCESS clause of read-write and/or read-create. Such objects may be considered sensitive or vulnerable in some network environments. The support for SET operations in a non-secure environment without proper protection can have a negative effect on network operations. These are the tables and objects and their sensitivity/vulnerability:

- o adsl2LineTable

The table consists of the following objects that support SET operations:

- * adsl2LineCnfgTemplate
- * adsl2LineAlarmCnfgTemplate
- * adsl2LineCmndConfPmsf
- * adsl2LineCmndConfLdsf
- * adsl2LineCmndAutomodeColdStart

Unauthorized changes to adsl2LineCnfgTemplate could have a major adverse operational effect on many lines simultaneously.

Unauthorized changes to adsl2LineAlarmCnfgTemplate could have a contrary effect on notifications.

Unauthorized changes to adsl2LineCmndConfPmsf could have an

adverse affect on the power consumption of a line and may disrupt an operational service.

Unauthorized changes to `adsl2LineCmndConfLdsf` could cause an unscheduled line test to be carried out on the line.

Unauthorized changes to `adsl2LineCmndAutomodeColdStart` could cause an unscheduled cold reset to the line.

o `adsl2SCStatusTable`

This table contains one object, `adsl2SCStatusRowStatus`, that supports SET operations. Unauthorized changes could result in line test results being deleted prematurely.

o `adsl2LineConfTemplateTable`

The table consists of the following objects that support SET operations:

- * `adsl2LConfTempLineProfile`
- * `adsl2LConfTempChan1ConfProfile`
- * `adsl2LConfTempChan1RaRatioDs`
- * `adsl2LConfTempChan1RaRatioUs`
- * `adsl2LConfTempChan2ConfProfile`
- * `adsl2LConfTempChan2RaRatioDs`
- * `adsl2LConfTempChan2RaRatioUs`
- * `adsl2LConfTempChan3ConfProfile`
- * `adsl2LConfTempChan3RaRatioDs`
- * `adsl2LConfTempChan3RaRatioUs`
- * `adsl2LConfTempChan4ConfProfile`
- * `adsl2LConfTempChan4RaRatioDs`
- * `adsl2LConfTempChan4RaRatioUs`
- * `adsl2LConfTempRowStatus`

Unauthorized changes to `adsl2LConfTempLineProfile`, `adsl2LConfTempChan1ConfProfile`, `adsl2LConfTempChan2ConfProfile`, `adsl2LConfTempChan3ConfProfile`, or `adsl2LConfTempChan4ConfProfile` could have an adverse operational effect on several lines; could change several lines over to running in unwanted levels of operation; or could result in several services undergoing changes in the number of channels that carry the service.

Unauthorized changes to `adsl2LConfTempChan1RaRatioDs`, `adsl2LConfTempChan2RaRatioDs`, `adsl2LConfTempChan3RaRatioDs`, or `adsl2LConfTempChan4RaRatioDs`, would alter the relative rate allocations among all channels belonging to a line. This could have an adverse operational effect on several lines.

Unauthorized changes to `adsl2LConfTempRowStatus` could result in templates being created or brought into service prematurely; or could result in templates being inadvertently deleted or taken out of service.

o `adsl2LineConfProfTable`

The table consists of the following objects that support SET operations:

- * `adsl2LConfProfScMaskDs`
- * `adsl2LConfProfScMaskUs`
- * `adsl2LConfProfRfiBandsDs`
- * `adsl2LConfProfRaModeDs`
- * `adsl2LConfProfRaModeUs`
- * `adsl2LConfProfRaUsNrmDs`
- * `adsl2LConfProfRaUsNrmUs`
- * `adsl2LConfProfRaUsTimeDs`
- * `adsl2LConfProfRaUsTimeUs`
- * `adsl2LConfProfRaDsNrmsDs`
- * `adsl2LConfProfRaDsNrmsUs`
- * `adsl2LConfProfRaDsTimeDs`
- * `adsl2LConfProfRaDsTimeUs`
- * `adsl2LConfProfTargetSnrmDs`
- * `adsl2LConfProfTargetSnrmUs`
- * `adsl2LConfProfMaxSnrmDs`
- * `adsl2LConfProfMaxSnrmUs`
- * `adsl2LConfProfMinSnrmDs`
- * `adsl2LConfProfMinSnrmUs`
- * `adsl2LConfProfMsgMinUs`
- * `adsl2LConfProfMsgMinDs`
- * `adsl2LConfProfAtuTransSysEna`
- * `adsl2LConfProfPmMode`
- * `adsl2LConfProfL0Time`
- * `adsl2LConfProfL2Time`
- * `adsl2LConfProfL2Atpr`
- * `adsl2LConfProfL2Atprt`
- * `adsl2LConfProfRowStatus`

Unauthorized changes resulting in the setting of any of the above objects to an incorrect value could have an adverse operational effect on several lines.

Also, unauthorized changes to `adsl2LConfProfRowStatus` could result in unwanted line profiles being created or brought into service prematurely; or could result in line profiles being inadvertently deleted or taken out of service.

o adsl2LineConfProfModeSpecTable

The table consists of the following objects that support SET operations:

- * adsl2LConfProfMaxNomPsdDs
- * adsl2LConfProfMaxNomPsdUs
- * adsl2LConfProfMaxNomAtpDs
- * adsl2LConfProfMaxNomAtpUs
- * adsl2LConfProfMaxAggRxPwrUs
- * adsl2LConfProfPsdMaskDs
- * adsl2LConfProfPsdMaskUs
- * adsl2LConfProfPsdMaskSelectUs
- * adsl2LConfProfModeSpecRowStatus

Unauthorized changes resulting in the setting of any of the above objects to an incorrect value could have an adverse operational effect on several lines.

Also, unauthorized changes to adsl2LConfProfModeSpecRowStatus could result in unwanted PSD configurations being created or brought into service prematurely; or could result in PSD configurations being inadvertently deleted or taken out of service.

o adsl2ChConfProfileTable

The table consists of the following objects that support SET operations:

- * adsl2ChConfProfMinDataRateDs
- * adsl2ChConfProfMinDataRateUs
- * adsl2ChConfProfMinResDataRateDs
- * adsl2ChConfProfMinResDataRateUs
- * adsl2ChConfProfMaxDataRateDs
- * adsl2ChConfProfMaxDataRateUs
- * adsl2ChConfProfMinDataRateLowPwrDs
- * adsl2ChConfProfMaxDelayDs
- * adsl2ChConfProfMaxDelayUs
- * adsl2ChConfProfMinProtectionDs
- * adsl2ChConfProfMinProtectionUs
- * adsl2ChConfProfMaxBerDs
- * adsl2ChConfProfMaxBerUs
- * adsl2ChConfProfUsDataRateDs
- * adsl2ChConfProfDsDataRateDs
- * adsl2ChConfProfUsDataRateUs

- * adsl2ChConfProfDsDataRateUs
- * adsl2ChConfProfImaEnabled
- * adsl2ChConfProfRowStatus

Unauthorized changes resulting in the setting of any of the above objects to an incorrect value could have an adverse operational effect on several lines.

Also, unauthorized changes to adsl2ChConfProfRowStatus could result in unwanted channel profiles being created or brought into service prematurely; or could result in channel profiles being inadvertently deleted or taken out of service.

o adsl2LineAlarmConfTemplateTable

The table consists of the following objects that support SET operations:

- * adsl2LAlarmConfTempLineProfile
- * adsl2LAlarmConfTempChan1ConfProfile
- * adsl2LAlarmConfTempChan2ConfProfile
- * adsl2LAlarmConfTempChan3ConfProfile
- * adsl2LAlarmConfTempChan4ConfProfile
- * adsl2LAlarmConfTempRowStatus

Unauthorized changes to adsl2LAlarmConfTempLineProfile, adsl2LAlarmConfTempChan1ConfProfile, adsl2LAlarmConfTempChan2ConfProfile, adsl2LAlarmConfTempChan3ConfProfile, or adsl2LAlarmConfTempChan4ConfProfile could have an adverse effect on the management of notifications generated at the scope of several to many lines; or could change several to many lines over to running with unwanted management rates for generated notifications.

Unauthorized changes to adsl2LAlarmConfTempRowStatus could result in alarm templates being created or brought into service prematurely; or could result in alarm templates being inadvertently deleted or taken out of service.

o adsl2LineAlarmConfProfileTable

The table consists of the following objects that support SET operations:

- * adsl2LineAlarmConfProfileAtucThresh15MinFecs

- * adsl2LineAlarmConfProfileAtucThresh15MinEs
- * adsl2LineAlarmConfProfileAtucThresh15MinSes
- * adsl2LineAlarmConfProfileAtucThresh15MinLoss
- * adsl2LineAlarmConfProfileAtucThresh15MinUas
- * adsl2LineAlarmConfProfileAturThresh15MinFecs
- * adsl2LineAlarmConfProfileAturThresh15MinEs
- * adsl2LineAlarmConfProfileAturThresh15MinSes
- * adsl2LineAlarmConfProfileAturThresh15MinLoss
- * adsl2LineAlarmConfProfileAturThresh15MinUas
- * adsl2LineAlarmConfProfileThresh15MinFailedFullInt
- * adsl2LineAlarmConfProfileThresh15MinFailedShrtInt
- * adsl2LineAlarmConfProfileRowStatus

Increasing any of the threshold values could result in a notification being suppressed or deferred. Setting a threshold to 0 could result in a notification being suppressed. Suppressing or deferring a notification could prevent the timely delivery of important diagnostic information. Decreasing any of the threshold values could result in a notification being sent from the network falsely reporting a threshold crossing.

Changing a threshold value could also have an impact on the amount of notifications the agent sends. The Notifications Section of this document has a paragraph which provides general guidance on the rate limiting of notifications. Agent implementations not providing rate limiting could result in notifications being generated at an uncontrolled rate. Unauthorized changes to a threshold value could result in an undesired notification rate.

Unauthorized changes to row status could result in unwanted line alarm profiles being created or brought into service. Also, changes to the row status could result in line alarm profiles being inadvertently deleted or taken out of service.

o adsl2ChAlarmConfProfileTable

The table consists of the following objects that support SET operations:

- * adsl2ChAlarmConfProfileAtucThresh15MinCodingViolations
- * adsl2ChAlarmConfProfileAtucThresh15MinCorrected
- * adsl2ChAlarmConfProfileAturThresh15MinCodingViolations
- * adsl2ChAlarmConfProfileAturThresh15MinCorrected
- * adsl2ChAlarmConfProfileRowStatus
- * adsl2LineAlarmConfProfileAturThresh15MinFecs
- * adsl2LineAlarmConfProfileAturThresh15MinEs

- * adsl2LineAlarmConfProfileAturThresh15MinSes
- * adsl2LineAlarmConfProfileAturThresh15MinLoss
- * adsl2LineAlarmConfProfileAturThresh15MinUas
- * adsl2LineAlarmConfProfileThresh15MinFailedFullInt
- * adsl2LineAlarmConfProfileThresh15MinFailedShrtInt
- * adsl2LineAlarmConfProfileRowStatus

Increasing any of the threshold values could result in a notification being suppressed or deferred. Setting a threshold to 0 could result in a notification being suppressed. Suppressing or deferring a notification could prevent the timely delivery of important diagnostic information. Decreasing any of the threshold values could result in a notification being sent from the network falsely reporting a threshold crossing.

Changing a threshold value could also have an impact on the amount of notifications the agent sends. The Notifications Section of this document has a paragraph which provides general guidance on the rate limiting of notifications. Agent implementations not providing rate limiting could result in notifications being generated at an uncontrolled rate. Unauthorized changes to a threshold value could result in an undesired notification rate.

Unauthorized changes to row status could result in unwanted channel alarm profiles being created or brought into service. Also, changes to the row status could result in channel alarm profiles being inadvertently deleted or taken out of service.

Some of the readable objects in this MIB module (i.e., objects with a MAX-ACCESS other than not-accessible) may be considered sensitive or vulnerable in some network environments. It is thus important to control even GET and/or NOTIFY access to these objects and possibly to even encrypt the values of these objects when sending them over the network via SNMP. These are the tables and objects and their sensitivity/vulnerability:

o adsl2LineInventoryTable

Access to these objects would allow an intruder to obtain information about which vendor's equipment is in use on the network. Further, such information is considered sensitive in many environments for competitive reasons.

- * adsl2LInvG994VendorId
- * adsl2LInvSystemVendorId
- * adsl2LInvVersionNumber

- * adsl2LInvSerialNumber
- * adsl2LInvSelfTestResult
- * adsl2LInvTransmissionCapabilities

SNMP versions prior to SNMPv3 did not include adequate security. Even if the network itself is secure (for example by using IPSec), even then, there is no control as to who on the secure network is allowed to access and GET/SET (read/change/create/delete) the objects in this MIB module.

It is RECOMMENDED that implementers consider the security features as provided by the SNMPv3 framework (see [\[RFC3410\]](#), [Section 8](#)), including full support for the SNMPv3 cryptographic mechanisms (for authentication and privacy).

It is RECOMMENDED to deploy SNMPv3 and to enable cryptographic security. It is then a customer/operator responsibility to ensure that the SNMP entity giving access to an instance of this MIB module is properly configured to give access only to those objects whose principals (users) have legitimate rights to indeed GET or SET (change/create/delete) them.

6. Acknowledgments

The authors are deeply grateful to the authors of the HDLSL2 LINE MIB ([RFC 4319](#)), Clay Sikes and Bob Ray, for contributing to accelerating the work on this document. The structure of this document as well as several paragraphs originate in their document.

Other contributions and advice were received from the following:

Randy Presuhn (Mindspring)
Chen Jian (Huawei)
Bert Wijnen (Lucent)
Clay Sikes (Zhone)

7. References

7.1. Normative References

- [G.992.1] "Asymmetric digital subscriber line (ADSL) transceivers", ITU-T G.992.1, 1999.
- [G.992.2] "Splitterless asymmetric digital subscriber line (ADSL) transceivers", ITU-T G.992.2, 1999.

- [G.992.3] "Asymmetric digital subscriber line transceivers 2 (ADSL2)", ITU-T G.992.3, 2002.
- [G.992.4] "Splitterless asymmetric digital subscriber line transceivers 2 (Splitterless ADSL2)", ITU-T G.992.4, 2002.
- [G.992.5] "Asymmetric digital subscriber line (ADSL) transceivers - Extended bandwidth ADSL2 (ADSL2+)", ITU-T G.992.5, 2003.
- [G.993.2] "Very-high speed Digital Subscriber Line Transceivers 2 (VDSL2 draft)", ITU-T G.993.2, July 2005.
- [G.997.1] "Physical layer management for digital subscriber line (DSL) transceivers", ITU-T G.997.1, May 2003.
- [G.997.1 am1]
"Physical layer management for digital subscriber line (DSL) transceivers Amendment 1", ITU-T G.997.1 Amendment 1, December 2003.
- [G.997.1 am2]
"Physical layer management for digital subscriber line (DSL) transceivers Amendment 2", ITU-T G.997.1 Amendment 2, January 2005.
- [RFC2119] Bradner, S., "Key words for use in RFCs to Indicate Requirement Levels", [BCP 14](#), [RFC 2119](#), March 1997.
- [RFC2578] McCloghrie, K., Ed., Perkins, D., Ed., and J. Schoenwaelder, Ed., "Structure of Management Information Version 2 (SMIv2)", STD 58, [RFC 2578](#), April 1999.
- [RFC2579] McCloghrie, K., Ed., Perkins, D., Ed., and J. Schoenwaelder, Ed., "Textual Conventions for SMIv2", STD 58, [RFC 2579](#), April 1999.
- [RFC2580] McCloghrie, K., Perkins, D., and J. Schoenwaelder, "Conformance Statements for SMIv2", STD 58, [RFC 2580](#), April 1999.
- [RFC2863] McCloghrie, K. and F. Kastenholz, "The Interfaces Group MIB", [RFC 2863](#), June 2000.
- [RFC3411] Harrington, D., Presuhn, R., and B. Wijnen, "An Architecture for Describing Simple Network Management Protocol (SNMP) Management Frameworks", STD 62, [RFC 3411](#), December 2002.

- [RFC3593] Tesink, K., "Textual Conventions for MIB Modules Using Performance History Based on 15 Minute Intervals", [RFC 3593](#), September 2003.
- [RFC3705] Ray, B. and R. Abbi, "High Capacity Textual Conventions for MIB Modules Using Performance History Based on 15 Minute Intervals", [RFC 3705](#), February 2004.
- [T1E1.413] J. Bingham & F. Van der Putten, "Network and Customer Installation Interfaces - Asymmetric Digital Subscriber Line (ADSL) Metallic Interface. (T1.413 Issue 2)", ANSI T1E1.413-1998, June 1998.
- [TR-90] Abbi, R., "Protocol Independent Object Model for Managing Next Generation ADSL Technologies", DSL Forum TR-90, December 2004.

[7.2.](#) Informative References

- [RFC2662] Bathrick, G. and F. Ly, "Definitions of Managed Objects for the ADSL Lines", [RFC 2662](#), August 1999.
- [RFC3410] Case, J., Mundy, R., Partain, D., and B. Stewart, "Introduction and Applicability Statements for Internet-Standard Management Framework", [RFC 3410](#), December 2002.
- [RFC3418] Presuhn, R., "Management Information Base (MIB) for the Simple Network Management Protocol (SNMP)", STD 62, [RFC 3418](#), December 2002.

Authors' Addresses

Moti Morgenstern
ECI Telecom Ltd.
30 Hasivim St.
Petach Tikva 49517
Israel

Phone: +972 3 926 6258
Fax: +972 3 928 7342
Email: moti.Morgenstern@ecitele.com

Menachem Dodge
ECI Telecom Ltd.
30 Hasivim St.
Petach Tikva 49517
Israel

Phone: +972 3 926 8421
Fax: +972 3 928 7342
Email: mbdodge@ieee.org

Scott Baillie
NEC Australia
649-655 Springvale Road
Mulgrave, Victoria 3170
Australia

Phone: +61 3 9264 3986
Fax: +61 3 9264 3892
Email: scott.baillie@nec.com.au

Umberto Bonollo
NEC Australia
649-655 Springvale Road
Mulgrave, Victoria 3170
Australia

Phone: +61 3 9264 3385
Fax: +61 3 9264 3892
Email: umberto.bonollo@nec.com.au

Intellectual Property Statement

The IETF takes no position regarding the validity or scope of any Intellectual Property Rights or other rights that might be claimed to pertain to the implementation or use of the technology described in this document or the extent to which any license under such rights might or might not be available; nor does it represent that it has made any independent effort to identify any such rights. Information on the procedures with respect to rights in RFC documents can be found in [BCP 78](#) and [BCP 79](#).

Copies of IPR disclosures made to the IETF Secretariat and any assurances of licenses to be made available, or the result of an attempt made to obtain a general license or permission for the use of such proprietary rights by implementers or users of this specification can be obtained from the IETF on-line IPR repository at <http://www.ietf.org/ipr>.

The IETF invites any interested party to bring to its attention any copyrights, patents or patent applications, or other proprietary rights that may cover technology that may be required to implement this standard. Please address the information to the IETF at ietf-ipr@ietf.org.

Disclaimer of Validity

This document and the information contained herein are provided on an "AS IS" basis and THE CONTRIBUTOR, THE ORGANIZATION HE/SHE REPRESENTS OR IS SPONSORED BY (IF ANY), THE INTERNET SOCIETY AND THE INTERNET ENGINEERING TASK FORCE DISCLAIM ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTY THAT THE USE OF THE INFORMATION HEREIN WILL NOT INFRINGE ANY RIGHTS OR ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

Copyright Statement

Copyright (C) The Internet Society (2006). This document is subject to the rights, licenses and restrictions contained in [BCP 78](#), and except as set forth therein, the authors retain all their rights.

Acknowledgment

Funding for the RFC Editor function is currently provided by the Internet Society.

