

Network Working Group
Category: Internet Draft

B. Ray
PESA Switching Systems
R. Abbi
Alcatel
September 2003

**Definitions of Managed Objects for Very High
Speed Digital Subscriber Lines (VDSL)
draft-ietf-adslmib-vdsl-12.txt**

Status of this Memo

This document is an Internet-Draft and is in full conformance with all provisions of [Section 10 of RFC2026](#).

Internet-Drafts are working documents of the Internet Engineering Task Force (IETF), its areas, and its working groups. Note that other groups may also distribute working documents as Internet-Drafts.

Internet-Drafts are draft documents valid for a maximum of six months and may be updated, replaced, or obsoleted by other documents at any time. It is inappropriate to use Internet-Drafts as reference material or to cite them other than as "work in progress."

The list of current Internet-Drafts can be accessed at:
<http://www.ietf.org/ietf/1id-abstracts.txt>

The list of Internet-Draft Shadow Directories can be accessed at:
<http://www.ietf.org/shadow.html>.

Copyright Notice

Copyright (C) The Internet Society (2003). All Rights Reserved.

Abstract

This document defines a Management Information Base (MIB) module for use with network management protocols in the Internet community. In particular, it describes objects used for managing Very High Speed Digital Subscriber Line (VDSL) interfaces.

Expires February 2, 2003

[Page 1]

Table of Contents

1.	The Internet-Standard Management Framework	2
2.	Overview	2
2.1	Relationship of the VDSL Line MIB Module to other MIB Modules .	3
2.2	Conventions used in the MIB Module	4
2.3	Structure	5
2.4	Counters, Interval Buckets and Thresholds	6
2.5	Profiles	7
2.6	Notifications	8
2.7	Persistence	9
3.	Conformance and Compliance	10
4.	Definitions	10
5.	Intellectual Property	64
6.	Normative References	64
7.	Informative References	65
8.	Security Considerations	66
9.	Acknowledgements	67
10.	Authors' Addresses	67
11.	Full Copyright Statement	68

[1.](#) The Internet-Standard Management Framework

For a detailed overview of the documents that describe the current Internet-Standard Management Framework, please refer to [section 7 of RFC 3410 \[RFC3410\]](#).

Managed objects are accessed via a virtual information store, termed the Management Information Base or MIB. MIB objects are generally accessed through the Simple Network Management Protocol (SNMP). Objects in the MIB are defined using the mechanisms defined in the Structure of Management Information (SMI). This memo specifies a MIB module that is compliant to the SMIV2, which is described in STD 58, [RFC 2578 \[RFC2578\]](#), STD 58, [RFC 2579 \[RFC2579\]](#) and STD 58, [RFC 2580 \[RFC2580\]](#).

The key words "MUST", "MUST NOT", "REQUIRED", "SHALL", "SHALL NOT", "SHOULD", "SHOULD NOT", "RECOMMENDED", "MAY", and "OPTIONAL" in this document are to be interpreted as described in [\[RFC2119\]](#).

[2.](#) Overview

This document describes an SNMP MIB module for managing VDSL Lines. These definitions are based upon the specifications for VDSL as defined in T1E1, ETSI, and ITU documentation [T1E1311, T1E1011, T1E1013, ETSI2701, ETSI2702, ITU9931, ITU9971].

The MIB module is located in the MIB tree under MIB 2 transmission, as discussed in the MIB-2 Integration ([RFC 2863 \[RFC2863\]](#)) section of this document.

Expires February 2, 2003

[Page 2]

2.1 Relationship of the VDSL Line MIB Module to other MIB Modules

This section outlines the relationship of this MIB with other MIBs described in RFCs. Specifically, IF-MIB as presented in [RFC 2863](#) [[RFC2863](#)] is discussed.

2.1.1 General IF-MIB Integration ([RFC 2863](#))

The VDSL Line MIB specifies the detailed attributes of a data interface. As such, it needs to integrate with [RFC 2863](#) [[RFC2863](#)]. The IANA has assigned the following ifType to VDSL:

```
IANAifType ::= TEXTUAL-CONVENTION
    ...

SYNTAX INTEGER {
    ...
    vdsl(97), -- Very H-speed Digital Subscrib. Loop
    ...
}
```

Additionally, a VDSL line may contain an optional fast channel and an optional interleaved channel which also integrate into [RFC 2863](#) [[RFC2863](#)]. The IANA has assigned the following ifTypes to these channels:

```
IANAifType ::= TEXTUAL-CONVENTION
    ...
SYNTAX INTEGER {
    ...
    interleave (124), -- Interleave channel
    fast (125),      -- Fast channel
    ...
}
```

2.1.2 Usage of ifTable

The MIB branch identified by this ifType contains tables appropriate for this interface type. Most such tables extend the ifEntry table, and are indexed by ifIndex. For interfaces in systems implementing this MIB, those table entries indexed by ifIndex MUST be persistent.

The following attributes are part of the mandatory ifGeneral group in [RFC 2863](#) [[RFC2863](#)], and are not duplicated in the VDSL Line MIB.

```
=====
ifIndex          Interface index.

ifDescr          See interfaces MIB [RFC2863].

ifType           vdsl(97),
                 interleave(124), or
                 fast(125)
```

Expires February 2, 2003

[Page 3]

ifSpeed	Set as appropriate.
ifPhysAddress	This object MUST have an octet string with zero length.
ifAdminStatus	See interfaces MIB [RFC2863].
ifOperStatus	See interfaces MIB [RFC2863].
ifLastChange	See interfaces MIB [RFC2863].
ifName	See interfaces MIB [RFC2863].
ifHighSpeed	Set as appropriate.
ifConnectorPresent	Set as appropriate.
ifLinkUpDownTrapEnable	Default to enabled(1).

=====

Figure 1: Use of ifTable Objects

[Section 2.3](#), below, describes the structure of this MIB in relation to ifEntry in greater detail.

2.2 Conventions used in the MIB Module

2.2.1 Naming Conventions

- A. Vtuc -- (VTUC) transceiver at near (Central) end of line
- B. Vtur -- (VTUR) transceiver at Remote end of line
- C. Vtu -- One of either Vtuc or Vtur
- D. Curr -- Current
- E. Prev -- Previous
- F. Atn -- Attenuation
- G. ES -- Errored Second
- H. SES -- Severely Errored Second
- I. UAS -- Unavailable Second
- J. LCS -- Line Code Specific
- K. Lof -- Loss of Frame
- L. Lol -- Loss of Link
- M. Los -- Loss of Signal
- N. Lpr -- Loss of Power
- O. xxxs -- Sum of Seconds in which xxx has occurred
(e.g., xxx = Lof, Los, Lpr, Lol)
- P. Max -- Maximum
- Q. Mgn -- Margin
- R. Min -- Minimum
- S. Psd -- Power Spectral Density
- T. Snr -- Signal to Noise Ratio
- U. Tx -- Transmit
- V. Blks -- Blocks

Expires February 2, 2003

[Page 4]

2.2.2 Textual Conventions

The following textual conventions are defined to reflect the line topology in the MIB (further discussed in the following section) and to define the behavior of the statistics to be maintained by an agent.

o VdslLineCodingType :

Attributes with this syntax identify the line coding used. Specified as an INTEGER, the three values are:

other(1) -- none of the following
mcm(2) -- Multiple Carrier Modulation
scm(3) -- Single Carrier Modulation

o VdslLineEntity :

Attributes with this syntax reference the two sides of a line. Specified as an INTEGER, the two values are:

vtuc(1) -- central site transceiver
vtur(2) -- remote site transceiver

2.3 Structure

The MIB is structured into the following MIB groups:

o vdslGroup :

This group supports all line code independent MIB objects found in this MIB. The following tables contain objects permitted for ifType vdsl(97):

- vdslLineTable
- vdslPhysTable
- vdslPerfDataTable
- vdslPerfIntervalTable
- vdslPerf1DayIntervalTable
- vdslLineConfProfileTable
- vdslLineAlarmConfProfileTable

The following tables contain objects permitted for ifTypes interleave(124) and (fast):

- vdslChanTable
- vdslChanPerfDataTable
- vdslChanPerfIntervalTable
- vdslChanPerf1DayIntervalTable

Figure 2, below, displays the relationship of the tables in the vdslGroup to ifEntry (and each other):

Expires February 2, 2003

[Page 5]

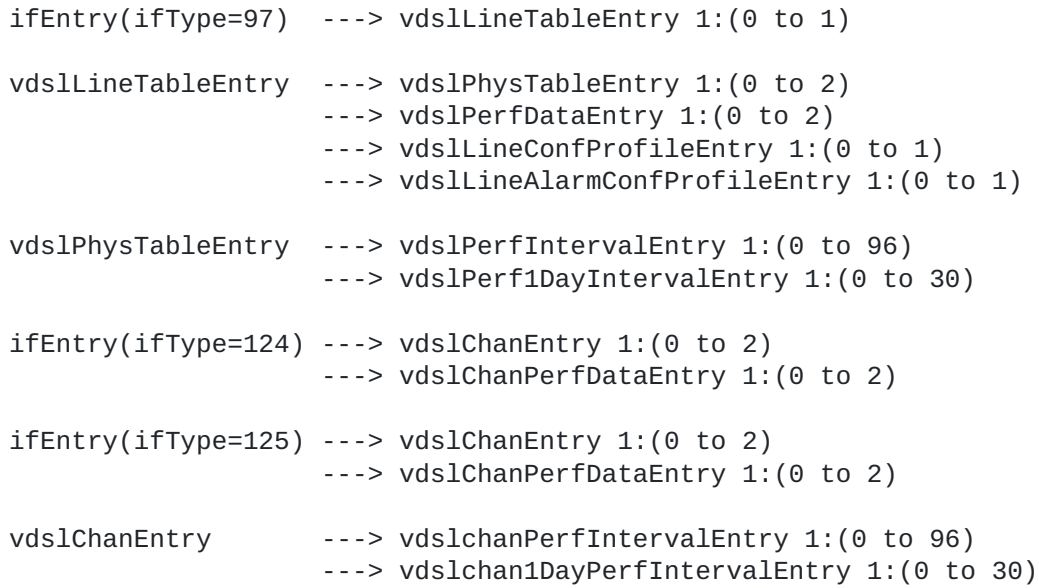


Figure 2: Table Relationships

o vdslNotificationGroup :

This group contains definitions of VDSL line notifications. [Section 2.6](#), below, presents greater detail on the notifications defined within the MIB module.

2.3.1 Line Topology

A VDSL Line consists of two units - a Vtuc (the central transceiver unit) and a Vtur (the remote transceiver unit).

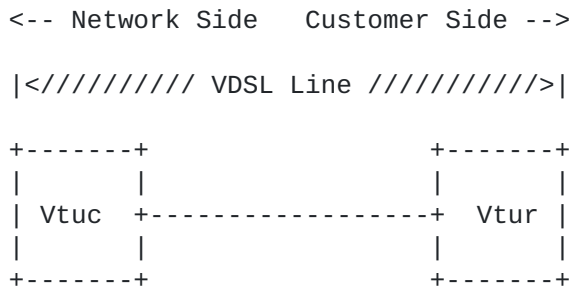


Figure 3: General topology for a VDSL Line

2.4 Counters, Interval Buckets and Thresholds

For Loss of Frame (lof), Loss of Link (lol), Loss of Signal (los), and Loss of Power (lpr), Errored Seconds (ES), Severely Errored Seconds (SES), and Unavailable Seconds (UAS) there are event counters, current 15-minute, 0 to 96 15-minute history bucket(s), and 0 to 30 1-day history bucket(s) of "interval-counters". Each current 15-minute event bucket has an associated threshold

Expires February 2, 2003

[Page 6]

notification.

Each of these counters uses the textual conventions defined in the HC-PerfHist-TC-MIB [[RFCXXXX](#)]. The HC-PerfHist-TC-MIB defines 64-bit versions of the textual conventions found in [RFC 3593](#) [[RFC3593](#)].

--- RFC Ed: please replace XXXX with the RFC number assigned to the
--- accompanying HC-TC MIB

There is no requirement for an agent to ensure a fixed relationship between the start of a fifteen minute interval and any wall clock; however, some implementations may align the fifteen minute intervals with quarter hours. Likewise, an implementation may choose to align one day intervals with the start of a day.

Counters are not reset when a Vtu is reinitialized, only when the agent is reset or reinitialized (or under specific request outside the scope of this MIB module).

[2.5](#) Profiles

As a managed node can handle a large number of Vtus, (e.g., hundreds or perhaps thousands of lines), provisioning every parameter on every Vtu may become burdensome. Moreover, most lines are provisioned identically with the same set of parameters. To simplify the provisioning process, this MIB makes use of profiles. A profile is a set of parameters that can be shared by multiple lines using the same configuration.

The following profiles are used in this MIB module:

- o Line Configuration Profiles - Line configuration profiles contain parameters for configuring VDSL lines. They are defined in the `vdslLineConfProfileTable`.
- o Alarm Configuration Profiles - These profiles contain parameters for configuring alarm thresholds for VDSL transceivers. These profiles are defined in the `vdslLineAlarmConfProfileTable`.

One or more lines may be configured to share parameters of a single profile by setting their `vdslLineConfProfile` objects to the value of this profile. If a change is made to the profile, all lines that refer to it will be reconfigured to the changed parameters. Before a profile can be deleted or taken out of service it must be first unreferenced from all associated lines.

Implementations MUST provide a default profile with an index value of 'DEFVAL' for each profile type. The values of the associated parameters will be vendor specific unless otherwise indicated in this document. Before a line's profiles have been set, these profiles will be automatically used by setting `vdslLineConfProfile` and `vdslLineAlarmConfProfile` to 'DEFVAL' where appropriate. This default profile name, 'DEFVAL', is considered reserved in the context of profiles defined in this MIB module.

Expires February 2, 2003

[Page 7]

Profiles are created, assigned, and deleted dynamically using the profile name and profile row status in each of the ten profile tables (nine line configuration tables and one alarm configuration table).

Profile changes MUST take effect immediately. These changes MAY result in a restart (hard reset or soft restart) of the units on the line.

2.6 Notifications

The ability to generate the SNMP notifications coldStart/WarmStart (per [[RFC3418](#)]) which are per agent (e.g., per Digital Subscriber Line Access Multiplexer, or DSLAM, in such a device), and linkUp/linkDown (per [[RFC2863](#)]) which are per interface (i.e., VDSL line) is required.

The notifications defined in this MIB are for initialization failure and for the threshold crossings associated with the following events: lof, lol, los, lpr, ES, SES, and UAS. Each threshold has its own enable/threshold value. When that value is 0, the notification is disabled.

A linkDown notification MAY be generated whenever any of lof, lol, los, lpr, ES, SES, or UAS threshold crossing event (as defined in this MIB module) occurs. The corresponding linkUp notification MAY be sent when all link failure conditions are cleared.

The vdslPhysCurrStatus is a bitmask representing all outstanding error conditions associated with a particular VDSL transceiver. Note that since status of remote transceivers is obtained via the EOC, this information may be unavailable for units that are unreachable via the EOC during a line error condition. Therefore, not all conditions may always be included in its current status. Notifications corresponding to the bit fields in this object are defined.

A threshold notification occurs whenever the corresponding current 15-minute interval error counter becomes equal to, or exceeds the threshold value. One notification may be sent per interval per interface. Since the current 15-minute counters are reset to 0 every 15 minutes, if the condition persists, the notification may recur as often as every 15 minutes. For example, to get a notification whenever a "loss of" event occurs (but at most once every 15 minutes), set the corresponding threshold to 1. The agent will generate a notification when the event originally occurs.

Note that the Network Management System, or NMS, may receive a linkDown notification, as well, if enabled (via ifLinkUpDownTrapEnable [[RFC2863](#)]). At the beginning of the next 15 minute interval, the counter is reset. When the first second goes by and the event occurs, the current interval bucket will be 1,

Expires February 2, 2003

[Page 8]

which equals the threshold and the notification will be sent again.

2.7 Persistence

All read-write and read-create objects defined in this MIB module SHOULD be stored persistently. Following is an exhaustive list of these persistent objects:

```
vdslLineConfProfile
vdslLineAlarmConfProfile
vdslLineConfProfileName
vdslLineConfDownRateMode
vdslLineConfUpRateMode
vdslLineConfDownMaxPwr
vdslLineConfUpMaxPwr
vdslLineConfDownMaxSnrMgn
vdslLineConfDownMinSnrMgn
vdslLineConfDownTargetSnrMgn
vdslLineConfUpMaxSnrMgn
vdslLineConfUpMinSnrMgn
vdslLineConfUpTargetSnrMgn
vdslLineConfDownFastMaxDataRate
vdslLineConfDownFastMinDataRate
vdslLineConfDownSlowMaxDataRate
vdslLineConfDownSlowMinDataRate
vdslLineConfUpFastMaxDataRate
vdslLineConfUpFastMinDataRate
vdslLineConfUpSlowMaxDataRate
vdslLineConfUpSlowMinDataRate
vdslLineConfDownRateRatio
vdslLineConfUpRateRatio
vdslLineConfDownMaxInterDelay
vdslLineConfUpMaxInterDelay
vdslLineConfDownPboControl
vdslLineConfUpPboControl
vdslLineConfDownPboLevel
vdslLineConfUpPboLevel
vdslLineConfDeploymentScenario
vdslLineConfAdslPresence
vdslLineConfApplicableStandard
vdslLineConfBandPlan
vdslLineConfBandPlanFx
vdslLineConfBandOptUsage
vdslLineConfUpPsdTemplate
vdslLineConfDownPsdTemplate
vdslLineConfHamBandMask
vdslLineConfCustomNotch1Start
vdslLineConfCustomNotch1Stop
vdslLineConfCustomNotch2Start
vdslLineConfCustomNotch2Stop
vdslLineConfDownTargetSlowBurst
vdslLineConfUpTargetSlowBurst
vdslLineConfDownMaxFastFec
```

Expires February 2, 2003

[Page 9]

Expires February 2, 2003

[Page 10]

vdsLMIB MODULE-IDENTITY

LAST-UPDATED "200309240000Z" -- September 24, 2003

ORGANIZATION "ADSLMIB Working Group"

CONTACT-INFO "WG-email: adslmib@ietf.org

Info: <https://www1.ietf.org/mailman/listinfo/adslmib>

Chair: Mike Sneed
Sand Channel Systems
Postal: P.O. Box 37324
Raleigh, NC 27627-7324
USA
Email: sneedmike@hotmail.com
Phone: +1 206 600 7022

Co-editor: Bob Ray
PESA Switching Systems, Inc.
Postal: 330-A Wynn Drive
Huntsville, AL 35805
USA
Email: r-ray@pesa.com
Phone: +1 256 726 9200 ext. 142

Co-editor: Rajesh Abbi
Alcatel USA
Postal: 2912 Wake Forest Road
Raleigh, NC 27609-7860
USA
Email: Rajesh.Abbi@alcatel.com
Phone: +1 919 850 6194

"

DESCRIPTION

"The MIB module defining objects for the management of a pair of VDSL transceivers at each end of the VDSL line. Each such line has an entry in an ifTable which may include multiple transceiver lines. An agent may reside at either end of the VDSL line. However, the MIB is designed to require no management communication between them beyond that inherent in the low-level VDSL line protocol. The agent may monitor and control this protocol for its needs.

VDSL lines may support optional Fast or Interleaved channels. If these are supported, additional entries corresponding to the supported channels must be created in the ifTable. Thus a VDSL line that supports both channels will have three entries in the ifTable, one for each physical, fast, and interleaved, whose ifType values are equal to `vdsl(97)`, `fast(125)`, and `interleaved(124)`, respectively. The ifStackTable is used to represent the relationship between the entries.

Naming Conventions:

Vtuc -- (VTUC) transceiver at near (Central) end of line
Vtur -- (VTUR) transceiver at Remote end of line

Expires February 2, 2003

[Page 11]

```

Vtu -- One of either Vtuc or Vtur
Curr -- Current
Prev -- Previous
Atn -- Attenuation
ES -- Errored Second.
SES -- Severely Errored Second
UAS -- Unavailable Second
LCS -- Line Code Specific
Lof -- Loss of Frame
Lol -- Loss of Link
Los -- Loss of Signal
Lpr -- Loss of Power
xxxx -- Sum of Seconds in which xxx has occurred
      (e.g., xxx = Lof, Los, Lpr, Lol)
Max -- Maximum
Mgn -- Margin
Min -- Minimum
Psd -- Power Spectral Density
Snr -- Signal to Noise Ratio
Tx -- Transmit
Blks -- Blocks

```

Copyright (C) The Internet Society (2003). This version of this MIB module is part of RFC XXXX: see the RFC itself for full legal notices."

```

-- RFC Ed.: replace XXXX with assigned number & remove this note
      REVISION "20030924000Z" -- September 24, 2003
      DESCRIPTION "Initial version, published as RFC XXXX."
-- RFC Ed.: replace XXXX with assigned number & remove this note
      ::= { transmission YYYY } -- To be assigned by IANA
-- RFC Ed.: we suggest to put it under { transmission 97 } because
--           97 is the value of the main ifType for the MIB objects
--           defined in this MIB module.

```

```

vdsllineMib OBJECT IDENTIFIER ::= { vdsLMIB 1 }
vdsLMibObjects OBJECT IDENTIFIER ::= { vdsllineMib 1 }

```

```

--
-- textual conventions used in this MIB
--

```

```

VdsllineCodingType ::= TEXTUAL-CONVENTION
    STATUS current
    DESCRIPTION
        "This data type is used as the syntax for the VDSL Line
        Code. Attributes with this syntax identify the line coding
        used. Specified as an INTEGER, the three values are:

        other(1) -- none of the following
        mcm(2) -- Multiple Carrier Modulation
        scm(3) -- Single Carrier Modulation"
    SYNTAX INTEGER
        {

```

Expires February 2, 2003

[Page 12]


```

    other(1),
    mcm(2),
    scm(3)
}

```

VdslLineEntry ::= TEXTUAL-CONVENTION

STATUS current

DESCRIPTION

"Identifies a transceiver as being either Vtuc or Vtur.
A VDSL line consists of two transceivers, a Vtuc and a
Vtur. Attributes with this syntax reference the two sides
of a line. Specified as an INTEGER, the two values are:

```

    vtuc(1) -- central site transceiver
    vtur(2) -- remote site transceiver"

```

SYNTAX INTEGER

```

{
    vtuc(1),
    vtur(2)
}

```

--

-- objects

--

vdslLineTable OBJECT-TYPE

SYNTAX SEQUENCE OF VdslLineEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"This table includes common attributes describing
both ends of the line. It is required for all VDSL
physical interfaces. VDSL physical interfaces are
those ifEntries where ifType is equal to vdsl(97)."

::= { vdslMibObjects 1 }

vdslLineEntry OBJECT-TYPE

SYNTAX VdslLineEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION "An entry in the vdslLineTable."

INDEX { ifIndex }

::= { vdslLineTable 1 }

VdslLineEntry ::=

SEQUENCE

```

{
    vdslLineCoding          VdslLineCodingType,
    vdslLineType            INTEGER,
    vdslLineConfProfile     SnmpAdminString,
    vdslLineAlarmConfProfile SnmpAdminString
}

```

Expires February 2, 2003

[Page 13]

vdslLineCoding OBJECT-TYPE

SYNTAX VdslLineCodingType

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Specifies the VDSL coding type used on this line."

REFERENCE "T1E1.4/2000-009R3, Part 1, common spec"

::= { vdslLineEntry 1 }

vdslLineType OBJECT-TYPE

SYNTAX INTEGER

```

{
  noChannel(1),          -- no channels exist
  fastOnly(2),          -- only fast channel exists
  interleavedOnly(3),   -- only interleaved channel exists
  fastOrInterleaved(4), -- either fast or interleaved channel
                        -- exist, but only one at a time
  fastAndInterleaved(5) -- both fast and interleaved channels
                        -- exist
}

```

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Defines the type of VDSL physical line entity that exists, by defining whether and how the line is channelized. If the line is channelized, the value will be other than noChannel(1). This object defines which channel type(s) are supported. Defined values are:

```

noChannel(1)          -- no channels exist
fastOnly(2)          -- only fast channel exists
interleavedOnly(3)   -- only interleaved channel exists
fastOrInterleaved(4) -- either fast or interleaved channel
                        -- exist, but only one at a time
fastAndInterleaved(5) -- both fast and interleaved channels
                        -- exist

```

Note that 'slow' and 'interleaved' refer to the same channel. In the case that the line is channelized, the manager can use the ifStackTable to determine the ifIndex for the associated channel(s)."

REFERENCE "T1E1.4/2000-009R3, Part 1, common spec"

::= { vdslLineEntry 2 }

vdslLineConfProfile OBJECT-TYPE

SYNTAX SnmpAdminString (SIZE(1..32))

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"The value of this object identifies the row in the VDSL Line Configuration Profile Table, vdslLineConfProfileTable, which applies for this VDSL line, and channels if applicable."

Expires February 2, 2003

[Page 14]

This object MUST be maintained in a persistent manner."
 DEFVAL { "DEFVAL" }
 ::= { vdslLineEntry 3 }

vdslLineAlarmConfProfile OBJECT-TYPE

SYNTAX SnmpAdminString (SIZE(1..32))
 MAX-ACCESS read-write
 STATUS current

DESCRIPTION

"The value of this object identifies the row in the VDSL Line Alarm Configuration Profile Table, vdslLineAlarmConfProfileTable, which applies to this VDSL line, and channels if applicable.

This object MUST be maintained in a persistent manner."
 DEFVAL { "DEFVAL" }
 ::= { vdslLineEntry 4 }

vdslPhysTable OBJECT-TYPE

SYNTAX SEQUENCE OF VdslPhysEntry
 MAX-ACCESS not-accessible
 STATUS current

DESCRIPTION

"This table provides one row for each Vtu. Each row contains the Physical Layer Parameters table for that Vtu. VDSL physical interfaces are those ifEntries where ifType is equal to vdsl(97)."

::= { vdslMibObjects 2 }

vdslPhysEntry OBJECT-TYPE

SYNTAX VdslPhysEntry
 MAX-ACCESS not-accessible
 STATUS current
 DESCRIPTION "An entry in the vdslPhysTable."
 INDEX { ifIndex,
 vdslPhysSide }
 ::= { vdslPhysTable 1 }

VdslPhysEntry ::=

SEQUENCE

{	
vdslPhysSide	VdslLineEntity,
vdslPhysInvSerialNumber	SnmpAdminString,
vdslPhysInvVendorID	SnmpAdminString,
vdslPhysInvVersionNumber	SnmpAdminString,
vdslPhysCurrSnrMgn	Integer32,
vdslPhysCurrAtn	Gauge32,
vdslPhysCurrStatus	BITS,
vdslPhysCurrOutputPwr	Integer32,
vdslPhysCurrAttainableRate	Gauge32,
vdslPhysCurrLineRate	Gauge32
}	

Expires February 2, 2003

[Page 15]

vdslPhysSide OBJECT-TYPE
SYNTAX VdslLineEntity
MAX-ACCESS not-accessible
STATUS current
DESCRIPTION
"Identifies whether the transceiver is the Vtuc or Vtur."
 ::= { vdslPhysEntry 1 }

vdslPhysInvSerialNumber OBJECT-TYPE
SYNTAX SnmpAdminString(SIZE (0..32))
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"The vendor specific string that identifies the
 vendor equipment."
REFERENCE "T1E1.4/2000-009R3, Part 1, common spec"
 ::= { vdslPhysEntry 2 }

vdslPhysInvVendorID OBJECT-TYPE
SYNTAX SnmpAdminString (SIZE (0..16))
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"The vendor ID code is a copy of the binary vendor
 identification field expressed as readable characters
 in hexadecimal notation."
REFERENCE "T1E1.4/2000-009R3, Part 1, common spec"
 ::= { vdslPhysEntry 3 }

vdslPhysInvVersionNumber OBJECT-TYPE
SYNTAX SnmpAdminString (SIZE (0..16))
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"The vendor specific version number sent by this Vtu
 as part of the initialization messages. It is a copy
 of the binary version number field expressed as
 readable characters in hexadecimal notation."
REFERENCE "T1E1.4/2000-009R3, Part 1, common spec"
 ::= { vdslPhysEntry 4 }

vdslPhysCurrSnrMgn OBJECT-TYPE
SYNTAX Integer32 (-127..127)
UNITS "0.25dBm"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"Noise Margin as seen by this Vtu with respect to its
 received signal in 0.25dB. The effective range is
 -31.75 to +31.75 dB."
REFERENCE "T1E1.4/2000-009R3, Part 1, common spec"
 ::= { vdslPhysEntry 5 }

Expires February 2, 2003

[Page 16]


```

vdslPhysCurrAtn OBJECT-TYPE
    SYNTAX      Gauge32 (0..255)
    UNITS       "0.25dBm"
    MAX-ACCESS  read-only
    STATUS      current
    DESCRIPTION
        "Measured difference in the total power transmitted by
        the peer Vtu and the total power received by this Vtu.
        The effective range is 0 to +63.75 dB."
    REFERENCE   "T1E1.4/2000-009R3, Part 1, common spec"
    ::= { vdslPhysEntry 6 }

```

```

vdslPhysCurrStatus OBJECT-TYPE
    SYNTAX      BITS
    {
        noDefect(0),
        lossOfFraming(1),
        lossOfSignal(2),
        lossOfPower(3),
        lossOfSignalQuality(4),
        lossOfLink(5),
        dataInitFailure(6),
        configInitFailure(7),
        protocolInitFailure(8),
        noPeerVtuPresent(9)
    }
    MAX-ACCESS  read-only
    STATUS      current
    DESCRIPTION
        "Indicates current state of the Vtu line. This is a
        bit-map of possible conditions. The various bit
        positions are:

```

0	noDefect	There are no defects on the line.
1	lossOfFraming	Vtu failure due to not receiving a valid frame.
2	lossOfSignal	Vtu failure due to not receiving signal.
3	lossOfPower	Vtu failure due to loss of power.
4	lossOfSignalQuality	Loss of Signal Quality is declared when the Noise Margin falls below the Minimum Noise Margin, or the bit-error-rate exceeds 10 ⁻⁷ .
5	lossOfLink	Vtu failure due to inability to link with peer Vtu. Set whenever the transceiver is in the 'Warm Start' state.

Expires February 2, 2003

[Page 17]

- | | | |
|---|---------------------|--|
| 6 | dataInitFailure | Vtu failure during initialization due to bit errors corrupting startup exchange data. |
| 7 | configInitFailure | Vtu failure during initialization due to peer Vtu not able to support requested configuration. |
| 8 | protocolInitFailure | Vtu failure during initialization due to incompatible protocol used by the peer Vtu. |
| 9 | noPeerVtuPresent | Vtu failure during initialization due to no activation sequence detected from peer Vtu. |

This is intended to supplement ifOperStatus."

REFERENCE "T1E1.4/2000-009R3, Part 1, common spec"
 ::= { vdslPhysEntry 7 }

vdslPhysCurrOutputPwr OBJECT-TYPE

SYNTAX Integer32 (0..160)
UNITS "0.1dBm"
MAX-ACCESS read-only
STATUS current
DESCRIPTION

"Measured total output power transmitted by this VTU.
This is the measurement that was reported during
the last activation sequence."

REFERENCE "T1E1.4/2000-009R3, Part 1, common spec"
 ::= { vdslPhysEntry 8 }

vdslPhysCurrAttainableRate OBJECT-TYPE

SYNTAX Gauge32
UNITS "kbps"
MAX-ACCESS read-only
STATUS current
DESCRIPTION

"Indicates the maximum currently attainable data rate
in steps of 1000 bits/second by the Vtu. This value
will be equal to or greater than vdslPhysCurrLineRate.
Note that for SCM, the minimum and maximum data rates
are equal. Note: 1 kbps = 1000 bps."

REFERENCE "T1E1.4/2000-009R3, Part 1, common spec"
 ::= { vdslPhysEntry 9 }

vdslPhysCurrLineRate OBJECT-TYPE

SYNTAX Gauge32
UNITS "kbps"
MAX-ACCESS read-only
STATUS current
DESCRIPTION

Expires February 2, 2003

[Page 18]

"Indicates the current data rate in steps of 1000 bits/second by the Vtu. This value will be less than or equal to vdslPhysCurrAttainableRate. Note: 1 kbps = 1000 bps."

REFERENCE "T1E1.4/2000-009R3, Part 1, common spec"

::= { vdslPhysEntry 10 }

vdslChanTable OBJECT-TYPE

SYNTAX SEQUENCE OF VdslChanEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"This table provides one row for each Vtu channel. VDSL channel interfaces are those ifEntries where ifType is equal to interleave(124) or fast(125)."

::= { vdslMibObjects 3 }

vdslChanEntry OBJECT-TYPE

SYNTAX VdslChanEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"An entry in the vdslChanTable."

INDEX { ifIndex,
vdslPhysSide }

::= { vdslChanTable 1 }

VdslChanEntry ::=

SEQUENCE

```
{
  vdslChanInterleaveDelay      Gauge32,
  vdslChanCrcBlockLength      Gauge32,
  vdslChanCurrTxRate          Gauge32,
  vdslChanCurrTxSlowBurstProtect Gauge32,
  vdslChanCurrTxFastFec       Gauge32
}
```

vdslChanInterleaveDelay OBJECT-TYPE

SYNTAX Gauge32

UNITS "milliseconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Interleave Delay for this channel.

Interleave delay applies only to the interleave (slow) channel and defines the mapping (relative spacing) between subsequent input bytes at the interleaver input and their placement in the bit stream at the interleaver output. Larger numbers provide greater separation between consecutive input bytes in the output bit stream allowing for improved impulse noise immunity at the expense of

Expires February 2, 2003

[Page 19]

payload latency.

In the case where the ifType is fast(125), return a value of zero."

REFERENCE "T1E1.4/2000-009R3, Part 1, common spec"
 ::= { vdslChanEntry 1 }

vdslChanCrcBlockLength OBJECT-TYPE

SYNTAX Gauge32
UNITS "bytes"
MAX-ACCESS read-only
STATUS current

DESCRIPTION

"Indicates the length of the channel data-block on which the CRC operates."

REFERENCE "T1E1.4/2000-009R3, Part 1, common spec"
 ::= { vdslChanEntry 2 }

vdslChanCurrTxRate OBJECT-TYPE

SYNTAX Gauge32
UNITS "kbps"
MAX-ACCESS read-only
STATUS current

DESCRIPTION

"Actual transmit data rate on this channel. Note: 1 kbps = 1000 bps."

::= { vdslChanEntry 3 }

vdslChanCurrTxSlowBurstProtect OBJECT-TYPE

SYNTAX Gauge32 (0..1275)
UNITS "microseconds"
MAX-ACCESS read-only
STATUS current

DESCRIPTION

"Actual level of impulse noise (burst) protection for an interleaved (slow) channel. This parameter is not applicable to fast channels. For fast channels, a value of zero shall be returned."

REFERENCE "ITU-T G.997.1, [section 7.3.2.3](#)"
 ::= { vdslChanEntry 4 }

vdslChanCurrTxFastFec OBJECT-TYPE

SYNTAX Gauge32 (0..50)
UNITS "%"
MAX-ACCESS read-only
STATUS current

DESCRIPTION

"Actual Forward Error Correction (FEC) redundancy related overhead for a fast channel. This parameter is not applicable to an interleaved (slow) channel. For interleaved channels, a value of zero shall be returned."

::= { vdslChanEntry 5 }

Expires February 2, 2003

[Page 20]


```

vdslPerfDataTable          OBJECT-TYPE
    SYNTAX                 SEQUENCE OF VdslPerfDataEntry
    MAX-ACCESS             not-accessible
    STATUS                 current
    DESCRIPTION
        "This table provides one row for each VDSL physical
        interface. VDSL physical interfaces are those ifEntries
        where ifType is equal to vdsl(97)."
```

::= { vdslMibObjects 4 }

```

vdslPerfDataEntry          OBJECT-TYPE
    SYNTAX                 VdslPerfDataEntry
    MAX-ACCESS             not-accessible
    STATUS                 current
    DESCRIPTION
        "An entry in the vdslPerfDataTable."
```

INDEX { ifIndex,
 vdslPhysSide }

::= { vdslPerfDataTable 1 }

```

VdslPerfDataEntry ::=
    SEQUENCE
        {
            vdslPerfDataValidIntervals          HcPerfValidIntervals,
            vdslPerfDataInvalidIntervals        HcPerfInvalidIntervals,
            vdslPerfDataLofs                    Unsigned32,
            vdslPerfDataLoss                    Unsigned32,
            vdslPerfDataLprs                    Unsigned32,
            vdslPerfDataLols                    Unsigned32,
            vdslPerfDataESS                     Unsigned32,
            vdslPerfDataSESS                    Unsigned32,
            vdslPerfDataUASS                    Unsigned32,
            vdslPerfDataInits                   Unsigned32,
            vdslPerfDataCurr15MinTimeElapsed    HcPerfTimeElapsed,
            vdslPerfDataCurr15MinLofs           HcPerfCurrentCount,
            vdslPerfDataCurr15MinLoss           HcPerfCurrentCount,
            vdslPerfDataCurr15MinLprs           HcPerfCurrentCount,
            vdslPerfDataCurr15MinLols           HcPerfCurrentCount,
            vdslPerfDataCurr15MinESS            HcPerfCurrentCount,
            vdslPerfDataCurr15MinSESS           HcPerfCurrentCount,
            vdslPerfDataCurr15MinUASS           HcPerfCurrentCount,
            vdslPerfDataCurr15MinInits          HcPerfCurrentCount,
            vdslPerfData1DayValidIntervals      HcPerfValidIntervals,
            vdslPerfData1DayInvalidIntervals    HcPerfInvalidIntervals,
            vdslPerfDataCurr1DayTimeElapsed     HcPerfTimeElapsed,
            vdslPerfDataCurr1DayLofs            Unsigned32,
            vdslPerfDataCurr1DayLoss            Unsigned32,
            vdslPerfDataCurr1DayLprs            Unsigned32,
            vdslPerfDataCurr1DayLols            Unsigned32,
            vdslPerfDataCurr1DayESS             Unsigned32,
            vdslPerfDataCurr1DaySESS            Unsigned32,
            vdslPerfDataCurr1DayUASS            Unsigned32,
```

Expires February 2, 2003

[Page 21]

```
    vdslPerfDataCurr1DayInits      Unsigned32
  }
```

```
vdslPerfDataValidIntervals OBJECT-TYPE
  SYNTAX      HCPerfValidIntervals
  UNITS       "intervals"
  MAX-ACCESS  read-only
  STATUS      current
  DESCRIPTION
    "Valid Intervals per definition found in
    HC-PerfHist-TC-MIB."
  ::= { vdslPerfDataEntry 1 }
```

```
vdslPerfDataInvalidIntervals OBJECT-TYPE
  SYNTAX      HCPerfInvalidIntervals
  UNITS       "intervals"
  MAX-ACCESS  read-only
  STATUS      current
  DESCRIPTION
    "Invalid Intervals per definition found in
    HC-PerfHist-TC-MIB."
  ::= { vdslPerfDataEntry 2 }
```

```
vdslPerfDataLofs OBJECT-TYPE
  SYNTAX      Unsigned32
  UNITS       "seconds"
  MAX-ACCESS  read-only
  STATUS      current
  DESCRIPTION
    "Count of seconds since the unit was last reset that there
    was Loss of Framing."
  REFERENCE   "T1E1.4/2000-009R3, Part 1, common spec"
  ::= { vdslPerfDataEntry 3 }
```

```
vdslPerfDataLoss OBJECT-TYPE
  SYNTAX      Unsigned32
  UNITS       "seconds"
  MAX-ACCESS  read-only
  STATUS      current
  DESCRIPTION
    "Count of seconds since the unit was last reset that there
    was Loss of Signal."
  REFERENCE   "T1E1.4/2000-009R3, Part 1, common spec"
  ::= { vdslPerfDataEntry 4 }
```

```
vdslPerfDataLprs OBJECT-TYPE
  SYNTAX      Unsigned32
  UNITS       "seconds"
  MAX-ACCESS  read-only
  STATUS      current
  DESCRIPTION
    "Count of seconds since the unit was last reset that there
    was Loss of Power."
```

Expires February 2, 2003

[Page 22]

REFERENCE "T1E1.4/2000-009R3, Part 1, common spec"
 ::= { vdslPerfDataEntry 5 }

vdslPerfDataLols OBJECT-TYPE
 SYNTAX Unsigned32
 UNITS "seconds"
 MAX-ACCESS read-only
 STATUS current
 DESCRIPTION
 "Count of seconds since the unit was last reset that there
 was Loss of Link."
 ::= { vdslPerfDataEntry 6 }

vdslPerfDataESSs OBJECT-TYPE
 SYNTAX Unsigned32
 UNITS "seconds"
 MAX-ACCESS read-only
 STATUS current
 DESCRIPTION
 "Count of Errored Seconds since the unit was last reset.
 An Errored Second is a one-second interval containing one
 or more CRC anomalies, or one or more LOS or LOF defects."
 REFERENCE "T1E1.4/2000-009R3, Part 1, common spec"
 ::= { vdslPerfDataEntry 7 }

vdslPerfDataSESSs OBJECT-TYPE
 SYNTAX Unsigned32
 UNITS "seconds"
 MAX-ACCESS read-only
 STATUS current
 DESCRIPTION
 "Count of Severely Errored Seconds since the unit was last
 reset."
 ::= { vdslPerfDataEntry 8 }

vdslPerfDataUASSs OBJECT-TYPE
 SYNTAX Unsigned32
 UNITS "seconds"
 MAX-ACCESS read-only
 STATUS current
 DESCRIPTION
 "Count of Unavailable Seconds since the unit was last
 reset."
 ::= { vdslPerfDataEntry 9 }

vdslPerfDataInits OBJECT-TYPE
 SYNTAX Unsigned32
 UNITS "occurrences"
 MAX-ACCESS read-only
 STATUS current
 DESCRIPTION
 "Count of the line initialization attempts since the unit
 was last reset. This count includes both successful and

Expires February 2, 2003

[Page 23]

failed attempts."

REFERENCE "T1E1.4/2000-009R3, Part 1, common spec"
 ::= { vdslPerfDataEntry 10 }

vdslPerfDataCurr15MinTimeElapsed OBJECT-TYPE

SYNTAX HCPerfTimeElapsed
UNITS "seconds"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "Total elapsed seconds in this interval."
 ::= { vdslPerfDataEntry 11 }

vdslPerfDataCurr15MinLofs OBJECT-TYPE

SYNTAX HCPerfCurrentCount
UNITS "seconds"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "Count of seconds during this interval that there
 was Loss of Framing."
REFERENCE "T1E1.4/2000-009R3, Part 1, common spec"
 ::= { vdslPerfDataEntry 12 }

vdslPerfDataCurr15MinLoss OBJECT-TYPE

SYNTAX HCPerfCurrentCount
UNITS "seconds"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "Count of seconds during this interval that there
 was Loss of Signal."
REFERENCE "T1E1.4/2000-009R3, Part 1, common spec"
 ::= { vdslPerfDataEntry 13 }

vdslPerfDataCurr15MinLprs OBJECT-TYPE

SYNTAX HCPerfCurrentCount
UNITS "seconds"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "Count of seconds during this interval that there
 was Loss of Power."
REFERENCE "T1E1.4/2000-009R3, Part 1, common spec"
 ::= { vdslPerfDataEntry 14 }

vdslPerfDataCurr15MinLols OBJECT-TYPE

SYNTAX HCPerfCurrentCount
UNITS "seconds"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "Count of seconds during this interval that there

Expires February 2, 2003

[Page 24]

was Loss of Link."
 ::= { vdslPerfDataEntry 15 }

vdslPerfDataCurr15MinESS OBJECT-TYPE

SYNTAX HCPerfCurrentCount
UNITS "seconds"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"Count of Errored Seconds during this interval. An Errored
Second is a one-second interval containing one or more CRC
anomalies, or one or more LOS or LOF defects."
REFERENCE "T1E1.4/2000-009R3, Part 1, common spec"
 ::= { vdslPerfDataEntry 16 }

vdslPerfDataCurr15MinSESS OBJECT-TYPE

SYNTAX HCPerfCurrentCount
UNITS "seconds"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"Count of Severely Errored Seconds during this interval."
 ::= { vdslPerfDataEntry 17 }

vdslPerfDataCurr15MinUASS OBJECT-TYPE

SYNTAX HCPerfCurrentCount
UNITS "seconds"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"Count of Unavailable Seconds during this interval."
 ::= { vdslPerfDataEntry 18 }

vdslPerfDataCurr15MinInits OBJECT-TYPE

SYNTAX HCPerfCurrentCount
UNITS "occurrences"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"Count of the line initialization attempts during this
interval. This count includes both successful and
failed attempts."
REFERENCE "T1E1.4/2000-009R3, Part 1, common spec"
 ::= { vdslPerfDataEntry 19 }

vdslPerfData1DayValidIntervals OBJECT-TYPE

SYNTAX HCPerfValidIntervals
UNITS "intervals"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"Valid Intervals per definition found in
HC-PerfHist-TC-MIB."

Expires February 2, 2003

[Page 25]

```
::= { vdslPerfDataEntry 20 }
```

```
vdslPerfData1DayInvalidIntervals OBJECT-TYPE
```

```
SYNTAX      HCPperfInvalidIntervals
```

```
UNITS       "intervals"
```

```
MAX-ACCESS  read-only
```

```
STATUS      current
```

```
DESCRIPTION
```

```
    "Invalid Intervals per definition found in  
    HC-PerfHist-TC-MIB."
```

```
::= { vdslPerfDataEntry 21 }
```

```
vdslPerfDataCurr1DayTimeElapsed OBJECT-TYPE
```

```
SYNTAX      HCPperfTimeElapsed
```

```
UNITS       "seconds"
```

```
MAX-ACCESS  read-only
```

```
STATUS      current
```

```
DESCRIPTION
```

```
    "Number of seconds that have elapsed since the beginning  
    of the current 1-day interval."
```

```
::= { vdslPerfDataEntry 22 }
```

```
vdslPerfDataCurr1DayLofs OBJECT-TYPE
```

```
SYNTAX      Unsigned32
```

```
UNITS       "seconds"
```

```
MAX-ACCESS  read-only
```

```
STATUS      current
```

```
DESCRIPTION
```

```
    "Count of Loss of Framing (LOF) Seconds since the  
    beginning of the current 1-day interval."
```

```
::= { vdslPerfDataEntry 23 }
```

```
vdslPerfDataCurr1DayLoss OBJECT-TYPE
```

```
SYNTAX      Unsigned32
```

```
UNITS       "seconds"
```

```
MAX-ACCESS  read-only
```

```
STATUS      current
```

```
DESCRIPTION
```

```
    "Count of Loss of Signal (LOS) Seconds since the beginning  
    of the current 1-day interval."
```

```
::= { vdslPerfDataEntry 24 }
```

```
vdslPerfDataCurr1DayLprs OBJECT-TYPE
```

```
SYNTAX      Unsigned32
```

```
UNITS       "seconds"
```

```
MAX-ACCESS  read-only
```

```
STATUS      current
```

```
DESCRIPTION
```

```
    "Count of Loss of Power (LPR) Seconds since the beginning  
    of the current 1-day interval."
```

```
::= { vdslPerfDataEntry 25 }
```

```
vdslPerfDataCurr1DayLols OBJECT-TYPE
```

Expires February 2, 2003

[Page 26]

SYNTAX Unsigned32
UNITS "seconds"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"Count of Loss of Link (LOL) Seconds since the beginning
of the current 1-day interval."
 ::= { vdslPerfDataEntry 26 }

vdslPerfDataCurr1DayESs OBJECT-TYPE

SYNTAX Unsigned32
UNITS "seconds"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"Count of Errored Seconds (ES) since the beginning
of the current 1-day interval."
 ::= { vdslPerfDataEntry 27 }

vdslPerfDataCurr1DaySEsS OBJECT-TYPE

SYNTAX Unsigned32
UNITS "seconds"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"Count of Severely Errored Seconds (SES) since the
beginning of the current 1-day interval."
 ::= { vdslPerfDataEntry 28 }

vdslPerfDataCurr1DayUASs OBJECT-TYPE

SYNTAX Unsigned32
UNITS "seconds"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"Count of Unavailable Seconds (UAS) since the beginning
of the current 1-day interval."
 ::= { vdslPerfDataEntry 29 }

vdslPerfDataCurr1DayInits OBJECT-TYPE

SYNTAX Unsigned32
UNITS "seconds"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
"Count of the line initialization attempts since the
beginning of the current 1-day interval. This count
includes both successful and failed attempts."
 ::= { vdslPerfDataEntry 30 }

vdslPerfIntervalTable OBJECT-TYPE

SYNTAX SEQUENCE OF VdslPerfIntervalEntry
MAX-ACCESS not-accessible

Expires February 2, 2003

[Page 27]

```

STATUS      current
DESCRIPTION
    "This table provides one row for each Vtu performance
    data collection interval. VDSL physical interfaces are
    those ifEntries where ifType is equal to vdsl(97)."
```

```
 ::= { vdslMibObjects 5 }
```

```

vdslPerfIntervalEntry      OBJECT-TYPE
SYNTAX      VdslPerfIntervalEntry
MAX-ACCESS  not-accessible
STATUS      current
DESCRIPTION
    "An entry in the vdslPerfIntervalTable."
INDEX { ifIndex,
        vdslPhysSide,
        vdslPerfIntervalNumber }
 ::= { vdslPerfIntervalTable 1 }
```

```

VdslPerfIntervalEntry ::=
SEQUENCE
{
    vdslPerfIntervalNumber      Unsigned32,
    vdslPerfIntervalLofs        HCPerfIntervalCount,
    vdslPerfIntervalLoss        HCPerfIntervalCount,
    vdslPerfIntervalLprs        HCPerfIntervalCount,
    vdslPerfIntervalLols        HCPerfIntervalCount,
    vdslPerfIntervalESSs        HCPerfIntervalCount,
    vdslPerfIntervalSESSs       HCPerfIntervalCount,
    vdslPerfIntervalUASSs       HCPerfIntervalCount,
    vdslPerfIntervalInits       HCPerfIntervalCount
}
```

```

vdslPerfIntervalNumber OBJECT-TYPE
SYNTAX      Unsigned32 (1..96)
MAX-ACCESS  not-accessible
STATUS      current
DESCRIPTION
    "Performance Data Interval number 1 is the most recent
    previous interval; interval 96 is 24 hours ago.
    Intervals 2 to 96 are optional."
 ::= { vdslPerfIntervalEntry 1 }
```

```

vdslPerfIntervalLofs OBJECT-TYPE
SYNTAX      HCPerfIntervalCount
UNITS       "seconds"
MAX-ACCESS  read-only
STATUS      current
DESCRIPTION
    "Count of seconds in the interval when there was Loss
    of Framing."
REFERENCE   "T1E1.4/2000-009R3, Part 1, common spec"
 ::= { vdslPerfIntervalEntry 2 }
```

Expires February 2, 2003

[Page 28]

vdslPerfIntervalLoss OBJECT-TYPE

SYNTAX HCPperfIntervalCount
UNITS "seconds"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "Count of seconds in the interval when there was Loss
 of Signal."
REFERENCE "T1E1.4/2000-009R3, Part 1, common spec"
::= { vdslPerfIntervalEntry 3 }

vdslPerfIntervalLprs OBJECT-TYPE

SYNTAX HCPperfIntervalCount
UNITS "seconds"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "Count of seconds in the interval when there was Loss
 of Power."
REFERENCE "T1E1.4/2000-009R3, Part 1, common spec"
::= { vdslPerfIntervalEntry 4 }

vdslPerfIntervalLols OBJECT-TYPE

SYNTAX HCPperfIntervalCount
UNITS "seconds"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "Count of seconds in the interval when there was Loss
 of Link."
::= { vdslPerfIntervalEntry 5 }

vdslPerfIntervalESs OBJECT-TYPE

SYNTAX HCPperfIntervalCount
UNITS "seconds"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "Count of Errored Seconds (ES) in the interval. An Errored
 Second is a one-second interval containing one or more CRC
 anomalies, one or more LOS or LOF defects."
REFERENCE "T1E1.4/2000-009R3, Part 1, common spec"
::= { vdslPerfIntervalEntry 6 }

vdslPerfIntervalSEsSs OBJECT-TYPE

SYNTAX HCPperfIntervalCount
UNITS "seconds"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "Count of Severely Errored Seconds in the interval."
::= { vdslPerfIntervalEntry 7 }

Expires February 2, 2003

[Page 29]

vds1PerfIntervalUASS OBJECT-TYPE

```

SYNTAX      HCPeRFIntervalCount
UNITS       "seconds"
MAX-ACCESS  read-only
STATUS      current
DESCRIPTION
    "Count of Unavailable Seconds in the interval."
 ::= { vds1PerfIntervalEntry 8 }

```

vds1PerfIntervalInits OBJECT-TYPE

```

SYNTAX      HCPeRFIntervalCount
MAX-ACCESS  read-only
STATUS      current
DESCRIPTION
    "Count of the line initialization attempts during this
    interval. This count includes both successful and
    failed attempts."
REFERENCE   "T1E1.4/2000-009R3, Part 1, common spec"
 ::= { vds1PerfIntervalEntry 9 }

```

vds1Perf1DayIntervalTable OBJECT-TYPE

```

SYNTAX      SEQUENCE OF Vds1Perf1DayIntervalEntry
MAX-ACCESS  not-accessible
STATUS      current
DESCRIPTION
    "This table provides one row for each VDSL performance
    data collection interval. This table contains live data
    from equipment. As such, it is NOT persistent."
 ::= { vds1MibObjects 6 }

```

vds1Perf1DayIntervalEntry OBJECT-TYPE

```

SYNTAX      Vds1Perf1DayIntervalEntry
MAX-ACCESS  not-accessible
STATUS      current
DESCRIPTION
    "An entry in the vds1Perf1DayIntervalTable."
INDEX { ifIndex,
        vds1PhysSide,
        vds1Perf1DayIntervalNumber }
 ::= { vds1Perf1DayIntervalTable 1 }

```

Vds1Perf1DayIntervalEntry ::=

```

SEQUENCE
{
    vds1Perf1DayIntervalNumber      Unsigned32,
    vds1Perf1DayIntervalMoniSecs    HCPeRFTimeElapsed,
    vds1Perf1DayIntervalLofs        Unsigned32,
    vds1Perf1DayIntervalLoss        Unsigned32,
    vds1Perf1DayIntervalLprs        Unsigned32,
    vds1Perf1DayIntervalLols        Unsigned32,
    vds1Perf1DayIntervalESSs        Unsigned32,
    vds1Perf1DayIntervalSESSs       Unsigned32,
    vds1Perf1DayIntervalUASS        Unsigned32,

```

Expires February 2, 2003

[Page 30]

```
    vdslPerf1DayIntervalInits                Unsigned32
  }

vdslPerf1DayIntervalNumber OBJECT-TYPE
  SYNTAX      Unsigned32 (1..30)
  MAX-ACCESS  not-accessible
  STATUS      current
  DESCRIPTION
    "History Data Interval number.  Interval 1 is the most
     recent previous day; interval 30 is 30 days ago.  Intervals
     2 to 30 are optional."
  ::= { vdslPerf1DayIntervalEntry 1 }

vdslPerf1DayIntervalMoniSecs OBJECT-TYPE
  SYNTAX      HCPerfTimeElapsed
  UNITS       "seconds"
  MAX-ACCESS  read-only
  STATUS      current
  DESCRIPTION
    "The amount of time in the 1-day interval over which the
     performance monitoring information is actually counted.
     This value will be the same as the interval duration except
     in a situation where performance monitoring data could not
     be collected for any reason."
  ::= { vdslPerf1DayIntervalEntry 2 }

vdslPerf1DayIntervalLofs OBJECT-TYPE
  SYNTAX      Unsigned32
  UNITS       "seconds"
  MAX-ACCESS  read-only
  STATUS      current
  DESCRIPTION
    "Count of Loss of Frame (LOF) Seconds during the 1-day
     interval as measured by vdslPerf1DayIntervalMoniSecs."
  REFERENCE   "T1E1.4/2000-009R3, Part 1, common spec"
  ::= { vdslPerf1DayIntervalEntry 3 }

vdslPerf1DayIntervalLoss OBJECT-TYPE
  SYNTAX      Unsigned32
  UNITS       "seconds"
  MAX-ACCESS  read-only
  STATUS      current
  DESCRIPTION
    "Count of Loss of Signal (LOS) Seconds during the 1-day
     interval as measured by vdslPerf1DayIntervalMoniSecs."
  REFERENCE   "T1E1.4/2000-009R3, Part 1, common spec"
  ::= { vdslPerf1DayIntervalEntry 4 }

vdslPerf1DayIntervalLprs OBJECT-TYPE
  SYNTAX      Unsigned32
  UNITS       "seconds"
  MAX-ACCESS  read-only
  STATUS      current
```

Expires February 2, 2003

[Page 31]

DESCRIPTION

"Count of Loss of Power (LPR) Seconds during the 1-day interval as measured by vdslPerf1DayIntervalMoniSecs."

REFERENCE "T1E1.4/2000-009R3, Part 1, common spec"

::= { vdslPerf1DayIntervalEntry 5 }

vdslPerf1DayIntervalLols OBJECT-TYPE

SYNTAX Unsigned32

UNITS "seconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Count of Loss of Link (LOL) Seconds during the 1-day interval as measured by vdslPerf1DayIntervalMoniSecs."

::= { vdslPerf1DayIntervalEntry 6 }

vdslPerf1DayIntervalESs OBJECT-TYPE

SYNTAX Unsigned32

UNITS "seconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Count of Errored Seconds (ES) during the 1-day interval as measured by vdslPerf1DayIntervalMoniSecs."

REFERENCE "T1E1.4/2000-009R3, Part 1, common spec"

::= { vdslPerf1DayIntervalEntry 7 }

vdslPerf1DayIntervalSESSs OBJECT-TYPE

SYNTAX Unsigned32

UNITS "seconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Count of Severely Errored Seconds (SES) during the 1-day interval as measured by vdslPerf1DayIntervalMoniSecs."

::= { vdslPerf1DayIntervalEntry 8 }

vdslPerf1DayIntervalUASs OBJECT-TYPE

SYNTAX Unsigned32

UNITS "seconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Count of Unavailable Seconds (UAS) during the 1-day interval as measured by vdslPerf1DayIntervalMoniSecs."

::= { vdslPerf1DayIntervalEntry 9 }

vdslPerf1DayIntervalInits OBJECT-TYPE

SYNTAX Unsigned32

UNITS "seconds"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

Expires February 2, 2003

[Page 32]

"Count of the line initialization attempts during the 1-day interval as measured by vdslPerf1DayIntervalMoniSecs. This count includes both successful and failed attempts."
 REFERENCE "T1E1.4/2000-009R3, Part 1, common spec"
 ::= { vdslPerf1DayIntervalEntry 10 }

vdslChanPerfDataTable OBJECT-TYPE
 SYNTAX SEQUENCE OF VdslChanPerfDataEntry
 MAX-ACCESS not-accessible
 STATUS current
 DESCRIPTION
 "This table provides one row for each Vtu channel. VDSL channel interfaces are those ifEntries where ifType is equal to interleave(124) or fast(125)."
 ::= { vdslMibObjects 7 }

vdslChanPerfDataEntry OBJECT-TYPE
 SYNTAX VdslChanPerfDataEntry
 MAX-ACCESS not-accessible
 STATUS current
 DESCRIPTION
 "An entry in the vdslChanPerfDataTable."
 INDEX { ifIndex,
 vdslPhysSide }
 ::= { vdslChanPerfDataTable 1 }

VdslChanPerfDataEntry ::= SEQUENCE
 {
 vdslChanValidIntervals HCPerfValidIntervals,
 vdslChanInvalidIntervals HCPerfInvalidIntervals,
 vdslChanFixedOctets ZeroBasedCounter64,
 vdslChanBadBlks ZeroBasedCounter64,
 vdslChanCurr15MinTimeElapsed HCPerfTimeElapsed,
 vdslChanCurr15MinFixedOctets HCPerfCurrentCount,
 vdslChanCurr15MinBadBlks HCPerfCurrentCount,
 vdslChan1DayValidIntervals HCPerfValidIntervals,
 vdslChan1DayInvalidIntervals HCPerfInvalidIntervals,
 vdslChanCurr1DayTimeElapsed HCPerfTimeElapsed,
 vdslChanCurr1DayFixedOctets HCPerfCurrentCount,
 vdslChanCurr1DayBadBlks HCPerfCurrentCount
 }

vdslChanValidIntervals OBJECT-TYPE
 SYNTAX HCPerfValidIntervals
 UNITS "intervals"
 MAX-ACCESS read-only
 STATUS current
 DESCRIPTION
 "Valid Intervals per definition found in HC-PerfHist-TC-MIB."
 ::= { vdslChanPerfDataEntry 1 }

Expires February 2, 2003

[Page 33]

```
vdslChanInvalidIntervals OBJECT-TYPE
    SYNTAX      HCPperfInvalidIntervals
    UNITS       "intervals"
    MAX-ACCESS   read-only
    STATUS      current
    DESCRIPTION
        "Invalid Intervals per definition found in
        HC-PerfHist-TC-MIB."
    ::= { vdslChanPerfDataEntry 2 }

vdslChanFixedOctets OBJECT-TYPE
    SYNTAX      ZeroBasedCounter64
    UNITS       "octets"
    MAX-ACCESS   read-only
    STATUS      current
    DESCRIPTION
        "Count of corrected octets since the unit was last reset."
    REFERENCE   "T1E1.4/2000-009R3, Part 1, common spec"
    ::= { vdslChanPerfDataEntry 3 }

vdslChanBadBlks OBJECT-TYPE
    SYNTAX      ZeroBasedCounter64
    UNITS       "blocks"
    MAX-ACCESS   read-only
    STATUS      current
    DESCRIPTION
        "Count of uncorrectable blocks since the unit was last
        reset."
    REFERENCE   "T1E1.4/2000-009R3, Part 1, common spec"
    ::= { vdslChanPerfDataEntry 4 }

vdslChanCurr15MinTimeElapsed OBJECT-TYPE
    SYNTAX      HCPperfTimeElapsed
    UNITS       "seconds"
    MAX-ACCESS   read-only
    STATUS      current
    DESCRIPTION
        "Total elapsed seconds in this interval."
    ::= { vdslChanPerfDataEntry 5 }

vdslChanCurr15MinFixedOctets OBJECT-TYPE
    SYNTAX      HCPperfCurrentCount
    UNITS       "octets"
    MAX-ACCESS   read-only
    STATUS      current
    DESCRIPTION
        "Count of corrected octets in this interval."
    REFERENCE   "T1E1.4/2000-009R3, Part 1, common spec"
    ::= { vdslChanPerfDataEntry 6 }

vdslChanCurr15MinBadBlks OBJECT-TYPE
    SYNTAX      HCPperfCurrentCount
    UNITS       "blocks"
```

Expires February 2, 2003

[Page 34]

```
MAX-ACCESS      read-only
STATUS          current
DESCRIPTION
    "Count of uncorrectable blocks in this interval."
REFERENCE       "T1E1.4/2000-009R3, Part 1, common spec"
 ::= { vdslChanPerfDataEntry 7 }

vdslChan1DayValidIntervals OBJECT-TYPE
SYNTAX          HCPperfValidIntervals
MAX-ACCESS      read-only
STATUS          current
DESCRIPTION
    "Valid Intervals per definition found in
    HC-PerfHist-TC-MIB."
 ::= { vdslChanPerfDataEntry 8 }

vdslChan1DayInvalidIntervals OBJECT-TYPE
SYNTAX          HCPperfInvalidIntervals
MAX-ACCESS      read-only
STATUS          current
DESCRIPTION
    "Invalid Intervals per definition found in
    HC-PerfHist-TC-MIB."
 ::= { vdslChanPerfDataEntry 9 }

vdslChanCurr1DayTimeElapsed OBJECT-TYPE
SYNTAX          HCPperfTimeElapsed
UNITS           "seconds"
MAX-ACCESS      read-only
STATUS          current
DESCRIPTION
    "Number of seconds that have elapsed since the beginning
    of the current 1-day interval."
 ::= { vdslChanPerfDataEntry 10 }

vdslChanCurr1DayFixedOctets OBJECT-TYPE
SYNTAX          HCPperfCurrentCount
UNITS           "octets"
MAX-ACCESS      read-only
STATUS          current
DESCRIPTION
    "Count of corrected octets since the beginning of the
    current 1-day interval."
REFERENCE       "T1E1.4/2000-009R3, Part 1, common spec"
 ::= { vdslChanPerfDataEntry 11 }

vdslChanCurr1DayBadBlks OBJECT-TYPE
SYNTAX          HCPperfCurrentCount
UNITS           "blocks"
MAX-ACCESS      read-only
STATUS          current
DESCRIPTION
    "Count of uncorrectable blocks since the beginning of the
```

Expires February 2, 2003

[Page 35]

current 1-day interval."

REFERENCE "T1E1.4/2000-009R3, Part 1, common spec"

::= { vdslChanPerfDataEntry 12 }

vdslChanIntervalTable OBJECT-TYPE
 SYNTAX SEQUENCE OF VdslChanIntervalEntry
 MAX-ACCESS not-accessible
 STATUS current
 DESCRIPTION
 "This table provides one row for each Vtu channel data collection interval. VDSL channel interfaces are those ifEntries where ifType is equal to interleave(124) or fast(125)."
 ::= { vdslMibObjects 8 }

vdslChanIntervalEntry OBJECT-TYPE
 SYNTAX VdslChanIntervalEntry
 MAX-ACCESS not-accessible
 STATUS current
 DESCRIPTION
 "An entry in the vdslChanIntervalTable."
 INDEX { ifIndex,
 vdslPhysSide,
 vdslChanIntervalNumber }
 ::= { vdslChanIntervalTable 1 }

VdslChanIntervalEntry ::= SEQUENCE
 {
 vdslChanIntervalNumber Unsigned32,
 vdslChanIntervalFixedOctets HCPperfIntervalCount,
 vdslChanIntervalBadBlks HCPperfIntervalCount
 }

vdslChanIntervalNumber OBJECT-TYPE
 SYNTAX Unsigned32 (1..96)
 MAX-ACCESS not-accessible
 STATUS current
 DESCRIPTION
 "Performance Data Interval number 1 is the most recent previous interval; interval 96 is 24 hours ago. Intervals 2 to 96 are optional."
 ::= { vdslChanIntervalEntry 1 }

vdslChanIntervalFixedOctets OBJECT-TYPE
 SYNTAX HCPperfIntervalCount
 UNITS "octets"
 MAX-ACCESS read-only
 STATUS current
 DESCRIPTION
 "Count of corrected octets in this interval."
 REFERENCE "T1E1.4/2000-009R3, Part 1, common spec"
 ::= { vdslChanIntervalEntry 2 }

Expires February 2, 2003

[Page 36]

vdslChanIntervalBadBlks OBJECT-TYPE

SYNTAX HCPperfIntervalCount
 UNITS "blocks"
 MAX-ACCESS read-only
 STATUS current
 DESCRIPTION
 "Count of uncorrectable blocks in this interval."
 REFERENCE "T1E1.4/2000-009R3, Part 1, common spec"
 ::= { vdslChanIntervalEntry 3 }

vdslChan1DayIntervalTable OBJECT-TYPE

SYNTAX SEQUENCE OF VdslChan1DayIntervalEntry
 MAX-ACCESS not-accessible
 STATUS current
 DESCRIPTION
 "This table provides one row for each VDSL performance
 data collection interval. This table contains live data
 from equipment. As such, it is NOT persistent."
 ::= { vdslMibObjects 9 }

vdslChan1DayIntervalEntry OBJECT-TYPE

SYNTAX VdslChan1DayIntervalEntry
 MAX-ACCESS not-accessible
 STATUS current
 DESCRIPTION
 "An entry in the vdslChan1DayIntervalTable."
 INDEX { ifIndex,
 vdslPhysSide,
 vdslChan1DayIntervalNumber }
 ::= { vdslChan1DayIntervalTable 1 }

VdslChan1DayIntervalEntry ::=

SEQUENCE
 {
 vdslChan1DayIntervalNumber Unsigned32,
 vdslChan1DayIntervalMoniSecs HCPperfTimeElapsed,
 vdslChan1DayIntervalFixedOctets HCPperfCurrentCount,
 vdslChan1DayIntervalBadBlks HCPperfCurrentCount
 }

vdslChan1DayIntervalNumber OBJECT-TYPE

SYNTAX Unsigned32 (1..30)
 MAX-ACCESS not-accessible
 STATUS current
 DESCRIPTION
 "History Data Interval number. Interval 1 is the most
 recent previous day; interval 30 is 30 days ago. Intervals
 2 to 30 are optional."
 ::= { vdslChan1DayIntervalEntry 1 }

vdslChan1DayIntervalMoniSecs OBJECT-TYPE

SYNTAX HCPperfTimeElapsed

Expires February 2, 2003

[Page 37]

```
UNITS          "seconds"
MAX-ACCESS     read-only
STATUS         current
DESCRIPTION    "The amount of time in the 1-day interval over which the
               performance monitoring information is actually counted.
               This value will be the same as the interval duration except
               in a situation where performance monitoring data could not
               be collected for any reason."
 ::= { vdslChan1DayIntervalEntry 2 }

vdslChan1DayIntervalFixedOctets OBJECT-TYPE
SYNTAX         HCPperfCurrentCount
UNITS          "octets"
MAX-ACCESS     read-only
STATUS         current
DESCRIPTION    "Count of corrected octets in this interval."
REFERENCE     "T1E1.4/2000-009R3, Part 1, common spec"
 ::= { vdslChan1DayIntervalEntry 3 }

vdslChan1DayIntervalBadBlks OBJECT-TYPE
SYNTAX         HCPperfCurrentCount
UNITS          "blocks"
MAX-ACCESS     read-only
STATUS         current
DESCRIPTION    "Count of uncorrectable blocks in this interval."
REFERENCE     "T1E1.4/2000-009R3, Part 1, common spec"
 ::= { vdslChan1DayIntervalEntry 4 }

--
-- profile tables
--

vdslLineConfProfileTable OBJECT-TYPE
SYNTAX         SEQUENCE OF VdslLineConfProfileEntry
MAX-ACCESS     not-accessible
STATUS         current
DESCRIPTION    "This table contains information on the VDSL line
               configuration. One entry in this table reflects a
               profile defined by a manager which can be used to
               configure the VDSL line.

               Entries in this table MUST be maintained in a
               persistent manner."
 ::= { vdslMibObjects 11 }

vdslLineConfProfileEntry OBJECT-TYPE
SYNTAX         VdslLineConfProfileEntry
MAX-ACCESS     not-accessible
STATUS         current
```

Expires February 2, 2003

[Page 38]

DESCRIPTION

"Each entry consists of a list of parameters that represents the configuration of a VDSL line.

A default profile with an index of 'DEFVAL', will always exist and its parameters will be set to vendor specific values, unless otherwise specified in this document."

```
INDEX { vdslLineConfProfileName }
      ::= { vdslLineConfProfileTable 1 }
```

```
VdslLineConfProfileEntry ::=
```

```
SEQUENCE
```

```
{
  vdslLineConfProfileName          SnmpAdminString,
  vdslLineConfDownRateMode        INTEGER,
  vdslLineConfUpRateMode          INTEGER,
  vdslLineConfDownMaxPwr          Unsigned32,
  vdslLineConfUpMaxPwr            Unsigned32,
  vdslLineConfDownMaxSnrMgn       Unsigned32,
  vdslLineConfDownMinSnrMgn       Unsigned32,
  vdslLineConfDownTargetSnrMgn    Unsigned32,
  vdslLineConfUpMaxSnrMgn         Unsigned32,
  vdslLineConfUpMinSnrMgn         Unsigned32,
  vdslLineConfUpTargetSnrMgn      Unsigned32,
  vdslLineConfDownFastMaxDataRate Unsigned32,
  vdslLineConfDownFastMinDataRate Unsigned32,
  vdslLineConfDownSlowMaxDataRate Unsigned32,
  vdslLineConfDownSlowMinDataRate Unsigned32,
  vdslLineConfUpFastMaxDataRate   Unsigned32,
  vdslLineConfUpFastMinDataRate   Unsigned32,
  vdslLineConfUpSlowMaxDataRate   Unsigned32,
  vdslLineConfUpSlowMinDataRate   Unsigned32,
  vdslLineConfDownRateRatio       Unsigned32,
  vdslLineConfUpRateRatio         Unsigned32,
  vdslLineConfDownMaxInterDelay   Unsigned32,
  vdslLineConfUpMaxInterDelay     Unsigned32,
  vdslLineConfDownPboControl      INTEGER,
  vdslLineConfUpPboControl        INTEGER,
  vdslLineConfDownPboLevel        Unsigned32,
  vdslLineConfUpPboLevel          Unsigned32,
  vdslLineConfDeploymentScenario   INTEGER,
  vdslLineConfAdslPresence        INTEGER,
  vdslLineConfApplicableStandard  INTEGER,
  vdslLineConfBandPlan            INTEGER,
  vdslLineConfBandPlanFx          Unsigned32,
  vdslLineConfBandOptUsage        INTEGER,
  vdslLineConfUpPsdTemplate        INTEGER,
  vdslLineConfDownPsdTemplate     INTEGER,
  vdslLineConfHamBandMask         BITS,
  vdslLineConfCustomNotch1Start    Unsigned32,
  vdslLineConfCustomNotch1Stop    Unsigned32,
  vdslLineConfCustomNotch2Start    Unsigned32,
```

Expires February 2, 2003

[Page 39]

```

vdslLineConfCustomNotch2Stop      Unsigned32,
vdslLineConfDownTargetSlowBurst  Unsigned32,
vdslLineConfUpTargetSlowBurst    Unsigned32,
vdslLineConfDownMaxFastFec       Unsigned32,
vdslLineConfUpMaxFastFec         Unsigned32,
vdslLineConfLineType             INTEGER,
vdslLineConfProfRowStatus        RowStatus
}

```

vdslLineConfProfileName OBJECT-TYPE

```

SYNTAX      SnmpAdminString (SIZE (1..32))
MAX-ACCESS  not-accessible
STATUS      current
DESCRIPTION

```

"This object identifies a row in this table.

A default profile with an index of 'DEFVAL', will always exist and its parameters will be set to vendor specific values, unless otherwise specified in this document."

```
 ::= { vdslLineConfProfileEntry 1 }
```

vdslLineConfDownRateMode OBJECT-TYPE

```

SYNTAX      INTEGER
            {
              manual(1),
              adaptAtInit(2)
            }
MAX-ACCESS  read-create
STATUS      current
DESCRIPTION

```

"Specifies the rate selection behavior for the line in the downstream direction.

manual(1) forces the rate to the configured rate
 adaptAtInit(2) adapts the line based upon line quality."

```
DEFVAL      { adaptAtInit }
```

```
 ::= { vdslLineConfProfileEntry 2 }
```

vdslLineConfUpRateMode OBJECT-TYPE

```

SYNTAX      INTEGER
            {
              manual(1),
              adaptAtInit(2)
            }
MAX-ACCESS  read-create
STATUS      current
DESCRIPTION

```

"Specifies the rate selection behavior for the line in the upstream direction.

manual(1) forces the rate to the configured rate
 adaptAtInit(2) adapts the line based upon line quality."

Expires February 2, 2003

[Page 40]


```
DEFVAL      { adaptAtInit }
 ::= { vdslLineConfProfileEntry 3 }

vdslLineConfDownMaxPwr OBJECT-TYPE
SYNTAX      Unsigned32 (0..58)
UNITS       "0.25dBm"
MAX-ACCESS  read-create
STATUS      current
DESCRIPTION
    "Specifies the maximum aggregate downstream power
     level in the range 0 to 14.5 dBm."
REFERENCE   "T1E1.4/2000-009R3, Part 1, common spec"
DEFVAL      { 0 }
 ::= { vdslLineConfProfileEntry 4 }

vdslLineConfUpMaxPwr OBJECT-TYPE
SYNTAX      Unsigned32 (0..58)
UNITS       "0.25dBm"
MAX-ACCESS  read-create
STATUS      current
DESCRIPTION
    "Specifies the maximum aggregate upstream power
     level in the range 0 to 14.5 dBm."
REFERENCE   "T1E1.4/2000-009R3, Part 1, common spec"
DEFVAL      { 0 }
 ::= { vdslLineConfProfileEntry 5 }

vdslLineConfDownMaxSnrMgn OBJECT-TYPE
SYNTAX      Unsigned32 (0..127)
UNITS       "0.25dBm"
MAX-ACCESS  read-create
STATUS      current
DESCRIPTION
    "Specifies the maximum downstream Signal/Noise Margin
     in units of 0.25 dB, for a range of 0 to 31.75 dB."
REFERENCE   "T1E1.4/2000-009R3, Part 1, common spec"
DEFVAL      { 0 }
 ::= { vdslLineConfProfileEntry 6 }

vdslLineConfDownMinSnrMgn OBJECT-TYPE
SYNTAX      Unsigned32 (0..127)
UNITS       "0.25dBm"
MAX-ACCESS  read-create
STATUS      current
DESCRIPTION
    "Specifies the minimum downstream Signal/Noise Margin
     in units of 0.25 dB, for a range of 0 to 31.75 dB."
REFERENCE   "T1E1.4/2000-009R3, Part 1, common spec"
DEFVAL      { 0 }
 ::= { vdslLineConfProfileEntry 7 }

vdslLineConfDownTargetSnrMgn OBJECT-TYPE
SYNTAX      Unsigned32 (0..127)
```

Expires February 2, 2003

[Page 41]

```
UNITS          "0.25dBm"
MAX-ACCESS    read-create
STATUS        current
DESCRIPTION   "Specifies the target downstream Signal/Noise Margin
              in units of 0.25 dB, for a range of 0 to 31.75 dB.
              This is the Noise Margin the transceivers must achieve
              with a BER of 10^-7 or better to successfully complete
              initialization."
REFERENCE     "T1E1.4/2000-009R3, Part 1, common spec"
DEFVAL        { 0 }
 ::= { vdslLineConfProfileEntry 8 }

vdslLineConfUpMaxSnrMgn OBJECT-TYPE
SYNTAX        Unsigned32 (0..127)
UNITS          "0.25dBm"
MAX-ACCESS    read-create
STATUS        current
DESCRIPTION   "Specifies the maximum upstream Signal/Noise Margin
              in units of 0.25 dB, for a range of 0 to 31.75 dB."
REFERENCE     "T1E1.4/2000-009R3, Part 1, common spec"
DEFVAL        { 0 }
 ::= { vdslLineConfProfileEntry 9 }

vdslLineConfUpMinSnrMgn OBJECT-TYPE
SYNTAX        Unsigned32 (0..127)
UNITS          "0.25dBm"
MAX-ACCESS    read-create
STATUS        current
DESCRIPTION   "Specifies the minimum upstream Signal/Noise Margin
              in units of 0.25 dB, for a range of 0 to 31.75 dB."
REFERENCE     "T1E1.4/2000-009R3, Part 1, common spec"
DEFVAL        { 0 }
 ::= { vdslLineConfProfileEntry 10 }

vdslLineConfUpTargetSnrMgn OBJECT-TYPE
SYNTAX        Unsigned32 (0..127)
UNITS          "0.25dBm"
MAX-ACCESS    read-create
STATUS        current
DESCRIPTION   "Specifies the target upstream Signal/Noise Margin in
              units of 0.25 dB, for a range of 0 to 31.75 dB. This
              is the Noise Margin the transceivers must achieve with
              a BER of 10^-7 or better to successfully complete
              initialization."
REFERENCE     "T1E1.4/2000-009R3, Part 1, common spec"
DEFVAL        { 0 }
 ::= { vdslLineConfProfileEntry 11 }

vdslLineConfDownFastMaxDataRate OBJECT-TYPE
```

Expires February 2, 2003

[Page 42]

```
SYNTAX      Unsigned32
UNITS       "kbps"
MAX-ACCESS  read-create
STATUS      current
DESCRIPTION
    "Specifies the maximum downstream fast channel
    data rate in steps of 1000 bits/second."
DEFVAL      { 0 }
 ::= { vdslLineConfProfileEntry 12 }
```

vdslLineConfDownFastMinDataRate OBJECT-TYPE

```
SYNTAX      Unsigned32
UNITS       "kbps"
MAX-ACCESS  read-create
STATUS      current
DESCRIPTION
    "Specifies the minimum downstream fast channel
    data rate in steps of 1000 bits/second."
DEFVAL      { 0 }
 ::= { vdslLineConfProfileEntry 13 }
```

vdslLineConfDownSlowMaxDataRate OBJECT-TYPE

```
SYNTAX      Unsigned32
UNITS       "kbps"
MAX-ACCESS  read-create
STATUS      current
DESCRIPTION
    "Specifies the maximum downstream slow channel
    data rate in steps of 1000 bits/second."

    The maximum aggregate downstream transmit speed
    of the line can be derived from the sum of maximum
    downstream fast and slow channel data rates."
DEFVAL      { 0 }
 ::= { vdslLineConfProfileEntry 14 }
```

vdslLineConfDownSlowMinDataRate OBJECT-TYPE

```
SYNTAX      Unsigned32
UNITS       "kbps"
MAX-ACCESS  read-create
STATUS      current
DESCRIPTION
    "Specifies the minimum downstream slow channel
    data rate in steps of 1000 bits/second."

    The minimum aggregate downstream transmit speed
    of the line can be derived from the sum of minimum
    downstream fast and slow channel data rates."
DEFVAL      { 0 }
 ::= { vdslLineConfProfileEntry 15 }
```

vdslLineConfUpFastMaxDataRate OBJECT-TYPE

```
SYNTAX      Unsigned32
```

Expires February 2, 2003

[Page 43]

```
UNITS          "kbps"
MAX-ACCESS    read-create
STATUS        current
DESCRIPTION   "Specifies the maximum upstream fast channel
              data rate in steps of 1000 bits/second.

              The maximum aggregate upstream transmit speed
              of the line can be derived from the sum of maximum
              upstream fast and slow channel data rates."
DEFVAL        { 0 }
 ::= { vdslLineConfProfileEntry 16 }

vdslLineConfUpFastMinDataRate OBJECT-TYPE
SYNTAX        Unsigned32
UNITS          "kbps"
MAX-ACCESS    read-create
STATUS        current
DESCRIPTION   "Specifies the minimum upstream fast channel
              data rate in steps of 1000 bits/second.

              The minimum aggregate upstream transmit speed
              of the line can be derived from the sum of minimum
              upstream fast and slow channel data rates."
DEFVAL        { 0 }
 ::= { vdslLineConfProfileEntry 17 }

vdslLineConfUpSlowMaxDataRate OBJECT-TYPE
SYNTAX        Unsigned32
UNITS          "kbps"
MAX-ACCESS    read-create
STATUS        current
DESCRIPTION   "Specifies the maximum upstream slow channel
              data rate in steps of 1000 bits/second."
DEFVAL        { 0 }
 ::= { vdslLineConfProfileEntry 18 }

vdslLineConfUpSlowMinDataRate OBJECT-TYPE
SYNTAX        Unsigned32
UNITS          "kbps"
MAX-ACCESS    read-create
STATUS        current
DESCRIPTION   "Specifies the minimum upstream slow channel
              data rate in steps of 1000 bits/second."
DEFVAL        { 0 }
 ::= { vdslLineConfProfileEntry 19 }

vdslLineConfDownRateRatio OBJECT-TYPE
SYNTAX        Unsigned32 (0..100)
UNITS          "percent"
```

Expires February 2, 2003

[Page 44]


```
MAX-ACCESS    read-create
STATUS        current
DESCRIPTION
    "For dynamic rate adaptation at startup, the allocation
    of data rate in excess of the minimum data rate for each
    channel is controlled by the object. This object specifies
    the ratio of the allocation of the excess data rate between
    the fast and the slow channels. This allocation represents
    downstream Fast Channel Allocation / Slow Channel
    Allocation."
DEFVAL        { 0 }
 ::= { vdslLineConfProfileEntry 20 }

vdslLineConfUpRateRatio OBJECT-TYPE
SYNTAX        Unsigned32 (0..100)
UNITS         "percent"
MAX-ACCESS    read-create
STATUS        current
DESCRIPTION
    "For dynamic rate adaptation at startup, the allocation
    of data rate in excess of the minimum data rate for each
    channel is controlled by the object. This object specifies
    the ratio of the allocation of the excess data rate between
    the fast and the slow channels. This allocation represents
    upstream Fast Channel Allocation/Slow Channel Allocation."
DEFVAL        { 0 }
 ::= { vdslLineConfProfileEntry 21 }

vdslLineConfDownMaxInterDelay OBJECT-TYPE
SYNTAX        Unsigned32 (0..255)
UNITS         "milliseconds"
MAX-ACCESS    read-create
STATUS        current
DESCRIPTION
    "Specifies the maximum interleave delay for the
    downstream slow channel."
DEFVAL        { 0 }
 ::= { vdslLineConfProfileEntry 22 }

vdslLineConfUpMaxInterDelay OBJECT-TYPE
SYNTAX        Unsigned32 (0..255)
UNITS         "milliseconds"
MAX-ACCESS    read-create
STATUS        current
DESCRIPTION
    "Specifies the maximum interleave delay for the
    upstream slow channel."
DEFVAL        { 0 }
 ::= { vdslLineConfProfileEntry 23 }

vdslLineConfDownPboControl OBJECT-TYPE
SYNTAX        INTEGER
              {
```

Expires February 2, 2003

[Page 45]

```
        disabled(1),
        auto(2),
        manual(3)
    }
MAX-ACCESS    read-create
STATUS        current
DESCRIPTION   "Downstream power backoff (PBO) control for this
line.  For transceivers which do not support downstream
PBO control, this object MUST be fixed at disabled(1).
If auto(2) is selected, the transceiver will automatically
adjust the power backoff.  If manual(3) is selected,
then the transceiver will use the value from
vdsLineConfDownPboLevel."
DEFVAL        { disabled }
 ::= { vdsLineConfProfileEntry 24 }

vdsLineConfUpPboControl OBJECT-TYPE
SYNTAX        INTEGER
              {
                disabled(1),
                auto(2),
                manual(3)
              }
MAX-ACCESS    read-create
STATUS        current
DESCRIPTION   "Upstream power backoff (PBO) control for this
line.  For transceivers which do not support upstream
PBO control, this object MUST be fixed at disabled(1).
If auto(2) is selected, the transceiver will automatically
adjust the power backoff.  If manual(3) is selected,
then the transceiver will use the value from
vdsLineConfUpPboLevel."
DEFVAL        { disabled }
 ::= { vdsLineConfProfileEntry 25 }

vdsLineConfDownPboLevel OBJECT-TYPE
SYNTAX        Unsigned32 (0..160)
UNITS         "0.25dB"
MAX-ACCESS    read-create
STATUS        current
DESCRIPTION   "Specifies the downstream backoff level to be used
when vdsLineConfDownPboControl = manual(3)."
DEFVAL        { 0 }
 ::= { vdsLineConfProfileEntry 26 }

vdsLineConfUpPboLevel OBJECT-TYPE
SYNTAX        Unsigned32 (0..160)
UNITS         "0.25dB"
MAX-ACCESS    read-create
STATUS        current
```

Expires February 2, 2003

[Page 46]

DESCRIPTION

"Specifies the upstream backoff level to be used when vdsLineConfUpPboControl = manual(3)."

DEFVAL { 0 }

::= { vdsLineConfProfileEntry 27 }

vdsLineConfDeploymentScenario OBJECT-TYPE

SYNTAX INTEGER

{
fttCab(1),
fttEx(2),
other(3)
}

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The VDSL line deployment scenario. When using fttCab(1), the VTU-C is located in a street cabinet. When using fttEx(2), the VTU-C is located at the central office. Changes to this value will have no effect on the transceiver."

REFERENCE "DSL Forum TR-057"

DEFVAL { fttCab }

::= { vdsLineConfProfileEntry 28 }

vdsLineConfAdslPresence OBJECT-TYPE

SYNTAX INTEGER

{
none(1),
adslOverPots(2),
adslOverISDN(3)
}

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Indicates presence of ADSL service in the associated cable bundle/binder.

none(1) indicates no ADSL service in the bundle
adslOverPots(2) indicates ADSL service over POTS is present in the bundle
adslOverISDN(3) indicates ADSL service over ISDN is present in the bundle"

DEFVAL { none }

::= { vdsLineConfProfileEntry 29 }

vdsLineConfApplicableStandard OBJECT-TYPE

SYNTAX INTEGER

{
ansi(1),
etsi(2),
itu(3),
other(4)
}

Expires February 2, 2003

[Page 47]

```

    }
MAX-ACCESS    read-create
STATUS        current
DESCRIPTION   "The VDSL standard to be used for the line.

               ansi(1)      indicates ANSI standard
               etsi(2)      indicates ETSI standard
               itu(3)        indicates ITU standard
               other(4)      indicates a standard other than the above."
DEFVAL        { ansi }
 ::= { vdslLineConfProfileEntry 30 }

```

vdslLineConfBandPlan OBJECT-TYPE

```

SYNTAX        INTEGER
               {
                 bandPlan997(1),
                 bandPlan998(2),
                 bandPlanFx(3),
                 other(4)
               }
MAX-ACCESS    read-create
STATUS        current
DESCRIPTION   "The VDSL band plan to be used for the line.

               bandPlan997(1) is to be used for
                 ITU-T G.993.1 Bandplan-B
                 ETSI Bandplan
                 ANSI Plan 997

               bandPlan998(2) is to be used for
                 ITU-T G.993.1 Bandplan-A
                 ANSI Plan 998

               bandPlanFx(3) is to be used for
                 ITU-T G.993.1 Bandplan-C.

               other(4) is to be used for
                 non-standard bandplans.

               If this object is set to bandPlanFx(3), then the
               object vdslLineConfBandPlanFx MUST also be set."
DEFVAL        { bandPlan997 }
 ::= { vdslLineConfProfileEntry 31 }

```

vdslLineConfBandPlanFx OBJECT-TYPE

```

SYNTAX        Unsigned32 (3750..12000)
UNITS         "kHz"
MAX-ACCESS    read-create
STATUS        current
DESCRIPTION   "The frequency limit between bands D2 and U2 when

```

Expires February 2, 2003

[Page 48]


```
        vdslLineConfBandPlan is set to bandPlanFx(3)."  
DEFVAL      { 3750 }  
 ::= { vdslLineConfProfileEntry 32 }  
  
vdslLineConfBandOptUsage OBJECT-TYPE  
SYNTAX      INTEGER  
            {  
            unused(1),  
            upstream(2),  
            downstream(3)  
            }  
MAX-ACCESS  read-create  
STATUS      current  
DESCRIPTION  
            "Defines the VDSL link use of the optional frequency  
            range [25kHz - 138kHz] (Opt).  
  
            unused(1)    indicates Opt is unused  
            upstream(2)  indicates Opt usage is for upstream  
            downstream(3) indicates Opt usage is for downstream."  
REFERENCE   "ITU-T G.993.1, section 6.1"  
DEFVAL      { unused }  
 ::= { vdslLineConfProfileEntry 33 }  
  
vdslLineConfUpPsdTemplate OBJECT-TYPE  
SYNTAX      INTEGER  
            {  
            templateMask1(1),  
            templateMask2(2)  
            }  
MAX-ACCESS  read-create  
STATUS      current  
DESCRIPTION  
            "The upstream PSD template to be used for the line.  
            Here, templateMask1(1) refers to a notched mask that  
            limits the transmitted PSD within the internationally  
            standardized HAM (Handheld Amateur Radio) radio bands,  
            while templateMask2(2) refers to an unnotched mask.  
  
            The masks themselves depend upon the applicable  
            standard being used (vdslLineConfApplicableStandard)."  
REFERENCE   "DSL TR-057"  
DEFVAL      { templateMask1 }  
 ::= { vdslLineConfProfileEntry 34 }  
  
vdslLineConfDownPsdTemplate OBJECT-TYPE  
SYNTAX      INTEGER  
            {  
            templateMask1(1),  
            templateMask2(2)  
            }  
MAX-ACCESS  read-create  
STATUS      current
```

Expires February 2, 2003

[Page 49]

DESCRIPTION

"The downstream PSD template to be used for the line. Here, templateMask1(1) refers to a notched mask that limits the transmitted PSD within the internationally standardized HAM (Handheld Amateur Radio) radio bands, while templateMask2(2) refers to an unnotched mask.

The masks themselves depend upon the applicable standard being used (vdslLineConfApplicableStandard)."

REFERENCE "DSL TR-057"
DEFVAL { templateMask1 }
::= { vdslLineConfProfileEntry 35 }

vdslLineConfHamBandMask OBJECT-TYPE

SYNTAX BITS
{
 customNotch1(0), -- custom (region-specific) notch
 customNotch2(1), -- custom (region-specific) notch
 amateurBand30m(2), -- amateur radio band notch
 amateurBand40m(3), -- amateur radio band notch
 amateurBand80m(4), -- amateur radio band notch
 amateurBand160m(5) -- amateur radio band notch
}

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The transmit power spectral density mask code, used to avoid interference with HAM (Handheld Amateur Radio) radio bands by introducing power control (notching) in one or more of these bands.

Amateur radio band notching is defined in the VDSL spectrum as follows:

Band	Start Frequency	Stop Frequency
30m	1810 kHz	2000 kHz
40m	3500 kHz	3800 kHz (ETSI); 4000 kHz (ANSI)
80m	7000 kHz	7100 kHz (ETSI); 7300 kHz (ANSI)
160m	10100 kHz	10150 kHz

Notching for each standard band can be enabled or disabled via the bit mask.

Two custom notches may be specified. If either of these are enabled via the bit mask, then the following objects MUST be specified:

If customNotch1 is enabled, then both
 vdslLineConfCustomNotch1Start
 vdslLineConfCustomNotch1Stop
 MUST be specified.

Expires February 2, 2003

[Page 50]

If customNotch2 is enabled, then both
vdsllineConfCustomNotch2Start
vdsllineConfCustomNotch2Stop
MUST be specified."

REFERENCE "DSLFR-057, [section 2.6](#)"

DEFVAL { { } }

::= { vdsllineConfProfileEntry 36 }

vdsllineConfCustomNotch1Start OBJECT-TYPE

SYNTAX Unsigned32

UNITS "kHz"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Specifies the start frequency of custom HAM (Handheld
Amateur Radio) notch 1. vdsllineConfCustomNotch1Start MUST
be less than or equal to vdsllineConfCustomNotch1Stop."

DEFVAL { 0 }

::= { vdsllineConfProfileEntry 37 }

vdsllineConfCustomNotch1Stop OBJECT-TYPE

SYNTAX Unsigned32

UNITS "kHz"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Specifies the stop frequency of custom HAM (Handheld
Amateur Radio) notch 1. vdsllineConfCustomNotch1Stop MUST
be greater than or equal to vdsllineConfCustomNotch1Start."

DEFVAL { 0 }

::= { vdsllineConfProfileEntry 38 }

vdsllineConfCustomNotch2Start OBJECT-TYPE

SYNTAX Unsigned32

UNITS "kHz"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Specifies the start frequency of custom HAM (Handheld
Amateur Radio) notch 2. vdsllineConfCustomNotch2Start MUST
be less than or equal to vdsllineConfCustomNotch2Stop."

DEFVAL { 0 }

::= { vdsllineConfProfileEntry 39 }

vdsllineConfCustomNotch2Stop OBJECT-TYPE

SYNTAX Unsigned32

UNITS "kHz"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Specifies the stop frequency of custom HAM (Handheld
Amateur Radio) notch 2. vdsllineConfCustomNotch2Stop MUST
be greater than or equal to vdsllineConfCustomNotch2Start."

Expires February 2, 2003

[Page 51]

```
DEFVAL      { 0 }
 ::= { vdslLineConfProfileEntry 40 }

vdslLineConfDownTargetSlowBurst OBJECT-TYPE
SYNTAX      Unsigned32 (0..1275)
UNITS       "microseconds"
MAX-ACCESS  read-create
STATUS      current
DESCRIPTION
    "Specifies the target level of impulse noise (burst)
    protection for an interleaved (slow) channel."
REFERENCE   "ITU-T G.997.1, section 7.3.2.3"
DEFVAL      { 0 }
 ::= { vdslLineConfProfileEntry 41 }

vdslLineConfUpTargetSlowBurst OBJECT-TYPE
SYNTAX      Unsigned32 (0..1275)
UNITS       "microseconds"
MAX-ACCESS  read-create
STATUS      current
DESCRIPTION
    "Specifies the target level of impulse noise (burst)
    protection for an interleaved (slow) channel."
REFERENCE   "ITU-T G.997.1, section 7.3.2.3"
DEFVAL      { 0 }
 ::= { vdslLineConfProfileEntry 42 }

vdslLineConfDownMaxFastFec OBJECT-TYPE
SYNTAX      Unsigned32 (0..50)
UNITS       "%"
MAX-ACCESS  read-create
STATUS      current
DESCRIPTION
    "This parameter provisions the maximum level of Forward
    Error Correction (FEC) redundancy related overhead to
    be maintained for a fast channel."
DEFVAL      { 0 }
 ::= { vdslLineConfProfileEntry 43 }

vdslLineConfUpMaxFastFec OBJECT-TYPE
SYNTAX      Unsigned32 (0..50)
UNITS       "%"
MAX-ACCESS  read-create
STATUS      current
DESCRIPTION
    "This parameter provisions the maximum level of Forward
    Error Correction (FEC) redundancy related overhead to
    be maintained for a fast channel."
DEFVAL      { 0 }
 ::= { vdslLineConfProfileEntry 44 }

vdslLineConfLineType OBJECT-TYPE
SYNTAX      INTEGER
```

Expires February 2, 2003

[Page 52]


```

    {
    noChannel(1),          -- no channels exist
    fastOnly(2),          -- only fast channel exists
    interleavedOnly(3),   -- only interleaved channel exists
    fastOrInterleaved(4), -- either fast or interleaved channel
                          -- exist, but only one at a time
    fastAndInterleaved(5) -- both fast and interleaved channels
                          -- exist
    }

```

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"This parameter provisions the VDSL physical entity at start-up by defining whether and how the line will be channelized, i.e. which channel type(s) are supported. If the line is to be channelized, the value will be other than noChannel(1).

This configuration can be activated only during start-up. Afterwards, the value of vdslLineType coincides with the value of vdslLineConfLineType. Depending on this value, the corresponding entries in the ifTable for the interleaved and the fast channels are enabled or disabled according to the value of their ifOperStatus.

Defined values are:

```

noChannel(1)          -- no channels exist
fastOnly(2)          -- only fast channel exists
interleavedOnly(3)   -- only interleaved channel exists
fastOrInterleaved(4) -- either fast or interleaved channel
                      -- exists, but only one at a time
fastAndInterleaved(5) -- both fast and interleaved channels
                      -- exist

```

Note that 'slow' and 'interleaved' refer to the same channel."

REFERENCE "T1E1.4/2000-009R3, Part 1, common spec"

DEFVAL { noChannel }

::= { vdslLineConfProfileEntry 45 }

vdslLineConfProfRowStatus OBJECT-TYPE

SYNTAX RowStatus

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"This object is used to create a new row or modify or delete an existing row in this table.

A profile activated by setting this object to 'active'. When 'active' is set, the system will validate the profile.

Before a profile can be deleted or taken out of service

Expires February 2, 2003

[Page 53]

(by setting this object to 'destroy' or 'outOfService'), it must be first unreferenced from all associated lines.

An 'active' profile may be modified at any time. Note that some changes may require that any referenced lines be restarted (e.g. vdslLineConfLineType)."

```
::= { vdslLineConfProfileEntry 46 }
```

```
--
```

```
-- Alarm configuration profile table
```

```
--
```

```
vdslLineAlarmConfProfileTable OBJECT-TYPE
```

```
SYNTAX SEQUENCE OF VdslLineAlarmConfProfileEntry
```

```
MAX-ACCESS not-accessible
```

```
STATUS current
```

```
DESCRIPTION
```

"This table contains information on the VDSL line alarm configuration. One entry in this table reflects a profile defined by a manager which can be used to configure the VDSL line alarm thresholds.

Entries in this table MUST be maintained in a persistent manner."

```
::= { vdslMibObjects 20 }
```

```
vdslLineAlarmConfProfileEntry OBJECT-TYPE
```

```
SYNTAX VdslLineAlarmConfProfileEntry
```

```
MAX-ACCESS not-accessible
```

```
STATUS current
```

```
DESCRIPTION
```

"Each entry consists of a list of parameters that represents the configuration of a VDSL line alarm profile.

A default profile with an index of 'DEFVAL', will always exist and its parameters will be set to vendor specific values, unless otherwise specified in this document."

```
INDEX { vdslLineAlarmConfProfileName }
```

```
::= { vdslLineAlarmConfProfileTable 1 }
```

```
VdslLineAlarmConfProfileEntry ::=
```

```
SEQUENCE
```

```
{
```

vdslLineAlarmConfProfileName	SnmpAdminString,
vdslLineAlarmConfThresh15MinLofs	HCPerfIntervalThreshold,
vdslLineAlarmConfThresh15MinLoss	HCPerfIntervalThreshold,
vdslLineAlarmConfThresh15MinLprs	HCPerfIntervalThreshold,
vdslLineAlarmConfThresh15MinLols	HCPerfIntervalThreshold,
vdslLineAlarmConfThresh15MinESS	HCPerfIntervalThreshold,
vdslLineAlarmConfThresh15MinSESS	HCPerfIntervalThreshold,
vdslLineAlarmConfThresh15MinUASS	HCPerfIntervalThreshold,

Expires February 2, 2003

[Page 54]

```
    vdslLineAlarmConfInitFailure      TruthValue,
    vdslLineAlarmConfProfRowStatus    RowStatus
}
```

vdslLineAlarmConfProfileName OBJECT-TYPE

```
SYNTAX      SnmpAdminString (SIZE (1..32))
MAX-ACCESS  not-accessible
STATUS      current
DESCRIPTION
    "The name for this profile as specified by an
    administrator."
 ::= { vdslLineAlarmConfProfileEntry 1 }
```

vdslLineAlarmConfThresh15MinLofs OBJECT-TYPE

```
SYNTAX      HCPperfIntervalThreshold
UNITS       "seconds"
MAX-ACCESS  read-create
STATUS      current
DESCRIPTION
    "This object configures the threshold for the number of
    loss of frame seconds (lofs) within any given 15-minute
    performance data collection interval.  If the value of
    loss of frame seconds in a particular 15-minute collection
    interval reaches/exceeds this value, a
    vdslPerfLofsThreshNotification notification will be
    generated.  No more than one notification will be sent
    per interval."
DEFVAL      { 0 }
 ::= { vdslLineAlarmConfProfileEntry 2 }
```

vdslLineAlarmConfThresh15MinLoss OBJECT-TYPE

```
SYNTAX      HCPperfIntervalThreshold
UNITS       "seconds"
MAX-ACCESS  read-create
STATUS      current
DESCRIPTION
    "This object configures the threshold for the number of
    loss of signal seconds (loss) within any given 15-minute
    performance data collection interval.  If the value of
    loss of signal seconds in a particular 15-minute
    collection interval reaches/exceeds this value, a
    vdslPerfLossThreshNotification notification will be
    generated.  One notification will be sent per interval
    per endpoint."
DEFVAL      { 0 }
 ::= { vdslLineAlarmConfProfileEntry 3 }
```

vdslLineAlarmConfThresh15MinLprs OBJECT-TYPE

```
SYNTAX      HCPperfIntervalThreshold
UNITS       "seconds"
MAX-ACCESS  read-create
STATUS      current
DESCRIPTION
```

Expires February 2, 2003

[Page 55]

"This object configures the threshold for the number of loss of power seconds (lprs) within any given 15-minute performance data collection interval. If the value of loss of power seconds in a particular 15-minute collection interval reaches/exceeds this value, a vdslPerfLprsThreshNotification notification will be generated. No more than one notification will be sent per interval."

DEFVAL { 0 }

::= { vdslLineAlarmConfProfileEntry 4 }

vdslLineAlarmConfThresh15MinLols OBJECT-TYPE

SYNTAX HCPerfIntervalThreshold

UNITS "seconds"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"This object configures the threshold for the number of loss of link seconds (lols) within any given 15-minute performance data collection interval. If the value of loss of power seconds in a particular 15-minute collection interval reaches/exceeds this value, a vdslPerfLolsThreshNotification notification will be generated. No more than one notification will be sent per interval."

DEFVAL { 0 }

::= { vdslLineAlarmConfProfileEntry 5 }

vdslLineAlarmConfThresh15MinESs OBJECT-TYPE

SYNTAX HCPerfIntervalThreshold

UNITS "seconds"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"This object configures the threshold for the number of errored seconds (ESs) within any given 15-minute performance data collection interval. If the value of errored seconds in a particular 15-minute collection interval reaches/exceeds this value, a vdslPerfESsThreshNotification notification will be generated. No more than one notification will be sent per interval."

DEFVAL { 0 }

::= { vdslLineAlarmConfProfileEntry 6 }

vdslLineAlarmConfThresh15MinSESSs OBJECT-TYPE

SYNTAX HCPerfIntervalThreshold

UNITS "seconds"

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"This object configures the threshold for the number of severely errored seconds (SESSs) within any given 15-minute

Expires February 2, 2003

[Page 56]

performance data collection interval. If the value of severely errored seconds in a particular 15-minute collection interval reaches/exceeds this value, a vdslPerfSESSThreshNotification notification will be generated. No more than one notification will be sent per interval."

DEFVAL { 0 }
 ::= { vdslLineAlarmConfProfileEntry 7 }

vdslLineAlarmConfThresh15MinUASs OBJECT-TYPE

SYNTAX HCPerfIntervalThreshold
UNITS "seconds"
MAX-ACCESS read-create
STATUS current
DESCRIPTION

"This object configures the threshold for the number of unavailable seconds (UASs) within any given 15-minute performance data collection interval. If the value of unavailable seconds in a particular 15-minute collection interval reaches/exceeds this value, a vdslPerfUASsThreshNotification notification will be generated. No more than one notification will be sent per interval."

DEFVAL { 0 }
 ::= { vdslLineAlarmConfProfileEntry 8 }

vdslLineAlarmConfInitFailure OBJECT-TYPE

SYNTAX TruthValue
MAX-ACCESS read-create
STATUS current
DESCRIPTION

"This object specifies if a vdslInitFailureNotification notification will be generated if an initialization failure occurs."

DEFVAL { false }
 ::= { vdslLineAlarmConfProfileEntry 9 }

vdslLineAlarmConfProfRowStatus OBJECT-TYPE

SYNTAX RowStatus
MAX-ACCESS read-create
STATUS current
DESCRIPTION

"This object is used to create a new row or modify or delete an existing row in this table.

A profile activated by setting this object to 'active'. When 'active' is set, the system will validate the profile.

Before a profile can be deleted or taken out of service, (by setting this object to 'destroy' or 'outOfService') it must be first unreferenced from all associated lines.

An 'active' profile may be modified at any time."

Expires February 2, 2003

[Page 57]

```
 ::= { vdslLineAlarmConfProfileEntry 10 }

-- Notification definitions

vdslNotifications OBJECT IDENTIFIER ::= { vdslLineMib 0 }

vdslPerfLofsThreshNotification NOTIFICATION-TYPE
    OBJECTS          {
                        vdslPerfDataCurr15MinLofs
                    }
    STATUS            current
    DESCRIPTION      "Loss of Framing 15-minute interval threshold
                    (vdslLineAlarmConfThresh15MinLofs) reached."
    ::= { vdslNotifications 1 }

vdslPerfLossThreshNotification NOTIFICATION-TYPE
    OBJECTS          {
                        vdslPerfDataCurr15MinLoss
                    }
    STATUS            current
    DESCRIPTION      "Loss of Signal 15-minute interval threshold
                    (vdslLineAlarmConfThresh15MinLoss) reached."
    ::= { vdslNotifications 2 }

vdslPerfLprsThreshNotification NOTIFICATION-TYPE
    OBJECTS          {
                        vdslPerfDataCurr15MinLprs
                    }
    STATUS            current
    DESCRIPTION      "Loss of Power 15-minute interval threshold
                    (vdslLineAlarmConfThresh15MinLprs) reached."
    ::= { vdslNotifications 3 }

vdslPerfLolsThreshNotification NOTIFICATION-TYPE
    OBJECTS          {
                        vdslPerfDataCurr15MinLols
                    }
    STATUS            current
    DESCRIPTION      "Loss of Link 15-minute interval threshold
                    (vdslLineAlarmConfThresh15MinLols) reached."
    ::= { vdslNotifications 4 }

vdslPerfESsThreshNotification NOTIFICATION-TYPE
    OBJECTS          {
                        vdslPerfDataCurr15MinESs
                    }
    STATUS            current
    DESCRIPTION      "Errored Seconds 15-minute interval threshold
```

Expires February 2, 2003

[Page 58]

```
    (vdslLineAlarmConfThresh15MinESs) reached."
 ::= { vdslNotifications 5 }
```

```
vdslPerfSESSsThreshNotification NOTIFICATION-TYPE
OBJECTS      {
                vdslPerfDataCurr15MinSESSs
            }
STATUS       current
DESCRIPTION  "Severely Errored Seconds 15-minute interval threshold
              (vdslLineAlarmConfThresh15MinSESSs) reached."
 ::= { vdslNotifications 6 }
```

```
vdslPerfUASsThreshNotification NOTIFICATION-TYPE
OBJECTS      {
                vdslPerfDataCurr15MinUASs
            }
STATUS       current
DESCRIPTION  "Unavailable Seconds 15-minute interval threshold
              (vdslLineAlarmConfThresh15MinUASs) reached."
 ::= { vdslNotifications 7 }
```

```
vdslDownMaxSnrMgnNotification NOTIFICATION-TYPE
OBJECTS      {
                vdslPhysCurrSnrMgn
            }
STATUS       current
DESCRIPTION  "The downstream Signal to Noise Margin exceeded
              vdslLineConfDownMaxSnrMgn. The object
              vdslPhysCurrSnrMgn will contain the Signal to Noise
              margin as measured by the VTU-R."
 ::= { vdslNotifications 8 }
```

```
vdslDownMinSnrMgnNotification NOTIFICATION-TYPE
OBJECTS      {
                vdslPhysCurrSnrMgn
            }
STATUS       current
DESCRIPTION  "The downstream Signal to Noise Margin fell below
              vdslLineConfDownMinSnrMgn. The object vdslPhysCurrSnrMgn
              will contain the Signal to Noise margin as measured by
              the VTU-R."
 ::= { vdslNotifications 9 }
```

```
vdslUpMaxSnrMgnNotification NOTIFICATION-TYPE
OBJECTS      {
                vdslPhysCurrSnrMgn
            }
STATUS       current
DESCRIPTION
```

Expires February 2, 2003

[Page 59]

```

    "The upstream Signal to Noise Margin exceeded
    vdslLineConfUpMaxSnrMgn. The object vdslPhysCurrSnrMgn
    will contain the Signal to Noise margin as measured
    by the VTU-C."
 ::= { vdslNotifications 10 }

vdslUpMinSnrMgnNotification NOTIFICATION-TYPE
OBJECTS      {
              vdslPhysCurrSnrMgn
            }
STATUS      current
DESCRIPTION
    "The upstream Signal to Noise Margin fell below
    vdslLineConfUpMinSnrMgn. The object vdslPhysCurrSnrMgn
    will contain the Signal to Noise margin as measured
    by the VTU-C."
 ::= { vdslNotifications 11 }

vdslInitFailureNotification NOTIFICATION-TYPE
OBJECTS      {
              vdslPhysCurrStatus
            }
STATUS      current
DESCRIPTION
    "Vtu initialization failed. See vdslPhysCurrStatus for
    potential reasons."
 ::= { vdslNotifications 12 }

-- conformance information

vdslConformance OBJECT IDENTIFIER ::= { vdslLineMib 3 }
vdslGroups OBJECT IDENTIFIER ::= { vdslConformance 1 }
vdslCompliances OBJECT IDENTIFIER ::= { vdslConformance 2 }

vdslLineMibCompliance MODULE-COMPLIANCE
STATUS current
DESCRIPTION
    "The compliance statement for SNMP entities which
    manage VDSL interfaces."

MODULE -- this module
MANDATORY-GROUPS
    {
        vdslGroup,
        vdslNotificationGroup
    }
 ::= { vdslCompliances 1 }

-- units of conformance

vdslGroup OBJECT-GROUP
OBJECTS
    {
```

Expires February 2, 2003

[Page 60]

vds1LineCoding,
vds1LineType,
vds1LineConfProfile,
vds1LineAlarmConfProfile,
vds1PhysInvSerialNumber,
vds1PhysInvVendorID,
vds1PhysInvVersionNumber,
vds1PhysCurrSnrMgn,
vds1PhysCurrAtn,
vds1PhysCurrStatus,
vds1PhysCurrOutputPwr,
vds1PhysCurrAttainableRate,
vds1PhysCurrLineRate,
vds1ChanInterleaveDelay,
vds1ChanCrcBlockLength,
vds1ChanCurrTxRate,
vds1ChanCurrTxSlowBurstProtect,
vds1ChanCurrTxFastFec,
vds1PerfDataValidIntervals,
vds1PerfDataInvalidIntervals,
vds1PerfDataLofs,
vds1PerfDataLoss,
vds1PerfDataLprs,
vds1PerfDataLols,
vds1PerfDataESs,
vds1PerfDataSESSs,
vds1PerfDataUASs,
vds1PerfDataInits,
vds1PerfDataCurr15MinTimeElapsed,
vds1PerfDataCurr15MinLofs,
vds1PerfDataCurr15MinLoss,
vds1PerfDataCurr15MinLprs,
vds1PerfDataCurr15MinLols,
vds1PerfDataCurr15MinESs,
vds1PerfDataCurr15MinSESSs,
vds1PerfDataCurr15MinUASs,
vds1PerfDataCurr15MinInits,
vds1PerfData1DayValidIntervals,
vds1PerfData1DayInvalidIntervals,
vds1PerfDataCurr1DayTimeElapsed,
vds1PerfDataCurr1DayLofs,
vds1PerfDataCurr1DayLoss,
vds1PerfDataCurr1DayLprs,
vds1PerfDataCurr1DayLols,
vds1PerfDataCurr1DayESs,
vds1PerfDataCurr1DaySESSs,
vds1PerfDataCurr1DayUASs,
vds1PerfDataCurr1DayInits,
vds1PerfIntervalLofs,
vds1PerfIntervalLoss,
vds1PerfIntervalLprs,
vds1PerfIntervalLols,
vds1PerfIntervalESs,

Expires February 2, 2003

[Page 61]

vds1PerfIntervalSEs,
vds1PerfIntervalUASs,
vds1PerfIntervalInits,
vds1Perf1DayIntervalMoniSecs,
vds1Perf1DayIntervalLofs,
vds1Perf1DayIntervalLoss,
vds1Perf1DayIntervalLprs,
vds1Perf1DayIntervalLols,
vds1Perf1DayIntervalESs,
vds1Perf1DayIntervalSEs,
vds1Perf1DayIntervalUASs,
vds1Perf1DayIntervalInits,
vds1ChanValidIntervals,
vds1ChanInvalidIntervals,
vds1ChanFixedOctets,
vds1ChanBadBlks,
vds1ChanCurr15MinTimeElapsed,
vds1ChanCurr15MinFixedOctets,
vds1ChanCurr15MinBadBlks,
vds1Chan1DayValidIntervals,
vds1Chan1DayInvalidIntervals,
vds1ChanCurr1DayTimeElapsed,
vds1ChanCurr1DayFixedOctets,
vds1ChanCurr1DayBadBlks,
vds1ChanIntervalFixedOctets,
vds1ChanIntervalBadBlks,
vds1Chan1DayIntervalMoniSecs,
vds1Chan1DayIntervalFixedOctets,
vds1Chan1DayIntervalBadBlks,
vds1LineConfDownRateMode,
vds1LineConfUpRateMode,
vds1LineConfDownMaxPwr,
vds1LineConfUpMaxPwr,
vds1LineConfDownMaxSnrMgn,
vds1LineConfDownMinSnrMgn,
vds1LineConfDownTargetSnrMgn,
vds1LineConfUpMaxSnrMgn,
vds1LineConfUpMinSnrMgn,
vds1LineConfUpTargetSnrMgn,
vds1LineConfDownFastMaxDataRate,
vds1LineConfDownFastMinDataRate,
vds1LineConfDownSlowMaxDataRate,
vds1LineConfDownSlowMinDataRate,
vds1LineConfUpFastMaxDataRate,
vds1LineConfUpFastMinDataRate,
vds1LineConfUpSlowMaxDataRate,
vds1LineConfUpSlowMinDataRate,
vds1LineConfDownRateRatio,
vds1LineConfUpRateRatio,
vds1LineConfDownMaxInterDelay,
vds1LineConfUpMaxInterDelay,
vds1LineConfDownPboControl,
vds1LineConfUpPboControl,

Expires February 2, 2003

[Page 62]

```

vdslLineConfDownPboLevel,
vdslLineConfUpPboLevel,
vdslLineConfDeploymentScenario,
vdslLineConfAdslPresence,
vdslLineConfApplicableStandard,
vdslLineConfBandPlan,
vdslLineConfBandPlanFx,
vdslLineConfBandOptUsage,
vdslLineConfUpPsdTemplate,
vdslLineConfDownPsdTemplate,
vdslLineConfHamBandMask,
vdslLineConfCustomNotch1Start,
vdslLineConfCustomNotch1Stop,
vdslLineConfCustomNotch2Start,
vdslLineConfCustomNotch2Stop,
vdslLineConfDownTargetSlowBurst,
vdslLineConfUpTargetSlowBurst,
vdslLineConfDownMaxFastFec,
vdslLineConfUpMaxFastFec,
vdslLineConfLineType,
vdslLineConfProfRowStatus,
vdslLineAlarmConfThresh15MinLofs,
vdslLineAlarmConfThresh15MinLoss,
vdslLineAlarmConfThresh15MinLprs,
vdslLineAlarmConfThresh15MinLols,
vdslLineAlarmConfThresh15MinESs,
vdslLineAlarmConfThresh15MinSESSs,
vdslLineAlarmConfThresh15MinUASs,
vdslLineAlarmConfInitFailure,
vdslLineAlarmConfProfRowStatus
}
STATUS      current
DESCRIPTION
    "A collection of objects providing information about
    a VDSL Line."
 ::= { vdslGroups 1 }

vdslNotificationGroup    NOTIFICATION-GROUP
    NOTIFICATIONS
    {
        vdslPerfLofsThreshNotification,
        vdslPerfLossThreshNotification,
        vdslPerfLprsThreshNotification,
        vdslPerfLolsThreshNotification,
        vdslPerfESsThreshNotification,
        vdslPerfSESSsThreshNotification,
        vdslPerfUASsThreshNotification,
        vdslDownMaxSnrMgnNotification,
        vdslDownMinSnrMgnNotification,
        vdslUpMaxSnrMgnNotification,
        vdslUpMinSnrMgnNotification,
        vdslInitFailureNotification
    }

```

Expires February 2, 2003

[Page 63]

```
STATUS      current
DESCRIPTION
    "This group supports notifications of significant
    conditions associated with VDSL Lines."
 ::= { vdslGroups 2 }
```

END

5. Intellectual Property Notice

The IETF takes no position regarding the validity or scope of any intellectual property or other rights that might be claimed to pertain to the implementation or use of the technology described in this document or the extent to which any license under such rights might or might not be available; neither does it represent that it has made any effort to identify any such rights. Information on the IETF's procedures with respect to rights in standards-track and standards-related documentation can be found in [BCP-11](#). Copies of claims of rights made available for publication and any assurances of licenses to be made available, or the result of an attempt made to obtain a general license or permission for the use of such proprietary rights by implementors or users of this specification can be obtained from the IETF Secretariat.

The IETF invites any interested party to bring to its attention any copyrights, patents or patent applications, or other proprietary rights which may cover technology that may be required to practice this standard. Please address the information to the IETF Executive Director.

6. Normative References

- [DSLFT057] DSL Forum TR-057, "VDSL Network Element Management", February 2003.
- [ETSI2701] ETSI TS 101 270-1 V1.2.1 "Transmission and Multiplexing (TM); Access transmission systems on metallic access cables; Very high speed Digital Subscriber Line (VDSL); Part 1: Functional requirements", October 1999.
- [ETSI2702] ETSI TS 101 270-2 V1.1.1 "Transmission and Multiplexing (TM); Access transmission systems on metallic access cables; Very high speed Digital Subscriber Line (VDSL); Part 1: Transceiver specification", February 2001.
- [ITU9931] ITU-T G.993.1 "Very-high-speed digital subscriber line foundation", November 2001.
- [ITU9971] ITU-T G.997.1 "Physical layer management for Digital Subscriber Line (DSL) Transceivers", July 1999.
- [RFC2119] Bradner, S., "Key words for use in RFCs to Indicate Requirement Levels", [BCP 14](#), [RFC 2119](#), March 1997.

Expires February 2, 2003

[Page 64]

- [RFC2578] McCloghrie, K., Perkins, D., Schoenwaelder, J., Case, J., Rose, M. and S. Waldbusser, "Structure of Management Information Version 2 (SMIV2)", STD 58, [RFC 2578](#), April 1999.
- [RFC2579] McCloghrie, K., Perkins, D., Schoenwaelder, J., Case, J., Rose, M. and S. Waldbusser, "Textual Conventions for SMIV2", STD 58, [RFC 2579](#), April 1999.
- [RFC2580] McCloghrie, K., Perkins, D., Schoenwaelder, J., Case, J., Rose, M. and S. Waldbusser, "Conformance Statements for SMIV2", STD 58, [RFC 2580](#), April 1999.
- [RFC2863] McCloghrie, K. and F. Kastenholz, "The Interfaces Group MIB", [RFC 2863](#), June 2000.
- [RFC3418] Presuhn, R., "Management Information Base (MIB) for the Simple Network Management Protocol (SNMP)", STD 62, [RFC 3418](#), December 2002.
- [RFC3593] Tesink, K., "Textual Conventions for MIB Modules Using Performance History Based on 15 Minute Intervals", [RFC 3593](#), September 2003.
- [RFCXXXX] Ray, B. and R. Abbi, "High Capacity Textual Conventions for MIB Modules Using Performance History Based on 15 Minute Intervals", RFC XXXX, YYYY 2003.
- RFC Ed: please replace XXXX with the RFC number assigned to the
--- accompanying HC-TC MIB and YYYY with the appropriate month.
- [T1E1311] ANSI T1E1.4/2001-311, "Very-high-bit-rate Digital Subscriber Line (VDSL) Metallic Interface, Part 1: Functional Requirements and Common Specification", February 2001.
- [T1E1011] ANSI T1E1.4/2001-011R3, "VDSL Metallic Interface, Part 2: Technical Specification for a Single-Carrier Modulation (SCM) Transceiver", November 2001.
- [T1E1013] ANSI T1E1.4/2001-013R4, "VDSL Metallic Interface, Part 3: Technical Specification for a Multi-Carrier Modulation (MCM) Transceiver", November 2000.

7. Informative References

- [RFC3410] Case, J., Mundy, R., Partain, D. and B. Stewart, "Introduction and Applicability Statements for Internet-Standard Management Framework", [RFC 3410](#), December 2002.
- [RFC3415] Wijnen, B., Presuhn, R. and K. McCloghrie, "View-based Access Control Model (VACM) for the Simple Network Management Protocol (SNMP)", [RFC 3415](#), December 2002.

Expires February 2, 2003

[Page 65]

8. Security Considerations

There are a number of management objects defined in this MIB module with a MAX-ACCESS clause of read-write and/or read-create. Such objects may be considered sensitive or vulnerable in some network environments. The support for SET operations in a non-secure environment without proper protection can have a negative effect on network operations. These are the tables and objects and their sensitivity/vulnerability:

Some of the readable objects in this MIB module (i.e., objects with a MAX-ACCESS other than not-accessible) may be considered sensitive or vulnerable in some network environments. It is thus important to control even GET and/or NOTIFY access to these objects and possibly to even encrypt the values of these objects when sending them over the network via SNMP.

VDSL layer connectivity from the Vtur will permit the subscriber to manipulate both the VDSL link directly and the VDSL embedded operations channel (EOC) for their own loop. For example, unchecked or unfiltered fluctuations initiated by the subscriber could generate sufficient notifications to potentially overwhelm either the management interface to the network or the element manager.

Additionally, allowing write access to configuration data may allow an end-user to increase their service levels or affect other end-users in either a positive or negative manner. For this reason, the following tables should be considered to contain sensitive information:

```
vdslLineTable
vdslLineConfProfileTable
vdslLineAlarmConfProfileTable
```

Individual line utilization information, available via the performance tables, may be considered sensitive. For example, if an end-user has a far lower line utilization during certain periods of the day, it may indicate an empty office or residence. For these reasons, the following tables should be considered to contain sensitive information:

- vdslPerfDataTable
- vdslPerfIntervalTable
- vdslPerf1DayIntervalTable

Further, notifications generated by agents implementing this MIB will contain threshold and performance information.

It is thus important to control even GET access to the objects within these tables and possibly to even encrypt the values of these objects when sending them over the network via SNMP. Not all versions of SNMP provide features for such a secure

Expires February 2, 2003

[Page 66]

environment.

SNMP versions prior to SNMPv3 did not include adequate security. Even if the network itself is secure (for example by using IPSec), even then, there is no control as to who on the secure network is allowed to access and GET/SET (read/change/create/delete) the objects in this MIB module.

It is RECOMMENDED that implementers consider the security features as provided by the SNMPv3 framework (see [\[RFC3410\], section 8](#)), including full support for the SNMPv3 cryptographic mechanisms (for authentication and privacy).

Further, deployment of SNMP versions prior to SNMPv3 is NOT RECOMMENDED. Instead, it is RECOMMENDED to deploy SNMPv3 and to enable cryptographic security. It is then a customer/operator responsibility to ensure that the SNMP entity giving access to an instance of this MIB module is properly configured to give access to the objects only to those principals (users) that have legitimate rights to indeed GET or SET (change/create/delete) them.

9. Acknowledgements

Greg Bathrick (Nokia)

Umberto Bonollo (NEC)

Andrew Cheers (NEC)

Felix Flemisch (Siemens)

David Horton (CiTR)

Travis Levin (Paradyne)

Moti Morgenstern (Inovia)

Randy Presuhn (BMC)

Say Sabit (NLC)

Bert Wijnen (Lucent)

10. Authors' Addresses

Bob Ray
PESA Switching Systems, Inc.
330-A Wynn Drive
Huntsville, AL 35805
USA

Phone: +1 256 726 9200 ext. 142
Fax: +1 256 726 9271

Expires February 2, 2003

[Page 67]

Email: rray@pesa.com

Rajesh Abbi
Alcatel USA
2912 Wake Forest Road
Raleigh, NC 27609-7860
USA

Phone: +1 919 850 6194
Email: Rajesh.Abbi@alcatel.com

11. Full Copyright Statement

Copyright (C) The Internet Society (2003). All Rights Reserved. This document and translations of it may be copied and furnished to others, and derivative works that comment on or otherwise explain it or assist in its implementation may be prepared, copied, published and distributed, in whole or in part, without restriction of any kind, provided that the above copyright notice and this paragraph are included on all such copies and derivative works. However, this document itself may not be modified in any way, such as by removing the copyright notice or references to the Internet Society or other Internet organizations, except as needed for the purpose of developing Internet standards in which case the procedures for copyrights defined in the Internet Standards process must be followed, or as required to translate it into languages other than English.

The limited permissions granted above are perpetual and will not be revoked by the Internet Society or its successors or assigns.

This document and the information contained herein is provided on an "AS IS" basis and THE INTERNET SOCIETY AND THE INTERNET ENGINEERING TASK FORCE DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTY THAT THE USE OF THE INFORMATION HEREIN WILL NOT INFRINGE ANY RIGHTS OR ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

Expires February 2, 2003

[Page 68]