

**Definitions of Supplemental Managed Objects  
for ATM Interface**

January 3, 2003

[draft-ietf-atommib-atm2-19.txt](#)

Status of this Memo

This document is an Internet-Draft and is in full conformance with all provisions of [Section 10 of RFC2026](#).

Internet-Drafts are working documents of the Internet Engineering Task Force (IETF), its areas, and its working groups. Note that other groups may also distribute working documents as Internet-Drafts.

Internet-Drafts are draft documents valid for a maximum of six months and may be updated, replaced, or obsoleted by other documents at any time. It is inappropriate to use Internet-Drafts as reference material or to cite them other than as ``work in progress.''

Copyright Notice

Copyright (C) The Internet Society (2003). All Rights Reserved.

Abstract

This memo defines objects used for managing ATM-based interfaces, devices,

and services in addition to those defined in the ATM-MIB [24], to provide additional support for the management of:

- ATM Switched Virtual Connections (SVCs)
- ATM Permanent Virtual Connections (PVCs)

## 1. The Internet-Standard Management Framework

For a detailed overview of the documents that describe the current Internet-Standard Management Framework, please refer to [section 7 of RFC 3410](#) [RFC3410].

Managed objects are accessed via a virtual information store, termed the Management Information Base or MIB. MIB objects are generally accessed through the Simple Network Management Protocol (SNMP). Objects in the MIB are defined using the mechanisms defined in the Structure of Management Information (SMI). This memo specifies a MIB module that is compliant to the SMIV2, which is described in STD 58, [RFC 2578](#) [RFC2578], STD 58, [RFC 2579](#) [RFC2579] and STD 58, [RFC 2580](#) [RFC2580].

## 2. Overview

The purpose of this memo is to provide additional capabilities, not found in the ATM-MIB [24], which are needed to manage ATM interfaces. This memo addresses the following areas:

- ATM Switch Support
- ATM Service Support
- ATM Host Support

In addition, this memo also provides ATM trap support.

### 2.1 Background

In addition to the MIB module defined in this memo, other MIB modules are necessary to manage ATM interfaces, links and cross-connects. Examples include MIB II for general system and interface management ([RFC 1907](#) [5] and [RFC 2863](#) [4]), the DS3 ([RFC 2496](#) [31]) or SONET MIBs ([RFC 2558](#) [30]) for management of SONET and DS3 physical interfaces, and, as appropriate, MIB modules for applications that make use of ATM, such as SMDS [28] and LAN Emulation [27]. These MIB modules are outside the scope of this specification.

This MIB module also requires the use of the ATM-MIB module defined in [24] and ATM-specific textual conventions defined in [34].

ATM Endpoint applications such as ATM LAN Emulation or Classical

Expires June 2003

[Page 2]



Expires June 2003

[Page 3]

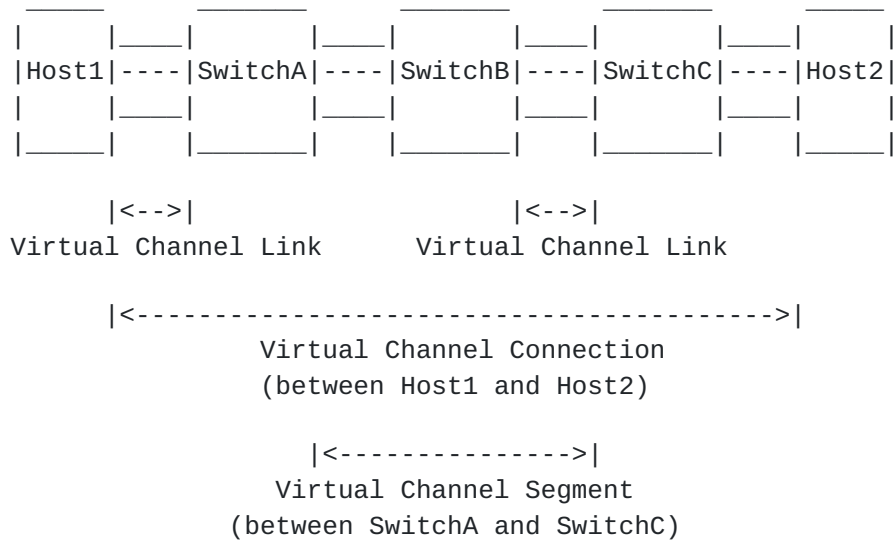


Figure 2: Examples of Virtual Channel Links, Virtual Channel Connection, and Virtual Channel Segment

### 3. Conventions used in the MIB

#### 3.1 Structure

The managed ATM objects are arranged as follows:

| Table                     | Host | Switch | Service |
|---------------------------|------|--------|---------|
| atmSvcVcCrossConnectTable |      | Y      | Y       |
| atmSvcVpCrossConnectTable |      | Y      | Y       |
| atmSigStatTable           | Y    | Y      | Y       |
| atmSigSupportTable        |      | Y      | Y       |
| atmSigDescrParamTable     | Y    |        |         |
| atmIfRegisteredAddrTable  |      | Y      | Y       |
| atmVclAddrTable           | Y    |        |         |
| atmAddrVclTable           | Y    |        |         |
| atmVplStatTable           | Y    | Y      | Y       |
| atmVplLogicalPortTable    | Y    | Y      | Y       |
| atmVclStatTable           | Y    | Y      | Y       |
| atmAal5VclStatTable       | Y    |        |         |
| atmVclGenTable            | Y    |        |         |

Expires June 2003

[Page 4]

|                              |  |   |  |   |  |   |  |
|------------------------------|--|---|--|---|--|---|--|
| atmInterfaceExtTable         |  | Y |  | Y |  | Y |  |
| atmIlmiSrvcRegTable          |  |   |  | Y |  | Y |  |
| atmIlmiNetworkPrefixTable    |  |   |  | Y |  | Y |  |
| atmSwitchAddressTable        |  |   |  | Y |  |   |  |
| atmVpCrossConnectXTable      |  |   |  |   |  | Y |  |
| atmVcCrossConnectXTable      |  |   |  |   |  | Y |  |
| atmCurrentlyFailingPVplTable |  | Y |  | Y |  | Y |  |
| atmCurrentlyFailingPVclTable |  | Y |  | Y |  | Y |  |

Table 1: MIB structure

### 3.1.1 ATM SVC VP Cross-Connect Table

This table provides the SVC VP Cross-Connect (SVPC) information. The equivalent PVC VP Cross-Connect table is defined in [24]. This table also includes cross-connect information for Soft PVPs.

This table contains configuration and state information of all SVC VP point-to-point, point-to-multipoint, or multipoint-to-multipoint VP cross-connects.

This table has read-only access and can be used to monitor the cross-connects which connect the VPLs together in an ATM switch or network. The atmSvcVpCrossConnectIndex is used to associate the related SVC VPLs that are cross-connected together. The atmSvcVpCrossConnectRowStatus object has read-write access to allow for tear-down.

The ATM SVC VP Cross-Connect Table models each bi-directional Switched Virtual Circuit (SVC) VP cross-connect as a set of entries in the atmSvcVpCrossConnectTable. A point-to-point VPC cross-connect is modeled as one entry; a point-to-multipoint (N leafs) VPC cross-connect as N entries in this table; and a multipoint-to-multipoint (N parties) VPC cross-connect as  $N(N-1)/2$  entries in this table. In the latter cases, all the N (or  $N(N-1)/2$ ) entries are associated with a single VPC cross-connect by having the same value of atmSvcVpCrossConnectIndex.



Expires June 2003

[Page 5]

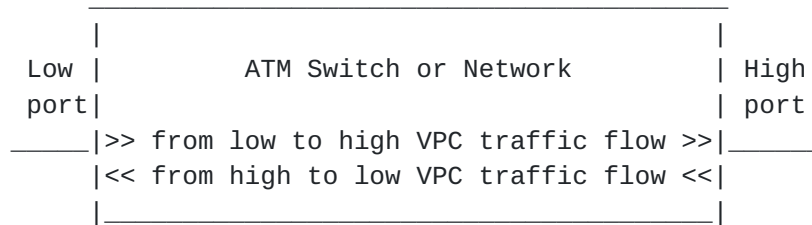


Figure 3: VPC Cross-Connect Model

The terms low and high are chosen to represent numerical ordering of the two interfaces associated with a VPC cross-connect. That is, the ATM interface with the lower value of ifIndex is termed 'low', while the other ATM interface associated with the VPC cross-connect is termed 'high'.

### 3.1.2 ATM SVC VC Cross-Connect Table

This table provides the SVC Cross-Connect (SVCC) information. The equivalent PVC VC Cross-Connect table is defined in [24]. This table also includes cross-connect information for Soft PVCs.

This table is used to model a bi-directional point-to-point, point-to-multipoint or multipoint-to-multipoint SVC VC cross-connect.

This table has read-only access and is used to monitor the cross-connects which connect the VCLs together in an ATM switch or network that belong to a VC connection. The atmSvcVcCrossConnectIndex is used to associate the related SVC VCLs that are cross-connected together. The atmSvcVcCrossConnectRowStatus object has read-write access to allow for tear-down.

The ATM SVC VC Cross-Connect Table models each bi-directional Switched Virtual Circuit (SVC) VC cross-connect as a set of entries in the atmSvcVcCrossConnectTable. A point-to-point VC cross-connect is modeled as one entry; a point-to-multipoint (N leafs) VC cross-connect as N entries in this table; and a multipoint-to-multipoint (N parties) VPC cross-connect as  $N(N-1)/2$  entries in this table. In the latter cases, all the N (or  $N(N-1)/2$ ) entries are associated with a single VPC cross-connect by having the same value of atmSvcVcCrossConnectIndex.

Expires June 2003

[Page 6]

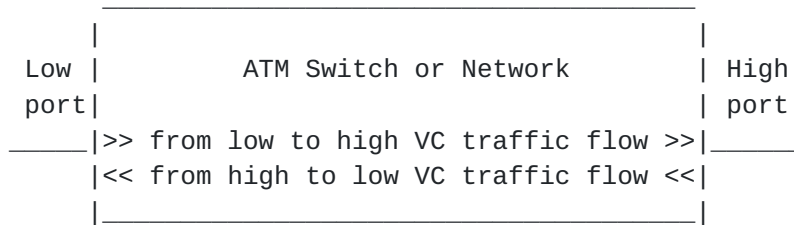


Figure 4: VC Cross-Connect Model

The terms low and high are chosen to represent numerical ordering of the two interfaces associated with a VPC cross-connect. That is, the ATM interface with the lower value of `ifIndex` is termed 'low', while the other ATM interface associated with the VPC cross-connect is termed 'high'.

### 5.1.3 ATM Interface Signalling Statistics Table

This table provides statistical information of the signalling entity. A signalling entity can be deployed over an ATM interface as defined in the `atmInterfaceConfTable` [24], a logical ATM interface defined in [section 5.1.10.1](#) in this document, or a proprietary virtual interface as described in the `atmInterfaceExtTable`. To monitor the signalling entity, a few counters are provided. They are defined as:

```

atmSigSSCOPConEvents
atmSigSSCOPErrdPcus
atmSigDetectSetupAttempts
atmSigEmitSetupAttempts
atmSigDetectUnavailRoutes
atmSigEmitUnavailRoutes
atmSigDetectUnavailResrcs
atmSigEmitUnavailResrcs
atmSigDetectCldPtyEvents
atmSigEmitCldPtyEvents
atmSigDetectMsgErrors
atmSigEmitMsgErrors
atmSigDetectClgPtyEvents
atmSigEmitClgPtyEvents
atmSigDetectTimerExpires
atmSigEmitTimerExpires
atmSigDetectRestarts
atmSigEmitRestarts
atmSigInEstabls
atmSigOutEstabls
  
```

### 3.1.4 ATM Signalling Capability Support

Expires June 2003

[Page 7]

A number of Information Elements may or may not be supported by ATM switches or ATM Services. Hence, for trouble isolation it is important to keep track which particular Information Elements are supported. The corresponding group of objects must be supported by switches or services supporting SVCs, and indicate whether the following Information Elements are enabled/disabled:

- 1) Calling party number
- 2) Calling party subaddress
- 3) Called party subaddress
- 4) Broadband high layer information
- 5) Broadband low layer information
- 5) Broadband Repeat Indicator
- 7) AAL parameters

The last parameter, Preferred Carrier Pre-Subscription, identifies the carrier to which intercarrier calls originated from this interface are routed when transit network selection information is not provided by the calling party.

#### 5.1.5 Signalling Descriptor Parameter Table

This table extends the ATM VCL table of the ATM-MIB [24] to include all other necessary signalling information as specified in the ATM Forum UNI Specifications [25] and [26]. A user can create an entry with all signalling parameters and later use that entry to specify the signalling characteristics of SVCs.

Some of the signalling parameters, such as the AAL5 parameters information element, are reflected in the VCL and VPL tables, and this table only contains the remaining AAL5 parameters.

Signalling attributes can be grouped into following categories:

- 1) ATM Adaptation Layer Parameters

Information in this group is captured in the ATM Signalling Descriptor Parameter Table defined in this memo. Please refer to [section 5.4.5.5](#) of [25] and [26].

Expires June 2003

[Page 8]

## 2) Broadband High Layer Information

Information in this group is captured by the ATM Signalling Descriptor Parameter Table defined in this memo. Please refer to [section 5.4.5.8](#) of [25] and [26].

## 3) Broadband Low Layer Information

Information in this group is captured by the ATM Signalling Descriptor Parameter Table defined in this memo. Please refer to [section 5.4.5.9](#) of [25] and [26].

### 3.1.6 ATM Interface Registered Address Table

This table contains a list of ATM addresses that can be used for calls to and from a given interface by a switch or service. The ATM addresses are either registered by the endsystem via ILMI or statically configured. This table does not expose PNNI reachability information. This table only applies to switches and network services. See also [Section 5.2](#).

### 3.1.7 ATM VPI/VCI to Address Mapping Table

In the `atmVclAddrTable`, the object `atmVclAddrAddr` can either be an ATM Local Address or an ATM Remote Address which represent the two endpoint addresses of a VCL. ATM Local Address identifies the local endpoint of the VCL represented by this agent. The ATM Remote address represents the address of the ATM application at the other end of the VCL.

### 5.1.8 ATM Address to VPI/VCI Mapping Table

This table provides an alternative way to retrieve the `atmVclTable`. This table can be used to retrieve the indexing to the `atmVclTable` by an ATM address.

### 3.1.9 ATM VPL Statistics Table

The `atmVplStatTable` includes per-VPL cell counters. The VPL cell counters count the valid ATM cells. The valid ATM cells include the user and OAM cells but exclude the physical layer (e.g., idle cells) and unassigned cells.

Cells coming into an ATM managed system are counted differently with the high Cell Loss Priority (CLP=0) or low Cell Loss Priority (CLP=1). The cells are tagged, passed or discarded depending on the incoming CLP value and the policed cell rate by the "traffic policing" entity in the ATM managed system. Refer to [25] and [26] for a description of the traffic policing.



Expires June 2003

[Page 9]

In the switch where the traffic policing is not supported, cells are passed or discarded depending on the bandwidth and buffering capacity of the switching fabric.

The Output Tagged Cells counter, in this case, is always zero.

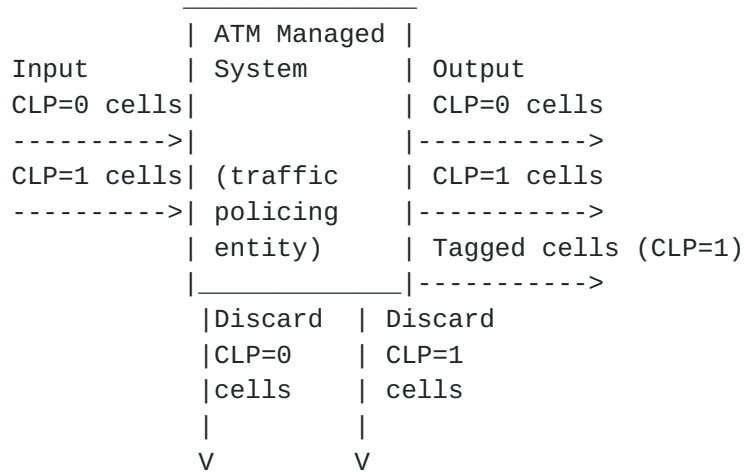


Figure 5: ATM Cell Counters per VPL

In this table, cells coming into and out of the managed ATM system are counted as the total number of cells and the cells with the CLP=0. The CLP=1 counter is derived by subtracting CLP=0 cells from the total cells. In addition, cells that are tagged on the output are also counted. The output CLP=1 cells equals the total cells out count minus both the CLP=0 cells and the tagged cells.

### 3.1.10 ATM VPL Logical Port Table

The ATM VPL Logical Port Table includes all ATM logical port interface configuration information.

#### 3.1.10.1 ATM Logical Port Interface

The interface type "ATM Logical Port" (ifType=80) is defined to allow the representation of a VP Tunnel, which is a VPL used as a trunk connection (most likely between devices that are not physically adjacent), providing for multiplexing and demultiplexing of VCs on the VP. Figure 6 illustrates such a VP Tunnel.

Note: the "ATM Logical Port" interface is more of a logical port, compared with an interface of type "ATM" which is more of a physical port that provides for the transport of many VP and VC connections between adjacent devices.

Expires June 2003

[Page 11]

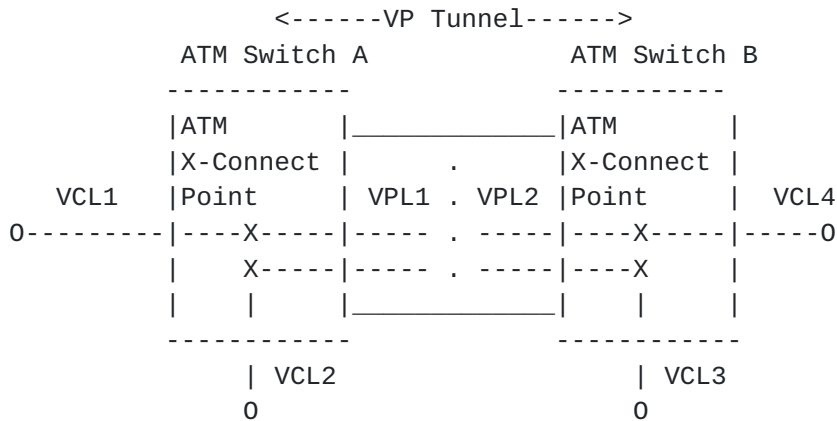


Figure 6: Virtual Path Tunnel

In Figure 6, a VP tunnel (denoted as VPL1 by Switch A, and as VPL2 by Switch B) is used to connect VCL1 with VCL4 and VCL2 with VCL3. Figure 6 shows only one VP tunnel, but there can be multiple VP tunnels over the same physical interface.

A particularly useful VP tunnel scenario is tunneling across a public network that does not support signalling. In Figure 6 above, assume Switches A and B are private switches that signal over the VP to set up connections transparently through the public network. The public network would just transport a PVC VP between the two switches.

Because the VP Tunnel constitutes an interface between two ATM devices that are not necessarily physically adjacent, most of the management information pertaining to the interface may differ for the tunnel, including:

- active VPI/VCI fields (the tunnel may be a subset of the parent interface).
- maximum number of VCCs
- configured VCCs
- ILMI VPI/VCI values
- ATM address type
- ATM administrative address
- received/transmitted cells.

### 3.1.10.2 How to create an ATM Logical Port interface

On ATM devices supporting VP tunnels, the ATM Logical Port Interface Table can be used to create VP tunnels. To create an ATM Logical Port interface via SNMP:

Expires June 2003

[Page 12]

- Create a VPL (e.g., VPI=a on an existing ATM interface which has ifIndex=x) in the atmVplTable.
- Set the object atmVplLogicalPortDef to isLogicalIf. A new row in the ifTable is then created by the agent, with ifIndex=y, to represent the ATM Logical Port interface. The object atmVplLogicalPortIndex is also set to y by the agent to represent the ifIndex value of the ATM Logical Port interface.
- The ifEntry values are set for the ATM Logical Port interface (ifIndex=y) as discussed in [RFC 2515](#), with the following exceptions:
  - \* ifType - a new enumerated value of atmLogical(80) was added to IANAifType, specifying an "ATM Logical Port" interface.
  - \* ifSpeed - The total bandwidth in bits per second for use by the ATM layer. Computed from the traffic descriptor for the VPL.
  - \* ifOperStatus - determined hierarchically, depending on the state of the physical atm-cell layer interface beneath it, and the ILMI on the VP.
  - \* ifInOctets, ifOutOctets - support of these objects is not mandatory for ATM Logical Port interfaces.
  - \* ifInErrors - always zero, HEC errors are specified for the atm cell-layer interface beneath it.
  - \* ifInUnknownProtos - always zero, errors are specified for the atm cell-layer interface beneath it.
- The atmInterfaceConfEntry values are set and reported as discussed in [24], with the following exceptions:
  - \* atmInterfaceMaxVpcs - 0.
  - \* atmInterfaceConfVpcs - 0.
  - \* atmInterfaceIlmiVpi - VPI of the VP tunnel.
- The atmInterfaceExtEntry values are set and reported as follows:
  - \* atmInterfaceConfMaxSvpcVpi - VPI of the VP tunnel, although VPCs cannot be setup on a VP tunnel.
  - \* atmInterfaceCurrentMaxSvpcVpi - VPI of VP tunnel, although VPCs cannot be setup on a VP tunnel.
  - \* atmInterfaceConfMaxSvccVpi - VPI of the VP tunnel.
  - \* atmInterfaceCurrentMaxSvccVpi - VPI of VP tunnel.
  - \* atmIntfPvcFailures - Includes failures of PVCLs

Expires June 2003

[Page 13]



within the VP tunnel, but not of the PVPL itself, since those are reported on the atm(37) interface.

- \* atmIntfCurrentlyFailingPVpls - 0.
- \* atmIntfPvcFailuresTrapEnable - Enables traps for PVCL failures within the VP tunnel, but not for the PVPL itself, since the latter are generated on behalf of the atm(37) interface.

- An entry is created in the ifStackTable, with values: ifStackHigherLayer=y, ifStackLowerLayer=x.
- VCLs defined on the VP tunnel are indexed by ifIndex=y, VPI=a, VCI.

### 3.1.11 ATM VCL Statistics Table

The atmVclStatTable includes per-VCL cell counters. The VCL cell counters count the valid ATM cells. The valid ATM cells include the user and OAM cells but exclude the physical layer (e.g., idle cells) and unassigned cells.

Cells coming into an ATM managed system are counted differently with the high Cell Loss Priority (CLP=0) or low Cell Loss Priority (CLP=1). The cells are tagged, passed or discarded depending on the incoming CLP value and the policed cell rate by the "traffic policing" entity in the ATM managed system. Refer to [25] and [26] for the description of the traffic policing.

In a switch where the traffic policing is not supported, cells are passed or discarded depending on the bandwidth and buffering capacity of the switching fabric.

The Output Tagged Cells counter, in this case, is always zero.

Expires June 2003

[Page 14]

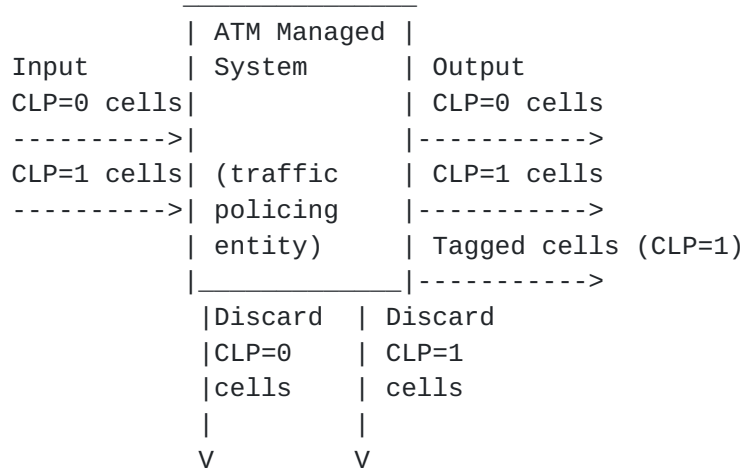


Figure 7: ATM Cell Counters per VCL

In this table, cells coming into and out of the managed ATM system are counted as the total number of cells and the cells with the CLP=0. The CLP=1 counter is derived by subtracting CLP=0 cells from the total cells. In addition, cells that are tagged on the output are also counted. The output CLP=1 cells equals the total cells out count minus both the CLP=0 cells and the tagged cells.

### 3.1.12 ATM VC General Information Table

This table contains the general information for each VC. It provides an index to the atmSigDescrParamTable defined in this MIB. This table is an extension to the atmVclTable defined in the ATM-MIB [24].

### 3.1.13 ATM Interface Configuration Extension Table

The ATM Interface Configuration Extension Table contains ATM interface information that supplements the atmInterfaceConfTable defined in [24]. It includes the configuration information of the interface type (i.e., connection setup procedures) and ILMI.

A network manager can configure the interface to run a specific type of connection setup procedures (i.e., protocol and version) such as ITU-T DSS2, ATM Forum UNI 3.1, PNNI 1.0 or BICI 2.0. It can also dictate the role of the managed entity as one side of the interface. For example, if an interface is configured to run ATM Forum UNI 3.1, the managed entity has to be told to run as either the network side or the user side of the UNI.

The objects atmIntfConfigType and atmIntfConfigSide are used for configuration and the objects atmIntfActualType and atmIntfActualSide

Expires June 2003

[Page 15]

are used for reading back the actual interface protocol and version.

The following table describes all the valid combinations of configuration of the interface type and side. Note that the value N/A meaning not applicable, should be set to the value other(1) when used.

| atmIntfConfigType | atmIntfConfigSide |
|-------------------|-------------------|
| -----             | -----             |
| autoConfig        | N/A               |
| ituDss2           | user/network      |
| atmfUni3Dot0      | user/network      |
| atmfUni3Dot1      | user/network      |
| atmfUni4Dot0      | user/network      |
| atmfIispUni3Dot0  | user/network      |
| atmfIispUni3Dot1  | user/network      |
| atmfIispUni4Dot0  | user/network      |
| atmfPnni1Dot0     | N/A               |
| atmfBici2Dot0     | N/A               |
| atmfUniPvcOnly    | user/network      |
| atmfNniPvcOnly    | N/A               |

When the value of the object atmIntfConfigType is configured to autoConfig(2), the interface type is determined via the ATM Forum ILMI auto-configuration procedures [29]. There is no need to set the interface side since it should be a derived value. The PNNI and BICI interfaces are always symmetric so setting the interface side is also not necessary.

This table also includes the configured and negotiated maximum VPI value per ATM interface, and the configured and negotiated minimum VCI value per ATM interface. Refer to [29] Sections [8.2.3.8](#) through [8.2.3.10](#) for a detailed description.

The following figure provides an example how the current minimum VCI values are derived from the configured minimum VCI values and the neighboring minimum VCI values:

Expires June 2003

[Page 16]

```

+-----+           +-----+           +-----+
| ATM   | ifA     ifB | ATM   | ifC     ifD | ATM   |
| Device |-----| Device |-----| Device |
+-----+           +-----+           +-----+

```

```

ifA: Configured Min SVCC VCI = 32 (configured)
      Current Min SVCC VCI   = 40 (negotiated)

```

```

ifB: Configured Min SVCC VCI = 40 (configured)
      Current Min SVCC VCI   = 40 (negotiated)

```

```

ifC: Configured Min SVCC VCI = 32 (configured)
      Current Min SVCC VCI   = 32 (negotiated)

```

```

ifD: Configured Min SVCC VCI = 32 (configured)
      Current Min SVCC VCI   = 32 (negotiated)

```

Between ifA and ifB, the maximum of the two values for atmInterfaceConfMinSvccVci is 40, so both interfaces set their atmInterfaceCurrentMinSvccVci values to 40. On the other hand, since ifC and ifD both are configured with atmInterfaceConfMinSvccVci values of 32, they set their atmInterfaceCurrentMinSvccVci values to 32.

Figure 8: Examples of configured vs. negotiated ILMI values

### 3.1.14 ATM ILMI Service Registry Table

This table contains information used by the switch/service to inform ATM hosts of the location of ATM network services such as the LAN Emulation Configuration Server (LECS), the ATM Name Server (ANS), the ATMARP Server, the Multicast Address Resolution Server (MARS), and the NHRP Server (NHS).

Entries in this table are exported to adjacent devices via ILMI over either all or a few user selected ATM interfaces.

As an example, let's assume that:

- An ATM switch X has three interfaces if1, if2 and if3.
- There are two ATM network services offered, a1.a2...aN and b1.b2...bN, where a1.a2...aN is an object identifier used to identify the first service, and b1.b2...bN is the object identifier for the other service.
- The first service is available at the ATM address 'a'.
- The second service is available at the ATM address 'b'.
- The first service can be used by any device connecting to

Expires June 2003

[Page 17]



the switch X.

- The second service can be used only by devices that connect to interfaces if1 and if3 on switch X.



Expires June 2003

[Page 19]

- the device attached to interface if2 will obtain the address a only.
- the device attached to interface if3 will obtain the address a and b.

#### 3.1.15 ILMI Network Prefix Table

A table specifying per-interface network prefix(es) supplied by the network side of the UNI during ILMI address registration. When no network prefixes are specified for a particular interface, one or more network prefixes based on the switch address(es) may be used for ILMI address registration.

#### 3.1.16 ATM Switch Address Table

This table contains one or more ATM endsystem addresses on a per-switch basis. These addresses are used to identify the switch. When no ILMI network prefixes are configured for certain interfaces, network prefixes based on the switch address(es) may be used for ILMI address registration.

#### 3.1.17 AAL5 per-VCC Statistics Table

This table contains the AAL5 statistics for the VCCs.

#### 3.1.18 ATM VP Cross-Connect Extension Table

This table extends the atmVpCrossConnectTable defined in ATM-MIB [24].

#### 3.1.19 ATM VC Cross-Connect Extension Table

This table extends the atmVcCrossConnectTable defined in ATM-MIB [24].

#### 3.1.20 Currently Failing PVPL Table

This table contains all the PVPLs that are in trouble.

#### 3.1.21 Currently Failing PVCL Table

This table contains all the PVCLs that are in trouble.

#### 3.1.22 Leaf Initiated Join Counter support

Two counter objects are added to count the number of leaf initiated setup requests and setup failures.

### 3.2 Network and User Addresses

Expires June 2003

[Page 20]

At the user side of a given ATM UNI interface there may be an address, "ifPhysAddress", to identify the interface. In addition, there may be several other addresses which can be used to originate and receive calls. These other addresses that are used to receive calls are listed in the "ifRcvAddrTable" defined in [RFC 2863](#) [4]. The registered addresses on the network side are listed in the ATM Registered Address Table. The ATM Registered Address Table is supported by switches and network services. It is not supported by hosts.

### 3.3 Configuration of VPLs, VCLs, and Cross-Connects

The ATM Managed Objects needed to support the configuration of VPLs, VCLs, and Cross-Connects of the Permanent VPLs and VCLs are defined in the ATM-MIB [24]. Cross-Connects of the Switched VPLs and VCLs are defined in this memo.

### 3.4 ATM-related Trap Support

Traps are defined to detect changes in the status of permanent VPLs and VCLs. The current up/down status of each permanent VPL or VCL is indicated by the atmVplOperStatus or atmVclOperStatus object, respectively. Several tables and objects and one trap are defined in order to help network managers quickly and efficiently detect changes in the status of permanent virtual links. Through use of these tables, objects, and traps, the time consuming and resource intensive task of continuously polling each row in the entire atmVplTable and atmVclTable can be avoided.

The atmIntfPvcFailures counter and the atmIntfCurrentlyFailingPVpls and atmIntfCurrentlyFailingPVcls gauges provide a quick means of determining the status of all PVPLs and PVCLs on an interface. The atmCurrentlyFailingPVplTable and the atmCurrentlyFailingPVclTable list all of the problematic PVPLs and PVCLs, respectively, allowing them to be quickly identified.

The atmIntfPvcFailuresTrap is generated just after a PVPL or PVCL on a particular interface leaves the 'up' operational state. Managers can then determine which PVPLs and/or PVCLs are failing by reading the atmCurrentlyFailingPVplTable and the atmCurrentlyFailingPVclTable. Generation of the atmIntfPvcFailuresTrap is rate limited by suppressing all traps that would occur within atmIntfPvcNotificationInterval of a previous trap for the same interface. Managers should continuously poll the tables and objects mentioned above for at least this amount of time in order to keep up with the state of the network.

## 4. Conformance and Compliance

See the conformance and compliance statements within the information module.

Expires June 2003

[Page 21]

## 5. Definitions

```
ATM2-MIB DEFINITIONS ::= BEGIN
```

```
IMPORTS
```

```
    MODULE-IDENTITY, OBJECT-TYPE, NOTIFICATION-TYPE,  
    Gauge32, Counter32, Integer32  
        FROM SNMPv2-SMI  
    TruthValue, RowStatus, TimeStamp  
        FROM SNMPv2-TC  
    MODULE-COMPLIANCE, OBJECT-GROUP, NOTIFICATION-GROUP  
        FROM SNMPv2-CONF  
    SnmpAdminString  
        FROM SNMP-FRAMEWORK-MIB  
    InterfaceIndex, InterfaceIndexOrZero, ifIndex  
        FROM IF-MIB  
    atmMIBObjects, atmInterfaceConfEntry,  
    atmVplEntry, atmVplVpi,  
    atmVclEntry, atmVclVpi, atmVclVci,  
    atmVpCrossConnectEntry, atmVcCrossConnectEntry  
        FROM ATM-MIB  
    AtmAddr, AtmSigDescrParamIndex,  
    AtmInterfaceType, AtmIlmiNetworkPrefix,  
    AtmVcIdentifier, AtmVpIdentifier,  
    AtmTrafficDescrParamIndex  
        FROM ATM-TC-MIB;
```

```
atm2MIB MODULE-IDENTITY
```

```
    LAST-UPDATED "200304131200Z"  
    ORGANIZATION "IETF AToMMIB Working Group"  
    CONTACT-INFO
```

```
        "AToMMIB WG
```

```
        http://www.ietf.org/html.charters/atommib-charter.html
```

```
    Editors:
```

```
        Faye Ly  
    Postal: Pedestal Networks  
            6503 Dumbarton Circle  
            Fremont, CA 94555  
            USA  
    Tel:    +1 510 896 2908  
    E-Mail: faye@pedestalnetworks.com
```

```
        Michael Noto  
    Postal: Cisco Systems  
            170 W. Tasman Drive  
            San Jose, CA 95134-1706  
            USA
```



Expires June 2003

[Page 22]

E-mail: mnoto@cisco.com

Andrew Smith

Postal: Allegro Networks  
 6399 San Ignacio Ave.  
 San Jose, CA 95119  
 USA

Fax: +1 415 345 1827

E-Mail: andrew@allegronetworks.com

Ethan Mickey Spiegel

Postal: Cisco Systems  
 170 W. Tasman Drive  
 San Jose, CA 95134-1706  
 USA

Tel: +1 408 526 6408

Fax: +1 408 526 6488

E-Mail: mspiegel@cisco.com

Kaj Tesink

Postal: Telcordia Technologies  
 331 Newman Springs Road  
 Red Bank, NJ 07701  
 USA

Tel: +1 732 758 5254

Fax: +1 732 758 2269

E-mail: kaj@research.telcordia.com"

DESCRIPTION

"Copyright (C) The Internet Society (2003). This version of this MIB module is part of RFC xxxx; see the RFC itself for full legal notices.

This MIB Module is a supplement to the ATM-MIB defined in [RFC 2515](#)."

REVISION "200304131200Z"

DESCRIPTION

"Initial version of this MIB, published as RFC xxxx."  
 -- xxxx to be assigned by RFC-Editor  
 ::= { atmMIBObjects 14 }

-- \*\*\*\*\* NOTE TO THE RFC EDITOR \*\*\*\*\*  
 -- Please fill out xxxx above with the RFC number of  
 -- this RFC and remove this note

atm2MIBObjects OBJECT IDENTIFIER ::= {atm2MIB 1}

atm2MIBTraps OBJECT IDENTIFIER ::= {atm2MIB 2}

Expires June 2003

[Page 23]

```
-- This ATM2-MIB Module consists of the following tables,  
-- plus ATM trap support:  
-- 1. atmSvcVpCrossConnectTable  
-- 2. atmSvcVcCrossConnectTable  
-- 3. atmSigStatTable  
-- 4. atmSigSupportTable  
-- 5. atmSigDescrParamTable  
-- 6. atmIfRegisteredAddrTable  
-- 7. atmVclAddrTable  
-- 8. atmAddrVclTable  
-- 9. atmVplStatTable  
-- 10. atmVplLogicalPortTable  
-- 11. atmVclStatTable  
-- 12. atmAal5VclStatTable  
-- 13. atmVclGenTable  
-- 14. atmInterfaceExtTable  
-- 15. atmIlmiSrvRegTable  
-- 16. atmIlmiNetworkPrefixTable  
-- 17. atmSwitchAddressTable  
-- 18. atmVpCrossConnectXTable  
-- 19. atmVcCrossConnectXTable  
-- 20. atmCurrentlyFailingPVplTable  
-- 21. atmCurrentlyFailingPVclTable
```

```
-- 1. ATM VPL SVC Cross-Connect Table
```

```
atmSvcVpCrossConnectTable OBJECT-TYPE  
    SYNTAX          SEQUENCE OF  
                    AtmSvcVpCrossConnectEntry  
    MAX-ACCESS      not-accessible
```

```
    STATUS          current
```

```
    DESCRIPTION
```

```
        "The ATM SVPC Cross-Connect table.  A  
        bi-directional VP cross-connect between two  
        switched VPLs is modeled as one entry in this  
        table.  A Soft PVPC cross-connect, between a  
        soft permanent VPL and a switched VPL, is  
        also modeled as one entry in this table."
```

```
    ::= { atm2MIBObjects 1 }
```

```
atmSvcVpCrossConnectEntry OBJECT-TYPE  
    SYNTAX          AtmSvcVpCrossConnectEntry  
    MAX-ACCESS      not-accessible  
    STATUS          current
```

```
    DESCRIPTION
```

```
        "An entry in the ATM SVPC Cross-Connect table."
```

Expires June 2003

[Page 24]

This entry is used to model a bi-directional ATM VP cross-connect between two VPLs."

```
INDEX { atmSvcVpCrossConnectIndex,
        atmSvcVpCrossConnectLowIfIndex,
        atmSvcVpCrossConnectLowVpi,
        atmSvcVpCrossConnectHighIfIndex,
        atmSvcVpCrossConnectHighVpi }
 ::= { atmSvcVpCrossConnectTable 1 }
```

```
AtmSvcVpCrossConnectEntry ::= SEQUENCE {
    atmSvcVpCrossConnectIndex      INTEGER,
    atmSvcVpCrossConnectLowIfIndex InterfaceIndex,
    atmSvcVpCrossConnectLowVpi     AtmVpIdentifier,
    atmSvcVpCrossConnectHighIfIndex InterfaceIndex,
    atmSvcVpCrossConnectHighVpi    AtmVpIdentifier,
    atmSvcVpCrossConnectCreationTime TimeStamp,
    atmSvcVpCrossConnectRowStatus  RowStatus
}
```

atmSvcVpCrossConnectIndex OBJECT-TYPE

SYNTAX INTEGER (1..2147483647)

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"A unique value to identify this SVPC cross-connect. For each VP associated with this cross-connect, the agent reports this cross-connect index value in the atmVplCrossConnectIdentifier attribute of the corresponding atmVplTable entries."

```
::= { atmSvcVpCrossConnectEntry 1 }
```

atmSvcVpCrossConnectLowIfIndex OBJECT-TYPE

SYNTAX InterfaceIndex

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The value of this object is equal to the ifIndex value of the ATM interface port for this SVPC cross-connect. The term low implies that this ATM interface has the numerically lower ifIndex value than the other ATM interface identified in the same atmSvcVpCrossConnectEntry."

```
::= { atmSvcVpCrossConnectEntry 2 }
```

atmSvcVpCrossConnectLowVpi OBJECT-TYPE

SYNTAX AtmVpIdentifier

Expires June 2003

[Page 25]

MAX-ACCESS not-accessible  
STATUS current  
DESCRIPTION  
"The value of this object is equal to the VPI value associated with the SVPC cross-connect at the ATM interface that is identified by atmSvcVpCrossConnectLowIfIndex. The VPI value cannot exceed the number supported by the atmInterfaceCurrentMaxSvpcVpi at the low ATM interface port."  
::= { atmSvcVpCrossConnectEntry 3 }

atmSvcVpCrossConnectHighIfIndex OBJECT-TYPE  
SYNTAX InterfaceIndex  
MAX-ACCESS not-accessible  
STATUS current  
DESCRIPTION  
"The value of this object is equal to the ifIndex value of the ATM interface port for this SVC VP cross-connect. The term high implies that this ATM interface has the numerically higher ifIndex value than the other ATM interface identified in the same atmSvcVpCrossConnectEntry."  
::= { atmSvcVpCrossConnectEntry 4 }

atmSvcVpCrossConnectHighVpi OBJECT-TYPE  
SYNTAX AtmVpIdentifier  
MAX-ACCESS not-accessible  
STATUS current  
DESCRIPTION  
"The value of this object is equal to the VPI value associated with the SVPC cross-connect  
  
at the ATM interface that is identified by atmSvcVpCrossConnectHighIfIndex. The VPI value cannot exceed the number supported by the atmInterfaceCurrentMaxSvpcVpi at the high ATM interface port."  
::= { atmSvcVpCrossConnectEntry 5 }

atmSvcVpCrossConnectCreationTime OBJECT-TYPE  
SYNTAX TimeStamp  
MAX-ACCESS read-only  
STATUS current  
DESCRIPTION  
"The value of the sysUpTime object



Expires June 2003

[Page 26]

at the time this bi-directional SVPC cross-connect was created. If the current state was entered prior to the last re-initialization of the agent, then this object contains a zero value."  
 ::= { atmSvcVpCrossConnectEntry 6 }

atmSvcVpCrossConnectRowStatus OBJECT-TYPE  
SYNTAX RowStatus  
MAX-ACCESS read-write  
STATUS current  
DESCRIPTION  
"This object is used to delete rows in the atmSvcVpCrossConnectTable."  
 ::= { atmSvcVpCrossConnectEntry 7 }

-- 2. ATM VCL SVC Cross-Connect Table

atmSvcVcCrossConnectTable OBJECT-TYPE  
SYNTAX SEQUENCE OF AtmSvcVcCrossConnectEntry  
MAX-ACCESS not-accessible  
STATUS current  
DESCRIPTION  
"The ATM SVCC Cross-Connect table. A bi-directional VC cross-connect between two switched VCLs is modeled as one entry in this table. A Soft PVCC cross-connect, between a soft permanent VCL and a switched VCL, is also modeled as one entry in this table."  
 ::= { atm2MIBObjects 2 }

atmSvcVcCrossConnectEntry OBJECT-TYPE  
SYNTAX AtmSvcVcCrossConnectEntry  
MAX-ACCESS not-accessible  
STATUS current  
DESCRIPTION  
"An entry in the ATM SVCC Cross-Connect table. This entry is used to model a bi-directional ATM VC cross-connect between two VCLs."  
INDEX { atmSvcVcCrossConnectIndex,  
atmSvcVcCrossConnectLowIfIndex,  
atmSvcVcCrossConnectLowVpi,  
atmSvcVcCrossConnectLowVci,  
atmSvcVcCrossConnectHighIfIndex,  
atmSvcVcCrossConnectHighVpi,  
atmSvcVcCrossConnectHighVci }  
 ::= { atmSvcVcCrossConnectTable 1 }

Expires June 2003

[Page 27]

```
AtmSvcVcCrossConnectEntry ::= SEQUENCE {
    atmSvcVcCrossConnectIndex      INTEGER,
    atmSvcVcCrossConnectLowIfIndex  InterfaceIndex,
    atmSvcVcCrossConnectLowVpi     AtmVpIdentifier,
    atmSvcVcCrossConnectLowVci     AtmVcIdentifier,
    atmSvcVcCrossConnectHighIfIndex InterfaceIndex,
    atmSvcVcCrossConnectHighVpi    AtmVpIdentifier,
    atmSvcVcCrossConnectHighVci    AtmVcIdentifier,
    atmSvcVcCrossConnectCreationTime TimeStamp,
    atmSvcVcCrossConnectRowStatus   RowStatus
}
```

atmSvcVcCrossConnectIndex OBJECT-TYPE

SYNTAX INTEGER (1..2147483647)

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"A unique value to identify this SVCC cross-connect. For each VP associated with this cross-connect, the agent reports this cross-connect index value in the atmVc1CrossConnectIdentifier attribute of the corresponding atmVp1Table entries."

::= { atmSvcVcCrossConnectEntry 1 }

atmSvcVcCrossConnectLowIfIndex OBJECT-TYPE

SYNTAX InterfaceIndex

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The value of this object is equal to the ifIndex value of the ATM interface port for this SVCC cross-connect. The term low implies that

this ATM interface has the numerically lower ifIndex value than the other ATM interface identified in the same atmSvcVcCrossConnectEntry."

::= { atmSvcVcCrossConnectEntry 2 }

atmSvcVcCrossConnectLowVpi OBJECT-TYPE

SYNTAX AtmVpIdentifier

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The value of this object is equal to the VPI value associated with the SVCC cross-connect at the ATM interface that is identified by atmSvcVcCrossConnectLowIfIndex. The VPI value

Expires June 2003

[Page 28]

cannot exceed the number supported by the atmInterfaceCurrentMaxSvccVpi at the low ATM interface port."

::= { atmSvcVcCrossConnectEntry 3 }

atmSvcVcCrossConnectLowVci OBJECT-TYPE

SYNTAX AtmVcIdentifier

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The value of this object is equal to the VCI value associated with the SVCC cross-connect at the ATM interface that is identified by atmSvcVcCrossConnectLowIfIndex. The VCI value cannot exceed the number supported by the atmInterfaceCurrentMaxSvccVci at the low ATM interface port."

::= { atmSvcVcCrossConnectEntry 4 }

atmSvcVcCrossConnectHighIfIndex OBJECT-TYPE

SYNTAX InterfaceIndex

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The value of this object is equal to the ifIndex value for the ATM interface port for this SVCC cross-connect. The term high implies that this ATM interface has the numerically higher ifIndex value than the other ATM interface identified in the same atmSvcVcCrossConnectEntry."

::= { atmSvcVcCrossConnectEntry 5 }

atmSvcVcCrossConnectHighVpi OBJECT-TYPE

SYNTAX AtmVpIdentifier

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The value of this object is equal to the VPI value associated with the SVCC cross-connect at the ATM interface that is identified by atmSvcVcCrossConnectHighIfIndex. The VPI value cannot exceed the number supported by the atmInterfaceCurrentMaxSvccVpi at the high ATM interface port."

::= { atmSvcVcCrossConnectEntry 6 }

Expires June 2003

[Page 29]

## atmSvcVcCrossConnectHighVci OBJECT-TYPE

SYNTAX AtmVcIdentifier

MAX-ACCESS not-accessible

STATUS current

## DESCRIPTION

"The value of this object is equal to the VCI value associated with the SVCC cross-connect at the ATM interface that is identified by atmSvcVcCrossConnectHighIfIndex. The VCI value cannot exceed the number supported by the atmInterfaceMaxVciBits at the high ATM interface port."

::= { atmSvcVcCrossConnectEntry 7 }

## atmSvcVcCrossConnectCreationTime OBJECT-TYPE

SYNTAX TimeStamp

MAX-ACCESS read-only

STATUS current

## DESCRIPTION

"The value of the sysUpTime object at the time this bi-directional SVCC cross-connect was created. If the current state was entered prior to the last re-initialization of the agent, then this object contains a zero value."

::= { atmSvcVcCrossConnectEntry 8 }

## atmSvcVcCrossConnectRowStatus OBJECT-TYPE

SYNTAX RowStatus

MAX-ACCESS read-write

STATUS current

## DESCRIPTION

"This object is used to delete rows in the atmSvcVcCrossConnectTable."

::= { atmSvcVcCrossConnectEntry 9 }

## -- 3. ATM Interface Signalling Statistics Table --

## atmSigStatTable OBJECT-TYPE

SYNTAX SEQUENCE OF AtmSigStatEntry

MAX-ACCESS not-accessible

STATUS current

## DESCRIPTION

"This table contains ATM interface signalling statistics, one entry per ATM signalling interface."

::= { atm2MIBObjects 3 }



Expires June 2003

[Page 30]

atmSigStatEntry            OBJECT-TYPE

SYNTAX            AtmSigStatEntry

MAX-ACCESS       not-accessible

STATUS            current

DESCRIPTION

"This list contains signalling statistics variables."

INDEX { ifIndex }

::= { atmSigStatTable 1}

AtmSigStatEntry        ::= SEQUENCE {

atmSigSSCOPConEvents        Counter32,

atmSigSSCOPErrdPdus        Counter32,

atmSigDetectSetupAttempts   Counter32,

atmSigEmitSetupAttempts    Counter32,

atmSigDetectUnavailRoutes   Counter32,

atmSigEmitUnavailRoutes    Counter32,

atmSigDetectUnavailResrcs   Counter32,

atmSigEmitUnavailResrcs    Counter32,

atmSigDetectCldPtyEvents    Counter32,

atmSigEmitCldPtyEvents     Counter32,

atmSigDetectMsgErrors       Counter32,

atmSigEmitMsgErrors        Counter32,

atmSigDetectClgPtyEvents    Counter32,

atmSigEmitClgPtyEvents     Counter32,

atmSigDetectTimerExpires    Counter32,

atmSigEmitTimerExpires     Counter32,

atmSigDetectRestarts        Counter32,

atmSigEmitRestarts         Counter32,

atmSigInEstabls            Counter32,

atmSigOutEstabls            Counter32

}

atmSigSSCOPConEvents    OBJECT-TYPE

SYNTAX            Counter32

MAX-ACCESS       read-only

STATUS            current

DESCRIPTION

"SSCOP Connection Events Counter. This counter counts the sum of the following errors:

1) SSCOP Connection Disconnect Counter

The abnormal occurrence of this event is characterized by the expiry of Timer\_NO\_RESPONSE. (This event is communicated to the layer management with MAA-ERROR code P. See ITU-T Q.2110.)

Expires June 2003

[Page 31]

## 2) SSCOP Connection Initiation Failure

This condition indicates the inability to establish an SSCOP connection. This event occurs whenever the number of expiries of the connection control timer (Timer\_CC) equals or exceeds the MaxCC, or upon receipt of a connection reject message BGREJ PDU. (This event is communicated to layer management with MAA-ERROR code 0. See ITU-T Q.2110.)

## 3) SSCOP Connection Re-Establ/Resynch

This event occurs upon receipt of a BGN PDU or RS PDU."

## REFERENCE

"ITU-T Recommendation Q.2110, Broadband Integrated Services Digital Network (B-ISDN) - ATM Adaptation Layer - Service Specific Connection Oriented Protocol (SSCOP) Specification, July 1994."

::= { atmSigStatEntry 1}

atmSigSSCOPErrdPdu OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

## DESCRIPTION

"SSCOP Errored PDUs Counter. This counter counts the sum of the following errors:

## 1) Invalid PDUs.

These are defined in SSCOP and consist of PDUs with an incorrect length (MAA-ERROR code U), an undefined PDU type code, or that are not 32-bit aligned.

## 2) PDUs that result in MAA-ERROR codes and are

discarded.

See MAA-ERROR codes A-D, F-M, and Q-T defined in ITU-T Q.2110."

## REFERENCE

"ITU-T Recommendation Q.2110, Broadband Integrated Services Digital Network (B-ISDN) - ATM Adaptation Layer - Service Specific Connection Oriented Protocol (SSCOP)

Expires June 2003

[Page 32]

Specification, July 1994."  
 ::= { atmSigStatEntry 2 }

atmSigDetectSetupAttempts OBJECT-TYPE

SYNTAX Counter32  
MAX-ACCESS read-only  
STATUS current

DESCRIPTION

"Call Setup Attempts Counter. This counter counts the number of call setup attempts (both successful and unsuccessful) detected on this interface."

::= { atmSigStatEntry 3 }

atmSigEmitSetupAttempts OBJECT-TYPE

SYNTAX Counter32  
MAX-ACCESS read-only  
STATUS current

DESCRIPTION

"Call Setup Attempts Counter. This counter counts the number of call setup attempts (both successful and unsuccessful) transmitted on this interface."

::= { atmSigStatEntry 4 }

atmSigDetectUnavailRoutes OBJECT-TYPE

SYNTAX Counter32  
MAX-ACCESS read-only  
STATUS current

DESCRIPTION

"Number of Route Unavailability detected on this interface. This counter is incremented when a RELEASE, RELEASE COMPLETE (only when not preceded by a RELEASE message for the same call), ADD PARTY REJECT, or STATUS message that contains one of the following cause code values is received (Note: These cause values apply to both UNI3.0 and UNI3.1):

| Cause Value | Meaning                               |
|-------------|---------------------------------------|
| 1           | unallocated (unassigned) number       |
| 2           | no route to specified transit network |
| 3           | no route to destination               |

NOTE: For this counter, RELEASE COMPLETE messages that are a reply to a previous RELEASE message and contain the same cause value, are redundant (for counting purposes) and should not be counted."

Expires June 2003

[Page 33]

::= { atmSigStatEntry 5 }

atmSigEmitUnavailRoutes OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Number of Route Unavailability transmitted from this interface. This counter is incremented when a RELEASE, RELEASE COMPLETE (only when not preceded by a RELEASE message for the same call), ADD PARTY REJECT, or STATUS message that contains one of the following cause code values is transmitted (Note: These cause values apply to both UNI3.0 and UNI3.1):

| Cause Value | Meaning                               |
|-------------|---------------------------------------|
| 1           | unallocated (unassigned) number       |
| 2           | no route to specified transit network |
| 3           | no route to destination               |

NOTE: For this counter, RELEASE COMPLETE messages that are a reply to a previous RELEASE message and contain the same cause value, are redundant (for counting purposes) and should not be counted."

::= { atmSigStatEntry 6 }

atmSigDetectUnavailResrcs OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Number of Resource Unavailability detected on this interface. This counter is incremented when a RELEASE, RELEASE COMPLETE (only when not preceded by a RELEASE message for the same call), ADD PARTY REJECT, or STATUS message that contains one of the following

cause code values is received (Note: These cause values apply to both UNI3.0 and UNI3.1 unless otherwise stated):

| Cause Value | Meaning                              |
|-------------|--------------------------------------|
| 35          | requested VPCI/VCI not available     |
| 37          | user cell rate not available (UNI3.1 |



Expires June 2003

[Page 34]

- only)
- 38 network out of order
- 41 temporary failure
- 45 no VPCI/VCI available
- 47 resource unavailable, unspecified
- 49 Quality of Service unavailable
- 51 user cell rate not available (UNI3.0 only)
- 58 bearer capability not presently available
- 63 Service or option not available, unspecified
- 92 too many pending add party requests

NOTE: For this counter, RELEASE COMPLETE messages that are a reply to a previous RELEASE message and contain the same cause value, are redundant (for counting purposes) and should not be counted."

::= { atmSigStatEntry 7 }

atmSigEmitUnavailResrcs OBJECT-TYPE

SYNTAX Counter32  
 MAX-ACCESS read-only  
 STATUS current

DESCRIPTION

"Number of Resource Unavailability transmitted from this interface. This counter is incremented when a RELEASE, RELEASE COMPLETE (only when not preceded by a RELEASE message for the same call), ADD PARTY REJECT, or STATUS message that contains one of the following cause code values is transmitted (Note: These cause values apply to both UNI3.0 and UNI3.1 unless otherwise stated):

| Cause Value | Meaning                                    |
|-------------|--|
| 35          | requested VPCI/VCI not available           |
| 37          | user cell rate not available (UNI3.1 only) |
| 38          | network out of order                       |
| 41          | temporary failure                          |
| 45          | no VPCI/VCI available                      |
| 47          | resource unavailable, unspecified          |
| 49          | Quality of Service unavailable             |
| 51          | user cell rate not available (UNI3.0 only) |

Expires June 2003

[Page 35]

- 58 bearer capability not presently available
- 63 Service or option not available, unspecified
- 92 too many pending add party requests

NOTE: For this counter, RELEASE COMPLETE messages that are a reply to a previous RELEASE message and contain the same cause value, are redundant (for counting purposes) and should not be counted."

::= { atmSigStatEntry 8 }

atmSigDetectCldPtyEvents OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Number of Called Party Responsible For Unsuccessful Call detected on this interface. This counter is incremented when a RELEASE, RELEASE COMPLETE (only when not preceded by a RELEASE message for the same call), ADD PARTY REJECT, or STATUS message that contains one of the following cause code values is received (Note: These cause values apply to both UNI3.0 and UNI3.1):

| Cause Value | Meaning  |
|-------------|--|
| 17          | user busy  |
| 18          | no user responding   |
| 21          | call rejected  |
| 22          | number changed   |
| 23          | user rejects all calls with calling line identification restriction (CLIR) |
| 27          | destination out of order   |
| 31          | normal, unspecified  |
| 88          | incompatible destination   |

NOTE: For this counter, RELEASE COMPLETE messages that are a reply to a previous RELEASE message and contain the same cause value, are redundant (for counting purposes) and should not be counted.

Note: Cause Value #30 'response to STATUS ENQUIRY' was not included in this memo since it did not apply to a hard failure."

Expires June 2003

[Page 36]

::= { atmSigStatEntry 9 }

atmSigEmitCldPtyEvents OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Number of Called Party Responsible For Unsuccessful Call transmitted from this interface. This counter is incremented when a RELEASE, RELEASE COMPLETE (only when not preceded by a RELEASE message for the same call), ADD PARTY REJECT, or STATUS message that contains one of the following cause code values is transmitted (Note: These cause values apply to both UNI3.0 and UNI3.1):

| Cause Value | Meaning  |
|-------------|--|
| 17          | user busy  |
| 18          | no user responding   |
| 21          | call rejected  |
| 22          | number changed   |
| 23          | user rejects all calls with calling line identification restriction (CLIR) |
| 27          | destination out of order   |
| 31          | normal, unspecified  |
| 88          | incompatible destination   |

NOTE: For this counter, RELEASE COMPLETE messages that are a reply to a previous RELEASE message and contain the same cause value, are redundant (for counting purposes) and should not be counted.

Note: Cause Value #30 'response to STATUS ENQUIRY' was not included in this memo since it did not apply to a hard failure."

::= { atmSigStatEntry 10 }

atmSigDetectMsgErrors OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Number of Incorrect Messages detected on this interface. The Incorrect Messages Counter reflects any sort of incorrect information in a message. This includes:

Expires June 2003

[Page 37]

- RELEASE, RELEASE COMPLETE, ADD PARTY REJECT, and STATUS messages transmitted, that contain any of the Cause values listed below.
- Ignored messages. These messages are dropped because the message was so damaged that it could not be further processed. A list of dropped messages is compiled below:
  1. Message with invalid protocol discriminator
  2. Message with errors in the call reference I.E.
    - Bits 5-8 of the first octet not equal to '0000'
    - Bits 1-4 of the first octet indicating a length other than 3 octets
    - RELEASE COMPLETE message received with a call reference that does not relate to a call active or in progress
    - SETUP message received with call reference flag incorrectly set to 1
    - SETUP message received with a call reference for a call that is already active or in progress.
  3. Message too short

The following cause values are monitored by this counter (Note: These cause values apply to both UNI3.0 and UNI3.1 unless otherwise stated):

| Cause Value | Meaning   |
|-------------|---|
| 10          | VPCI/VCI unacceptable (UNI3.0 only)                 |
| 36          | VPCI/VCI assignment failure (UNI3.1 only)           |
| 81          | invalid call reference value                        |
| 82          | identified channel does not exist                   |
| 89          | invalid endpoint reference                          |
| 96          | mandatory information element is missing            |
| 97          | message type non-existent or not implemented        |
| 99          | information element non-existent or not implemented |
| 100         | invalid information element contents                |
| 101         | message not compatible with call state              |
| 104         | incorrect message length                            |



Expires June 2003

[Page 38]

111 protocol error, unspecified

NOTE: For this counter, RELEASE COMPLETE messages that are a reply to a previous RELEASE message and contain the same cause value, are redundant (for counting purposes) and should not be counted."

::= { atmSigStatEntry 11 }

atmSigEmitMsgErrors OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Number of Incorrect Messages transmitted on this interface. The Incorrect Messages Counter reflects any sort of incorrect information in a message. This includes:

- RELEASE, RELEASE COMPLETE, ADD PARTY REJECT, and STATUS messages transmitted or received, that contain any of the Cause values listed below.
- Ignored messages. These messages are dropped because the message was so damaged that it could not be further processed. A list of dropped messages is compiled below:
  1. Message with invalid protocol discriminator
  2. Message with errors in the call reference I.E.
    - Bits 5-8 of the first octet not equal to '0000'
    - Bits 1-4 of the first octet indicating a length other than 3 octets
    - RELEASE COMPLETE message received with a call reference that does not relate to a call active or in progress
    - SETUP message received with call reference flag incorrectly set to 1
    - SETUP message received with a call reference for a call that is already active or in progress.
  3. Message too short

The following cause values are monitored by this counter (Note: These cause values apply to both UNI3.0 and UNI3.1

Expires June 2003

[Page 39]

unless otherwise stated):

| Cause Value | Meaning   |
|-------------|---|
| 10          | VPCI/VCI unacceptable (UNI3.0 only)                 |
| 36          | VPCI/VCI assignment failure (UNI3.1 only)           |
| 81          | invalid call reference value                        |
| 82          | identified channel does not exist                   |
| 89          | invalid endpoint reference                          |
| 96          | mandatory information element is missing            |
| 97          | message type non-existent or not implemented        |
| 99          | information element non-existent or not implemented |
| 100         | invalid information element contents                |
| 101         | message not compatible with call state              |
| 104         | incorrect message length                            |
| 111         | protocol error, unspecified                         |

NOTE: For this counter, RELEASE COMPLETE messages that are a reply to a previous RELEASE message and contain the same cause value, are redundant (for counting purposes) and should not be counted."

```
::= { atmSigStatEntry 12 }
```

atmSigDetectClgPtyEvents      OBJECT-TYPE

SYNTAX            Counter32

MAX-ACCESS       read-only

STATUS            current

DESCRIPTION

"Number of Calling Party Events detected on this interface. This counter monitors error events that occur due to the originating user doing something wrong. This counter is incremented when a RELEASE, RELEASE COMPLETE (only when not preceded by a RELEASE message for the same call), ADD PARTY REJECT, or STATUS message that contains one of the following cause code values is received (Note: These cause values apply to both UNI3.0 and UNI3.1):

| Cause Value | Meaning                                       |
|-------------|---|
| 28          | invalid number format (address incomplete)    |
| 43          | access information discarded                  |
| 57          | bearer capability not authorized              |
| 65          | bearer capability not implemented             |
| 73          | unsupported combination of traffic parameters |

Expires June 2003

[Page 40]

- 78 AAL parameters cannot be supported (UNI3.1 only)
- 91 invalid transit network selection
- 93 AAL parameters cannot be supported (UNI3.0 only)

NOTE: For this counter, RELEASE COMPLETE messages that are a reply to a previous RELEASE message and contain the same cause value, are redundant (for counting purposes) and should not be counted."

::= { atmSigStatEntry 13 }

atmSigEmitClgPtyEvents OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Number of Calling Party Events transmitted from this interface. This counter monitors error events that occur due to the originating user doing something wrong. This counter is incremented when a RELEASE, RELEASE COMPLETE (only when not preceded by a RELEASE message for the same call), ADD PARTY REJECT, or STATUS message that contains one of the following cause code values is transmitted (Note: These cause values apply to both UNI3.0 and UNI3.1):

| Cause Value | Meaning  |
|-------------|--|
| 28          | invalid number format (address incomplete)       |
| 43          | access information discarded                     |
| 57          | bearer capability not authorized                 |
| 65          | bearer capability not implemented                |
| 73          | unsupported combination of traffic parameters    |
| 78          | AAL parameters cannot be supported (UNI3.1 only) |
| 91          | invalid transit network selection                |
| 93          | AAL parameters cannot be supported (UNI3.0 only) |

NOTE: For this counter, RELEASE COMPLETE messages that are a reply to a previous RELEASE message and contain the same cause value, are redundant (for counting purposes) and should not be counted."

::= { atmSigStatEntry 14 }

Expires June 2003

[Page 41]

## atmSigDetectTimerExpires OBJECT-TYPE

SYNTAX Counter32  
MAX-ACCESS read-only  
STATUS current

## DESCRIPTION

"Number of Timer Expiries detected on this interface. The Timer Expiries Counter provides a count of network timer expiries, and to some extent, host or switch timer expiries. The conditions for incrementing this counter are:

- Expiry of any network timer
- Receipt of a RELEASE or RELEASE COMPLETE message with Cause #102, 'recovery on timer expiry'.

NOTE: For this counter, RELEASE COMPLETE messages that are a reply to a previous RELEASE message and contain the same cause value, are redundant (for counting purposes) and should not be counted."

::= { atmSigStatEntry 15 }

## atmSigEmitTimerExpires OBJECT-TYPE

SYNTAX Counter32  
MAX-ACCESS read-only  
STATUS current

## DESCRIPTION

"Number of Timer Expiries transmitted from this interface. The Timer Expiries Counter provides a count of network timer expiries, and to some extent, host or switch timer expiries. The conditions for incrementing this counter are:

- Expiry of any network timer
- Receipt of a RELEASE or RELEASE COMPLETE message with Cause #102, 'recovery on timer expiry'.

NOTE: For this counter, RELEASE COMPLETE messages that are a reply to a previous RELEASE message and contain the same cause value, are redundant (for counting purposes) and should not be counted."

::= { atmSigStatEntry 16 }



Expires June 2003

[Page 42]

atmSigDetectRestarts      OBJECT-TYPE

SYNTAX                  Counter32

MAX-ACCESS              read-only

STATUS                  current

DESCRIPTION

"Number of Restart Activity errors detected on this interface. The Restart Activity Counter provides a count of host, switch, or network restart activity. This counter is incremented when receiving a RESTART message."

::= { atmSigStatEntry 17 }

atmSigEmitRestarts        OBJECT-TYPE

SYNTAX                  Counter32

MAX-ACCESS              read-only

STATUS                  current

DESCRIPTION

"Number of Restart Activity errors transmitted from this interface. The Restart Activity Counter provides a count of host, switch, or network restart activity. This counter is incremented when transmitting a RESTART message."

::= { atmSigStatEntry 18 }

atmSigInEstabls          OBJECT-TYPE

SYNTAX                  Counter32

MAX-ACCESS              read-only

STATUS                  current

DESCRIPTION

"Number of SVCs established at this signalling entity for incoming connections."

::= { atmSigStatEntry 19 }

atmSigOutEstabls         OBJECT-TYPE

SYNTAX                  Counter32

MAX-ACCESS              read-only

STATUS                  current

DESCRIPTION

"Number of SVCs established at this signalling entity for outgoing connections."

::= { atmSigStatEntry 20 }

-- 4. ATM Interface Signalling Support Table

--

-- This table provides information to support  
-- the signalling process which is used to establish  
-- ATM Switched Virtual Connections (SVCs).

Expires June 2003

[Page 43]

```

atmSigSupportTable      OBJECT-TYPE
    SYNTAX      SEQUENCE OF AtmSigSupportEntry
    MAX-ACCESS  not-accessible
    STATUS      current
    DESCRIPTION
        "This table contains ATM local interface configuration
        parameters, one entry per ATM signalling interface."
    ::= { atm2MIBObjects 4 }

atmSigSupportEntry      OBJECT-TYPE
    SYNTAX      AtmSigSupportEntry
    MAX-ACCESS  not-accessible
    STATUS      current
    DESCRIPTION
        "This list contains signalling configuration parameters
        and state variables."
    INDEX { ifIndex }
    ::= { atmSigSupportTable 1}

AtmSigSupportEntry     ::= SEQUENCE {
    atmSigSupportClgPtyNumDel      INTEGER,
    atmSigSupportClgPtySubAddr    INTEGER,
    atmSigSupportCldPtySubAddr    INTEGER,
    atmSigSupportHiLyrInfo        INTEGER,
    atmSigSupportLoLyrInfo        INTEGER,
    atmSigSupportBlliRepeatInd    INTEGER,
    atmSigSupportAALInfo          INTEGER,
    atmSigSupportPrefCarrier      OCTET STRING
}

atmSigSupportClgPtyNumDel  OBJECT-TYPE
    SYNTAX      INTEGER { enabled(1), disabled(2) }
    MAX-ACCESS  read-write
    STATUS      current
    DESCRIPTION
        "This object indicates whether the Calling Party Number
        Information Element is transferred to the called party
        address.  The value of this object can be:

        - enabled(1) This Information Element is transferred
          to the called party

        - disabled(2) This Information Element is NOT
          transferred to the called party."

    ::= { atmSigSupportEntry 1 }

atmSigSupportClgPtySubAddr  OBJECT-TYPE

```

Expires June 2003

[Page 44]

SYNTAX           INTEGER { enabled(1), disabled(2) }  
MAX-ACCESS       read-write  
STATUS            current

## DESCRIPTION

"This object indicates whether to accept and transfer the Calling Party Subaddress Information Element from the calling party to the called party. Calling party subaddress information shall only be transferred to the called party if calling party number delivery is enabled (i.e., atmSigSupportClgPtyNumDel = 'enabled(1)'). The value of this object can be:

- enabled(1) This Information Element is transferred to the called party
- disabled(2) This Information Element is NOT transferred to the called party."

::= { atmSigSupportEntry 2 }

atmSigSupportCldPtySubAddr    OBJECT-TYPE

SYNTAX           INTEGER { enabled(1), disabled(2) }  
MAX-ACCESS       read-write  
STATUS            current

## DESCRIPTION

"This object indicates whether to accept, transfer, and deliver the Called Party Subaddress Information Element from the calling party to the called party. The value of this object can be:

- enabled(1) This Information Element is transferred to the called party
- disabled(2) This Information Element is NOT transferred to the called party."

::= { atmSigSupportEntry 3 }

atmSigSupportHiLyrInfo       OBJECT-TYPE

SYNTAX           INTEGER { enabled(1), disabled(2) }  
MAX-ACCESS       read-write  
STATUS            current

## DESCRIPTION

"This object indicates whether to accept, transfer, and deliver the Broadband High Layer Information Element from the calling party to the called party. The value of this object can be:

- enabled(1) This Information Element is transferred to the called party

Expires June 2003

[Page 45]

- disabled(2) This Information Element is NOT transferred to the called party."

::= { atmSigSupportEntry 4 }

atmSigSupportLoLyrInfo OBJECT-TYPE

SYNTAX INTEGER { enabled(1), disabled(2) }

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"This object indicates whether to accept, transfer, and deliver the Broadband Low Layer Information Element from the calling party to the called party. The value of this object can be:

- enabled(1) This Information Element is transferred to the called party
- disabled(2) This Information Element is NOT transferred to the called party."

::= { atmSigSupportEntry 5 }

atmSigSupportBlliRepeatInd OBJECT-TYPE

SYNTAX INTEGER { enabled(1), disabled(2) }

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"This object indicates whether to accept, transfer, and deliver the Broadband Repeat Indicator with two or three instances of the Broadband Low Layer Information Element for low layer information selection from the calling party to the called party. This object's value should always be disabled(2) if the value of atmSigSupportLoLyrInfo is disabled(2).

The value of this object can be:

- enabled(1) This Information Element is transferred to the called party
- disabled(2) This Information Element is NOT transferred to the called party."

::= { atmSigSupportEntry 6 }

atmSigSupportAALInfo OBJECT-TYPE

SYNTAX INTEGER { enabled(1), disabled(2) }

MAX-ACCESS read-write

STATUS current



Expires June 2003

[Page 46]

## DESCRIPTION

"This object indicates whether to accept, transfer, and deliver the ATM Adaptation Layer Parameters Information Element from the calling party to the called party. The value of this object can be:

- enabled(1) This Information Element is transferred to the called party
- disabled(2) This Information Element is NOT transferred to the called party."

::= { atmSigSupportEntry 7 }

atmSigSupportPrefCarrier      OBJECT-TYPE  
SYNTAX            OCTET STRING (SIZE(0|4))  
MAX-ACCESS      read-write  
STATUS            current

## DESCRIPTION

"This parameter identifies the carrier to which intercarrier calls originated from this interface are routed when transit

network selection information is not provided by the calling party. If a Carrier Identification Code (CIC) is used the parameter shall contain the CIC. For three-digit CICs, the first octet shall be '0' and the CIC is contained in the three following octets. If the preferred carrier feature is not supported the value is a zero-length string."

::= { atmSigSupportEntry 8 }

-- 5. ATM Signalling Descriptor Parameter Table

atmSigDescrParamTable      OBJECT-TYPE  
SYNTAX            SEQUENCE OF AtmSigDescrParamEntry  
MAX-ACCESS      not-accessible  
STATUS            current

## DESCRIPTION

"A table contains signalling capabilities of VCLs except the Traffic Descriptor. Traffic descriptors are described in the atmTrafficDescrParamTable."

## REFERENCE

"ATM User-Network Interface Specification, Version 3.1 (UNI 3.1), September 1994, [Section 5.4.5](#) Variable Length Information Elements."

Expires June 2003

[Page 47]

```
 ::= { atm2MIBObjects 5 }
```

```
atmSigDescrParamEntry      OBJECT-TYPE
    SYNTAX      AtmSigDescrParamEntry
    MAX-ACCESS  not-accessible
    STATUS      current
    DESCRIPTION
        "Each entry in this table represents a
        set of signalling capabilities that can
        be applied to a VCL.  There is no requirement
        for unique entries, except that the index must
        be unique."
    INDEX { atmSigDescrParamIndex }
    ::= { atmSigDescrParamTable 1 }
```

```
AtmSigDescrParamEntry ::=
    SEQUENCE {
        atmSigDescrParamIndex
                                AtmSigDescrParamIndex,
        atmSigDescrParamAalType      INTEGER,
        atmSigDescrParamAalSscsType  INTEGER,
        atmSigDescrParamBhliType     INTEGER,

        atmSigDescrParamBhliInfo     OCTET STRING,
        atmSigDescrParamBbcConnConf  INTEGER,
        atmSigDescrParamBlliLayer2   INTEGER,
        atmSigDescrParamBlliLayer3   INTEGER,
        atmSigDescrParamBlliPktSize  INTEGER,
        atmSigDescrParamBlliSnapId   INTEGER,
        atmSigDescrParamBlliOuiPid   OCTET STRING,
        atmSigDescrParamRowStatus    RowStatus
    }
```

```
atmSigDescrParamIndex OBJECT-TYPE
    SYNTAX      AtmSigDescrParamIndex
    MAX-ACCESS  not-accessible
    STATUS      current
    DESCRIPTION
        "The value of this object is used by the
        atmVclGenSigDescrIndex object in the atmVclGenTable to
        identify a row in this table."
```

```
 ::= { atmSigDescrParamEntry 1 }
```

```
atmSigDescrParamAalType OBJECT-TYPE
    SYNTAX      INTEGER {
        other(1),      -- not defined
```

Expires June 2003

[Page 48]

```

    aal1(2),          -- AAL type 1
    aal34(3),         -- AAL type 3/4
    aal5(4),          -- AAL type 5
    userDefined(5),  -- User-Defined AAL
    aal2(6)           -- AAL type 2
  }
MAX-ACCESS    read-create
STATUS        current
DESCRIPTION
  "The AAL type.  The value of this object is set to other(1)
  when not defined."

DEFVAL { other }
 ::= { atmSigDescrParamEntry 2 }

```

atmSigDescrParamAalSscsType OBJECT-TYPE

```

SYNTAX        INTEGER {
    other(1),          -- other, or not used
    assured(2),       -- Data SSCS based on SSCOP
                      -- assured operation
    nonassured(3),   -- Data SSCS based on SSCOP
                      -- non-assured operation
    frameRelay(4),   -- frame relay SSCS
    null(5)           -- null
  }
MAX-ACCESS    read-create
STATUS        current
DESCRIPTION
  "The SSCS type used by this entry."

DEFVAL { other }
 ::= { atmSigDescrParamEntry 3 }

```

atmSigDescrParamBhliType OBJECT-TYPE

```

SYNTAX        INTEGER {
    other(1),          -- not defined
    iso(2),           -- ISO
    user(3),          -- User specific
    hiProfile(4),     -- Higher layer profile
                      -- this enum applicable to
                      -- UNI 3.0 only
    vendorSpecific(5) -- Vender specific
                      -- application identifier
  }
MAX-ACCESS    read-create
STATUS        current

```

Expires June 2003

[Page 49]

## DESCRIPTION

"The Broadband high layer type."

DEFVAL { other }

::= { atmSigDescrParamEntry 4 }

## atmSigDescrParamBhliInfo OBJECT-TYPE

SYNTAX OCTET STRING (SIZE(0..8))

MAX-ACCESS read-create

STATUS current

## DESCRIPTION

"The Broadband high layer information. When atmSigDescrParamBhliType is set to iso(2), the value of this object is a zero length string. When atmSigDescrParamBhliType is set to user(3), the value of this object is an octet string with length ranging from 0 to 8. When atmSigDescrParamBhliType is set to hiProfile(4), the value of this object is a length of 4 octet string containing user to user profile identifier. When atmSigDescrParamBhliType is set to vendorSpecific(5), the value of this object is a length of 7 octet string, where the most significant 3 octets consist of a globally-administered OUI, and the least significant 4 octets are the vender administered application OUI."

DEFVAL { 'H' }

::= { atmSigDescrParamEntry 5 }

## atmSigDescrParamBbcConnConf OBJECT-TYPE

SYNTAX INTEGER {  
    ptp(1), -- point-to-point  
    ptmp(2) -- point-to-multipoint  
}

MAX-ACCESS read-create

STATUS current

## DESCRIPTION

"The Broadband bearer capability user plane connection configuration parameter."

DEFVAL { ptp }

::= { atmSigDescrParamEntry 6 }

## atmSigDescrParamBlliLayer2 OBJECT-TYPE

SYNTAX INTEGER {  
    other(1), -- not specified  
    iso1745(2), -- Basic mode ISO 1745  
    q921(3), -- CCITT Recommendation Q.921



Expires June 2003

[Page 50]

```

x25linklayer(4), -- CCITT Recommendation X.25
                  -- Link Layer
x25multilink(5), -- CCITT Recommendation X.25
                  -- Multilink
lapb(6),         -- Extended LAPB; for half
                  -- duplex operation
hdlcArm(7),     -- HDLC ARM (ISO 4335)
hdlcNrm(8),     -- HDLC NRM (ISO 4335)
hdlcAbm(9),     -- HDLC ABM (ISO 4335)
iso88022(10),   -- LAN logical link control
                  -- (ISO 8802/2)
x75slp(11),    -- CCITT Recommendation X.75,
                  -- single link
                  -- procedure (SLP)
q922(12),      -- CCITT Recommendation Q.922
userDef(13),   -- User specified
iso7776(14)   -- ISO 7776 DTE-DTE operation
}
MAX-ACCESS      read-create
STATUS          current
DESCRIPTION
  "The Broadband low layer information, protocol type of layer
  2. The value of this object is other(1) if layer 2 protocol
  is not used."

DEFVAL { other }
 ::= { atmSigDescrParamEntry 7 }

```

#### atmSigDescrParamBlliLayer3 OBJECT-TYPE

```

SYNTAX          INTEGER {
  other(1),     -- not specified
  x25pkt(2),    -- CCITT Recommendation X.25
                  -- packet layer
  isoiec8208(3), -- ISO/IEC 8208 (X.25 packet
                  -- level protocol for data
                  -- terminal equipment)
  x223iso8878(4), -- X.223/ISO 8878
  isoiec8473(5), -- ISO/IEC 8473 OSI
                  -- connectionless
                  -- mode protocol
  t70(6),      -- CCITT Recommendation T.70
                  -- minimum
                  -- network layer
  tr9577(7),   -- ISO/IEC TR 9577 Protocol
                  -- Identification in the
                  -- network layer
  userDef(8)   -- user specified
}

```

Expires June 2003

[Page 51]

```
    }
    MAX-ACCESS    read-create
    STATUS        current
    DESCRIPTION
        "The Broadband low layer information, protocol type of layer
        3. The value of this object is other(1) if layer 3 protocol
        is not used."

    DEFVAL { other }
    ::= { atmSigDescrParamEntry 8 }

atmSigDescrParamBlliPktSize OBJECT-TYPE
    SYNTAX        INTEGER {
        other(1),      -- not used
        s16(2),        -- 16 octets
        s32(3),        -- 32 octets
        s64(4),        -- 64 octets
        s128(5),       -- 128 octets
        s256(6),       -- 256 octets
        s512(7),       -- 512 octets
        s1024(8),      -- 1028 octets
        s2048(9),      -- 2048 octets
        s4096(10)     -- 4096 octets
    }
    MAX-ACCESS    read-create
    STATUS        current
    DESCRIPTION
        "The default packet size defined in B-LLI."

    DEFVAL { other }
    ::= { atmSigDescrParamEntry 9 }

atmSigDescrParamBlliSnapId OBJECT-TYPE
    SYNTAX        INTEGER {
        other(1),      -- not used
        true(2),       -- SNAP ID is 1
        false(3)       -- SNAP ID is 0
    }
    MAX-ACCESS    read-create
    STATUS        current
    DESCRIPTION
        "The SNAP ID used for Broadband low layer protocol layer 3.
        The value of this object is other(1) if
        atmSigDescrParamBlliLayer3 is set to other(1)."
```

```
    DEFVAL { other }
    ::= { atmSigDescrParamEntry 10 }
```

Expires June 2003

[Page 52]

## atmSigDescrParamBlliOuiPid OBJECT-TYPE

SYNTAX OCTET STRING (SIZE(0|5))

MAX-ACCESS read-create

STATUS current

## DESCRIPTION

"The OUI/PID encoding for Broadband low layer protocol layer 3. The value of this object is a zero length string if atmSigDescrParamBlliLayer3 is set to other(1). When used, it is always 5 octets with the most significant octet as the OUI Octet 1 and the least significant octet as the PID Octet 2."

DEFVAL { ''H }

::= { atmSigDescrParamEntry 11 }

## atmSigDescrParamRowStatus OBJECT-TYPE

SYNTAX RowStatus

MAX-ACCESS read-create

STATUS current

## DESCRIPTION

"This object is used to create and delete rows in the atmSigDescrParamTable."

::= { atmSigDescrParamEntry 12 }

## -- 6. ATM Interface Registered Address Table --

## atmIfRegisteredAddrTable OBJECT-TYPE

SYNTAX SEQUENCE OF AtmIfRegisteredAddrEntry

MAX-ACCESS not-accessible

STATUS current

## DESCRIPTION

"This table contains a list of ATM addresses that can be used for calls to and from a given interface by a switch or service. The ATM addresses are either registered by the endsystem via ILMI or statically configured. This table does not expose PNNI reachability information. ILMI registered addresses cannot be deleted using this table. This table only applies to switches and network services."

::= { atm2MIBObjects 6 }

## atmIfRegisteredAddrEntry OBJECT-TYPE

SYNTAX AtmIfRegisteredAddrEntry

MAX-ACCESS not-accessible

STATUS current

## DESCRIPTION

Expires June 2003

[Page 53]

"An entry in the ATM Interface Registered Address table."

```
INDEX { ifIndex, atmIfRegAddrAddress }  
 ::= { atmIfRegisteredAddrTable 1}
```

```
AtmIfRegisteredAddrEntry ::= SEQUENCE {  
    atmIfRegAddrAddress      AtmAddr,  
    atmIfRegAddrAddressSource INTEGER,  
    atmIfRegAddrOrgScope     INTEGER,  
    atmIfRegAddrRowStatus    RowStatus  
}
```

atmIfRegAddrAddress OBJECT-TYPE

SYNTAX AtmAddr

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"An address registered for a given switch or service interface."

```
 ::= { atmIfRegisteredAddrEntry 1}
```

atmIfRegAddrAddressSource OBJECT-TYPE

```
SYNTAX INTEGER {  
    other(1),  
    static(2),  
    dynamic(3)  
}
```

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The type of address source for a given ATM Address. The value dynamic(3) is indicated when ILMI is used."

```
 ::= { atmIfRegisteredAddrEntry 2}
```

atmIfRegAddrOrgScope OBJECT-TYPE

```
SYNTAX INTEGER {  
    localNetwork(1),  
    localNetworkPlusOne(2),  
    localNetworkPlusTwo(3),  
    siteMinusOne(4),  
    intraSite(5),  
    sitePlusOne(6),  
    organizationMinusOne(7),  
    intraOrganization(8),  
    organizationPlusOne(9),  
    communityMinusOne(10),  
    intraCommunity(11),  
    communityPlusOne(12),
```



Expires June 2003

[Page 54]

```
    regional(13),
    interRegional(14),
    global(15)
}
MAX-ACCESS    read-create
STATUS        current
DESCRIPTION
    "This object indicates the organizational scope for
    the referenced address.  The information of the
    referenced address shall not be distributed outside
    the indicated scope.  Refer to Annex 5.3 of ATM
    Forum UNI Signalling 4.0 for guidelines regarding
    the use of organizational scopes.
```

This value cannot be configured for ILMI-registered addresses.

The default values for organizational scope are localNetwork(1) for ATM group addresses, and global(15) for individual addresses."

```
::= { atmIfRegisteredAddrEntry 3 }
```

atmIfRegAddrRowStatus OBJECT-TYPE

```
SYNTAX        RowStatus
MAX-ACCESS    read-create
STATUS        current
DESCRIPTION
    "This object is used to create and delete rows in the
    atmIfRegisteredAddrTable.  Rows created dynamically (e.g., ILMI-
    registered addresses) cannot be deleted using this object."
```

```
::= { atmIfRegisteredAddrEntry 4 }
```

-- 7. ATM VPI/VCI to Address Mapping Table

atmVclAddrTable OBJECT-TYPE

```
SYNTAX        SEQUENCE OF AtmVclAddrEntry
MAX-ACCESS    not-accessible
STATUS        current
DESCRIPTION
    "This table provides a mapping between the atmVclTable and
    the ATM called party/calling party address.  This table can
    be used to retrieve the calling party and called party ATM
    address pair for a given VCL.  Note that there can be more
    than one pair of calling party and called party ATM
    addresses for a VCL in a point to multi-point call."
```

```
::= { atm2MIBObjects 7 }
```

Expires June 2003

[Page 55]

```

atmVclAddrEntry    OBJECT-TYPE
  SYNTAX           AtmVclAddrEntry
  MAX-ACCESS       not-accessible
  STATUS           current
  DESCRIPTION
    "Each entry in this table represents a binding between a VCL
    and an ATM address associated with this call.  This ATM
    address can be either the called party address or the
    calling party address.  There can be more than one pair of
    calling/called party ATM addresses associated with the VCL
    entry for point to multi-point calls.  Objects
    atmVclAddrType, and atmVclAddrRowStatus are
    required during row creation."
  INDEX { ifIndex, atmVclVpi, atmVclVci,
          atmVclAddrAddr }
  ::= { atmVclAddrTable 1 }

```

```

AtmVclAddrEntry ::=
  SEQUENCE {
    atmVclAddrAddr      AtmAddr,
    atmVclAddrType      INTEGER,
    atmVclAddrRowStatus RowStatus
  }

```

```

atmVclAddrAddr    OBJECT-TYPE
  SYNTAX           AtmAddr
  MAX-ACCESS       not-accessible
  STATUS           current
  DESCRIPTION
    "An ATM address on one end of the VCL.  For SVCs, the agent
    supplies the value of this object at creation time.  For PVC
    VCL, the manager can supply the value of this object during
    or after the PVC VCL creation."
  ::= { atmVclAddrEntry 1 }

```

```

atmVclAddrType    OBJECT-TYPE
  SYNTAX           INTEGER {
    callingParty(1),
    calledParty(2)
  }
  MAX-ACCESS       read-create
  STATUS           current
  DESCRIPTION
    "The type of ATM Address represented by the object
    atmVclAddrAddr.  Choices are either the calling party ATM
    address or the called party ATM address."

```

Expires June 2003

[Page 56]

```
::= { atmVclAddrEntry 2 }
```

```
atmVclAddrRowStatus      OBJECT-TYPE
```

```
SYNTAX      RowStatus
```

```
MAX-ACCESS  read-create
```

```
STATUS      current
```

```
DESCRIPTION
```

```
"This object is used to create or destroy an
entry from this table. Note that the manager entity
can only destroy the PVC VCLs."
```

```
::= { atmVclAddrEntry 3 }
```

```
-- 8. ATM Address to VPI/VCI Mapping Table
```

```
--
```

```
-- This table provides an alternative way to access
-- a row in the atmVclAddrTable by using
-- an ATM address as an index, instead of
-- the ifIndex
```

```
atmAddrVclTable          OBJECT-TYPE
```

```
SYNTAX      SEQUENCE OF AtmAddrVclEntry
```

```
MAX-ACCESS  not-accessible
```

```
STATUS      current
```

```
DESCRIPTION
```

```
"This table provides an alternative way to retrieve the
atmVclTable. This table can be used to retrieve the
indexing to the atmVclTable by an ATM address."
```

```
::= { atm2MIBObjects 8 }
```

```
atmAddrVclEntry          OBJECT-TYPE
```

```
SYNTAX      AtmAddrVclEntry
```

```
MAX-ACCESS  not-accessible
```

```
STATUS      current
```

```
DESCRIPTION
```

```
"Each entry in this table represents an entry in the
atmVclTable of the ATM-MIB by its ATM address. The ATM
address is either the calling or called party ATM address
of the call. Entries in this table are read only.
They show up when entries are created in the
atmVclAddrTable."
```

```
REFERENCE
```

```
"Tesink, K., Editor, Definitions of Managed Objects
for ATM Management, RFC 2515, Bell Communications
Research, February, 1999."
```

```
INDEX { atmVclAddrAddr, atmAddrVclAtmIfIndex,
        atmAddrVclVpi, atmAddrVclVci }
```

```
::= { atmAddrVclTable 1 }
```

Expires June 2003

[Page 57]

AtmAddrVclEntry ::=

```
SEQUENCE {
    atmAddrVclAtmIfIndex    InterfaceIndex,
    atmAddrVclVpi           AtmVpIdentifier,
    atmAddrVclVci           AtmVcIdentifier,
    atmAddrVclAddrType      INTEGER
}
```

atmAddrVclAtmIfIndex OBJECT-TYPE

SYNTAX InterfaceIndex

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The interface index of the ATM interface to which this VCL pertains. This object combined with the atmAddrVclVpi and atmAddrVclVci objects serves as an index to the atmVclTable."

::= { atmAddrVclEntry 1 }

atmAddrVclVpi OBJECT-TYPE

SYNTAX AtmVpIdentifier

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The VPI value of the VCL. This object combined with the atmAddrVclAtmIfIndex and atmAddrVclVci objects serves as an index to the atmVclTable."

::= { atmAddrVclEntry 2 }

atmAddrVclVci OBJECT-TYPE

SYNTAX AtmVcIdentifier

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The VCI value of the VCL. This object combined with the atmAddrVclAtmIfIndex and atmAddrVclVpi objects serves as an index to the atmVclTable."

::= { atmAddrVclEntry 3 }

atmAddrVclAddrType OBJECT-TYPE

SYNTAX INTEGER {  
 callingParty(1),  
 calledParty(2) }

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The type of ATM Address represented by the object atmVclAddrAddr. Choices are either calling party address



Expires June 2003

[Page 58]

or called party address."  
 ::= { atmAddrVclEntry 4 }

-- 9. ATM VPL Statistics Table

atmVplStatTable OBJECT-TYPE  
 SYNTAX SEQUENCE OF AtmVplStatEntry  
 MAX-ACCESS not-accessible  
 STATUS current  
 DESCRIPTION  
 "This table contains all statistics counters per VPL. It is  
 used to monitor the usage of the VPL in terms of incoming  
 cells and outgoing cells."  
 ::= { atm2MIBObjects 9 }

atmVplStatEntry OBJECT-TYPE  
 SYNTAX AtmVplStatEntry  
 MAX-ACCESS not-accessible  
 STATUS current  
 DESCRIPTION  
 "Each entry in this table represents a VPL."  
 INDEX { ifIndex, atmVplVpi }  
 ::= { atmVplStatTable 1 }

AtmVplStatEntry ::=  
 SEQUENCE {  
 atmVplStatTotalCellIns Counter32,  
 atmVplStatClp0CellIns Counter32,  
 atmVplStatTotalDiscards Counter32,  
 atmVplStatClp0Discards Counter32,  
 atmVplStatTotalCellOuts Counter32,  
 atmVplStatClp0CellOuts Counter32,  
 atmVplStatClp0Tagged Counter32  
 }

atmVplStatTotalCellIns OBJECT-TYPE  
 SYNTAX Counter32  
 MAX-ACCESS read-only  
 STATUS current  
 DESCRIPTION  
 "The total number of valid ATM cells received by this VPL  
 including both CLP=0 and CLP=1 cells. The cells are  
 counted prior to the application of the traffic policing."  
 ::= { atmVplStatEntry 1 }

atmVplStatClp0CellIns OBJECT-TYPE  
 SYNTAX Counter32  
 MAX-ACCESS read-only

Expires June 2003

[Page 59]

STATUS current

DESCRIPTION

"The number of valid ATM cells received by this VPL with CLP=0. The cells are counted prior to the application of the traffic policing."

::= { atmVplStatEntry 2 }

atmVplStatTotalDiscards OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The total number of valid ATM cells discarded by the traffic policing entity. This includes cells originally received with CLP=0 and CLP=1."

::= { atmVplStatEntry 3 }

atmVplStatClp0Discards OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The total number of valid ATM cells received with CLP=0 and discarded by the traffic policing entity."

::= { atmVplStatEntry 4 }

atmVplStatTotalCellOuts OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The total number of valid ATM cells transmitted by this VPL. This includes both CLP=0 and CLP=1 cells."

::= { atmVplStatEntry 5 }

atmVplStatClp0CellOuts OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The total number of valid ATM cells transmitted with CLP=0 by this VPL."

::= { atmVplStatEntry 6 }

atmVplStatClp0Tagged OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

Expires June 2003

[Page 60]

## DESCRIPTION

"The total number of valid ATM cells tagged by the traffic policing entity from CLP=0 to CLP=1."

::= { atmVplStatEntry 7 }

## -- 10. ATM Logical Port Configuration Table

## atmVplLogicalPortTable OBJECT-TYPE

SYNTAX SEQUENCE OF AtmVplLogicalPortEntry

MAX-ACCESS not-accessible

STATUS current

## DESCRIPTION

"Indicates whether the VPL is an ATM Logical Port interface (ifType=80)."

::= { atm2MIBObjects 10 }

## atmVplLogicalPortEntry OBJECT-TYPE

SYNTAX AtmVplLogicalPortEntry

MAX-ACCESS not-accessible

STATUS current

## DESCRIPTION

"An entry with information about the ATM Logical Port interface."

AUGMENTS { atmVplEntry }

::= { atmVplLogicalPortTable 1 }

## AtmVplLogicalPortEntry ::=

SEQUENCE {

atmVplLogicalPortDef INTEGER,

atmVplLogicalPortIndex InterfaceIndexOrZero

}

## atmVplLogicalPortDef OBJECT-TYPE

SYNTAX INTEGER {  
notLogicalIf(1),  
isLogicalIf(2)  
}

MAX-ACCESS read-create

STATUS current

## DESCRIPTION

"Indicates whether the VPC at this VPL interface is an ATM Logical Port interface."

DEFVAL { notLogicalIf }

::= { atmVplLogicalPortEntry 1 }

## atmVplLogicalPortIndex OBJECT-TYPE

SYNTAX InterfaceIndexOrZero

MAX-ACCESS read-only

Expires June 2003

[Page 61]

```

STATUS          current
DESCRIPTION
    "The ifTable index of the ATM logical port interface
    associated with this VPL. The distinguished value of zero
    indicates that the agent has not (yet) assigned such an
    ifTable Index. The zero value must be assigned by the agent
    if the value of atmVplLogicalPortDef is set to notLogicalIf,
    or if the VPL row is not active."
 ::= { atmVplLogicalPortEntry 2 }

```

-- 11. ATM VCL Statistics Table

```

atmVclStatTable OBJECT-TYPE
    SYNTAX          SEQUENCE OF AtmVclStatEntry
    MAX-ACCESS      not-accessible
    STATUS          current
    DESCRIPTION
        "This table contains all statistics counters per VCL. It is
        used to monitor the usage of the VCL in terms of incoming
        cells and outgoing cells."
 ::= { atm2MIBObjects 11 }

```

```

atmVclStatEntry OBJECT-TYPE
    SYNTAX          AtmVclStatEntry
    MAX-ACCESS      not-accessible
    STATUS          current
    DESCRIPTION
        "Each entry in this table represents a VCL."
    INDEX { ifIndex, atmVclVpi, atmVclVci }
 ::= { atmVclStatTable 1 }

```

```

AtmVclStatEntry ::=
    SEQUENCE {
        atmVclStatTotalCellIns      Counter32,
        atmVclStatClp0CellIns      Counter32,
        atmVclStatTotalDiscards    Counter32,
        atmVclStatClp0Discards     Counter32,
        atmVclStatTotalCellOuts    Counter32,
        atmVclStatClp0CellOuts     Counter32,
        atmVclStatClp0Tagged       Counter32
    }

```

```

atmVclStatTotalCellIns OBJECT-TYPE
    SYNTAX          Counter32
    MAX-ACCESS      read-only
    STATUS          current
    DESCRIPTION
        "The total number of valid ATM cells received by this VCL

```



Expires June 2003

[Page 62]

including both CLP=0 and CLP=1 cells. The cells are counted prior to the application of the traffic policing."  
 ::= { atmVclStatEntry 1 }

atmVclStatClp0CellIns OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The number of valid ATM cells received by this VCL with CLP=0. The cells are counted prior to the application of the traffic policing."

::= { atmVclStatEntry 2 }

atmVclStatTotalDiscards OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The total number of valid ATM cells discarded by the traffic policing entity. This includes cells originally received with CLP=0 and CLP=1."

::= { atmVclStatEntry 3 }

atmVclStatClp0Discards OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The total number of valid ATM cells received with CLP=0 and discarded by the traffic policing entity."

::= { atmVclStatEntry 4 }

atmVclStatTotalCellOuts OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The total number of valid ATM cells transmitted by this VCL. This includes both CLP=0 and CLP=1 cells."

::= { atmVclStatEntry 5 }

atmVclStatClp0CellOuts OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The total number of valid ATM cells transmitted with CLP=0

Expires June 2003

[Page 63]

by this VCL."  
 ::= { atmVclStatEntry 6 }

atmVclStatClp0Tagged OBJECT-TYPE

SYNTAX Counter32  
 MAX-ACCESS read-only  
 STATUS current  
 DESCRIPTION

"The total number of valid ATM cells tagged by the traffic  
 policing entity from CLP=0 to CLP=1."

::= { atmVclStatEntry 7 }

-- 12. ATM AAL5 per-VCC Statistics Table

atmAal5VclStatTable OBJECT-TYPE

SYNTAX SEQUENCE OF AtmAal5VclStatEntry  
 MAX-ACCESS not-accessible  
 STATUS current  
 DESCRIPTION

"This table provides a collection of objects providing AAL5  
 configuration and performance statistics of a VCL."

::= { atm2MIBObjects 12 }

atmAal5VclStatEntry OBJECT-TYPE

SYNTAX AtmAal5VclStatEntry  
 MAX-ACCESS not-accessible  
 STATUS current  
 DESCRIPTION

"Each entry in this table represents an AAL5 VCL, and  
 is indexed by ifIndex values of AAL5 interfaces and  
 the associated VPI/VCI values."

INDEX { ifIndex, atmVclVpi, atmVclVci }  
 ::= { atmAal5VclStatTable 1 }

AtmAal5VclStatEntry ::=

SEQUENCE {  
   atmAal5VclInPkts Counter32,  
   atmAal5VclOutPkts Counter32,  
   atmAal5VclInOctets Counter32,  
   atmAal5VclOutOctets Counter32  
 }

atmAal5VclInPkts OBJECT-TYPE

SYNTAX Counter32  
 MAX-ACCESS read-only  
 STATUS current  
 DESCRIPTION

"The number of AAL5 CPCS PDUs received on the AAL5 VCC at

Expires June 2003

[Page 64]

the interface identified by the ifIndex."  
 ::= { atmAal5VclStatEntry 1 }

atmAal5VclOutPkts OBJECT-TYPE  
SYNTAX Counter32  
MAX-ACCESS read-only  
STATUS current  
DESCRIPTION  
 "The number of AAL5 CPCS PDUs transmitted on the AAL5 VCC  
 at the interface identified by the ifIndex."  
 ::= { atmAal5VclStatEntry 2 }

atmAal5VclInOctets OBJECT-TYPE  
SYNTAX Counter32  
MAX-ACCESS read-only  
STATUS current  
DESCRIPTION  
 "The number of octets contained in AAL5 CPCS PDUs received  
 on the AAL5 VCC at the interface identified by the ifIndex."  
 ::= { atmAal5VclStatEntry 3 }

atmAal5VclOutOctets OBJECT-TYPE  
SYNTAX Counter32  
MAX-ACCESS read-only  
STATUS current  
DESCRIPTION  
 "The number of octets contained in AAL5 CPCS PDUs  
 transmitted on the AAL5 VCC at the interface identified by  
 the ifIndex."  
 ::= { atmAal5VclStatEntry 4 }

-- 13. ATM VC General Information Table

atmVclGenTable OBJECT-TYPE  
SYNTAX SEQUENCE OF AtmVclGenEntry  
MAX-ACCESS not-accessible  
STATUS current  
DESCRIPTION  
 "General Information for each VC."  
 ::= { atm2MIBObjects 13 }

atmVclGenEntry OBJECT-TYPE  
SYNTAX AtmVclGenEntry  
MAX-ACCESS not-accessible  
STATUS current  
DESCRIPTION  
 "An entry with general information about the ATM VC."

Expires June 2003

[Page 65]

```
AUGMENTS { atmVclEntry }
 ::= { atmVclGenTable 1 }
```

```
AtmVclGenEntry ::=
 SEQUENCE {
   atmVclGenSigDescrIndex      AtmSigDescrParamIndex
 }
```

```
atmVclGenSigDescrIndex  OBJECT-TYPE
 SYNTAX                  AtmSigDescrParamIndex
 MAX-ACCESS              read-create
 STATUS                  current
 DESCRIPTION
   "The value of this object identifies the row in the ATM
   Signalling Descriptor Parameter Table which applies to this
   VCL."
 ::= { atmVclGenEntry 1 }
```

-- 14. ATM Interface Configuration Extension Table

```
atmInterfaceExtTable    OBJECT-TYPE
 SYNTAX                  SEQUENCE OF AtmInterfaceExtEntry
 MAX-ACCESS              not-accessible
 STATUS                  current
 DESCRIPTION
   "This table contains ATM interface configuration and monitoring
   information not defined in the atmInterfaceConfTable from the
   ATM-MIB. This includes the type of connection setup procedures,
   ILMI information, and information on the VPI/VCI range."
 REFERENCE
   "Tesink, K., Editor, Definitions of Managed Objects
   for ATM Management, RFC 2515, Bell Communications
   Research, February, 1999."
 ::= { atm2MIBObjects 14 }
```

```
atmInterfaceExtEntry    OBJECT-TYPE
 SYNTAX                  AtmInterfaceExtEntry
 MAX-ACCESS              not-accessible
 STATUS                  current
 DESCRIPTION
   "An entry extends the atmInterfaceConfEntry defined in the ATM-
   MIB. Each entry corresponds to an ATM interface."
 REFERENCE
   "Tesink, K., Editor, Definitions of Managed Objects
   for ATM Management, RFC 2515, Bell Communications
   Research, February, 1999."
 AUGMENTS { atmInterfaceConfEntry }
 ::= { atmInterfaceExtTable 1 }
```



Expires June 2003

[Page 66]

```

AtmInterfaceExtEntry ::= SEQUENCE {
    atmIntfConfigType           AtmInterfaceType,
    atmIntfActualType           AtmInterfaceType,
    atmIntfConfigSide           INTEGER,
    atmIntfActualSide           INTEGER,
    atmIntfIlmiAdminStatus      BITS,
    atmIntfIlmiOperStatus       BITS,
    atmIntfIlmiFsmState         INTEGER,
    atmIntfIlmiEstablishConPollIntvl Integer32,
    atmIntfIlmiCheckConPollIntvl Integer32,
    atmIntfIlmiConPollInactFactor Integer32,
    atmIntfIlmiPublicPrivateIndctr INTEGER,
    atmInterfaceConfMaxSvpcVpi  INTEGER,
    atmInterfaceCurrentMaxSvpcVpi INTEGER,
    atmInterfaceConfMaxSvccVpi  INTEGER,
    atmInterfaceCurrentMaxSvccVpi INTEGER,
    atmInterfaceConfMinSvccVci  INTEGER,
    atmInterfaceCurrentMinSvccVci INTEGER,
    atmIntfSigVccRxTrafficDescrIndex
                                AtmTrafficDescrParamIndex,
    atmIntfSigVccTxTrafficDescrIndex
                                AtmTrafficDescrParamIndex,
    atmIntfPvcFailures          Counter32,
    atmIntfCurrentlyFailingPVpls Gauge32,
    atmIntfCurrentlyFailingPVcls Gauge32,
    atmIntfPvcFailuresTrapEnable TruthValue,
    atmIntfPvcNotificationInterval INTEGER,
    atmIntfLeafSetupFailures    Counter32,
    atmIntfLeafSetupRequests    Counter32 }

```

atmIntfConfigType OBJECT-TYPE

SYNTAX AtmInterfaceType

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"The type of connection setup procedures configured for the ATM interface. Setting this variable to a value of 'other' is not allowed."

DEFVAL { autoConfig }

::= { atmInterfaceExtEntry 1 }

atmIntfActualType OBJECT-TYPE

SYNTAX AtmInterfaceType

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The type of connection setup procedures currently being used on the interface. This may reflect a manually configured value for

Expires June 2003

[Page 67]

the interface type, or may be determined by other means such as auto-configuration. A value of 'autoConfig' indicates that auto-configuration was requested but has not yet been completed."  
 ::= { atmInterfaceExtEntry 2 }

atmIntfConfigSide        OBJECT-TYPE  
SYNTAX            INTEGER {  
                  other(1),  
                  user(2),  
                  network(3) }  
MAX-ACCESS        read-write  
STATUS            current  
DESCRIPTION  
                  "The configured role of the managed entity as one side of the ATM interface. This value does not apply when the object atmIntfConfigType is set to 'autoConfig', 'atmfPnni1Dot0', or 'atmfBici2Dot0'.  
 ::= { atmInterfaceExtEntry 3 }

atmIntfActualSide        OBJECT-TYPE  
SYNTAX            INTEGER {  
                  other(1),  
                  user(2),  
                  network(3),  
                  symmetric(4) }  
MAX-ACCESS        read-only  
STATUS            current  
DESCRIPTION  
                  "The current role used by the managed entity to represent one side of the ATM interface."  
 ::= { atmInterfaceExtEntry 4 }

atmIntfIlmiAdminStatus    OBJECT-TYPE  
SYNTAX            BITS { ilmi(0),  
                  ilmiAddressRegistration(1),  
                  ilmiConnectivity(2),  
                  ilmiPvcPvpMgmt(3),  
                  ilmiSigVccParamNegotiation(4) }  
MAX-ACCESS        read-write  
STATUS            current  
DESCRIPTION  
                  "Indicates which components of ILMI are administratively enabled on this interface. If the 'ilmi' bit is not set, then no ILMI components are operational. ILMI components other than auto-configuration that are not represented in the value have their administrative status determined according to the 'ilmi' bit. The ILMI auto-configuration component is enabled/disabled by the

Expires June 2003

[Page 68]

```
    atmIntfConfigType object."  
    ::= { atmInterfaceExtEntry 5 }
```

```
atmIntfIlmiOperStatus    OBJECT-TYPE  
    SYNTAX                BITS { ilmi(0),  
                                ilmiAddressRegistration(1),  
                                ilmiConnectivity(2),  
                                ilmiPvcPvpMgmt(3),  
                                ilmiSigVccParamNegotiation(4) }  
    MAX-ACCESS            read-only  
    STATUS                 current  
    DESCRIPTION  
        "Indicates which components of ILMI are operational on this  
        interface."  
    ::= { atmInterfaceExtEntry 6 }
```

```
atmIntfIlmiFsmState     OBJECT-TYPE  
    SYNTAX                INTEGER { stopped(1),  
                                linkFailing(2),  
                                establishing(3),  
                                configuring(4),  
                                retrievingNetworkPrefixes(5),  
                                registeringNetworkPrefixes(6),  
                                retrievingAddresses(7),  
                                registeringAddresses(8),  
                                verifying(9) }  
    MAX-ACCESS            read-only  
    STATUS                 current  
    DESCRIPTION  
        "Indicates the state of the ILMI Finite State Machine associated  
        with this interface."  
  
    REFERENCE  
        "ATM Forum, Integrated Local Management Interface  
        (ILMI) Specification, Version 4.0, af-ilmi-0065.000,  
        September 1996, Appendix 1"  
    ::= { atmInterfaceExtEntry 7 }
```

```
atmIntfIlmiEstablishConPollIntvl    OBJECT-TYPE  
    SYNTAX                Integer32 (1..65535)  
    UNITS                 "seconds"  
    MAX-ACCESS            read-write  
    STATUS                 current  
    DESCRIPTION  
        "The amount of time S between successive transmissions of ILMI  
        messages on this interface for the purpose of detecting  
        establishment of ILMI connectivity."  
    REFERENCE
```

Expires June 2003

[Page 69]

"ATM Forum, Integrated Local Management Interface  
(ILMI) Specification, Version 4.0, af-ilmi-0065.000,  
September 1996, [Section 8.3.1](#)"

DEFVAL { 1 }

::= { atmInterfaceExtEntry 8 }

atmIntfIlmiCheckConPollIntvl OBJECT-TYPE

SYNTAX Integer32 (0..65535)

UNITS "seconds"

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"The amount of time T between successive transmissions of ILMI messages on this interface for the purpose of detecting loss of ILMI connectivity. The distinguished value zero disables ILMI connectivity procedures on this interface."

REFERENCE

"ATM Forum, Integrated Local Management Interface  
(ILMI) Specification, Version 4.0, af-ilmi-0065.000,  
September 1996, [Section 8.3.1](#)"

DEFVAL { 5 }

::= { atmInterfaceExtEntry 9 }

atmIntfIlmiConPollInactFactor OBJECT-TYPE

SYNTAX Integer32 (0..65535)

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"The number K of consecutive polls on this interface for which no ILMI response message is received before ILMI connectivity is declared lost."

REFERENCE

"ATM Forum, Integrated Local Management Interface  
(ILMI) Specification, Version 4.0, af-ilmi-0065.000,  
September 1996, [Section 8.3.1](#)"

DEFVAL { 4 }

::= { atmInterfaceExtEntry 10 }

atmIntfIlmiPublicPrivateIndctr OBJECT-TYPE

SYNTAX INTEGER {  
other(1),  
public(2),  
private(3)  
}

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"Specifies whether this end of the interface is advertised in



Expires June 2003

[Page 70]

ILMI as a device of the `public' or `private' type."

DEFVAL { private }

::= { atmInterfaceExtEntry 11 }

atmInterfaceConfMaxSvpcVpi OBJECT-TYPE

SYNTAX INTEGER (0..4095)

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"The maximum VPI that the signalling stack on the ATM interface is configured to support for allocation to switched virtual path connections."

::= { atmInterfaceExtEntry 12 }

atmInterfaceCurrentMaxSvpcVpi OBJECT-TYPE

SYNTAX INTEGER (0..4095)

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The maximum VPI that the signalling stack on the ATM interface may currently allocate to switched virtual path connections. This value is the minimum of atmInterfaceConfMaxSvpcVpi, and the atmInterfaceMaxSvpcVpi of the interface's UNI/NNI peer.

If the interface does not negotiate with its peer to determine the maximum VPI that can be allocated to SVPCs on the interface, then the value of this object must equal atmInterfaceConfMaxSvpcVpi. "

::= { atmInterfaceExtEntry 13 }

atmInterfaceConfMaxSvccVpi OBJECT-TYPE

SYNTAX INTEGER (0..4095)

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"The maximum VPI that the signalling stack on the ATM interface is configured to support for allocation to switched virtual channel connections."

::= { atmInterfaceExtEntry 14 }

atmInterfaceCurrentMaxSvccVpi OBJECT-TYPE

SYNTAX INTEGER (0..4095)

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The maximum VPI that the signalling stack on the ATM interface may currently allocate to switched virtual channel connections.

Expires June 2003

[Page 71]

This value is the minimum of atmInterfaceConfMaxSvccVpi, and the atmInterfaceConfMaxSvccVpi of the interface's UNI/NNI peer.

If the interface does not negotiate with its peer to determine the maximum VPI that can be allocated to SVCCs on the interface, then the value of this object must equal atmInterfaceConfMaxSvccVpi."

```
::= { atmInterfaceExtEntry 15 }
```

atmInterfaceConfMinSvccVci OBJECT-TYPE

SYNTAX INTEGER (0..65535)

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"The minimum VCI that the signalling stack on the ATM interface is configured to support for allocation to switched virtual channel connections."

```
::= { atmInterfaceExtEntry 16 }
```

atmInterfaceCurrentMinSvccVci OBJECT-TYPE

SYNTAX INTEGER (0..65535)

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The minimum VCI that the signalling stack on the ATM interface may currently allocate to switched virtual channel connections. This value is the maximum of atmInterfaceConfMinSvccVci, and the atmInterfaceConfMinSvccVci of the interface's UNI/NNI peer. If the interface does not negotiate with its peer to determine the minimum VCI that can be allocated to SVCCs on the interface, then the value of this object must equal atmInterfaceConfMinSvccVci."

```
::= { atmInterfaceExtEntry 17 }
```

atmIntfSigVccRxTrafficDescrIndex OBJECT-TYPE

SYNTAX AtmTrafficDescrParamIndex

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"This object identifies the row in the atmTrafficDescrParamTable used during ILMI auto-configuration to specify the advertised signalling VCC traffic parameters for the receive direction. The traffic descriptor resulting from ILMI auto-configuration of the signalling VCC is indicated in the atmVclTable."

```
::= { atmInterfaceExtEntry 18 }
```

atmIntfSigVccTxTrafficDescrIndex OBJECT-TYPE

SYNTAX AtmTrafficDescrParamIndex

Expires June 2003

[Page 72]

MAX-ACCESS read-write  
STATUS current  
DESCRIPTION

"This object identifies the row in the atmTrafficDescrParamTable used during ILMI auto-configuration to specify the advertised signalling VCC traffic parameters for the transmit direction. The traffic descriptor resulting from ILMI auto-configuration of the signalling VCC is indicated in the atmVclTable."

::= { atmInterfaceExtEntry 19 }

atmIntfPvcFailures OBJECT-TYPE

SYNTAX Counter32  
MAX-ACCESS read-only  
STATUS current  
DESCRIPTION

"The number of times the operational status of a PVPL or PVCL on this interface has gone down."

::= { atmInterfaceExtEntry 20 }

atmIntfCurrentlyFailingPVpls OBJECT-TYPE

SYNTAX Gauge32  
MAX-ACCESS read-only  
STATUS current  
DESCRIPTION

"The current number of VPLs on this interface for which there is an active row in the atmVplTable having an atmVplConnKind value of `pvc' and an atmVplOperStatus with a value other than `up'."

::= { atmInterfaceExtEntry 21 }

atmIntfCurrentlyFailingPVcls OBJECT-TYPE

SYNTAX Gauge32  
MAX-ACCESS read-only  
STATUS current  
DESCRIPTION

"The current number of VCLs on this interface for which there is an active row in the atmVclTable having an atmVclConnKind value of `pvc' and an atmVclOperStatus with a value other than `up'."

::= { atmInterfaceExtEntry 22 }

atmIntfPvcFailuresTrapEnable OBJECT-TYPE

SYNTAX TruthValue  
MAX-ACCESS read-write  
STATUS current  
DESCRIPTION

"Allows the generation of traps in response to PVCL or PVPL failures on this interface."

DEFVAL { false }

::= { atmInterfaceExtEntry 23 }

Expires June 2003

[Page 73]

**atmIntfPvcNotificationInterval** OBJECT-TYPE

SYNTAX INTEGER (1..3600)

UNITS "seconds"

MAX-ACCESS read-write

STATUS current

## DESCRIPTION

"The minimum interval between the sending of  
atmIntfPvcFailuresTrap notifications for this interface."

DEFVAL { 30 }

::= { atmInterfaceExtEntry 24 }

**atmIntfLeafSetupFailures** OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

## DESCRIPTION

"Number of setup failures. For root, this is the number of  
rejected setup requests and for leaf, this is the number of setup  
failure received."

::= { atmInterfaceExtEntry 25 }

**atmIntfLeafSetupRequests** OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

## DESCRIPTION

"Number of setup requests. For root, this includes both incoming  
setup request and root initiated setup requests."

::= { atmInterfaceExtEntry 26 }

## -- 15. ATM ILMI Service Registry Table

**atmIlmiSrvcRegTable** OBJECT-TYPE

SYNTAX SEQUENCE OF AtmIlmiSrvcRegEntry

MAX-ACCESS not-accessible

STATUS current

## DESCRIPTION

"This table contains a list of all the ATM network services known  
by this device.

The characteristics of these services are made available through  
the ILMI, using the ILMI general-purpose service registry MIB.  
These services may be made available to all ATM interfaces  
(atmIlmiSrvcRegIndex = 0) or to some specific ATM interfaces only  
(atmIlmiSrvcRegIndex = ATM interface index)."

::= { atm2MIBObjects 15 }

**atmIlmiSrvcRegEntry** OBJECT-TYPE



Expires June 2003

[Page 74]

```

SYNTAX      AtmIlmiSrvcRegEntry
MAX-ACCESS  not-accessible
STATUS      current
DESCRIPTION
    "Information about a single service provider that is available to
    the user-side of an adjacent device through the ILMI."
INDEX { atmIlmiSrvcRegIndex,
        atmIlmiSrvcRegServiceID,
        atmIlmiSrvcRegAddressIndex }
 ::= { atmIlmiSrvcRegTable 1 }

```

```

AtmIlmiSrvcRegEntry ::= SEQUENCE {
    atmIlmiSrvcRegIndex      InterfaceIndexOrZero,
    atmIlmiSrvcRegServiceID  OBJECT IDENTIFIER,
    atmIlmiSrvcRegAddressIndex  INTEGER,
    atmIlmiSrvcRegATMAddress  AtmAddr,
    atmIlmiSrvcRegParm1       OCTET STRING,
    atmIlmiSrvcRegRowStatus   RowStatus
}

```

atmIlmiSrvcRegIndex OBJECT-TYPE

```

SYNTAX      InterfaceIndexOrZero
MAX-ACCESS  not-accessible
STATUS      current
DESCRIPTION

```

"The ATM interface where the service defined in this entry can be made available to an ATM device attached to this interface.

The value of 0 has a special meaning: when an ATM service is defined in an entry whose atmIlmiSrvcRegIndex is zero, the ATM service is available to ATM devices connected to any ATM interface. (default value(s)).

When the user-side of an adjacent device queries the content of the ILMI service registry MIB (using the ILMI protocol), the local network-side responds with the ATM services defined in atmIlmiSrvcRegTable entries, provided that these entries are indexed by:

- the corresponding ifIndex value (atmIlmiSrvcRegIndex equal to the ifIndex of the interface to which the adjacent device is connected) - zero (atmIlmiSrvcRegIndex=0)."

```
 ::= { atmIlmiSrvcRegEntry 1 }

```

atmIlmiSrvcRegServiceID OBJECT-TYPE

```

SYNTAX      OBJECT IDENTIFIER
MAX-ACCESS  not-accessible
STATUS      current

```

Expires June 2003

[Page 75]

## DESCRIPTION

"This is the service identifier which uniquely identifies the type of service at the address provided in the table. The object identifiers for the LAN Emulation Configuration Server (LECS) and the ATM Name Server (ANS) are defined in the ATM Forum ILMI Service Registry MIB. The object identifiers for the ATMARP Server, the Multicast Address Resolution Server (MARS), and the NHRP Server (NHS) are defined in [RFC 2601](#), [RFC 2602](#), and [RFC 2603](#), respectively."

::= { atmIlmiSrvcRegEntry 2 }

## atmIlmiSrvcRegAddressIndex OBJECT-TYPE

SYNTAX INTEGER (1..2147483647)

MAX-ACCESS not-accessible

STATUS current

## DESCRIPTION

"An arbitrary integer to differentiate multiple rows containing different ATM addresses for the same service on the same interface. This number need NOT be the same as the corresponding ILMI atmfSrvcRegAddressIndex MIB object."

::= { atmIlmiSrvcRegEntry 3 }

## atmIlmiSrvcRegATMAddress OBJECT-TYPE

SYNTAX AtmAddr

MAX-ACCESS read-create

STATUS current

## DESCRIPTION

"This is the full address of the service. The user-side of the adjacent device may use this address to establish a connection with the service."

::= { atmIlmiSrvcRegEntry 4 }

## atmIlmiSrvcRegParm1 OBJECT-TYPE

SYNTAX OCTET STRING (SIZE(1..255))

MAX-ACCESS read-create

STATUS current

## DESCRIPTION

"An octet string used according to the value of atmIlmiSrvcRegServiceID."

::= { atmIlmiSrvcRegEntry 5 }

## atmIlmiSrvcRegRowStatus OBJECT-TYPE

SYNTAX RowStatus

MAX-ACCESS read-create

STATUS current

## DESCRIPTION

"This object is used to create or destroy an entry from this table."

Expires June 2003

[Page 76]

```
 ::= { atmIlmiSrvcRegEntry 6 }
```

```
-- 16. ILMI Network Prefix Table
```

```
atmIlmiNetworkPrefixTable    OBJECT-TYPE
    SYNTAX                    SEQUENCE OF AtmIlmiNetworkPrefixEntry
    MAX-ACCESS                not-accessible
    STATUS                    current
    DESCRIPTION
        "A table specifying per-interface network prefix(es) supplied by
        the network side of the UNI during ILMI address registration.
        When no network prefixes are specified for a particular
        interface, one or more network prefixes based on the switch
        address(es) may be used for ILMI address registration."
    ::= { atm2MIBObjects 16 }
```

```
atmIlmiNetworkPrefixEntry    OBJECT-TYPE
    SYNTAX                    AtmIlmiNetworkPrefixEntry
    MAX-ACCESS                not-accessible
    STATUS                    current
    DESCRIPTION
        "Information about a single network prefix supplied by the
        network side of the UNI during ILMI address registration. Note
        that the index variable atmIlmiNetPrefixPrefix is a variable-
        length string, and as such the rule for variable-length strings
        in section 7.7 of RFC 2578 applies."
    INDEX { ifIndex,
            atmIlmiNetPrefixPrefix }
    ::= { atmIlmiNetworkPrefixTable 1 }
```

```
AtmIlmiNetworkPrefixEntry ::=
    SEQUENCE {
        atmIlmiNetPrefixPrefix    AtmIlmiNetworkPrefix,
        atmIlmiNetPrefixRowStatus RowStatus
    }
```

```
atmIlmiNetPrefixPrefix    OBJECT-TYPE
    SYNTAX                    AtmIlmiNetworkPrefix
    MAX-ACCESS                not-accessible
    STATUS                    current
    DESCRIPTION
        "The network prefix specified for use in ILMI address
        registration."
    ::= { atmIlmiNetworkPrefixEntry 1 }
```

```
atmIlmiNetPrefixRowStatus    OBJECT-TYPE
    SYNTAX                    RowStatus
    MAX-ACCESS                read-create
```

Expires June 2003

[Page 77]

```

STATUS      current
DESCRIPTION
    "Used to create, delete, activate and de-activate network
    prefixes used in ILMI address registration."

```

```
 ::= { atmIlmiNetworkPrefixEntry 2 }
```

```
-- 17. ATM Switch Address Table
```

```

atmSwitchAddressTable  OBJECT-TYPE
    SYNTAX      SEQUENCE OF AtmSwitchAddressEntry
    MAX-ACCESS  not-accessible
    STATUS      current
    DESCRIPTION
        "This table contains one or more ATM endsystem addresses on a
        per-switch basis.  These addresses are used to identify the
        switch.  When no ILMI network prefixes are configured for certain
        interfaces, network prefixes based on the switch address(es) may
        be used for ILMI address registration."
    ::= { atm2MIBObjects 17 }

```

```

atmSwitchAddressEntry  OBJECT-TYPE
    SYNTAX      AtmSwitchAddressEntry
    MAX-ACCESS  not-accessible
    STATUS      current
    DESCRIPTION
        "An entry in the ATM Switch Address table."
    INDEX { atmSwitchAddressIndex }
    ::= { atmSwitchAddressTable 1 }

```

```

AtmSwitchAddressEntry ::=
    SEQUENCE {
        atmSwitchAddressIndex      Integer32,
        atmSwitchAddressAddress    OCTET STRING,
        atmSwitchAddressRowStatus  RowStatus
    }

```

```

atmSwitchAddressIndex  OBJECT-TYPE
    SYNTAX      Integer32 (1..65535)
    MAX-ACCESS  not-accessible
    STATUS      current
    DESCRIPTION
        "An arbitrary index used to enumerate the ATM endsystem addresses
        for this switch."
    ::= { atmSwitchAddressEntry 1 }

```

```

atmSwitchAddressAddress OBJECT-TYPE
    SYNTAX      OCTET STRING (SIZE(13|20))

```



Expires June 2003

[Page 78]

```
MAX-ACCESS    read-create
STATUS        current
DESCRIPTION
    "An ATM endsystem address or address prefix used to identify this
    switch.  When no ESI or SEL field is specified, the switch may
    generate the ESI and SEL fields automatically to obtain a
    complete 20-byte ATM endsystem address."
 ::= { atmSwitchAddressEntry 2 }
```

atmSwitchAddressRowStatus OBJECT-TYPE

```
SYNTAX        RowStatus
MAX-ACCESS    read-create
STATUS        current
DESCRIPTION
    "Used to create, delete, activate, and de-activate addresses used
    to identify this switch."
 ::= { atmSwitchAddressEntry 3 }
```

-- 18. ATM VP Cross-Connect Extension Table

atmVpCrossConnectXTable OBJECT-TYPE

```
SYNTAX        SEQUENCE OF AtmVpCrossConnectXEntry
MAX-ACCESS    not-accessible
STATUS        current
DESCRIPTION
    "This table contains one row per VP Cross-Connect represented in
    the atmVpCrossConnectTable."
 ::= { atm2MIBObjects 18 }
```

atmVpCrossConnectXEntry OBJECT-TYPE

```
SYNTAX        AtmVpCrossConnectXEntry
MAX-ACCESS    not-accessible
STATUS        current
DESCRIPTION
    "Information about a particular ATM VP Cross-Connect.
    Each entry provides an two objects that name the Cross-Connect.
    One is assigned by the Service User and the other by the Service
    Provider."
AUGMENTS      { atmVpCrossConnectEntry }
 ::= { atmVpCrossConnectXTable 1 }
```

```
AtmVpCrossConnectXEntry ::= SEQUENCE {
    atmVpCrossConnectUserName      SnmpAdminString,
    atmVpCrossConnectProviderName  SnmpAdminString
}
```

atmVpCrossConnectUserName OBJECT-TYPE

```
SYNTAX        SnmpAdminString (SIZE(0..255))
```

Expires June 2003

[Page 79]

```

MAX-ACCESS    read-create
STATUS        current
DESCRIPTION
    "This is a service user assigned textual representation of a VPC
    PVC."
 ::= { atmVpCrossConnectXEntry 1 }

```

```

atmVpCrossConnectProviderName OBJECT-TYPE
SYNTAX        SnmpAdminString (SIZE(0..255))
MAX-ACCESS    read-only
STATUS        current
DESCRIPTION
    "This is a system supplied textual representation of VPC PVC. It
    is assigned by the service provider."
 ::= { atmVpCrossConnectXEntry 2 }

```

-- 19. ATM VC Cross-Connect Extension Table

```

atmVcCrossConnectXTable OBJECT-TYPE
SYNTAX        SEQUENCE OF AtmVcCrossConnectXEntry
MAX-ACCESS    not-accessible
STATUS        current
DESCRIPTION
    "This table contains one row per VC Cross-Connect represented in
    the atmVcCrossConnectTable."
 ::= { atm2MIBObjects 19 }

```

```

atmVcCrossConnectXEntry      OBJECT-TYPE
SYNTAX        AtmVcCrossConnectXEntry
MAX-ACCESS    not-accessible
STATUS        current
DESCRIPTION
    "Information about a particular ATM VC Cross-Connect.
    Each entry provides an two objects that name the Cross-Connect.
    One is assigned by the Service User and the other by the Service
    Provider."
AUGMENTS     { atmVcCrossConnectEntry }
 ::= { atmVcCrossConnectXTable 1 }

```

```

AtmVcCrossConnectXEntry ::= SEQUENCE {
    atmVcCrossConnectUserName      SnmpAdminString,
    atmVcCrossConnectProviderName  SnmpAdminString
}

```

```

atmVcCrossConnectUserName OBJECT-TYPE
SYNTAX        SnmpAdminString (SIZE(0..255))
MAX-ACCESS    read-create
STATUS        current

```

Expires June 2003

[Page 80]

## DESCRIPTION

"This is a service user assigned textual representation of a VCC PVC."

```
::= { atmVcCrossConnectXEntry 1 }
```

## atmVcCrossConnectProviderName OBJECT-TYPE

SYNTAX SnmpAdminString (SIZE(0..255))

MAX-ACCESS read-only

STATUS current

## DESCRIPTION

"This is a system supplied textual representation of VCC PVC. It is assigned by the service provider."

```
::= { atmVcCrossConnectXEntry 2 }
```

## -- 20. Currently Failing PVPL Table

## atmCurrentlyFailingPVplTable OBJECT-TYPE

SYNTAX SEQUENCE OF AtmCurrentlyFailingPVplEntry

MAX-ACCESS not-accessible

STATUS current

## DESCRIPTION

"A table indicating all VPLs for which there is an active row in the atmVplTable having an atmVplConnKind value of `pvc' and an atmVplOperStatus with a value other than `up'."

```
::= { atm2MIBObjects 20 }
```

## atmCurrentlyFailingPVplEntry OBJECT-TYPE

SYNTAX AtmCurrentlyFailingPVplEntry

MAX-ACCESS not-accessible

STATUS current

## DESCRIPTION

"Each entry in this table represents a VPL for which the atmVplRowStatus is `active', the atmVplConnKind is `pvc', and the atmVplOperStatus is other than `up'."

INDEX { ifIndex, atmVplVpi }

```
::= { atmCurrentlyFailingPVplTable 1 }
```

## AtmCurrentlyFailingPVplEntry ::=

```
SEQUENCE {
    atmCurrentlyFailingPVplTimeStamp    TimeStamp
}
```

## atmCurrentlyFailingPVplTimeStamp OBJECT-TYPE

SYNTAX TimeStamp

MAX-ACCESS read-only

STATUS current

## DESCRIPTION

Expires June 2003

[Page 81]

```
    "The time at which this PVPL began to fail."  
    ::= { atmCurrentlyFailingPVplEntry 1 }
```

```
-- 21. Currently Failing PVCL Table
```

```
atmCurrentlyFailingPVclTable    OBJECT-TYPE  
    SYNTAX          SEQUENCE OF AtmCurrentlyFailingPVclEntry  
    MAX-ACCESS      not-accessible  
    STATUS          current  
    DESCRIPTION  
        "A table indicating all VCLs for which there is an active row in  
        the atmVclTable having an atmVclConnKind value of `pvc' and an  
        atmVclOperStatus with a value other than `up'."  
    ::= { atm2MIBObjects 21 }
```

```
atmCurrentlyFailingPVclEntry    OBJECT-TYPE  
    SYNTAX          AtmCurrentlyFailingPVclEntry  
    MAX-ACCESS      not-accessible  
    STATUS          current  
    DESCRIPTION  
        "Each entry in this table represents a VCL for which the  
        atmVclRowStatus is `active', the atmVclConnKind is `pvc', and the  
        atmVclOperStatus is other than `up'."  
    INDEX          { ifIndex, atmVclVpi, atmVclVci }  
    ::= { atmCurrentlyFailingPVclTable 1 }
```

```
AtmCurrentlyFailingPVclEntry ::=  
    SEQUENCE {  
        atmCurrentlyFailingPVclTimeStamp    TimeStamp  
    }
```

```
atmCurrentlyFailingPVclTimeStamp    OBJECT-TYPE  
    SYNTAX          TimeStamp  
    MAX-ACCESS      read-only  
    STATUS          current  
    DESCRIPTION  
        "The time at which this PVCL began to fail."  
    ::= { atmCurrentlyFailingPVclEntry 1 }
```

```
-- ATM PVC Traps
```

```
atmPvcTraps    OBJECT IDENTIFIER ::= { atm2MIBTraps 1 }
```

```
atmPvcTrapsPrefix    OBJECT IDENTIFIER ::= { atmPvcTraps 0 }
```

```
atmIntfPvcFailuresTrap    NOTIFICATION-TYPE  
    OBJECTS          { ifIndex, atmIntfPvcFailures,  
                      atmIntfCurrentlyFailingPVpls,
```



Expires June 2003

[Page 82]

```

        atmIntfCurrentlyFailingPVcls }
STATUS      current
DESCRIPTION
    "A notification indicating that one or more PVPLs or PVCLs on
    this interface has failed since the last atmPvcFailuresTrap was
    sent.  If this trap has not been sent for the last
    atmIntfPvcNotificationInterval, then it will be sent on the next
    increment of atmIntfPvcFailures."
 ::= { atmPvcTrapsPrefix 1 }

-- Conformance Information

atm2MIBConformance  OBJECT IDENTIFIER ::= {atm2MIB 3}

atm2MIBGroups       OBJECT IDENTIFIER ::= {atm2MIBConformance 1}

atm2MIBCompliances  OBJECT IDENTIFIER ::= {atm2MIBConformance 2}

-- Compliance Statements

atm2MIBCompliance  MODULE-COMPLIANCE
STATUS              current
DESCRIPTION
    "The compliance statement for SNMP entities which represent ATM
    interfaces.  The compliance statements are used to determine if a
    particular group or object applies to hosts, networks/switches,
    or both.  The Common group is defined as applicable to all three."

MODULE -- this module
MANDATORY-GROUPS { atmCommonGroup }

-- Objects in the ATM Switch/Service/Host Group

GROUP             atmCommonStatsGroup
DESCRIPTION
    "This group is mandatory for systems that are supporting
    per-VPC or per-VCC counters."

OBJECT            atmVplLogicalPortDef
MIN-ACCESS        read-only
DESCRIPTION
    "This object is mandatory for systems support ATM Logical
    Port interfaces."

OBJECT            atmIntfSigVccRxTrafficDescrIndex
DESCRIPTION
    "This object is mandatory for systems that support negotiation of
    signalling VCC traffic parameters through ILMI."
```

Expires June 2003

[Page 83]

OBJECT            atmIntfSigVccTxTrafficDescrIndex  
DESCRIPTION  
    "This object is mandatory for systems that support negotiation of signalling VCC traffic parameters through ILMI."

OBJECT            atmCurrentlyFailingPVplTimeStamp  
DESCRIPTION  
    "This object is optional."

OBJECT            atmCurrentlyFailingPVclTimeStamp  
DESCRIPTION  
    "This object is optional."

OBJECT            atmIntfLeafSetupFailures  
DESCRIPTION  
    "This object is optional."

OBJECT            atmIntfLeafSetupRequests  
DESCRIPTION  
    "This object is optional."

-- Objects in the ATM Switch/Service Group

GROUP            atmSwitchSvcGroup  
DESCRIPTION  
    "This group is mandatory for a Switch/Service that implements ATM interfaces."

OBJECT            atmIfRegAddrRowStatus  
MIN-ACCESS       read-only  
DESCRIPTION  
    "Write access is not required, and only one of the six enumerated values for the RowStatus textual convention need be supported, specifically: active(1)."

OBJECT            atmSvcVpCrossConnectRowStatus  
MIN-ACCESS       read-only  
DESCRIPTION  
    "Write access is not required, and only one of the six enumerated values for the RowStatus textual convention need be supported, specifically: active(1)"

OBJECT            atmSvcVcCrossConnectRowStatus  
MIN-ACCESS       read-only  
DESCRIPTION  
    "Write access is not required, and only one of the six enumerated values for the RowStatus textual convention need be supported, specifically: active(1)"

Expires June 2003

[Page 84]

-- Objects in the ATM Switch/Service Signalling Group

```
GROUP      atmSwitchServcSigGroup
DESCRIPTION
    "This group's write access is not required."
```

-- Objects in the ATM Switch/Service Notifications Group

```
GROUP      atmSwitchServcNotifGroup
DESCRIPTION
    "This group is optional for systems implementing support for an ATM
    Switch or an ATM Network Service."
```

-- Objects in the ATM Switch Group

```
GROUP      atmSwitchGroup
DESCRIPTION
    "This group is optional for a switch that implements ATM
interfaces."
```

-- Objects in the ATM Service Group

```
GROUP      atmServcGroup
DESCRIPTION
    "This group is mandatory for systems implementing support for an ATM
    Network Service."
```

-- Objects in the ATM Host Group

```
GROUP      atmHostGroup
DESCRIPTION
    "This group is mandatory for a Host that implements ATM interfaces."
```

```
OBJECT      atmVclAddrType
MIN-ACCESS  read-only
DESCRIPTION
    "Write access is not required."
```

```
OBJECT      atmVclAddrRowStatus
MIN-ACCESS  read-only
DESCRIPTION
    "Write access is not required, and only one of the six enumerated
    values for the RowStatus textual convention need be supported,
    specifically: active(1)."
```

-- ATM Host Sig Descriptor Parameter Group

```
GROUP      atmHostSigDescrGroup
DESCRIPTION
```

Expires June 2003

[Page 85]

"This group is mandatory for a Host that implements ATM interfaces.  
Write access is not required for this group."

::= { atm2MIBCompliances 1 }

-- \*\*\*\*\*

- Units of Conformance
- Mandatory for ATM hosts and switch/service providers

atmCommonGroup      OBJECT-GROUP

OBJECTS {

- atmSigSSCOPConEvents,
- atmSigSSCOPErrdPdus,
- atmSigDetectSetupAttempts,
- atmSigEmitSetupAttempts,
- atmSigDetectUnavailRoutes,
- atmSigEmitUnavailRoutes,
- atmSigDetectUnavailResrcs,
- atmSigEmitUnavailResrcs,
- atmSigDetectCldPtyEvents,
- atmSigEmitCldPtyEvents,
- atmSigDetectMsgErrors,
- atmSigEmitMsgErrors,
- atmSigDetectClgPtyEvents,
- atmSigEmitClgPtyEvents,
- atmSigDetectTimerExpireds,
- atmSigEmitTimerExpireds,
- atmSigDetectRestarts,
- atmSigEmitRestarts,
- atmSigInEstabls,
- atmSigOutEstabls,
- atmVplLogicalPortDef,
- atmVplLogicalPortIndex,
- atmInterfaceConfMaxSvpcVpi,
- atmInterfaceCurrentMaxSvpcVpi,
- atmInterfaceConfMaxSvccVpi,
- atmInterfaceCurrentMaxSvccVpi,
- atmInterfaceConfMinSvccVci,
- atmInterfaceCurrentMinSvccVci,
- atmIntfSigVccRxTrafficDescrIndex,
- atmIntfSigVccTxTrafficDescrIndex,
- atmIntfPvcFailures,
- atmIntfCurrentlyFailingPVpls,
- atmIntfCurrentlyFailingPVcls,
- atmIntfPvcNotificationInterval,
- atmIntfPvcFailuresTrapEnable,



Expires June 2003

[Page 86]

```

    atmIntfLeafSetupFailures,
    atmIntfLeafSetupRequests,
    atmIntfConfigType,
    atmIntfActualType,
    atmIntfConfigSide,
    atmIntfActualSide,
    atmIntfIlmiAdminStatus,
    atmIntfIlmiOperStatus,
    atmIntfIlmiFsmState,
    atmIntfIlmiEstablishConPollIntvl,
    atmIntfIlmiCheckConPollIntvl,
    atmIntfIlmiConPollInactFactor,
    atmIntfIlmiPublicPrivateIndctr,
    atmCurrentlyFailingPVplTimeStamp,
    atmCurrentlyFailingPVclTimeStamp
}

```

STATUS current

DESCRIPTION

"A collection of objects providing information for a Switch/Service/Host that implements ATM interfaces."

::= { atm2MIBGroups 1 }

atmCommonStatsGroup OBJECT-GROUP

OBJECTS {

```

    atmVclStatTotalCellIns,
    atmVclStatClp0CellIns,
    atmVclStatTotalDiscards,
    atmVclStatClp0Discards,
    atmVclStatTotalCellOuts,
    atmVclStatClp0CellOuts,
    atmVclStatClp0Tagged,
    atmVplStatTotalCellIns,
    atmVplStatClp0CellIns,
    atmVplStatTotalDiscards,
    atmVplStatClp0Discards,
    atmVplStatTotalCellOuts,
    atmVplStatClp0CellOuts,
    atmVplStatClp0Tagged

```

}

STATUS current

DESCRIPTION

"A collection of objects providing information for a Switch/Service/Host that implements

Expires June 2003

[Page 87]

```
    ATM VCL and VPL Statistics"
 ::= { atm2MIBGroups 2 }
```

```
atmSwitchSrvcGroup      OBJECT-GROUP
```

```
OBJECTS {
```

```
    atmIlmiSrvcRegATMAddress,
    atmIlmiSrvcRegParm1,
    atmIlmiSrvcRegRowStatus,
    atmIlmiNetPrefixRowStatus,
    atmSvcVpCrossConnectCreationTime,
    atmSvcVpCrossConnectRowStatus,
    atmSvcVcCrossConnectCreationTime,
    atmSvcVcCrossConnectRowStatus,
    atmIfRegAddrAddressSource,
    atmIfRegAddrOrgScope,
    atmIfRegAddrRowStatus}
```

```
STATUS      current
```

```
DESCRIPTION
```

```
    "A collection of objects providing information
    for a Switch/Service that implements ATM interfaces."
```

```
 ::= { atm2MIBGroups 3 }
```

```
atmSwitchSrvcSigGroup   OBJECT-GROUP
```

```
OBJECTS {
```

```
    atmSigSupportClgPtyNumDel,
    atmSigSupportClgPtySubAddr,
    atmSigSupportCldPtySubAddr,
    atmSigSupportHiLyrInfo,
    atmSigSupportLoLyrInfo,
    atmSigSupportBlliRepeatInd,
    atmSigSupportAALInfo,
    atmSigSupportPrefCarrier}
```

```
STATUS      current
```

```
DESCRIPTION
```

```
    "A collection of objects providing information
    for a Switch/Service that implements ATM signalling."
```

```
 ::= { atm2MIBGroups 4 }
```

```
atmSwitchSrvcNotifGroup NOTIFICATION-GROUP
```

```
NOTIFICATIONS { atmIntfPvcFailuresTrap }
```

```
STATUS      current
```

```
DESCRIPTION
```

```
    "A collection of notifications providing information
```

Expires June 2003

[Page 88]

```
    for a Switch/Service that implements ATM interfaces."
 ::= { atm2MIBGroups 5 }
```

```
atmSwitchGroup      OBJECT-GROUP
  OBJECTS {
    atmSwitchAddressAddress,
    atmSwitchAddressRowStatus }
  STATUS      current
  DESCRIPTION
    "A collection of objects providing information
    for an ATM switch."
 ::= { atm2MIBGroups 6 }
```

```
atmServcGroup      OBJECT-GROUP

OBJECTS {
  atmVpCrossConnectUserName,
  atmVpCrossConnectProviderName,
  atmVcCrossConnectUserName,
  atmVcCrossConnectProviderName }
STATUS      current
DESCRIPTION
  "A collection of objects providing information
  for an ATM Network Service."
 ::= { atm2MIBGroups 7 }
```

```
atmHostGroup      OBJECT-GROUP

OBJECTS {
  atmAal5VclInPkts,
  atmAal5VclOutPkts,
  atmAal5VclInOctets,
  atmAal5VclOutOctets,
  atmVclAddrType,
  atmVclAddrRowStatus,
  atmAddrVclAddrType,
  atmVclGenSigDescrIndex}
STATUS      current
DESCRIPTION
  "A collection of objects providing information
  for a Host that implements ATM interfaces."
 ::= { atm2MIBGroups 8 }
```

```
atmHostSigDescrGroup  OBJECT-GROUP

OBJECTS {
  atmSigDescrParamAalType,
  atmSigDescrParamAalSscsType,
```

Expires June 2003

[Page 89]

```
    atmSigDescrParamBhliType,
    atmSigDescrParamBhliInfo,
    atmSigDescrParamBbcConnConf,
    atmSigDescrParamBlliLayer2,
    atmSigDescrParamBlliLayer3,
    atmSigDescrParamBlliPktSize,
    atmSigDescrParamBlliSnapId,
    atmSigDescrParamBlliOuiPid,
    atmSigDescrParamRowStatus}
STATUS      current
DESCRIPTION
    "A collection of objects providing information
    for a Host that implements ATM interfaces."
 ::= { atm2MIBGroups 9 }
```

END

## 6. Acknowledgments

This document is a product of the AToMMIB Working Group. Special thanks go to Gary Hanson of ADC Telecommunications for his quality contributions to this specification.

## 7. References

### 7.1 Normative References

- [RFC2515] Tesink, K., "Definitions of Managed Objects for ATM Management", [RFC 2515](#), Bell Communications Research, February, 1999.
- [ATM Forum 3.0] ATM Forum, "ATM User-Network Interface Specification, Version 3.0 (UNI 3.0)", September 1993.
- [ATM Forum UNI 3.1] ATM Forum, "ATM User-Network Interface Specification, Version 3.1 (UNI 3.1)", September 1994.
- [ATM Forum LANE] ATM Forum, "LAN Emulation Client Management Specification, Version 1.0", af-lane-0038.000, September 1995.
- [RFC1694] Brown, T., Tesink, K., "Definitions of Managed Objects for SMDS Interfaces using SMIV2", [RFC 1694](#), August 1994.
- [ATM Forum ILMI] ATM Forum, "Integrated Local Management Interface (ILMI) Specification, Version 4.0",



Expires June 2003

[Page 90]

af-ilmi-0065.000, September 1996.

- [RFC2558] Tesink, K., "Definitions of Managed Objects for the SONET/SDH Interface Type", [RFC 2558](#), March 1999.
- [RFC2496] Fowler, D., "Definitions of Managed Objects for the DS3/E3 Interface Type", [RFC 2496](#), January 1999.
- [RFC1905] Case, J., McCloghrie, K., Rose, M., and S. Waldbusser, "Protocol Operations for Version 2 of the Simple Network Management Protocol (SNMPv2)", [RFC 1905](#), January 1996.
- [RFC1906] Case, J., McCloghrie, K., Rose, M., and S. Waldbusser, "Transport Mappings for Version 2 of the Simple Network Management Protocol (SNMPv2)", [RFC 1906](#), January 1996.
- [RFC2026] Bradner S., "The Internet Standards Process - Revision 3", October 1996.
- [RFC2028] Hovey R., S. Bradner, "The Organizations Involved in the IETF Standards Process", October 1996.
- [RFC2493] K. Tesink "Textual Conventions for MIB Modules Using Performance History Based on 15 Minute Intervals" [RFC 2493](#), January 1999.
- [RFC2571] Harrington, D., Presuhn, R., and B. Wijnen, "An Architecture for Describing SNMP Management Frameworks", [RFC 2571](#), April 1999.
- [RFC2572] Case, J., Harrington D., Presuhn R., and B. Wijnen, "Message Processing and Dispatching for the Simple Network Management Protocol (SNMP)", [RFC 2572](#), April 1999.
- [RFC2573] Levi, D., Meyer, P., and B. Stewart, "SNMPv3 Applications", [RFC 2573](#), April 1999.
- [RFC2574] Blumenthal, U., and B. Wijnen, "User-based Security Model (USM) for version 3 of the Simple Network Management Protocol (SNMPv3)", [RFC 2574](#), April 1999.
- [RFC2575] Wijnen, B., Presuhn, R., and K. McCloghrie, "View-based Access Control Model (VACM) for the Simple Network Management Protocol (SNMP)", [RFC 2575](#), April 1999.
- [RFC2578] McCloghrie, K., Perkins, D., Schoenwaelder, J., Case, J., Rose, M., and S. Waldbusser, "Structure of Management Information Version 2 (SMIv2)", STD 58, [RFC 2578](#), April

Expires June 2003

[Page 91]

1999.

- [RFC2579] McCloghrie, K., Perkins, D., Schoenwaelder, J., Case, J., Rose, M., and S. Waldbusser, "Textual Conventions for SMIV2", STD 58, [RFC 2579](#), April 1999.
- [RFC2580] McCloghrie, K., Perkins, D., Schoenwaelder, J., Case, J., Rose, M., and S. Waldbusser, "Conformance Statements for SMIV2", STD 58, [RFC 2580](#), April 1999.
- [RFC2863] McCloghrie, K. and F. Kastenholz, "The Interfaces Group MIB", [RFC 2863](#), June 2000.

## 7.2 Informative References

- [RFC1157] Case, J., Fedor, M., Schoffstall, M., and J. Davin, "Simple Network Management Protocol", STD 15, [RFC 1157](#), May 1990.
- [RFC2570] Case, J., Mundy, R., Partain, D., and B. Stewart, "Introduction to Version 3 of the Internet-standard Network Management Framework", [RFC 2570](#), April 1999.
- [RFC1155] Rose, M., and K. McCloghrie, "Structure and Identification of Management Information for TCP/IP-based Internets", STD 16, [RFC 1155](#), May 1990.
- [RFC1212] Rose, M. and K. McCloghrie, "Concise MIB Definitions", STD 16, [RFC 1212](#), March 1991.
- [RFC1215] M. Rose, "A Convention for Defining Traps for use with the SNMP", [RFC 1215](#), March 1991.
- [RFC1901] Case, J., McCloghrie, K., Rose, M., and S. Waldbusser, "Introduction to Community-based SNMPv2", [RFC 1901](#), January 1996.
- [RFC3410] Case, J., Mundy, R., Partain, D. and B. Stewart, "Introduction and Applicability Statements for Internet-Standard Management Framework", [RFC 3410](#), December 2002.

## 8. Security Considerations

There are a number of management objects defined in this MIB module with a MAX-ACCESS clause of read-write and/or read-create. Such objects may be considered sensitive or vulnerable in some network environments. The support for SET operations in a non-secure

Expires June 2003

[Page 92]

environment without proper protection can have a negative effect on network operations. These are the tables and objects and their sensitivity/vulnerability:

| Table                            | Sensitivity/vulnerability                |
|----------------------------------|--|
| 1. atmSvcVpCrossConnectTable     | Deletion of VP cross-connects            |
| 2. atmSvcVcCrossConnectTable     | Deletion of VC cross-connects            |
| 3. atmSigStatTable               | Signalling read-only statistics          |
| 4. atmSigSupportTable            | Signalling configuration params          |
| 5. atmSigDescrParamTable         | Signalling configuration params          |
| 6. atmIfRegisteredAddrTable      | Interface address table                  |
| 7. atmVclAddrTable               | VCL/Address mapping table                |
| 8. atmAddrVclTable               | VCL/Address mapping table<br>(read-only) |
| 9. atmVplStatTable               | VPL statistics (read-only)               |
| 10. atmVplLogicalPortTable       | VPL logical port configuration           |
| 11. atmVclStatTable              | VCL statistics (read-only)               |
| 12. atmAal5VclStatTable          | AAL5 statistics (read-only)              |
| 13. atmVclGenTable               | Signalling configuration                 |
| 14. atmInterfaceExtTable         | Interface configuration                  |
| 15. atmIlmiSrvcRegTable          | ILMI config params                       |
| 16. atmIlmiNetworkPrefixTable    | ILMI config params                       |
| 17. atmSwitchAddressTable        | Switch address info                      |
| 18. atmVpCrossConnectXTable      | VP cross-connect params                  |
| 19. atmVcCrossConnectXTable      | VC cross-connect params                  |
| 20. atmCurrentlyFailingPVplTable | PVPL status info (read-only)             |
| 21. atmCurrentlyFailingPVclTable | PVCL status info (read-only)             |

Some of the readable objects in this MIB module (i.e., objects with a MAX-ACCESS other than not-accessible) may be considered sensitive or vulnerable in some network environments. It is thus important to control even GET and/or NOTIFY access to these objects and possibly to even encrypt the values of these objects when sending them over the network via SNMP.

SNMP versions prior to SNMPv3 did not include adequate security. Even if the network itself is secure (for example by using IPSec), even then, there is no control as to who on the secure network is allowed to access and GET/SET (read/change/create/delete) the objects in this MIB module.

It is RECOMMENDED that implementers consider the security features as provided by the SNMPv3 framework (see [\[RFC3410\]](#), [section 8](#)), including full support for the SNMPv3 cryptographic mechanisms (for authentication and privacy).

Expires June 2003

[Page 93]

Further, deployment of SNMP versions prior to SNMPv3 is NOT RECOMMENDED. Instead, it is RECOMMENDED to deploy SNMPv3 and to enable cryptographic security. It is then a customer/operator responsibility to ensure that the SNMP entity giving access to an instance of this MIB module is properly configured to give access to the objects only to those principals (users) that have legitimate rights to indeed GET or SET (change/create/delete) them.

## 9. Intellectual Property Notice

The IETF takes no position regarding the validity or scope of any intellectual property or other rights that might be claimed to pertain to the implementation or use of the technology described in this document or the extent to which any license under such rights might or might not be available; neither does it represent that it has made any effort to identify any such rights. Information on the IETF's procedures with respect to rights in standards-track and standards-related documentation can be found in [BCP-11](#). Copies of claims of rights made available for publication and any assurances of licenses to be made available, or the result of an attempt made to obtain a general license or permission for the use of such proprietary rights by implementers or users of this specification can be obtained from the IETF Secretariat."

The IETF invites any interested party to bring to its attention any copyrights, patents or patent applications, or other proprietary rights which may cover technology that may be required to practice this standard. Please address the information to the IETF Executive Director.

## 10. Authors' Addresses

Faye Ly  
Pedestal Networks  
6503 Dumbarton Circle  
Fremont, CA 94555  
USA  
Phone (510) 896-2908  
EMail: faye@pedestalnetworks.com

Michael Noto  
Cisco Systems  
170 W. Tasman Drive  
San Jose, CA 95134-1706  
USA  
EMail: mnoto@cisco.com

Andrew Smith  
Allegro Networks



Expires June 2003

[Page 94]

6399 San Ignacio  
San Jose, CA 95119-1206  
USA  
EMail: andrew@allegronetworks.com

Ethan Mickey Spiegel  
Cisco Systems  
170 W. Tasman Drive  
San Jose, CA 95134-1706  
Phone: (408) 526-6408  
EMail: mspiegel@cisco.com

Kaj Tesink  
Telcordia Technologies  
331 Newman Springs Road  
Red Bank, NJ 07701-7020  
Phone: (732) 758-5254  
EMail: kaj@research.telcordia.com

## 11. Full Copyright Statement

Copyright (C) The Internet Society (2003). All Rights Reserved.

This document and translations of it may be copied and furnished to others, and derivative works that comment on or otherwise explain it or assist in its implementation may be prepared, copied, published and distributed, in whole or in part, without restriction of any kind, provided that the above copyright notice and this paragraph are included on all such copies and derivative works. However, this document itself may not be modified in any way, such as by removing the copyright notice or references to the Internet Society or other Internet organizations, except as needed for the purpose of developing Internet standards in which case the procedures for copyrights defined in the Internet Standards process must be followed, or as required to translate it into languages other than English.

The limited permissions granted above are perpetual and will not be revoked by the Internet Society or its successors or assigns.

This document and the information contained herein is provided on an "AS IS" basis and THE INTERNET SOCIETY AND THE INTERNET ENGINEERING TASK FORCE DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTY THAT THE USE OF THE INFORMATION HEREIN WILL NOT INFRINGE ANY RIGHTS OR ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE."

Expires June 2003

[Page 95]

Table of Contents

Status of this Memo ..... [1](#)  
Abstract ..... [2](#)  
[1](#). The Internet-Standard Management Framework ..... [2](#)  
[2](#). Overview ..... [11](#)  
[3](#). Conventions used in the MIB ..... [13](#)  
[4](#). Conformance and Compliance ..... [28](#)  
[5](#). Definitions ..... [28](#)  
[6](#). Acknowledgments ..... [95](#)  
[7](#). References ..... [95](#)  
[8](#). Security Considerations ..... [97](#)  
[9](#). Intellectual Property Notice ..... [98](#)  
[10](#). Authors' Addresses ..... [98](#)  
[11](#). Full Copyright Statement ..... [99](#)

