

**Radio Frequency (RF) Interface Management Information Base
for MCNS/DOCSIS compliant RF interfaces
draft-ietf-ipcdn-rf-interface-mib-07.txt**

Wed Feb 17 11:20:28 PST 1999

Mike StJohns (editor)
@Home Network
stjohns@corp.home.net

Status of this Memo

This document is an Internet-Draft and is in full conformance with all the provisions of [Section 10 of RFC2026](#). Internet-Drafts are working documents of the Internet Engineering Task Force (IETF), its areas, and its working groups. Note that other groups may also distribute working documents as Internet-Drafts.

Internet-Drafts are draft documents valid for a maximum of six months and may be updated, replaced, or obsoleted by other documents at any time. It is inappropriate to use Internet-Drafts as reference material or to cite them other than as "work in progress".

To view the entire list of current Internet-Drafts, please check the "1id-abstracts.txt" listing contained in the Internet-Drafts Shadow Directories on ftp.is.co.za (Africa), ftp.nordu.net (Europe), munnari.oz.au (Pacific Rim), ftp.ietf.org (US East Coast), or ftp.isi.edu (US West Coast).

Copyright (C) The Internet Society (1997). All Rights Reserved.

Abstract

This memo defines a portion of the Management Information Base (MIB) for use with network management protocols in the Internet community. In particular, it defines a basic set of managed objects for SNMP-based management of MCNS/DOCSIS compliant Radio Frequency (RF) interfaces.

This memo specifies a MIB module in a manner that is compliant to the SNMP SMIV2 [\[5\]](#)[\[6\]](#)[\[7\]](#). The set of objects are consistent with the SNMP framework and existing SNMP standards.

This memo is a product of the IPCDN working group within the Internet Engineering Task Force. Comments are solicited and should be addressed

to the working group's mailing list at ipcdn@terayon.com and/or the author.

Expires August 1999

[Page 1]

Table of Contents

1	The SNMP Management Framework	3
2	Glossary	3
2.1	CATV	4
2.2	Channel	4
2.3	CM	4
2.4	CMTS	4
2.5	Codeword	4
2.6	Data Packet	4
2.7	dBmV	4
2.8	DOCSIS	4
2.9	Downstream	4
2.10	Head-end	4
2.11	MAC Packet	5
2.12	MCNS	5
2.13	Mini-slot	5
2.14	QPSK	5
2.15	QAM	5
2.16	RF	5
2.17	Symbol-times	5
2.18	Upstream	5
3	Overview	6
3.1	Structure of the MIB	6
3.1.1	docsIfBaseObjects	6
3.1.2	docsIfCmObjects	6
3.1.3	docsIfCmtsObjects	7
3.2	Relationship to the Interfaces MIB	7
3.2.1	Layering Model	7
3.2.2	Virtual Circuits	8
3.2.3	ifTestTable	8
3.2.4	ifRcvAddressTable	8
3.2.5	ifEntry	9
3.2.5.1	ifEntry for Downstream interfaces	9
3.2.5.1.1	ifEntry for Downstream interfaces in Cable Modem Termination Systems	9
3.2.5.1.2	ifEntry for Downstream interfaces in Cable Modems	10
3.2.5.2	ifEntry for Upstream interfaces	12
3.2.5.2.1	ifEntry for Upstream interfaces in Cable Modem Termination Systems	12
3.2.5.2.2	ifEntry for Upstream interfaces in Cable Modems	13
3.2.5.3	ifEntry for the MAC Layer	15
4	Definitions	16
5	Acknowledgments	64
6	References	64
7	Security Considerations	66
8	Intellectual Property	66

9 Author's Address	67
10 Copyright Section	67

Expires August 1999

[Page 2]

1. The SNMP Management Framework

The SNMP Management Framework presently consists of five major components:

- o An overall architecture, described in [RFC 2271](#) [1].
- o Mechanisms for describing and naming objects and events for the purpose of management. The first version of this Structure of Management Information (SMI) is called SMIV1 and described in [RFC 1155](#) [2], [RFC 1212](#) [3] and [RFC 1215](#) [4]. The second version, called SMIV2, is described in [RFC 1902](#) [5], [RFC 1903](#) [6] and [RFC 1904](#) [7].
- o Message protocols for transferring management information. The first version of the SNMP message protocol is called SNMPv1 and described in [RFC 1157](#) [8]. A second version of the SNMP message protocol, which is not an Internet standards track protocol, is called SNMPv2c and described in [RFC 1901](#) [9] and [RFC 1906](#) [10]. The third version of the message protocol is called SNMPv3 and described in [RFC 1906](#) [10], [RFC 2272](#) [11] and [RFC 2274](#) [12].
- o Protocol operations for accessing management information. The first set of protocol operations and associated PDU formats is described in [RFC 1157](#) [8]. A second set of protocol operations and associated PDU formats is described in [RFC 1905](#) [13].
- o A set of fundamental applications described in [RFC 2273](#) [14] and the view-based access control mechanism described in [RFC 2275](#) [15].

Managed objects are accessed via a virtual information store, termed the Management Information Base or MIB. Objects in the MIB are defined using the mechanisms defined in the SMI.

This memo specifies a MIB module that is compliant to the SMIV2. A MIB conforming to the SMIV1 can be produced through the appropriate translations. The resulting translated MIB MUST be semantically equivalent, except where objects or events are omitted because no translation is possible (use of Counter64). Some machine readable information in SMIV2 will be converted into textual descriptions in SMIV1 during the translation process. However, this loss of machine readable information is not considered to change the semantics of the MIB.

2. Glossary

The terms in this document are derived either from normal cable system usage, or from the documents associated with the Data Over Cable Service

Interface Specification process.

Expires August 1999

[Page 3]

2.1. CATV

Originally "Community Antenna Television", now used to refer to any cable or hybrid fiber and cable system used to deliver video signals to a community.

2.2. Channel

A specific frequency allocation with an RF medium, specified by channel width in Hertz (cycles per second) and by center frequency. Within the US Cable Systems, upstream channels are generally allocated from the 5-42MHz range while down stream channels are generally allocated from the 50-750MHz range depending on the capabilities of the given system. The typical broadcast channel width in the US is 6MHz. Upstream channel widths for DOCSIS vary.

2.3. CM Cable Modem. A CM acts as a "slave" station in a DOCSIS compliant cable data system.

2.4. CMTS Cable Modem Termination System. A generic term covering a cable bridge or cable router in a head-end. A CMTS acts as the master station in a DOCSIS compliant cable data system. It is the only station that transmits downstream, and it controls the scheduling of upstream transmissions by its associated CMs.

2.5. Codeword

See [16]. A characteristic of the Forward Error Correction scheme used above the RF media layer.

2.6. Data Packet

The payload portion of the MAC Packet.

2.7. dBmV

Decibel relative to one milli-volt. A measure of RF power.

2.8. DOCSIS

"Data Over Cable Interface Specification". A term referring to the ITU-T J.112 Annex B standard for cable modem systems. [20]

2.9. Downstream

The direction from the head-end towards the subscriber.

2.10. Head-end

The origination point in most cable systems of the subscriber video signals.

Expires August 1999

[Page 4]

[2.11.](#) MAC Packet

A DOCSIS PDU.

[2.12.](#) MCNS

"Multimedia Cable Network System". Generally replaced in usage by DOCSIS.

[2.13.](#) Mini-slot

See [[16](#)]. In general, an interval of time which is allocated by the CMTS to a given CM for that CM to transmit in an upstream direction.

[2.14.](#) QPSK Quadrature Phase Shift Keying. A particular modulation scheme on an RF medium. See [[19](#)]

[2.15.](#) QAM Quadrature Amplitude Modulation. A particular modulation scheme on on RF medium. Usually expressed with a number indicating the size of the modulation constellation (e.g. 16 QAM). See [[19](#)], or any other book on digital communications over RF for a complete explanation of this.

[2.16.](#) RF

Radio Frequency.

[2.17.](#) Symbol-times

See [[16](#)]. A characteristic of the RF modulation scheme.

[2.18.](#) Upstream

The direction from the subscriber towards the head-end.

Expires August 1999

[Page 5]

3. Overview

This MIB provides a set of objects required for the management of MCNS/DOCSIS compliant Cable Modem (CM) and Cable Modem Termination System (CMTS) RF interfaces. The specification is derived in part from the parameters and protocols described in DOCSIS Radio Frequency Interface Specification [16].

3.1. Structure of the MIB

This MIB is structured as three groups:

- o Management information pertinent to both Cable Modems (CM) and Cable Modem Termination Systems (CMTS) (docsIfBaseObjects).
- o Management information pertinent to Cable Modems only (docsIfCmObjects).
- o Management information pertinent to Cable Modem Termination Systems only (docsIfCmtsObjects).

Tables within each of these groups group objects functionally - e.g. Quality of Service, Channel characteristics, MAC layer management, etc. Rows created automatically (e.g. by the device according to the hardware configuration) may and generally will have a mixture of configuration and status objects within them. Rows that are meant to be created by the management station are generally restricted to configuration (read-create) objects.

3.1.1. docsIfBaseObjects

docsIfDownstreamChannelTable - This table describes the active downstream channels for a CMTS and the received downstream channel for a CM.

docsIfUpstreamChannelTable - This table describes the active upstream channels for a CMTS and the current upstream transmission channel for a CM.

docsIfQosProfileTable - This table describes the valid Quality of Service service profiles for the cable data system.

docsIfSignalQualityTable - This table is used to monitor RF signal quality characteristics of received signals.

3.1.2. docsIfCmObjects

docsIfCmMacTable - This table is used to monitor the DOCSIS MAC interface and can be considered an extension to the ifEntry.

docsIfCmServiceTable - This table describes the upstream service queues available at this CM. There is a comparable table at the CMTS,

Expires August 1999

[Page 6]

docsIfCmtsServiceEntry, which describes the service queues from the point of view of the CMTS.

3.1.3. docsIfCmtsObjects

docsIfCmtsStatusTable - This table provides a set of aggregated counters which roll-up values and events that occur on the underlying sub-interfaces.

docsIfCmtsCmStatusTable - This table is used to hold information about known (e.g. registered) cable modems on the system serviced by this CMTS.

docsIfCmtsServiceEntry - This table provides access to the information related to upstream service queues.

docsIfCmtsModulationTable - This table allows control over the modulation profiles for RF channels associated with this CMTS.

docsIfCmtsMacToCmTable - This table allows fast access into the docsIfCmtsCmTable via a MAC address (of the CM) interface.


3.2. Relationship to the Interfaces MIB

This section clarifies the relationship of this MIB to the Interfaces MIB [17]. Several areas of correlation are addressed in the following subsections. The implementor is referred to the Interfaces MIB document in order to understand the general intent of these areas.

3.2.1. Layering Model

An instance of ifEntry exists for each RF Downstream interface, for each RF Upstream interface, and for each RF MAC layer. The ifStackTable [17] MUST be implemented to identify relationships among sub-interfaces.

The following example illustrates a MAC interface with one downstream and two upstream channels.

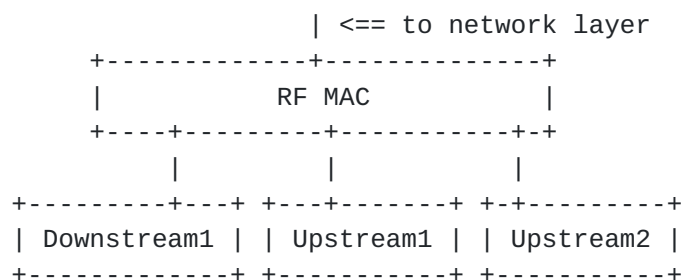

As can be seen from this example, the RF MAC interface is layered on top of the downstream and upstream interfaces.

Expires August 1999

[Page 7]

In this example, the assignment of index values could be as follows:

ifIndex	ifType	Description
1	docsCableMacLayer(127)	CATV MAC Layer
2	docsCableDownstream(128)	CATV Downstream interface
3	docsCableUpstream(129)	CATV Upstream interface
4	docsCableUpstream(129)	CATV Upstream interface

The corresponding ifStack entries would then be:

IfStackHigherLayer	ifStackLowerLayer
0	1
1	2
1	3
1	4
2	0
3	0
4	0

The same interface model can also be used in Telephony or Telco Return systems. A pure Telco Return system (Cable Modem as well as Cable Modem Termination System) would not have upstream, but only downstream cable channels. Systems supporting both Telco Return and cable upstream channels can use the above model without modification.

Telco Return Upstream channel(s) are handled by the appropriate MIBs, such as PPP or Modem MIBs.

3.2.2. Virtual Circuits

This medium does not support virtual circuits and this area is not applicable to this MIB.

3.2.3. ifTestTable

The ifTestTable is not supported by this MIB.

3.2.4. ifRcvAddressTable

The ifRcvAddressTable is not supported by this MIB.

Expires August 1999

[Page 8]

3.2.5. ifEntry

This section documents only the differences from the requirements specified in the Interfaces MIB. See that MIB for columns omitted from the descriptions below.

3.2.5.1. ifEntry for Downstream interfaces

The ifEntry for Downstream interfaces supports the ifGeneralInformationGroup and the ifPacketGroup of the Interfaces MIB. This is an output only interface at the CMTS and all input status counters - ifIn* - will return zero. This is an input only interface at the CM and all output status counters - ifOut* - will return zero.

3.2.5.1.1. ifEntry for Downstream interfaces in Cable Modem Termination Systems

ifTable	Comments
=====	=====
ifIndex	Each RF Cable Downstream interface is represented by an ifEntry.
ifType	The IANA value of docsCableDownstream(128).
ifSpeed	Return the speed of this downstream channel. The returned value the raw bandwidth in bits/s of this interface. This is the symbol rate multiplied with the number of bits per symbol.
ifPhysAddress	Return an empty string.
ifAdminStatus	The administrative status of this interface.
ifOperStatus	The current operational status of this interface.
ifMtu	The size of the largest frame which can be sent on this interface, specified in octets. The value includes the length of the MAC header.
ifInOctets	Return zero.
ifInUcastPkts	Return zero.
ifInMulticastPkts	Return zero.
ifInBroadcastPkts	Return zero.
ifInDiscards	Return zero.

ifInErrors Return zero.

ifInUnknownProtos Return zero.

Expires August 1999

[Page 9]

ifOutOctets	The total number of octets transmitted on this interface. This includes MAC packets as well as data packets, and includes the length of the MAC header.
ifOutUcastPkts	The number of Unicast packets transmitted on this interface. This includes MAC packets as well as data packets.
ifOutMulticastPkts	Return the number of Multicast packets transmitted on this interface. This includes MAC packets as well as data packets.
ifOutBroadcastPkts	Return the number of broadcast packets transmitted on this interface. This includes MAC packets as well as data packets.
ifOutDiscards	The total number of outbound packets which were discarded. Possible reasons are: buffer shortage.
ifOutErrors	The number of packets which could not be transmitted due to errors.
ifPromiscuousMode	Return false.

3.2.5.1.2. ifEntry for Downstream interfaces in Cable Modems

ifTable	Comments
=====	=====
ifIndex	Each RF Cable Downstream interface is represented by an ifEntry.
ifType	The IANA value of docsCableDownstream(128).
ifSpeed	Return the speed of this downstream channel. The returned value the raw bandwidth in bits/s of this interface. This is the symbol rate multiplied with the number of bits per symbol.
ifPhysAddress	Return an empty string.
ifAdminStatus	The administrative status of this interface.
ifOperStatus	The current operational status of this interface.

ifMtu The size of the largest frame which can be
 received from this interface, specified in octets.
 The value includes the length of the MAC header.

Expires August 1999

[Page 10]

ifInOctets	The total number of octets received on this interface. This includes data packets as well as MAC layer packets, and includes the length of the MAC header.
ifInUcastPkts	The number of Unicast packets received on this interface. This includes data packets as well as MAC layer packets.
ifInMulticastPkts	Return the number of Multicast packets received on this interface. This includes data packets as well as MAC layer packets.
ifInBroadcastPkts	Return the number of Broadcast packets received on this interface. This includes data packets as well as MAC layer packets.
ifInDiscards	The total number of received packets which have been discarded. The possible reasons are: buffer shortage.
ifInErrors	The number of inbound packets that contained errors preventing them from being deliverable to higher layers. Possible reasons are: MAC FCS error.
ifInUnknownProtos	The number of frames with an unknown packet type. These are MAC frames with an unknown packet type.
ifOutOctets	Return zero.
ifOutUcastPkts	Return zero.
ifOutMulticastPkts	Return zero.
ifOutBroadcastPkts	Return zero.
ifOutDiscards	Return zero.
ifOutErrors	Return zero.
ifPromiscuousMode	Refer to the Interfaces MIB.

Expires August 1999

[Page 11]

3.2.5.2. ifEntry for Upstream interfaces

The ifEntry for Upstream interfaces supports the ifGeneralInformationGroup and the ifPacketGroup of the Interfaces MIB. This is an input only interface at the CMTS and all output status counters - ifOut* - will return zero. This is an output only interface at the CM and all input status counters - ifIn* - will return zero.

3.2.5.2.1. ifEntry for Upstream interfaces in Cable Modem Termination Systems

ifTable	Comments
=====	=====
ifIndex	Each RF Cable Upstream interface is represented by an ifEntry.
ifType	The IANA value of docsCableUpstream(129).
ifSpeed	Return the speed of this upstream channel. The returned value is the raw bandwidth in bits/s of this interface, regarding the highest speed modulation profile that is defined. This is the symbol rate multiplied with the number of bits per symbol for this modulation profile.
ifPhysAddress	Return an empty string.
ifAdminStatus	The administrative status of this interface.
ifOperStatus	The current operational status of this interface.
ifMtu	The size of the largest frame which can be received on this interface, specified in octets. The value includes the length of the MAC header.
ifInOctets	The total number of octets received on this interface. This includes data packets as well as MAC layer packets, and includes the length of the MAC header.
ifInUcastPkts	The number of Unicast packets received on this interface. This includes data packets as well as MAC layer packets.
ifInMulticastPkts	Return the number of Multicast packets received on this interface. This includes data packets as well as MAC layer packets.

ifInBroadcastPkts Return the number of Broadcast packets received on this interface. This includes data packets as well as MAC layer packets.

Expires August 1999

[Page 12]

ifInDiscards	The total number of received packets which have been discarded. The possible reasons are: buffer shortage.
ifInErrors	The number of inbound packets that contained errors preventing them from being deliverable to higher layers. Possible reasons are: MAC FCS error.
ifInUnknownProtos	The number of frames with an unknown packet type. This are MAC frames with an unknown packet type.
ifOutOctets	Return zero.
ifOutUcastPkts	Return zero.
ifOutMulticastPkts	Return zero.
ifOutBroadcastPkts	Return zero.
ifOutDiscards	Return zero.
ifOutErrors	Return zero.

3.2.5.2.2. ifEntry for Upstream interfaces in Cable Modems

ifTable	Comments
=====	=====
ifIndex	Each RF Cable Upstream interface is represented by an ifEntry.
ifType	The IANA value of docsCableUpstream(129).
ifSpeed	Return the speed of this upstream channel. The returned value is the raw bandwidth in bits/s of this interface, regarding the highest speed modulation profile that is defined. This is the symbol rate multiplied with the number of bits per symbol for this modulation profile.
ifPhysAddress	Return an empty string.
ifAdminStatus	The administrative status of this interface.
ifOperStatus	The current operational status of this interface.

ifMtu The size of the largest frame which can be
transmitted on this interface, specified in octets.

Expires August 1999

[Page 13]

The value includes the length of the MAC header.

ifInOctets Return zero.

ifInUcastPkts Return zero.

ifInMulticastPkts Return zero.

ifInBroadcastPkts Return zero.

ifInDiscards Return zero.

ifInErrors Return zero.

ifInUnknownProtos Return zero.

ifOutOctets The total number of octets transmitted on this interface. This includes MAC packets as well as data packets, and includes the length of the MAC header.

ifOutUcastPkts The number of Unicast packets transmitted on this interface. This includes MAC packets as well as data packets.

ifOutMulticastPkts
Return the number of Multicast packets transmitted on this interface.
This includes MAC packets as well as data packets.

ifOutBroadcastPkts
Return the number of broadcast packets transmitted on this interface.
This includes MAC packets as well as data packets.

ifOutDiscards The total number of outbound packets which were discarded. Possible reasons are:
buffer shortage.

ifOutErrors The number of packets which could not be transmitted due to errors.

ifPromiscuousMode Return false.

Expires August 1999

[Page 14]

3.2.5.3. ifEntry for the MAC Layer

The ifEntry for the MAC Layer supports the ifGeneralInformationGroup and the ifPacketGroup of the Interfaces MIB. This interface provides an aggregate view of status for the lower level Downstream and Upstream interfaces.

ifTable	Comments
=====	=====
ifIndex	Each RF Cable MAC layer entity is represented by an ifEntry.
ifType	The IANA value of docsCableMacLayer(127).
ifSpeed	Return zero.
ifPhysAddress	Return the physical address of this interface.
ifAdminStatus	The administrative status of this interface.
ifOperStatus	The current operational status of the MAC layer interface.
ifHighSpeed	Return zero.
ifMtu	Return 1500.
ifInOctets	The total number of data octets received on this interface, targeted for upper protocol layers.
ifInUcastPkts	The number of Unicast packets received on this interface, targeted for upper protocol layers.
ifInMulticastPkts	Return the number of Multicast packets received on this interface, targeted for upper protocol layers.
ifInBroadcastPkts	Return the number of Broadcast packets received on this interface, targeted for upper protocol layers.
ifInDiscards	The total number of received packets which have been discarded. The possible reasons are: buffer shortage.
ifInErrors	The number of inbound packets that contained errors preventing them from being deliverable to higher layers. Possible reasons are: data packet FCS error,

invalid MAC header.

ifInUnknownProtos The number of frames with an unknown packet type.

Expires August 1999

[Page 15]

This is the number of data packets targeted for upper protocol layers with an unknown packet type.

ifOutOctets The total number of octets, received from upper protocol layers and transmitted on this interface.

ifOutUcastPkts The number of Unicast packets, received from upper protocol layers and transmitted on this interface.

ifOutMulticastPkts Return the number of Multicast packets received from upper protocol layers and transmitted on this interface.

ifOutBroadcastPkts Return the number of broadcast packets received from upper protocol layers and transmitted on this interface.

ifOutDiscards The total number of outbound packets which were discarded. Possible reasons are:
buffer shortage.

ifOutErrors The number of packets which could not be transmitted due to errors.

ifPromiscuousMode Refer to the Interfaces MIB.

[4. Definitions](#)

DOCS-IF-MIB DEFINITIONS ::= BEGIN

IMPORTS

 MODULE-IDENTITY,
 OBJECT-TYPE,
-- do not import BITS,
 Unsigned32,
 Integer32,
 Counter32,
 TimeTicks,
 IpAddress
 FROM SNMPv2-SMI
 TEXTUAL-CONVENTION,
 MacAddress,
 RowStatus,
 TruthValue,
 TimeInterval,

TimeStamp
FROM SNMPv2-TC
OBJECT-GROUP,

Expires August 1999

[Page 16]


```
MODULE-COMPLIANCE
    FROM SNMPv2-CONF
ifIndex, InterfaceIndexOrZero
    FROM IF-MIB
transmission
    FROM RFC1213-MIB;
```

docsIfMib MODULE-IDENTITY

```
LAST-UPDATED      "9902171132Z" -- Feb 17, 1999
```

```
ORGANIZATION      "IETF IPCDN Working Group"
```

CONTACT-INFO

```
"          Michael StJohns
```

```
Postal: @Home Network
```

```
425 Broadway
```

```
Redwood City, CA
```

```
U.S.A.
```

```
Phone: +1 650 569 5368
```

```
E-mail: stjohns@corp.home.net"
```

DESCRIPTION

```
"This is the MIB Module for MCNS/DOCSIS compliant Radio
Frequency (RF) interfaces in Cable Modems (CM) and
Cable Modem Termination Systems (CMTS)."
```

```
REVISION "9810061512Z"
```

DESCRIPTION

```
"Modified by Mike StJohns to fix problems identified by
the first pass of the MIB doctor.  Of special note,
docsIfRangingResp and docsIfCmtsInsertionInterval were
obsoleted and replaced by other objects with the same
functionality, but more appropriate SYNTAX."
```

```
::= { transmission 127 }
```

-- Textual Conventions

TenthdBmV ::= TEXTUAL-CONVENTION

```
DISPLAY-HINT "d-1"
```

```
STATUS      current
```

DESCRIPTION

```
"This data type represents power levels that are normally
expressed in dBmV. Units are in tenths of a dBmV;
for example, 5.1 dBmV will be represented as 51."
```

```
SYNTAX      Integer32
```

TenthdB ::= TEXTUAL-CONVENTION

```
DISPLAY-HINT "d-1"
```

```
STATUS      current
```

DESCRIPTION

```
"This data type represents power levels that are normally
expressed in dB. Units are in tenths of a dB;
```

for example, 5.1 dB will be represented as 51."
SYNTAX Integer32

docsIfMibObjects OBJECT IDENTIFIER ::= { docsIfMib 1 }

Expires August 1999

[Page 17]

```
docsIfBaseObjects OBJECT IDENTIFIER ::= { docsIfMibObjects 1 }
docsIfCmObjects    OBJECT IDENTIFIER ::= { docsIfMibObjects 2 }
docsIfCmtsObjects  OBJECT IDENTIFIER ::= { docsIfMibObjects 3 }
```

```
--
-- BASE GROUP
--
```

```
--
-- The following table is implemented on both the Cable Modem (CM)
-- and the Cable Modem Termination System (CMTS).
--
```

```
docsIfDownstreamChannelTable OBJECT-TYPE
    SYNTAX      SEQUENCE OF DocsIfDownstreamChannelEntry
    MAX-ACCESS  not-accessible
    STATUS      current
    DESCRIPTION
        "This table describes the attributes of downstream
        channels (frequency bands)."
    REFERENCE
        "DOCSIS Radio Frequency Interface Specification,
        Table 4-12 and Table 4-13."
    ::= { docsIfBaseObjects 1 }
```

```
docsIfDownstreamChannelEntry OBJECT-TYPE
    SYNTAX      DocsIfDownstreamChannelEntry
    MAX-ACCESS  not-accessible
    STATUS      current
    DESCRIPTION
        "An entry provides a list of attributes for a single
        Downstream channel.
        An entry in this table exists for each ifEntry with an
        ifType of docsCableDownstream(128)."
```

```
INDEX { ifIndex }
::= { docsIfDownstreamChannelTable 1 }
```

```
DocsIfDownstreamChannelEntry ::= SEQUENCE {
    docsIfDownChannelId      Integer32,
    docsIfDownChannelFrequency Integer32,
    docsIfDownChannelWidth   Integer32,
    docsIfDownChannelModulation INTEGER,
    docsIfDownChannelInterleave INTEGER,
    docsIfDownChannelPower    TenthdBmV
}
```

```
docsIfDownChannelId OBJECT-TYPE
    SYNTAX      Integer32 (0..255)
```

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The Cable Modem Termination System (CMTS) identification

Expires August 1999

[Page 18]

of the downstream channel within this particular MAC interface. If the interface is down, the object returns the most current value. If the downstream channel ID is unknown, this object returns a value of 0."

::= { docsIfDownstreamChannelEntry 1 }

docsIfDownChannelFrequency OBJECT-TYPE

SYNTAX Integer32 (0..1000000000)

UNITS "hertz"

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"The center of the downstream frequency associated with this channel. This object will return the current tuner frequency. If a CMTS provides IF output, this object will return 0, unless this CMTS is in control of the final downstream RF frequency. See the associated compliance object for a description of valid frequencies that may be written to this object."

REFERENCE

"DOCSIS Radio Frequency Interface Specification,
[Section 4.3.3.](#)"

::= { docsIfDownstreamChannelEntry 2 }

docsIfDownChannelWidth OBJECT-TYPE

SYNTAX Integer32 (0..16000000)

UNITS "hertz"

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"The bandwidth of this downstream channel. Most implementations are expected to support a channel width of 6 MHz (North America) and/or 8 MHz (Europe). See the associated compliance object for a description of the valid channel widths for this object."

REFERENCE

"DOCSIS Radio Frequency Interface Specification,
Table 4-12 and Table 4-13."

::= { docsIfDownstreamChannelEntry 3 }

docsIfDownChannelModulation OBJECT-TYPE

SYNTAX INTEGER {

unknown(1),

other(2),

qam64(3),

qam256(4)

}

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"The modulation type associated with this downstream
channel. If the interface is down, this object either

Expires August 1999

[Page 19]

returns the configured value (CMTS), the most current value (CM), or the value of unknown(1). See the associated conformance object for write conditions and limitations. See the reference for specifics on the modulation profiles implied by qam64 and qam256."

REFERENCE

"DOCSIS Radio Frequency Interface Specification,
[Section 3.6.2](#)."

::= { docsIfDownstreamChannelEntry 4 }

docsIfDownChannelInterleave OBJECT-TYPE

SYNTAX INTEGER {

unknown(1),
other(2),
taps8Increment16(3),
taps16Increment8(4),
taps32Increment4(5),
taps64Increment2(6),
taps128Increment1(7)

}

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"The Forward Error Correction (FEC) interleaving used for this downstream channel.

Values are defined as follows:

taps8Increment16(3):	protection 5.9/4.1 usec, latency .22/.15 msec
taps16Increment8(4):	protection 12/8.2 usec, latency .48/.33 msec
taps32Increment4(5):	protection 24/16 usec, latency .98/.68 msec
taps64Increment2(6):	protection 47/33 usec, latency 2/1.4 msec
taps128Increment1(7):	protection 95/66 usec, latency 4/2.8 msec

If the interface is down, this object either returns the configured value (CMTS), the most current value (CM), or the value of unknown(1).

The value of other(2) is returned if the interleave is known but not defined in the above list.

See the associated conformance object for write conditions and limitations. See the reference for the FEC configuration described by the setting of this object."

REFERENCE

"DOCSIS Radio Frequency Interface Specification,
[Section 4.3.2](#)."

::= { docsIfDownstreamChannelEntry 5 }

docsIfDownChannelPower OBJECT-TYPE
SYNTAX TenthdBmV
UNITS "dBmV"

Expires August 1999

[Page 20]

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"At the CMTS, the operational transmit power. At the CM, the received power level. May be set to zero at the CM if power level measurement is not supported.

If the interface is down, this object either returns the configured value (CMTS), the most current value (CM) or the value of 0. See the associated conformance object for write conditions and limitations. See the reference for recommended and required power levels."

REFERENCE

"DOCSIS Radio Frequency Interface Specification, Table 4-12 and Table 4-13."

::= { docsIfDownstreamChannelEntry 6 }

--

-- The following table is implemented on both the CM and the CMTS.
 -- For the CM, only attached channels appear in the table. For the
 -- CM, this table is read only as well.

--

docsIfUpstreamChannelTable OBJECT-TYPE

SYNTAX SEQUENCE OF DocsIfUpstreamChannelEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"This table describes the attributes of attached upstream channels (frequency bands)."

::= { docsIfBaseObjects 2 }

docsIfUpstreamChannelEntry OBJECT-TYPE

SYNTAX DocsIfUpstreamChannelEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"List of attributes for a single upstream channel.
 An entry in this table exists for each ifEntry with an ifType of docsCableUpstream(129)."

INDEX { ifIndex }

::= { docsIfUpstreamChannelTable 1 }

DocsIfUpstreamChannelEntry ::= SEQUENCE {

docsIfUpChannelId	Integer32,
docsIfUpChannelFrequency	Integer32,
docsIfUpChannelWidth	Integer32,
docsIfUpChannelModulationProfile	Unsigned32,
docsIfUpChannelSlotSize	Unsigned32,

docsIfUpChannelTxTimingOffset	Unsigned32,
docsIfUpChannelRangingBackoffStart	Integer32,
docsIfUpChannelRangingBackoffEnd	Integer32,
docsIfUpChannelTxBackoffStart	Integer32,

```
docsIfUpChannelTxBackoffEnd      Integer32
}
```

docsIfUpChannelId OBJECT-TYPE

```
SYNTAX      Integer32 (0..255)
MAX-ACCESS  read-only
STATUS      current
DESCRIPTION
    "The CMTS identification of the upstream channel."
 ::= { docsIfUpstreamChannelEntry 1 }
```

docsIfUpChannelFrequency OBJECT-TYPE

```
SYNTAX      Integer32 (0..1000000000)
UNITS       "hertz"
MAX-ACCESS  read-write
STATUS      current
DESCRIPTION
    "The center of the frequency band associated with this
    upstream channel. This object returns 0 if the frequency
    is undefined or unknown. Minimum permitted upstream
    frequency is 5,000,000 Hz for current technology. See
    the associated conformance object for write conditions
    and limitations."
REFERENCE
    "DOCSIS Radio Frequency Interface Specification,
    Table 2-2."
 ::= { docsIfUpstreamChannelEntry 2 }
```

docsIfUpChannelWidth OBJECT-TYPE

```
SYNTAX      Integer32 (0..200000000)
UNITS       "hertz"
MAX-ACCESS  read-write
STATUS      current
DESCRIPTION
    "The bandwidth of this upstream channel. This object
    returns 0 if the channel width is undefined or unknown.
    Minimum permitted channel width is 200,000 Hz currently. See the
    associated conformance object for write conditions and
    limitations."
REFERENCE
    "DOCSIS Radio Frequency Interface Specification,
    Table 4-3."
 ::= { docsIfUpstreamChannelEntry 3 }
```

docsIfUpChannelModulationProfile OBJECT-TYPE

```
SYNTAX      Unsigned32
MAX-ACCESS  read-write
STATUS      current
```

DESCRIPTION

"An entry identical to the docsIfModIndex in the
docsIfCmtsModulationTable that describes this channel.
This channel is further instantiated there by a grouping

Expires August 1999

[Page 22]

of interval usage codes which together fully describe the channel modulation. This object returns 0 if the docsIfCmtsModulationTable entry does not exist or docsIfCmtsModulationTable is empty. See the associated conformance object for write conditions and limitations."

::= { docsIfUpstreamChannelEntry 4 }

docsIfUpChannelSlotSize OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"The number of 6.25 microsecond ticks in each upstream mini-slot. Returns zero if the value is undefined or unknown. See the associated conformance object for write conditions and limitations."

REFERENCE

"DOCSIS Radio Frequency Interface Specification,
[Section 6.1.2.4](#)."

::= { docsIfUpstreamChannelEntry 5 }

docsIfUpChannelTxTimingOffset OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"A measure of the current round trip time at the CM, or the maximum round trip time seen by the CMTS. Used for timing of CM upstream transmissions to ensure synchronized arrivals at the CMTS. Units are in terms of (6.25 microseconds/64)."

REFERENCE

"DOCSIS Radio Frequency Interface Specification,
[Section 6.5](#)."

::= { docsIfUpstreamChannelEntry 6 }

docsIfUpChannelRangingBackoffStart OBJECT-TYPE

SYNTAX Integer32 (0..16)

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"The initial random backoff window to use when retrying Ranging Requests. Expressed as a power of 2. A value of 16 at the CMTS indicates that a proprietary adaptive retry mechanism is to be used. See the associated conformance object for write conditions and limitations."

REFERENCE

```
"DOCSIS Radio Frequency Interface Specification,  
Section 6.4.4."  
::= { docsIfUpstreamChannelEntry 7 }
```

Expires August 1999

[Page 23]

docsIfUpChannelRangingBackoffEnd OBJECT-TYPE

SYNTAX Integer32 (0..16)

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"The final random backoff window to use when retrying Ranging Requests. Expressed as a power of 2. A value of 16 at the CMTS indicates that a proprietary adaptive retry mechanism is to be used. See the associated conformance object for write conditions and limitations."

REFERENCE

"DOCSIS Radio Frequency Interface Specification,
[Section 6.4.4.](#)"

::= { docsIfUpstreamChannelEntry 8 }

docsIfUpChannelTxBackoffStart OBJECT-TYPE

SYNTAX Integer32 (0..16)

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"The initial random backoff window to use when retrying transmissions. Expressed as a power of 2. A value of 16 at the CMTS indicates that a proprietary adaptive retry mechanism is to be used. See the associated conformance object for write conditions and limitations."

REFERENCE

"DOCSIS Radio Frequency Interface Specification,
[Section 6.4.4.](#)"

::= { docsIfUpstreamChannelEntry 9 }

docsIfUpChannelTxBackoffEnd OBJECT-TYPE

SYNTAX Integer32 (0..16)

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"The final random backoff window to use when retrying transmissions. Expressed as a power of 2. A value of 16 at the CMTS indicates that a proprietary adaptive retry mechanism is to be used. See the associated conformance object for write conditions and limitations."

REFERENCE

"DOCSIS Radio Frequency Interface Specification,
[Section 6.4.4.](#)"

::= { docsIfUpstreamChannelEntry 10 }

-- The following table describes the attributes of each class of
-- service. The entries in this table are referenced from the
-- docsIfServiceEntries. They exist as a separate table in order to

```
-- reduce redundant information in docsIfServiceTable.  
--  
-- This table is implemented at both the CM and the CMTS.  
-- The CM need only maintain entries for the classes of service
```

Expires August 1999

[Page 24]


```
-- referenced by its docsIfServiceTable.  
--
```

```
docsIfQosProfileTable OBJECT-TYPE
```

```
    SYNTAX      SEQUENCE OF DocsIfQosProfileEntry
```

```
    MAX-ACCESS  not-accessible
```

```
    STATUS      current
```

```
    DESCRIPTION
```

```
        "Describes the attributes for each class of service."
```

```
    ::= { docsIfBaseObjects 3 }
```

```
docsIfQosProfileEntry OBJECT-TYPE
```

```
    SYNTAX      DocsIfQosProfileEntry
```

```
    MAX-ACCESS  not-accessible
```

```
    STATUS      current
```

```
    DESCRIPTION
```

```
        "Describes the attributes for a single class of service."
```

```
        If implemented as read-create in the Cable Modem  
        Termination System, creation of entries in this table is  
        controlled by the value of docsIfCmtsQosProfilePermissions.
```

```
        If implemented as read-only, entries are created based  
        on information in REG-REQ MAC messages received from  
        Cable Modems (Cable Modem Termination System  
        implementation), or based on information extracted from  
        the TFTP option file (Cable Modem implementation).  
        In the Cable Modem Termination system, read-only entries  
        are removed if no longer referenced by  
        docsIfCmtsServiceTable.
```

```
        An entry in this table must not be removed while it is  
        referenced by an entry in docsIfCmServiceTable (Cable Modem)  
        or docsIfCmtsServiceTable (Cable Modem Termination System).
```

```
        An entry in this table should not be changeable while  
        it is referenced by an entry in docsIfCmtsServiceTable.
```

```
        If this table is created automatically, there should only  
        be a single entry for each Class of Service. Multiple  
        entries with the same Class of Service parameters are not  
        recommended."
```

```
    INDEX { docsIfQosProfIndex }
```

```
    ::= { docsIfQosProfileTable 1 }
```

```
DocsIfQosProfileEntry ::= SEQUENCE {
```

```
    docsIfQosProfIndex      Integer32,
```

```
    docsIfQosProfPriority   Integer32,
```

```
    docsIfQosProfMaxUpBandwidth Integer32,
```

docsIfQosProfGuarUpBandwidth	Integer32,
docsIfQosProfMaxDownBandwidth	Integer32,
docsIfQosProfMaxTxBurst	Integer32,

```
docsIfQosProfBaselinePrivacy    TruthValue,
docsIfQosProfStatus             RowStatus
}
```

docsIfQosProfIndex OBJECT-TYPE

SYNTAX Integer32 (1..16383)

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The index value which uniquely identifies an entry
in the docsIfQosProfileTable."

::= { docsIfQosProfileEntry 1 }

docsIfQosProfPriority OBJECT-TYPE

SYNTAX Integer32 (0..7)

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"A relative priority assigned to this service when
allocating bandwidth. Zero indicates lowest priority;
and seven indicates highest priority.

Interpretation of priority is device-specific.

MUST NOT be changed while this row is active."

DEFVAL { 0 }

::= { docsIfQosProfileEntry 2 }

docsIfQosProfMaxUpBandwidth OBJECT-TYPE

SYNTAX Integer32 (0..100000000)

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The maximum upstream bandwidth, in bits per second,
allowed for a service with this service class.

Zero if there is no restriction of upstream bandwidth.

MUST NOT be changed while this row is active."

DEFVAL { 0 }

::= { docsIfQosProfileEntry 3 }

docsIfQosProfGuarUpBandwidth OBJECT-TYPE

SYNTAX Integer32 (0..100000000)

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Minimum guaranteed upstream bandwidth, in bits per second,
allowed for a service with this service class.

MUST NOT be changed while this row is active."

DEFVAL { 0 }

::= { docsIfQosProfileEntry 4 }

docsIfQosProfMaxDownBandwidth OBJECT-TYPE
SYNTAX Integer32 (0..100000000)
MAX-ACCESS read-create

Expires August 1999

[Page 26]

STATUS current

DESCRIPTION

"The maximum downstream bandwidth, in bits per second,
allowed for a service with this service class.
Zero if there is no restriction of downstream bandwidth.
MUST NOT be changed while this row is active."

DEFVAL { 0 }

::= { docsIfQosProfileEntry 5 }

docsIfQosProfMaxTxBurst OBJECT-TYPE

SYNTAX Integer32 (0..255)

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The maximum number of mini-slots that may be requested
for a single upstream transmission.
A value of zero means there is no limit.
MUST NOT be changed while this row is active."

DEFVAL { 0 }

::= { docsIfQosProfileEntry 6 }

docsIfQosProfBaselinePrivacy OBJECT-TYPE

SYNTAX TruthValue

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Indicates whether Baseline Privacy is enabled for this
service class.
MUST NOT be changed while this row is active."

DEFVAL { false }

::= { docsIfQosProfileEntry 7 }

docsIfQosProfStatus OBJECT-TYPE

SYNTAX RowStatus

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"This is object is to used to create or delete rows in
this table. This object MUST NOT be changed from active while
the row is referenced by the any entry in either
docsIfCmServiceTable (on the CM), or the
docsIfCmtsServiceTable (on the CMTS)."

::= { docsIfQosProfileEntry 8 }

docsIfSignalQualityTable OBJECT-TYPE

SYNTAX SEQUENCE OF DocsIfSignalQualityEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"At the CM, describes the PHY signal quality of downstream channels. At the CMTS, describes the PHY signal quality of

Expires August 1999

[Page 27]

upstream channels. At the CMTS, this table may exclude contention intervals."
 ::= { docsIfBaseObjects 4 }

docsIfSignalQualityEntry OBJECT-TYPE

SYNTAX DocsIfSignalQualityEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"At the CM, describes the PHY characteristics of a downstream channel. At the CMTS, describes the PHY signal quality of an upstream channel.
An entry in this table exists for each ifEntry with an ifType of docsCableUpstream(129) for Cable Modem Termination Systems and docsCableDownstream(128) for Cable Modems."

INDEX { ifIndex }

::= { docsIfSignalQualityTable 1 }

DocsIfSignalQualityEntry ::= SEQUENCE {

docsIfSigQIncludesContention TruthValue,
docsIfSigQUnerroreds Counter32,
docsIfSigQCorrecteds Counter32,
docsIfSigQUncorrectables Counter32,
docsIfSigQSignalNoise TenthdB,
docsIfSigQMicrorereflections Integer32,
docsIfSigQEqualizationData OCTET STRING

}

docsIfSigQIncludesContention OBJECT-TYPE

SYNTAX TruthValue

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"true(1) if this CMTS includes contention intervals in the counters in this table. Always false(2) for CMs."

REFERENCE

"DOCSIS Radio Frequency Interface specification,
[Section 6.4.4](#)"

::= { docsIfSignalQualityEntry 1 }

docsIfSigQUnerroreds OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Codewords received on this channel without error.
This includes all codewords, whether or not they were part of frames destined for this device."

REFERENCE

"DOCSIS Radio Frequency Interface specification,
[Section 4.2.3](#) and 4.3.6"

::= { docsIfSignalQualityEntry 2 }

Expires August 1999

[Page 28]

docsIfSigQCorrecteds OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Codewords received on this channel with correctable errors. This includes all codewords, whether or not they were part of frames destined for this device."

REFERENCE

"DOCSIS Radio Frequency Interface specification,
[Section 4.2.3](#) and 4.3.6"

::= { docsIfSignalQualityEntry 3 }

docsIfSigQUncorrectables OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Codewords received on this channel with uncorrectable errors. This includes all codewords, whether or not they were part of frames destined for this device."

REFERENCE

"DOCSIS Radio Frequency Interface specification,
[Section 4.2.3](#) and 4.3.6"

::= { docsIfSignalQualityEntry 4 }

docsIfSigQSignalNoise OBJECT-TYPE

SYNTAX TenthdB

UNITS "dB"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Signal/Noise ratio as perceived for this channel.
At the CM, describes the Signal/Noise of the downstream channel. At the CMTS, describes the average Signal/Noise of the upstream channel."

REFERENCE

"DOCSIS Radio Frequency Interface specification,
Table 2-1 and 2-2"

::= { docsIfSignalQualityEntry 5 }

docsIfSigQMicroreflections OBJECT-TYPE

SYNTAX Integer32 (0..255)

UNITS "dBc"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Total microreflections including in-channel response"

as perceived on this interface, measured in dBc below the signal level.

This object is not assumed to return an absolutely accurate value, but should give a rough indication

of microreflections received on this interface.
It is up to the implementor to provide information
as accurate as possible."

REFERENCE

"DOCSIS Radio Frequency Interface specification,
Table 2-1 and 2-2"

::= { docsIfSignalQualityEntry 6 }

docsIfSigQEqualizationData OBJECT-TYPE

SYNTAX OCTET STRING

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"At the CM, returns the equalization data for the downstream
channel. At the CMTS, returns the average equalization
data for the upstream channel. Returns an empty string
if the value is unknown or if there is no equalization
data available or defined."

REFERENCE

"DOCSIS Radio Frequency Interface Specification,
Figure 6-23."

::= { docsIfSignalQualityEntry 7 }

--

-- CABLE MODEM GROUP

--

-- #####

--

-- The CM MAC Table

--

docsIfCmMacTable OBJECT-TYPE

SYNTAX SEQUENCE OF DocsIfCmMacEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"Describes the attributes of each CM MAC interface,
extending the information available from ifEntry."

::= { docsIfCmObjects 1 }

docsIfCmMacEntry OBJECT-TYPE

SYNTAX DocsIfCmMacEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"An entry containing objects describing attributes of

each MAC entry, extending the information in ifEntry.
An entry in this table exists for each ifEntry with an
ifType of docsCableMaclayer(127)."
INDEX { ifIndex }

Expires August 1999

[Page 30]

```
::= { docsIfCmMacTable 1 }
```

```
DocsIfCmMacEntry ::= SEQUENCE {  
    docsIfCmCmtsAddress      MacAddress,  
    docsIfCmCapabilities     BITS,  
    docsIfCmRangingRespTimeout TimeTicks,  
    docsIfCmRangingTimeout   TimeInterval  
}
```

```
docsIfCmCmtsAddress OBJECT-TYPE  
    SYNTAX      MacAddress  
    MAX-ACCESS  read-only  
    STATUS      current  
    DESCRIPTION  
        "Identifies the CMTS that is believed to control this MAC  
        domain. At the CM, this will be the source address from  
        SYNC, MAP, and other MAC-layer messages. If the CMTS is  
        unknown, returns 00-00-00-00-00-00."  
    ::= { docsIfCmMacEntry 1 }
```

```
docsIfCmCapabilities OBJECT-TYPE  
    SYNTAX      BITS {  
        atmCells(0),  
        concatenation(1)  
    }  
    MAX-ACCESS  read-only  
    STATUS      current  
    DESCRIPTION  
        "Identifies the capabilities of the MAC implementation  
        at this interface. Note that packet transmission is  
        always supported. Therefore, there is no specific bit  
        required to explicitly indicate this capability."  
    ::= { docsIfCmMacEntry 2 }
```

```
-- This object has been obsoleted and replaced by  
-- docsIfCmRangingTimeout to correct the typing to TimeInterval. New  
-- implementations of the MIB should use docsIfCmRangingTimeout instead.
```

```
docsIfCmRangingRespTimeout OBJECT-TYPE  
    SYNTAX      TimeTicks  
    MAX-ACCESS  read-write  
    STATUS      obsolete  
    DESCRIPTION  
        "Waiting time for a Ranging Response packet."  
    REFERENCE  
        "DOCSIS Radio Frequency Interface specification,
```

Figure 7-6 and 7-7, timer T3."
DEFVAL { 20 }
::= { docsIfCmMacEntry 3 }

Expires August 1999

[Page 31]

docsIfCmRangingTimeout OBJECT-TYPE

SYNTAX TimeInterval

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"Waiting time for a Ranging Response packet."

REFERENCE

"DOCSIS Radio Frequency Interface specification,
Figure 7-6 and 7-7, timer T3."

DEFVAL { 20 }

::= { docsIfCmMacEntry 4 }

--

-- CM status table.

-- This table is implemented only at the CM.

--

docsIfCmStatusTable OBJECT-TYPE

SYNTAX SEQUENCE OF DocsIfCmStatusEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"This table maintains a number of status objects
and counters for Cable Modems."

::= { docsIfCmObjects 2 }

docsIfCmStatusEntry OBJECT-TYPE

SYNTAX DocsIfCmStatusEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"A set of status objects and counters for a single MAC
layer instance in a Cable Modem.An entry in this table exists for each ifEntry with an
ifType of docsCableMaclayer(127)."

INDEX { ifIndex }

::= { docsIfCmStatusTable 1 }

DocsIfCmStatusEntry ::= SEQUENCE {

docsIfCmStatusValue

INTEGER,

docsIfCmStatusCode

OCTET STRING,

docsIfCmStatusTxPower

TenthdBmV,

docsIfCmStatusResets

Counter32,

docsIfCmStatusLostSynchs

Counter32,

docsIfCmStatusInvalidMaps

Counter32,

docsIfCmStatusInvalidUcDs

Counter32,

--

docsIfCmStatusInvalidRangingResp

Counter32,

docsIfCmStatusInvalidRangingResponses

Counter32,

```
--      docsIfCmStatusInvalidRegistrationResp    Counter32,  
docsIfCmStatusInvalidRegistrationResponses Counter32,  
docsIfCmStatusT1Timeouts                      Counter32,  
docsIfCmStatusT2Timeouts                      Counter32,
```

Expires August 1999

[Page 32]


```
docsIfCmStatusT3Timeouts      Counter32,
docsIfCmStatusT4Timeouts      Counter32,
docsIfCmStatusRangingAborted  Counter32
}
```

docsIfCmStatusValue OBJECT-TYPE

```
SYNTAX      INTEGER {
    other(1),
    notReady(2),
    notSynchronized(3),
    phySynchronized(4),
    usParametersAcquired(5),
    rangingComplete(6),
    ipComplete(7),
    todEstablished(8),
    securityEstablished(9),
    paramTransferComplete(10),
    registrationComplete(11),
    operational(12),
    accessDenied(13)
}
```

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Current Cable Modem connectivity state, as specified in the RF Interface Specification."

REFERENCE

"DOCSIS Radio Frequency Interface Specification, Chapter 7.2."

::= { docsIfCmStatusEntry 1 }

docsIfCmStatusCode OBJECT-TYPE

SYNTAX OCTET STRING

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Status code for this Cable Modem as defined in the RF Interface Specification. The status code consists of a single character indicating error groups, followed by a two- or three-digit number indicating the status condition."

REFERENCE

"DOCSIS Radio Frequency Interface Specification, Cable Modem status codes."

::= { docsIfCmStatusEntry 2 }

docsIfCmStatusTxPower OBJECT-TYPE

SYNTAX TenthdBmV

UNITS	"dBmV"
MAX-ACCESS	read-only
STATUS	current
DESCRIPTION	

Expires August 1999

[Page 33]

"The operational transmit power for the attached upstream channel."

REFERENCE

"DOCSIS Radio Frequency Interface specification,
[Section 4.2.8.](#)"

::= { docsIfCmStatusEntry 3 }

docsIfCmStatusResets OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Number of times the CM reset or initialized
this interface."

::= { docsIfCmStatusEntry 4 }

docsIfCmStatusLostSynchs OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Number of times the CM lost synchronization with
the downstream channel."

REFERENCE

"DOCSIS Radio Frequency Interface specification,
[Section 6.5.](#)"

::= { docsIfCmStatusEntry 5 }

docsIfCmStatusInvalidMaps OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Number of times the CM received invalid MAP messages."

REFERENCE

"DOCSIS Radio Frequency Interface specification,
[Section 6.3.2.3](#) and 6.4.2."

::= { docsIfCmStatusEntry 6 }

docsIfCmStatusInvalidUcds OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Number of times the CM received invalid UCD messages."

REFERENCE

"DOCSIS Radio Frequency Interface specification,
[Section 6.3.2.2.](#)"

```
::= { docsIfCmStatusEntry 7 }
```

```
-- docsIfCmStatusInvalidRangingResp replaced for Counter32  
-- naming requirements
```

Expires August 1999

[Page 34]

docsIfCmStatusInvalidRangingResponses OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Number of times the CM received invalid ranging response messages."

::= { docsIfCmStatusEntry 8 }

-- docsIfCmStatusInvalidRegistrationResp replaced for

-- Counter32 naming requirements

docsIfCmStatusInvalidRegistrationResponses OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Number of times the CM received invalid registration response messages."

::= { docsIfCmStatusEntry 9 }

docsIfCmStatusT1Timeouts OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Number of times counter T1 expired in the CM."

REFERENCE

"DOCSIS Radio Frequency Interface specification,
Figure 7-3."

::= { docsIfCmStatusEntry 10 }

docsIfCmStatusT2Timeouts OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Number of times counter T2 expired in the CM."

REFERENCE

"DOCSIS Radio Frequency Interface specification,
Figure 7-6."

::= { docsIfCmStatusEntry 11 }

docsIfCmStatusT3Timeouts OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Number of times counter T3 expired in the CM."

REFERENCE

"DOCSIS Radio Frequency Interface specification,
Figure 7-6 and 7-7."

::= { docsIfCmStatusEntry 12 }

Expires August 1999

[Page 35]

docsIfCmStatusT4Timeouts OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Number of times counter T4 expired in the CM."

REFERENCE

"DOCSIS Radio Frequency Interface specification,
Figure 7-7."

::= { docsIfCmStatusEntry 13 }

docsIfCmStatusRangingAbortedds OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Number of times the ranging process was aborted
by the CMTS."

::= { docsIfCmStatusEntry 14 }

--

-- The Cable Modem Service Table

--

docsIfCmServiceTable OBJECT-TYPE

SYNTAX SEQUENCE OF DocsIfCmServiceEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"Describes the attributes of each upstream service queue
on a CM."

::= { docsIfCmObjects 3 }

docsIfCmServiceEntry OBJECT-TYPE

SYNTAX DocsIfCmServiceEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"Describes the attributes of an upstream bandwidth service
queue.

An entry in this table exists for each Service ID.

The primary index is an ifIndex with an ifType of
docsCableMaclayer(127)."

INDEX { ifIndex, docsIfCmServiceId }

::= { docsIfCmServiceTable 1 }

DocsIfCmServiceEntry ::= SEQUENCE {

docsIfCmServiceId

Integer32,

docsIfCmServiceQosProfile	Integer32,
docsIfCmServiceTxSlotsImmed	Counter32,
docsIfCmServiceTxSlotsDed	Counter32,
docsIfCmServiceTxRetries	Counter32,


```
--      docsIfCmServiceTxExceeded      Counter32,
docsIfCmServiceTxExceededs            Counter32,
docsIfCmServiceRqRetries              Counter32,
--      docsIfCmServiceRqExceeded      Counter32
docsIfCmServiceRqExceededs            Counter32
}
```

docsIfCmServiceId OBJECT-TYPE

SYNTAX Integer32 (1..16383)

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"Identifies a service queue for upstream bandwidth. The attributes of this service queue are shared between the CM and the CMTS. The CMTS allocates upstream bandwidth to this service queue based on requests from the CM and on the class of service associated with this queue."

::= { docsIfCmServiceEntry 1 }

docsIfCmServiceQosProfile OBJECT-TYPE

SYNTAX Integer32 (0..16383)

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The index in docsIfQosProfileTable describing the quality of service attributes associated with this particular service. If no associated entry in docsIfQosProfileTable exists, this object returns a value of zero."

::= { docsIfCmServiceEntry 2 }

docsIfCmServiceTxSlotsImmed OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The number of upstream mini-slots which have been used to transmit data PDUs in immediate (contention) mode. This includes only those PDUs which are presumed to have arrived at the headend (i.e., those which were explicitly acknowledged.) It does not include retransmission attempts or mini-slots used by Requests."

REFERENCE

"DOCSIS Radio Frequency Interface specification,
[Section 6.4.](#)"

::= { docsIfCmServiceEntry 3 }

docsIfCmServiceTxSlotsDed OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The number of upstream mini-slots which have been used to

Expires August 1999

[Page 37]

transmit data PDUs in dedicated mode (i.e., as a result of a unicast Data Grant)."

REFERENCE

"DOCSIS Radio Frequency Interface specification,
[Section 6.4.](#)"

::= { docsIfCmServiceEntry 4 }

docsIfCmServiceTxRetries OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The number of attempts to transmit data PDUs containing requests for acknowledgment which did not result in acknowledgment."

REFERENCE

"DOCSIS Radio Frequency Interface specification,
[Section 6.4.](#)"

::= { docsIfCmServiceEntry 5 }

-- docsIfCmServiceTxExceeded renamed for Counter32 naming requirements

docsIfCmServiceTxExceededs OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The number of data PDUs transmission failures due to excessive retries without acknowledgment."

REFERENCE

"DOCSIS Radio Frequency Interface specification,
[Section 6.4.](#)"

::= { docsIfCmServiceEntry 6 }

docsIfCmServiceRqRetries OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The number of attempts to transmit bandwidth requests which did not result in acknowledgment."

REFERENCE

"DOCSIS Radio Frequency Interface specification,
[Section 6.4.](#)"

::= { docsIfCmServiceEntry 7 }

-- docsIfCmServiceRqExceeded renamed for Counter 32 naming
-- requirements

docsIfCmServiceRqExceeded OBJECT-TYPE

SYNTAX	Counter32
MAX-ACCESS	read-only
STATUS	current

Expires August 1999

[Page 38]

DESCRIPTION

"The number of requests for bandwidth which failed due to excessive retries without acknowledgment."

REFERENCE

"DOCSIS Radio Frequency Interface specification,
[Section 6.4.](#)"

::= { docsIfCmServiceEntry 8 }

--

-- CMTS GROUP

--

--

-- The CMTS MAC Table

--

docsIfCmtsMacTable OBJECT-TYPE

SYNTAX SEQUENCE OF DocsIfCmtsMacEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"Describes the attributes of each CMTS MAC interface, extending the information available from ifEntry. Mandatory for all CMTS devices."

::= { docsIfCmtsObjects 1 }

docsIfCmtsMacEntry OBJECT-TYPE

SYNTAX DocsIfCmtsMacEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"An entry containing objects describing attributes of each MAC entry, extending the information in ifEntry.

An entry in this table exists for each ifEntry with an ifType of docsCableMaclayer(127)."

INDEX { ifIndex }

::= { docsIfCmtsMacTable 1 }

DocsIfCmtsMacEntry ::= SEQUENCE {

docsIfCmtsCapabilities	BITS,	
docsIfCmtsSyncInterval	Integer32,	
docsIfCmtsUcdInterval	Integer32,	
docsIfCmtsMaxServiceIds	Integer32,	
docsIfCmtsInsertionInterval	TimeTicks,	-- Obsolete
docsIfCmtsInvitedRangingAttempts	Integer32,	
docsIfCmtsInsertInterval	TimeInterval	

}

```
docsIfCmtsCapabilities OBJECT-TYPE
    SYNTAX      BITS {
        atmCells(0),
        concatenation(1)
    }
```

Expires August 1999

[Page 39]

```
}
MAX-ACCESS    read-only
STATUS        current
DESCRIPTION
    "Identifies the capabilities of the CMTS MAC
    implementation at this interface. Note that packet
    transmission is always supported. Therefore, there
    is no specific bit required to explicitly indicate
    this capability."
REFERENCE
    "DOCSIS Radio Frequency Interface specification,
    Chapter 6."
::= { docsIfCmtsMacEntry 1 }
```

```
docsIfCmtsSyncInterval OBJECT-TYPE
    SYNTAX      Integer32 (1..200)
    UNITS        "Milliseconds"
    MAX-ACCESS   read-write
    STATUS       current
    DESCRIPTION
        "The interval between CMTS transmission of successive SYNC
        messages at this interface."
    REFERENCE
        "DOCSIS Radio Frequency Interface Specification,
        Section 6.5 and Appendix B."
    ::= { docsIfCmtsMacEntry 2 }
```

```
docsIfCmtsUcdInterval OBJECT-TYPE
    SYNTAX      Integer32 (1..2000)
    UNITS        "Milliseconds"
    MAX-ACCESS   read-write
    STATUS       current
    DESCRIPTION
        "The interval between CMTS transmission of successive
        Upstream Channel Descriptor messages for each upstream
        channel at this interface."
    REFERENCE
        "DOCSIS Radio Frequency Interface Specification,
        Section 6.5 and Appendix B."
    ::= { docsIfCmtsMacEntry 3 }
```

```
docsIfCmtsMaxServiceIds OBJECT-TYPE
    SYNTAX      Integer32 (1..16383)
    MAX-ACCESS   read-only
    STATUS       current
    DESCRIPTION
        "The maximum number of service IDs that may be
        simultaneously active."
```

```
::= { docsIfCmtsMacEntry 4 }
```

```
-- This object has been obsoleted and replaced by
```

Expires August 1999

[Page 40]


```
-- docsIfCmtsInsertInterval to fix a SYNTAX typing problem.  New
-- implementations of this MIB should use that object instead.
docsIfCmtsInsertionInterval OBJECT-TYPE
    SYNTAX      TimeTicks
    MAX-ACCESS   read-write
    STATUS       obsolete
    DESCRIPTION
        "The amount of time to elapse between each broadcast
        station maintenance grant. Broadcast station maintenance
        grants are used to allow new cable modems to join the
        network. Zero indicates that a vendor-specific algorithm
        is used instead of a fixed time. Maximum amount of time
        permitted by the specification is 2 seconds."
    REFERENCE
        "DOCSIS Radio Frequency Interface Specification,
        Appendix B, Ranging Interval."
    ::= { docsIfCmtsMacEntry 5 }

docsIfCmtsInvitedRangingAttempts OBJECT-TYPE
    SYNTAX      Integer32 (0..1024)
    MAX-ACCESS   read-write
    STATUS       current
    DESCRIPTION
        "The maximum number of attempts to make on invitations
        for ranging requests. A value of zero means the system
        should attempt to range forever."
    REFERENCE
        "DOCSIS Radio Frequency Interface specification,
        Section 7.2.5 and Appendix B."
    ::= { docsIfCmtsMacEntry 6 }

docsIfCmtsInsertInterval OBJECT-TYPE
    SYNTAX      TimeInterval
    MAX-ACCESS   read-write
    STATUS       current
    DESCRIPTION
        "The amount of time to elapse between each broadcast
        station maintenance grant. Broadcast station maintenance
        grants are used to allow new cable modems to join the
        network. Zero indicates that a vendor-specific algorithm
        is used instead of a fixed time. Maximum amount of time
        permitted by the specification is 2 seconds."
    REFERENCE
        "DOCSIS Radio Frequency Interface Specification,
        Appendix B."
    ::= { docsIfCmtsMacEntry 7 }
```

--

--
-- CMTS status table.
--

Expires August 1999

[Page 41]

docsIfCmtsStatusTable OBJECT-TYPE

SYNTAX SEQUENCE OF DocsIfCmtsStatusEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"For the MAC layer, this group maintains a number of status objects and counters."

::= { docsIfCmtsObjects 2 }

docsIfCmtsStatusEntry OBJECT-TYPE

SYNTAX DocsIfCmtsStatusEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"Status entry for a single MAC layer.

An entry in this table exists for each ifEntry with an ifType of docsCableMacLayer(127)."

INDEX { ifIndex }

::= { docsIfCmtsStatusTable 1 }

DocsIfCmtsStatusEntry ::= SEQUENCE {

docsIfCmtsStatusInvalidRangeReqs Counter32,

docsIfCmtsStatusRangingAborted Counter32,

docsIfCmtsStatusInvalidRegReqs Counter32,

docsIfCmtsStatusFailedRegReqs Counter32,

docsIfCmtsStatusInvalidDataReqs Counter32,

docsIfCmtsStatusT5Timeouts Counter32

}

docsIfCmtsStatusInvalidRangeReqs OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts invalid RNG-REQ messages received on this interface."

::= { docsIfCmtsStatusEntry 1 }

docsIfCmtsStatusRangingAborted OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This object counts ranging attempts that were explicitly aborted by the CMTS."

::= { docsIfCmtsStatusEntry 2 }

docsIfCmtsStatusInvalidRegReqs OBJECT-TYPE

SYNTAX	Counter32
MAX-ACCESS	read-only
STATUS	current
DESCRIPTION	

Expires August 1999

[Page 42]

```
        "This object counts invalid REG-REQ messages received on
        this interface."
 ::= { docsIfCmtsStatusEntry 3 }
```

docsIfCmtsStatusFailedRegReqs OBJECT-TYPE

```
SYNTAX      Counter32
MAX-ACCESS  read-only
STATUS      current
DESCRIPTION
    "This object counts failed registration attempts, i.e.,
    authentication failures and class of service failures,
    on this interface."
 ::= { docsIfCmtsStatusEntry 4 }
```

docsIfCmtsStatusInvalidDataReqs OBJECT-TYPE

```
SYNTAX      Counter32
MAX-ACCESS  read-only
STATUS      current
DESCRIPTION
    "This object counts invalid data request messages
    received on this interface."
 ::= { docsIfCmtsStatusEntry 5 }
```

docsIfCmtsStatusT5Timeouts OBJECT-TYPE

```
SYNTAX      Counter32
MAX-ACCESS  read-only
STATUS      current
DESCRIPTION
    "This object counts the number of times counter T5
    expired on this interface."
 ::= { docsIfCmtsStatusEntry 6 }
```

```
--
-- CM status table (within CMTS).
-- This table is implemented only at the CMTS.
-- It contains per CM status information available in the CMTS.
--
```

docsIfCmtsCmStatusTable OBJECT-TYPE

```
SYNTAX      SEQUENCE OF DocsIfCmtsCmStatusEntry
MAX-ACCESS  not-accessible
STATUS      current
DESCRIPTION
    "A set of objects in the CMTS, maintained for each
    Cable Modem connected to this CMTS."
 ::= { docsIfCmtsObjects 3 }
```

docsIfCmtsCmStatusEntry OBJECT-TYPE

SYNTAX	DocsIfCmtsCmStatusEntry
MAX-ACCESS	not-accessible
STATUS	current
DESCRIPTION	

Expires August 1999

[Page 43]

"Status information for a single Cable Modem.

An entry in this table exists for each Cable Modem

that is connected to the CMTS implementing this table."

INDEX { docsIfCmtsCmStatusIndex }

::= { docsIfCmtsCmStatusTable 1 }

DocsIfCmtsCmStatusEntry ::= SEQUENCE {

docsIfCmtsCmStatusIndex	Integer32,
docsIfCmtsCmStatusMacAddress	MacAddress,
docsIfCmtsCmStatusIpAddress	IpAddress,
docsIfCmtsCmStatusDownChannelIfIndex	InterfaceIndexOrZero,
docsIfCmtsCmStatusUpChannelIfIndex	InterfaceIndexOrZero,
docsIfCmtsCmStatusRxPower	TenthdBmV,
docsIfCmtsCmStatusTimingOffset	Unsigned32,
docsIfCmtsCmStatusEqualizationData	OCTET STRING,
docsIfCmtsCmStatusValue	INTEGER,
docsIfCmtsCmStatusUnerroreds	Counter32,
docsIfCmtsCmStatusCorrecteds	Counter32,
docsIfCmtsCmStatusUncorrectables	Counter32,
docsIfCmtsCmStatusSignalNoise	TenthdB,
docsIfCmtsCmStatusMicroreflections	Integer32

}

docsIfCmtsCmStatusIndex OBJECT-TYPE

SYNTAX Integer32 (1..2147483647)

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"Index value to uniquely identify an entry in this table.

For an individual Cable Modem, this index value should

not change during CMTS uptime."

::= { docsIfCmtsCmStatusEntry 1 }

docsIfCmtsCmStatusMacAddress OBJECT-TYPE

SYNTAX MacAddress

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"MAC address of this Cable Modem. If the Cable Modem has

multiple MAC addresses, this is the MAC address associated

with the Cable interface."

::= { docsIfCmtsCmStatusEntry 2 }

docsIfCmtsCmStatusIpAddress OBJECT-TYPE

SYNTAX IpAddress

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"IP address of this Cable Modem. If the Cable Modem has no IP address assigned, or the IP address is unknown, this object returns a value of 0.0.0.0. If the Cable Modem has multiple IP addresses, this object returns the IP address

Expires August 1999

[Page 44]

associated with the Cable interface."
 ::= { docsIfCmtsCmStatusEntry 3 }

docsIfCmtsCmStatusDownChannelIfIndex OBJECT-TYPE

SYNTAX InterfaceIndexOrZero
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "IfIndex of the downstream channel this CM is connected
 to. If the downstream channel is unknown, this object
 returns a value of zero."
 ::= { docsIfCmtsCmStatusEntry 4 }

docsIfCmtsCmStatusUpChannelIfIndex OBJECT-TYPE

SYNTAX InterfaceIndexOrZero
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "IfIndex of the upstream channel this CM is connected
 to. If the upstream channel is unknown, this object
 returns a value of zero."
 ::= { docsIfCmtsCmStatusEntry 5 }

docsIfCmtsCmStatusRxPower OBJECT-TYPE

SYNTAX TenthdBmV
UNITS "dBmV"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "The receive power as percieved for upstream data from
 this Cable Modem.
 If the receive power is unknown, this object returns
 a value of zero."
REFERENCE
 "DOCSIS Radio Frequency Interface Specification,
 Table 4-13."
 ::= { docsIfCmtsCmStatusEntry 6 }

docsIfCmtsCmStatusTimingOffset OBJECT-TYPE

SYNTAX Unsigned32
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "A measure of the current round trip time for this CM.
 Used for timing of CM upstream transmissions to ensure
 synchronized arrivals at the CMTS. Units are in terms
 of (6.25 microseconds/64). Returns zero if the value
 is unknown."

REFERENCE

"DOCSIS Radio Frequency Interface Specification,
[Section 6.5.](#)"

::= { docsIfCmtsCmStatusEntry 7 }

Expires August 1999

[Page 45]

docsIfCmtsCmStatusEqualizationData OBJECT-TYPE

SYNTAX OCTET STRING

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Equalization data for this CM. Returns an empty string if the value is unknown or if there is no equalization data available or defined."

REFERENCE

"DOCSIS Radio Frequency Interface Specification,
Figure 6-23."

::= { docsIfCmtsCmStatusEntry 8 }

docsIfCmtsCmStatusValue OBJECT-TYPE

SYNTAX INTEGER {

other(1),

ranging(2),

rangingAborted(3),

rangingComplete(4),

ipComplete(5),

registrationComplete(6),

accessDenied(7)

}

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Current Cable Modem connectivity state, as specified in the RF Interface Specification. Returned status information is the CM status as assumed by the CMTS, and indicates the following events:

other(1)

Any state other than below.

ranging(2)

The CMTS has received an Initial Ranging Request message from the CM, and the ranging process is not yet complete.

rangingAborted(3)

The CMTS has sent a Ranging Abort message to the CM.

rangingComplete(4)

The CMTS has sent a Ranging Complete message to the CM.

ipComplete(5)

The CMTS has received a DHCP reply message and forwarded it to the CM.

registrationComplete(6)

The CMTS has sent a Registration Response message to the CM.

accessDenied(7)

The CMTS has sent a Registration Aborted message

to the CM.

The CMTS only needs to report states it is able to detect."

REFERENCE

"DOCSIS Radio Frequency Interface Specification,

Expires August 1999

[Page 46]

Chapter 7.2."

::= { docsIfCmtsCmStatusEntry 9 }

docsIfCmtsCmStatusUnerrored OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Codewords received without error from this Cable Modem."

REFERENCE

"DOCSIS Radio Frequency Interface specification,
[Section 4.2.3](#)"

::= { docsIfCmtsCmStatusEntry 10 }

docsIfCmtsCmStatusCorrected OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Codewords received with correctable errors from this
Cable Modem."

REFERENCE

"DOCSIS Radio Frequency Interface specification,
[Section 4.2.3](#)"

::= { docsIfCmtsCmStatusEntry 11 }

docsIfCmtsCmStatusUncorrectables OBJECT-TYPE

SYNTAX Counter32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Codewords received with uncorrectable errors from this
Cable Modem."

REFERENCE

"DOCSIS Radio Frequency Interface specification,
[Section 4.2.3](#)"

::= { docsIfCmtsCmStatusEntry 12 }

docsIfCmtsCmStatusSignalNoise OBJECT-TYPE

SYNTAX TenthdB

UNITS "dB"

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Signal/Noise ratio as perceived for upstream data from
this Cable Modem.
If the Signal/Noise is unknown, this object returns
a value of zero."

```
::= { docsIfCmtsCmStatusEntry 13 }
```

```
docsIfCmtsCmStatusMicroreflections OBJECT-TYPE  
    SYNTAX      Integer32 (0..255)
```

Expires August 1999

[Page 47]

UNITS "dBc"
MAX-ACCESS read-only
STATUS current
DESCRIPTION
 "Total microreflections including in-channel response
 as perceived on this interface, measured in dBc below
 the signal level.
 This object is not assumed to return an absolutely
 accurate value, but should give a rough indication
 of microreflections received on this interface.
 It is up to the implementor to provide information
 as accurate as possible."
REFERENCE
 "DOCSIS Radio Frequency Interface specification,
 Table 2-1 and 2-2"
::= { docsIfCmtsCmStatusEntry 14 }

--
-- The CMTS Service Table.
--

docsIfCmtsServiceTable OBJECT-TYPE
 SYNTAX SEQUENCE OF DocsIfCmtsServiceEntry
 MAX-ACCESS not-accessible
 STATUS current
 DESCRIPTION
 "Describes the attributes of upstream service queues
 in a Cable Modem Termination System."
 ::= { docsIfCmtsObjects 4 }

docsIfCmtsServiceEntry OBJECT-TYPE
 SYNTAX DocsIfCmtsServiceEntry
 MAX-ACCESS not-accessible
 STATUS current
 DESCRIPTION
 "Describes the attributes of a single upstream bandwidth
 service queue.
 Entries in this table exist for each ifEntry with an
 ifType of docsCableMacLayer(127), and for each service
 queue (Service ID) within this MAC layer.
 Entries in this table are created with the creation of
 individual Service IDs by the MAC layer and removed
 when a Service ID is removed."
 INDEX { ifIndex, docsIfCmtsServiceId }
 ::= { docsIfCmtsServiceTable 1 }

DocsIfCmtsServiceEntry ::= SEQUENCE {
 docsIfCmtsServiceId Integer32,

docsIfCmtsServiceCmStatusIndex	Integer32,
docsIfCmtsServiceAdminStatus	INTEGER,
docsIfCmtsServiceQosProfile	Integer32,
docsIfCmtsServiceCreateTime	TimeStamp,


```
        docsIfCmtsServiceInOctets      Counter32,
        docsIfCmtsServiceInPackets     Counter32
    }
```

docsIfCmtsServiceId OBJECT-TYPE

SYNTAX Integer32 (1..16383)

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"Identifies a service queue for upstream bandwidth. The attributes of this service queue are shared between the Cable Modem and the Cable Modem Termination System. The CMTS allocates upstream bandwidth to this service queue based on requests from the CM and on the class of service associated with this queue."

::= { docsIfCmtsServiceEntry 1 }

docsIfCmtsServiceCmStatusIndex OBJECT-TYPE

SYNTAX Integer32 (0..65535)

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"Pointer to an entry in docsIfCmtsCmStatusTable identifying the Cable Modem using this Service Queue. If multiple Cable Modems are using this Service Queue, the value of this object is zero."

::= { docsIfCmtsServiceEntry 2 }

docsIfCmtsServiceAdminStatus OBJECT-TYPE

SYNTAX INTEGER {
 enabled(1),
 disabled(2),
 destroyed(3) }

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"Allows a service class for a particular modem to be suppressed, (re-)enabled, or deleted altogether."

::= { docsIfCmtsServiceEntry 3 }

docsIfCmtsServiceQosProfile OBJECT-TYPE

SYNTAX Integer32 (0..16383)

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The index in docsIfQosProfileTable describing the quality of service attributes associated with this particular service. If no associated docsIfQosProfileTable entry

```
exists, this object returns a value of zero."  
::= { docsIfCmtsServiceEntry 4 }
```

docsIfCmtsServiceCreateTime OBJECT-TYPE

Expires August 1999

[Page 49]

```
--      SYNTAX      TimeTicks
--      SYNTAX      TimeStamp
--      MAX-ACCESS   read-only
--      STATUS       current
--      DESCRIPTION
--          "The value of sysUpTime when this entry was created."
--      ::= { docsIfCmtsServiceEntry 5 }

docsIfCmtsServiceInOctets OBJECT-TYPE
    SYNTAX      Counter32
    MAX-ACCESS   read-only
    STATUS       current
    DESCRIPTION
        "The cumulative number of Packet Data octets received
         on this Service ID. The count does not include the
         size of the Cable MAC header"
    ::= { docsIfCmtsServiceEntry 6 }

docsIfCmtsServiceInPackets OBJECT-TYPE
    SYNTAX      Counter32
    MAX-ACCESS   read-only
    STATUS       current
    DESCRIPTION
        "The cumulative number of Packet Data packets received
         on this Service ID."
    ::= { docsIfCmtsServiceEntry 7 }

--
-- The following table provides upstream channel modulation profiles.
-- Entries in this table can be
-- re-used by one or more upstream channels. An upstream channel will
-- have a modulation profile
-- for each value of docsIfModIntervalUsageCode.
--

docsIfCmtsModulationTable OBJECT-TYPE
    SYNTAX      SEQUENCE OF DocsIfCmtsModulationEntry
    MAX-ACCESS   not-accessible
    STATUS       current
    DESCRIPTION
        "Describes a modulation profile associated with one or more
         upstream channels."
    ::= { docsIfCmtsObjects 5 }

docsIfCmtsModulationEntry OBJECT-TYPE
    SYNTAX      DocsIfCmtsModulationEntry
    MAX-ACCESS   not-accessible
    STATUS       current
```

DESCRIPTION

"Describes a modulation profile for an Interval Usage Code for one or more upstream channels.

Entries in this table are created by the operator. Initial

Expires August 1999

[Page 50]

default entries may be created at system initialization time. No individual objects have to be specified in order to create an entry in this table.

Note that some objects do not have DEFVALs, but do have calculated defaults and need not be specified during row creation.

There is no restriction on the changing of values in this table while their associated rows are active."

```
INDEX { docsIfCmtsModIndex, docsIfCmtsModIntervalUsageCode }
 ::= { docsIfCmtsModulationTable 1 }
```

```
DocsIfCmtsModulationEntry ::= SEQUENCE {
    docsIfCmtsModIndex                Integer32,
    docsIfCmtsModIntervalUsageCode    INTEGER,
    docsIfCmtsModControl              RowStatus,
    docsIfCmtsModType                 INTEGER,
    docsIfCmtsModPreambleLen          Integer32,
    docsIfCmtsModDifferentialEncoding TruthValue,
    docsIfCmtsModFECErrorCorrection   Integer32,
    docsIfCmtsModFECCodewordLength    Integer32,
    docsIfCmtsModScramblerSeed        Integer32,
    docsIfCmtsModMaxBurstSize         Integer32,
    docsIfCmtsModGuardTimeSize        Unsigned32,
    docsIfCmtsModLastCodewordShortened TruthValue,
    docsIfCmtsModScrambler            TruthValue
}
```

docsIfCmtsModIndex OBJECT-TYPE

SYNTAX Integer32 (1..2147483647)

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"An index into the Channel Modulation table representing a group of Interval Usage Codes, all associated with the same channel."

```
::= { docsIfCmtsModulationEntry 1 }
```

docsIfCmtsModIntervalUsageCode OBJECT-TYPE

SYNTAX INTEGER {

request(1),

requestData(2),

initialRanging(3),

periodicRanging(4),

shortData(5),

longData(6)

}

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"An index into the Channel Modulation table which, when grouped with other Interval Usage Codes, fully instantiate all modulation sets for a given upstream

Expires August 1999

[Page 51]

channel."

REFERENCE

"DOCSIS Radio Frequency Interface specification,
Table 6-16."

::= { docsIfCmtsModulationEntry 2 }

docsIfCmtsModControl OBJECT-TYPE

SYNTAX RowStatus

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Controls and reflects the status of rows in this table."

::= { docsIfCmtsModulationEntry 3 }

docsIfCmtsModType OBJECT-TYPE

SYNTAX INTEGER {

other(1),

qpsk(2),

qam16(3)

}

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The modulation type used on this channel. Returns
other(1) if the modulation type is neither qpsk or
qam16. See the reference for the modulation profiles
implied by qpsk or qam16. See the conformance object for
write conditions and limitations."

REFERENCE

"DOCSIS Radio Frequency Interface specification,
[Section 4.2.2](#)."

DEFVAL { qpsk }

::= { docsIfCmtsModulationEntry 4 }

docsIfCmtsModPreambleLen OBJECT-TYPE

SYNTAX Integer32 (0..1024)

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The preamble length for this modulation profile in bits.
Default value is the minimum needed by the implementation
at the CMTS for the given modulation profile."

REFERENCE

"DOCSIS Radio Frequency Interface specification,
[Section 4.2.5](#)."

::= { docsIfCmtsModulationEntry 5 }

docsIfCmtsModDifferentialEncoding OBJECT-TYPE

SYNTAX	TruthValue
MAX-ACCESS	read-create
STATUS	current
DESCRIPTION	

Expires August 1999

[Page 52]

"Specifies whether or not differential encoding is used
on this channel."

DEFVAL { false }

::= { docsIfCmtsModulationEntry 6 }

docsIfCmtsModFECErrorCorrection OBJECT-TYPE

SYNTAX Integer32 (0..10)

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The number of correctable errored bytes (t) used in
forward error correction code. The value of 0 indicates
no correction is employed. The number of check bytes
appended will be twice this value."

REFERENCE

"DOCSIS Radio Frequency Interface specification,
[Section 4.2.3](#)."

DEFVAL { 0 }

::= { docsIfCmtsModulationEntry 7 }

docsIfCmtsModFECCodewordLength OBJECT-TYPE

SYNTAX Integer32 (1..255)

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The number of data bytes (k) in the forward error
correction codeword.
This object is not used if docsIfCmtsModFECErrorCorrection
is zero."

REFERENCE

"DOCSIS Radio Frequency Interface specification,
[Section 4.2.3](#)."

DEFVAL { 32 }

::= { docsIfCmtsModulationEntry 8 }

docsIfCmtsModScramblerSeed OBJECT-TYPE

SYNTAX Integer32 (0..32767)

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"The 15 bit seed value for the scrambler polynomial."

REFERENCE

"DOCSIS Radio Frequency Interface specification,
[Section 4.2.4](#)."

DEFVAL { 0 }

::= { docsIfCmtsModulationEntry 9 }

docsIfCmtsModMaxBurstSize OBJECT-TYPE

SYNTAX	Integer32 (0..255)
MAX-ACCESS	read-create
STATUS	current
DESCRIPTION	

Expires August 1999

[Page 53]

"The maximum number of mini-slots that can be transmitted during this channel's burst time. Returns zero if the burst length is bounded by the allocation MAP rather than this profile.

Default value is 0 except for shortData, where it is 8."

::= { docsIfCmtsModulationEntry 10 }

docsIfCmtsModGuardTimeSize OBJECT-TYPE

SYNTAX Unsigned32

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The number of symbol-times which must follow the end of this channel's burst. Default value is the minimum time needed by the implementation for this modulation profile."

REFERENCE

"DOCSIS Radio Frequency Interface specification,
[Section 4.2.7](#)."

::= { docsIfCmtsModulationEntry 11 }

docsIfCmtsModLastCodewordShortened OBJECT-TYPE

SYNTAX TruthValue

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Indicates if the last FEC codeword is truncated."

REFERENCE

"DOCSIS Radio Frequency Interface specification,
[Section 4.2.10](#)."

DEFVAL { true }

::= { docsIfCmtsModulationEntry 12 }

docsIfCmtsModScrambler OBJECT-TYPE

SYNTAX TruthValue

MAX-ACCESS read-create

STATUS current

DESCRIPTION

"Indicates if the scrambler is employed."

REFERENCE

"DOCSIS Radio Frequency Interface specification,
[Section 4.2.4](#)."

DEFVAL { false }

::= { docsIfCmtsModulationEntry 13 }

docsIfCmtsQosProfilePermissions OBJECT-TYPE

SYNTAX BITS {
createByManagement(0),
updateByManagement(1),

```
        createByModems(2)
    }
    MAX-ACCESS    read-write
    STATUS        current
```

Expires August 1999

[Page 54]

DESCRIPTION

"This object specifies permitted methods of creating entries in docsIfQosProfileTable. CreateByManagement(0) is set if entries can be created using SNMP. UpdateByManagement(1) is set if updating entries using SNMP is permitted. CreateByModems(2) is set if entries can be created based on information in REG-REQ MAC messages received from Cable Modems. Information in this object is only applicable if docsIfQosProfileTable is implemented as read-create. Otherwise, this object is implemented as read-only and returns CreateByModems(2). Either CreateByManagement(0) or CreateByModems(1) must be set when writing to this object."

::= { docsIfCmtsObjects 6 }

docsIfCmtsMacToCmTable OBJECT-TYPE

SYNTAX SEQUENCE OF DocsIfCmtsMacToCmEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"This is a table to provide a quick access index into the docsIfCmtsCmStatusTable. There is exactly one row in this table for each row in the docsIfCmtsCmStatusTable. In general, the management station should use this table only to get a pointer into the docsIfCmtsCmStatusTable (which corresponds to the CM's RF interface MAC address), and should not iterate (e.g. GetNext through) this table."

::= { docsIfCmtsObjects 7 }

docsIfCmtsMacToCmEntry OBJECT-TYPE

SYNTAX DocsIfCmtsMacToCmEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"A row in the docsIfCmtsMacToCmTable.
An entry in this table exists for each Cable Modem that is connected to the CMTS implementing this table."

INDEX { docsIfCmtsCmMac }

::= { docsIfCmtsMacToCmTable 1 }

DocsIfCmtsMacToCmEntry ::= SEQUENCE {

docsIfCmtsCmMac MacAddress,
docsIfCmtsCmPtr Integer32

}

docsIfCmtsCmMac OBJECT-TYPE

SYNTAX MacAddress

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"The RF side MAC address for the referenced CM. (E.g. the

Expires August 1999

[Page 55]

```
        interface on the CM that has docsCableMacLayer(127) as
        its ifType."
 ::= { docsIfCmtsMacToCmEntry 1 }

docsIfCmtsCmPtr OBJECT-TYPE
    SYNTAX      Integer32 (1..2147483647)
    MAX-ACCESS   read-only
    STATUS       current
    DESCRIPTION
        "An row index into docsIfCmtsCmStatusTable. When queried
        with the correct instance value (e.g. a CM's MAC address),
        returns the index in docsIfCmtsCmStatusTable which
        represents that CM."
 ::= { docsIfCmtsMacToCmEntry 2 }

--
-- notification group is for future extension.
--
docsIfNotification OBJECT IDENTIFIER ::= { docsIfMib 2 }

docsIfConformance OBJECT IDENTIFIER ::= { docsIfMib 3 }
docsIfCompliances  OBJECT IDENTIFIER ::= { docsIfConformance 1 }
docsIfGroups       OBJECT IDENTIFIER ::= { docsIfConformance 2 }

-- compliance statements

docsIfBasicCompliance MODULE-COMPLIANCE
    STATUS       current
    DESCRIPTION
        "The compliance statement for devices that implement
        MCNS/DOCSIS compliant Radio Frequency Interfaces."

MODULE -- docsIfMib

-- unconditionally mandatory groups
MANDATORY-GROUPS {
    docsIfBasicGroup
}

-- conditionally mandatory group
GROUP docsIfCmGroup
    DESCRIPTION
        "This group is implemented only in Cable Modems, not in
        Cable Modem Termination Systems."

-- conditionally mandatory group
GROUP docsIfCmtsGroup
    DESCRIPTION
        "This group is implemented only in Cable Modem Termination
```

Systems, not in Cable Modems."

OBJECT docsIfDownChannelFrequency

Expires August 1999

[Page 56]

WRITE-SYNTAX Integer32 (54000000..860000000)

MIN-ACCESS read-only

DESCRIPTION

"Read-write in Cable Modem Termination Systems;
read-only in Cable Modems. The values above are
appropriate for a cable plant using a Sub-Split channel
plan. If DOCSIS is extended to cover other types of
channel plans (and frequency allocations) this object
will be modified accordingly."

OBJECT docsIfDownChannelWidth

WRITE-SYNTAX Integer32 (6000000)

MIN-ACCESS read-only

DESCRIPTION

"It is conformant to implement this object as read-only.
In Cable Modems, this object is always implemented as
read-only. The above value is appropriate for cable
plants running under NTSC (National Television
Standards Committee) standards. If DOCSIS is extended to
work with other standard (e.g. European standards), this
object will be modified accordingly."

OBJECT docsIfDownChannelModulation

WRITE-SYNTAX INTEGER {
 qam64 (3),
 qam256 (4)
 }

MIN-ACCESS read-only

DESCRIPTION

"Read-write in Cable Modem Termination Systems;
read-only in Cable Modems."

OBJECT docsIfDownChannelInterleave

WRITE-SYNTAX INTEGER {
 taps8Increment16(3),
 taps16Increment8(4),
 taps32Increment4(5),
 taps64Increment2(6),
 taps128Increment1(7)
 }

MIN-ACCESS read-only

DESCRIPTION

"Read-write in Cable Modem Termination Systems;
read-only in Cable Modems."

OBJECT docsIfDownChannelPower

MIN-ACCESS read-only

DESCRIPTION

"Read-write in Cable Modem Termination Systems;
read-only in Cable Modems."

OBJECT docsIfUpChannelFrequency

Expires August 1999

[Page 57]

WRITE-SYNTAX Integer32 (5000000..42000000)

MIN-ACCESS read-only

DESCRIPTION

"Read-write in Cable Modem Termination Systems;
read-only in Cable Modems. The values above are
appropriate for a cable plant using a Sub-Split channel
plan. If DOCSIS is extended to cover other types of
channel plans (and frequency allocations) this object
will be modified accordingly."

OBJECT docsIfUpChannelWidth

WRITE-SYNTAX Integer32 (200000..3200000)

MIN-ACCESS read-only

DESCRIPTION

"Read-write in Cable Modem Termination Systems;
read-only in Cable Modems. The above value is appropriate for cable
plants running under NTSC (National Television
Standards Committee) standards. If DOCSIS is extended to
work with other standard (e.g. European standards), this
object will be modified accordingly."

OBJECT docsIfUpChannelModulationProfile

MIN-ACCESS read-only

DESCRIPTION

"Read-write in Cable Modem Termination Systems;
read-only in Cable Modems."

OBJECT docsIfUpChannelSlotSize

MIN-ACCESS read-only

DESCRIPTION

"This object is always read-only in Cable Modems.
It is compliant to implement this object as read-only
in Cable Modem Termination Systems."

OBJECT docsIfUpChannelRangingBackoffStart

MIN-ACCESS read-only

DESCRIPTION

"Read-write in Cable Modem Termination Systems;
read-only in Cable Modems."

OBJECT docsIfUpChannelRangingBackoffEnd

MIN-ACCESS read-only

DESCRIPTION

"Read-write in Cable Modem Termination Systems;
read-only in Cable Modems."

OBJECT docsIfUpChannelTxBackoffStart

MIN-ACCESS read-only

DESCRIPTION

"Read-write in Cable Modem Termination Systems;
read-only in Cable Modems."

Expires August 1999

[Page 58]

OBJECT docsIfUpChannelTxBackoffEnd
MIN-ACCESS read-only
DESCRIPTION
 "Read-write in Cable Modem Termination Systems;
 read-only in Cable Modems."

OBJECT docsIfQosProfPriority
MIN-ACCESS read-only
DESCRIPTION
 "This object is always read-only in Cable Modems.
 It is compliant to implement this object as read-only
 in Cable Modem Termination Systems."

OBJECT docsIfQosProfMaxUpBandwidth
MIN-ACCESS read-only
DESCRIPTION
 "This object is always read-only in Cable Modems.
 It is compliant to implement this object as read-only
 in Cable Modem Termination Systems."

OBJECT docsIfQosProfGuarUpBandwidth
MIN-ACCESS read-only
DESCRIPTION
 "This object is always read-only in Cable Modems.
 It is compliant to implement this object as read-only
 in Cable Modem Termination Systems."

OBJECT docsIfQosProfMaxDownBandwidth
MIN-ACCESS read-only
DESCRIPTION
 "This object is always read-only in Cable Modems.
 It is compliant to implement this object as read-only
 in Cable Modem Termination Systems."

OBJECT docsIfQosProfMaxTxBurst
MIN-ACCESS read-only
DESCRIPTION
 "This object is always read-only in Cable Modems.
 It is compliant to implement this object as read-only
 in Cable Modem Termination Systems."

OBJECT docsIfQosProfBaselinePrivacy
MIN-ACCESS read-only
DESCRIPTION
 "This object is always read-only in Cable Modems.
 It is compliant to implement this object as read-only
 in Cable Modem Termination Systems."

OBJECT docsIfQosProfStatus
MIN-ACCESS read-only
DESCRIPTION
 "This object is always read-only in Cable Modems.

Expires August 1999

[Page 59]

It is compliant to implement this object as read-only
in Cable Modem Termination Systems."

```
OBJECT docsIfCmtsServiceAdminStatus
  MIN-ACCESS read-only
  DESCRIPTION
    "It is compliant to implement this object as read-only."

OBJECT docsIfCmtsSyncInterval
  MIN-ACCESS read-only
  DESCRIPTION
    "It is compliant to implement this object as read-only."

OBJECT docsIfCmtsUcdInterval
  MIN-ACCESS read-only
  DESCRIPTION
    "It is compliant to implement this object as read-only."

OBJECT docsIfCmtsInsertInterval
  MIN-ACCESS read-only
  DESCRIPTION
    "It is compliant to implement this object as read-only."

OBJECT docsIfCmtsInvitedRangingAttempts
  MIN-ACCESS read-only
  DESCRIPTION
    "It is compliant to implement this object as read-only."

OBJECT docsIfCmtsQosProfilePermissions
  MIN-ACCESS read-only
  DESCRIPTION
    "It is compliant to implement this object as read-only."

OBJECT docsIfCmtsModType
  WRITE-SYNTAX INTEGER {
    qpsk (2),
    qam16 (3)
  }
  DESCRIPTION
    "Management station may only set 16QAM or QPSK modulation,
    but others might be possible based on device configuration."

 ::= { docsIfCompliances 1 }

docsIfBasicGroup OBJECT-GROUP
  OBJECTS {
    docsIfDownChannelId,
    docsIfDownChannelFrequency,
```

docsIfDownChannelWidth,
docsIfDownChannelModulation,
docsIfDownChannelInterleave,

Expires August 1999

[Page 60]


```
docsIfDownChannelPower,
docsIfUpChannelId,
docsIfUpChannelFrequency,
docsIfUpChannelWidth,
docsIfUpChannelModulationProfile,
docsIfUpChannelSlotSize,
docsIfUpChannelTxTimingOffset,
docsIfUpChannelRangingBackoffStart,
docsIfUpChannelRangingBackoffEnd,
docsIfUpChannelTxBackoffStart,
docsIfUpChannelTxBackoffEnd,
docsIfQosProfPriority,
docsIfQosProfMaxUpBandwidth,
docsIfQosProfGuarUpBandwidth,
docsIfQosProfMaxDownBandwidth,
docsIfQosProfMaxTxBurst,
docsIfQosProfBaselinePrivacy,
docsIfQosProfStatus,
docsIfSigQIncludesContention,
docsIfSigQUnerroreds,
docsIfSigQCorrecteds,
docsIfSigQUncorrectables,
docsIfSigQSignalNoise,
docsIfSigQMicroreflections,
docsIfSigQEqualizationData
}
STATUS      current
DESCRIPTION
    "Group of objects implemented in both Cable Modems and
    Cable Modem Termination Systems."
 ::= { docsIfGroups 1 }
```

```
-- The following table was modified to correct naming conventions for
-- Counter32 variables.
```

```
docsIfCmGroup OBJECT-GROUP
    OBJECTS {
        docsIfCmCmtsAddress,
        docsIfCmCapabilities,
--        docsIfCmRangingRespTimeout,
        docsIfCmRangingTimeout,
        docsIfCmStatusValue,
        docsIfCmStatusCode,
        docsIfCmStatusTxPower,
        docsIfCmStatusResets,
        docsIfCmStatusLostSyncs,
        docsIfCmStatusInvalidMaps,
        docsIfCmStatusInvalidUcds,
--        docsIfCmStatusInvalidRangingResp,
```

```
docsIfCmStatusInvalidRangingResponses,  
-- docsIfCmStatusInvalidRegistrationResp,  
docsIfCmStatusInvalidRegistrationResponses,  
docsIfCmStatusT1Timeouts,
```

Expires August 1999

[Page 61]

```
docsIfCmStatusT2Timeouts,
docsIfCmStatusT3Timeouts,
docsIfCmStatusT4Timeouts,
docsIfCmStatusRangingAborted,
docsIfCmServiceQosProfile,
docsIfCmServiceTxSlotsImmed,
docsIfCmServiceTxSlotsDed,
docsIfCmServiceTxRetries,
-- docsIfCmServiceTxExceeded,
docsIfCmServiceTxExceededs,
docsIfCmServiceRqRetries,
-- docsIfCmServiceRqExceeded
docsIfCmServiceRqExceededs
}
STATUS      current
DESCRIPTION
    "Group of objects implemented in Cable Modems."
 ::= { docsIfGroups 2 }
```

docsIfCmtsGroup OBJECT-GROUP

```
OBJECTS {
docsIfCmtsCapabilities,
docsIfCmtsSyncInterval,
docsIfCmtsUcdInterval,
docsIfCmtsMaxServiceIds,
-- docsIfCmtsInsertionInterval,
docsIfCmtsInvitedRangingAttempts,
docsIfCmtsInsertInterval,
docsIfCmtsStatusInvalidRangeReqs,
docsIfCmtsStatusRangingAborted,
docsIfCmtsStatusInvalidRegReqs,
docsIfCmtsStatusFailedRegReqs,
docsIfCmtsStatusInvalidDataReqs,
docsIfCmtsStatusT5Timeouts,
docsIfCmtsCmStatusMacAddress,
docsIfCmtsCmStatusIpAddress,
docsIfCmtsCmStatusDownChannelIfIndex,
docsIfCmtsCmStatusUpChannelIfIndex,
docsIfCmtsCmStatusRxPower,
docsIfCmtsCmStatusTimingOffset,
docsIfCmtsCmStatusEqualizationData,
docsIfCmtsCmStatusValue,
docsIfCmtsCmStatusUnerrored,
docsIfCmtsCmStatusCorrected,
docsIfCmtsCmStatusUncorrectables,
docsIfCmtsCmStatusSignalNoise,
docsIfCmtsCmStatusMicroreflections,
docsIfCmtsServiceCmStatusIndex,
```

docsIfCmtsServiceAdminStatus,
docsIfCmtsServiceQosProfile,
docsIfCmtsServiceCreateTime,
docsIfCmtsServiceInOctets,

Expires August 1999

[Page 62]

```
docsIfCmtsServiceInPackets,
docsIfCmtsModType,
docsIfCmtsModControl,
docsIfCmtsModPreambleLen,
docsIfCmtsModDifferentialEncoding,
docsIfCmtsModFECErrorCorrection,
docsIfCmtsModFECCodewordLength,
docsIfCmtsModScramblerSeed,
docsIfCmtsModMaxBurstSize,
docsIfCmtsModGuardTimeSize,
docsIfCmtsModLastCodewordShortened,
docsIfCmtsModScrambler,
docsIfCmtsQosProfilePermissions,
docsIfCmtsCmPtr
}
STATUS      current
DESCRIPTION
    "Group of objects implemented in Cable Modem Termination
    Systems."
::= { docsIfGroups 3 }
```

```
docsIfObsoleteGroup OBJECT-GROUP
    OBJECTS {
        docsIfCmRangingRespTimeout,
        docsIfCmtsInsertionInterval
    }
    STATUS      obsolete
    DESCRIPTION
        "Group of objects obsoleted."
    ::= { docsIfGroups 4 }
```

END

Expires August 1999

[Page 63]

5. Acknowledgments

This document was produced by the IPCDN Working Group. It is based on a document written by Pam Anderson from CableLabs, Wilson Sawyer from BayNetworks, and Rich Woundy from Continental Cablevision. The original working group editor, Guenter Roeck of cisco Systems, did much of the grunt work of putting the document into its current form.

Special thanks is also due to Azlina Palmer, who helped a lot reviewing the document.

6. References

- [1] Harrington, D., Presuhn, R., and B. Wijnen, "An Architecture for Describing SNMP Management Frameworks", [RFC 2271](#), Cabletron Systems, Inc., BMC Software, Inc., IBM T. J. Watson Research, January 1998
- [2] Rose, M., and K. McCloghrie, "Structure and Identification of Management Information for TCP/IP-based Internets", [RFC 1155](#), Performance Systems International, Hughes LAN Systems, May 1990
- [3] Rose, M., and K. McCloghrie, "Concise MIB Definitions", [RFC 1212](#), Performance Systems International, Hughes LAN Systems, March 1991
- [4] M. Rose, "A Convention for Defining Traps for use with the SNMP", [RFC 1215](#), Performance Systems International, March 1991
- [5] Case, J., McCloghrie, K., Rose, M., and S. Waldbusser, "Structure of Management Information for Version 2 of the Simple Network Management Protocol (SNMPv2)", [RFC 1902](#), SNMP Research, Inc., Cisco Systems, Inc., Dover Beach Consulting, Inc., International Network Services, January 1996.
- [6] Case, J., McCloghrie, K., Rose, M., and S. Waldbusser, "Textual Conventions for Version 2 of the Simple Network Management Protocol (SNMPv2)", [RFC 1903](#), SNMP Research, Inc., Cisco Systems, Inc., Dover Beach Consulting, Inc., International Network Services, January 1996.
- [7] Case, J., McCloghrie, K., Rose, M., and S. Waldbusser, "Conformance Statements for Version 2 of the Simple Network Management Protocol (SNMPv2)", [RFC 1904](#), SNMP Research, Inc., Cisco Systems, Inc., Dover Beach Consulting, Inc., International Network Services, January 1996.
- [8] Case, J., Fedor, M., Schoffstall, M., and J. Davin, "Simple Network Management Protocol", [RFC 1157](#), SNMP Research, Performance Systems

International, Performance Systems International, MIT Laboratory
for Computer Science, May 1990.

Expires August 1999

[Page 64]

- [9] Case, J., McCloghrie, K., Rose, M., and S. Waldbusser, "Introduction to Community-based SNMPv2", [RFC 1901](#), SNMP Research, Inc., Cisco Systems, Inc., Dover Beach Consulting, Inc., International Network Services, January 1996.
- [10] Case, J., McCloghrie, K., Rose, M., and S. Waldbusser, "Transport Mappings for Version 2 of the Simple Network Management Protocol (SNMPv2)", [RFC 1906](#), SNMP Research, Inc., Cisco Systems, Inc., Dover Beach Consulting, Inc., International Network Services, January 1996.
- [11] Case, J., Harrington D., Presuhn R., and B. Wijnen, "Message Processing and Dispatching for the Simple Network Management Protocol (SNMP)", [RFC 2272](#), SNMP Research, Inc., Cabletron Systems, Inc., BMC Software, Inc., IBM T. J. Watson Research, January 1998.
- [12] Blumenthal, U., and B. Wijnen, "User-based Security Model (USM) for version 3 of the Simple Network Management Protocol (SNMPv3)", [RFC 2274](#), IBM T. J. Watson Research, January 1998.
- [13] Case, J., McCloghrie, K., Rose, M., and S. Waldbusser, "Protocol Operations for Version 2 of the Simple Network Management Protocol (SNMPv2)", [RFC 1905](#), SNMP Research, Inc., Cisco Systems, Inc., Dover Beach Consulting, Inc., International Network Services, January 1996.
- [14] Levi, D., Meyer, P., and B. Stewart, "SNMPv3 Applications", [RFC 2273](#), SNMP Research, Inc., Secure Computing Corporation, Cisco Systems, January 1998
- [15] Wijnen, B., Presuhn, R., and K. McCloghrie, "View-based Access Control Model (VACM) for the Simple Network Management Protocol (SNMP)", [RFC 2275](#), IBM T. J. Watson Research, BMC Software, Inc., Cisco Systems, Inc., January 1998
- [16] " Data-Over-Cable Service Interface Specifications: Cable Modem Radio Frequency Interface Specification SP-RFI-I04-980724", DOCSIS, July 1998, <http://www.cablemodem.com/public/pubtechspec/SP-RFI-I04-980724.pdf>.
- [17] McCloghrie, K. and F. Kastenholz, "The Interfaces Group MIB using SMIPv2", [RFC2233](#), Cisco Systems, Inc., FTP Software, November 1997
- [18] Roeck, G. "Cable Device Management Information Base for MCNS/DOCSIS compliant Cable Modems and Cable Modem Termination Systems", [draft-ietf-ipcdn-cable-device-mib-05.txt](#), Cisco Systems, Inc., October 1998
- [19] Proakis, John G., "Digital Communications, 3rd Edition", McGraw-

Hill, New York, New York, 1995, ISBN 0-07-051726-6

Expires August 1999

[Page 65]

[20] "Transmission Systems for Interactive Cable Television Services, Annex B", J.112, International Telecommunications Union, March 1998

7. Security Considerations

This MIB relates to a system which will provide metropolitan public internet access. As such, improper manipulation of the objects represented by this MIB may result in denial of service to a large number of end-users. In addition, manipulation of the docsIfCmServiceQosProfile, docsIfCmtsServerQosProfile, and the elements of docsIfQosProfileTable may allow an end-user to improve their service response or decrease other subscriber service response.

This MIB does not affect confidentiality, authentication or authorization of services on a cable modem system. For authentication and authorization, please see the related document "Cable Device Management Information Base for MCNS/DOCSIS compliant Cable Modems and Cable Modem Termination Systems" currently an Internet Draft [[18](#)] but to be published as an RFC simultaneously with this document. For confidentiality, the working group expects to issue a MIB which describes the management of the DOCSIS Baseline Privacy mechanism.

8. Intellectual Property

The IETF takes no position regarding the validity or scope of any intellectual property or other rights that might be claimed to pertain to the implementation or use of the technology described in this document or the extent to which any license under such rights might or might not be available; neither does it represent that it has made any effort to identify any such rights. Information on the IETF's procedures with respect to rights in standards-track and standards-related documentation can be found in [BCP-11](#). Copies of claims of rights made available for publication and any assurances of licenses to be made available, or the result of an attempt made to obtain a general license or permission for the use of such proprietary rights by implementors or users of this specification can be obtained from the IETF Secretariat.

The IETF invites any interested party to bring to its attention any copyrights, patents or patent applications, or other proprietary rights which may cover technology that may be required to practice this standard. Please address the information to the IETF Executive

Expires August 1999

[Page 66]

Director.

9. Author's Address

Michael StJohns
@Home Network
425 Broadway
Redwood City, CA 94063

Phone: +1 650 569 5368
Email: stjohs@corp.home.net

10. Copyright Section

Copyright (C) The Internet Society (1998). All Rights Reserved.

This document and translations of it may be copied and furnished to others, and derivative works that comment on or otherwise explain it or assist in its implementation may be prepared, copied, published and distributed, in whole or in part, without restriction of any kind, provided that the above copyright notice and this paragraph are included on all such copies and derivative works. However, this document itself may not be modified in any way, such as by removing the copyright notice or references to the Internet Society or other Internet organizations, except as needed for the purpose of developing Internet standards in which case the procedures for copyrights defined in the Internet Standards process must be followed, or as required to translate it into languages other than English.

The limited permissions granted above are perpetual and will not be revoked by the Internet Society or its successors or assigns.

This document and the information contained herein is provided on an "AS IS" basis and THE INTERNET SOCIETY AND THE INTERNET ENGINEERING TASK FORCE DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTY THAT THE USE OF THE INFORMATION HEREIN WILL NOT INFRINGE ANY RIGHTS OR ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

Expires August 1999

[Page 67]